

SIEMENS

COMBIMASTER 411 & MICROMASTER 411

Operating Instructions

Issue 03/02



User Documentation

MICROMASTER 411 DOCUMENTATION

Getting Started Guide

Provides for Quick Commissioning of the Inverter.



Operating Instructions

Gives information about features of the MM411, Installation, Commissioning, Control modes, System Parameter structure, Troubleshooting, Specifications and available options of the MM411.




Parameter List

The Parameter List contains the description of all Parameters structured in functional order and a detailed description. The Parameter list also includes a series of function plans.



Catalogues

In the catalogue you will find all the necessary information to select an appropriate inverter, as well as Operator Panels and Communication Options.

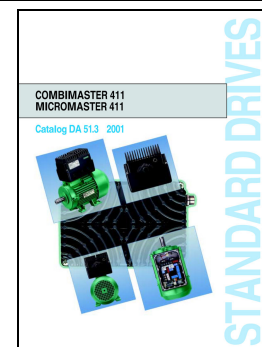



COMBIMASTER 411 & MICROMASTER 411

Operating Instructions User Documentation

Valid for Release

Inverter Type
COMBIMASTER 411 &
MICROMASTER 411

Control Version
March 2002

Issue: 03/02

Overview	1
Installation	2
Commissioning	3
Using the COMBIMASTER 411 MICROMASTER 411	4
System Parameters	5
Troubleshooting	6
COMBIMASTER 411 MICROMASTER 411 Specifications	7
Options	8
Electro-Magnetic Compatibility	9
Engineering Information	10
Appendices	A B C
Index	

Further information is available on the Internet under:

<http://www.siemens.de/micromaster>

Approved Siemens Quality for Software and Training
is to DIN ISO 14001, Reg. No. 2160-01

The reproduction, transmission or use of this document, or its
contents is not permitted unless authorized in writing.
Offenders will be liable for damages. All rights including rights
created by patent grant or registration of a utility model or
design are reserved.

© Siemens AG 2002. All Rights Reserved.

MICROMASTER® is a registered trademark of Siemens.

Other functions not described in this document may be
available. However, this fact shall not constitute an obligation
to supply such functions with a new control, or when
servicing.

We have checked that the contents of this document
correspond to the hardware and software described. There
may be discrepancies nevertheless, and no guarantee can be
given that they are completely identical. The information
contained in this document is reviewed regularly and any
necessary changes will be included in the next edition. We
welcome suggestions for improvement.

Siemens handbooks are printed on chlorine-free paper that
has been produced from managed sustainable forests. No
solvents have been used in the printing or binding process.
Document subject to change without prior notice.

Order Number. 6SE6400-5CA00-0BP0
Printed in the United Kingdom

Siemens-Aktiengesellschaft.

Foreword

User Documentation



Warning

Before installing and commissioning, you must read the safety instructions and warnings carefully and all the warning labels attached to the equipment. Make sure that the warning labels are kept in a legible condition and replace missing or damaged labels.

MICROMASTER documentation is structured within three distinct levels:

- **Getting Started Guide**
The Getting Started Guide is designed to give you quick access to all the basic information required to install and set up your COMBIMASTER 411 & MICROMASTER 411 for operation.
- **Operating Instructions**
The Operating Instructions provide detailed information for installation and operation of your COMBIMASTER 411 & MICROMASTER 411.
- **Parameter List**
The Parameter List contains a complete detailed listing of all MICROMASTER 411 parameters.

Information is also available from:

Technical Support Nuremberg

Tel: +49 (0) 180 5050 222
Fax: +49 (0) 180 5050 223
Email: techsupport@ad.siemens.de

Monday to Friday: 7:00 am to 5:00 pm (Central European Time)

Internet Home Address

Customers can access technical and general information at:
<http://www.siemens.de/micromaster>

Definitions and Warnings



Danger

For the purpose of this documentation and the product warning labels, "Danger" indicates that death; severe personal injury or substantial damage to property will result if proper precautions are not taken.



Warning

For the purpose of this documentation and the product warning labels, "Warning" indicates that death; severe personal injury or substantial damage to property can result if proper precautions are not taken.



Caution

For the purpose of this documentation and the product warning labels, "Caution" indicates that minor personal injury or material damage can result if proper precautions are not taken.

Note

For the purpose of this documentation, "Note," indicates important information relating to the product or highlights part of the documentation for special attention.

Qualified personnel

For the purpose of this Instruction Manual and product labels, a "Qualified person" is someone who is familiar with the installation, mounting, start-up and operation of the equipment and the hazards involved. He or she must have the following qualifications:

1. Trained and authorized to energize, de-energize, clear, ground and tag circuits and equipment in accordance with established safety procedures.
 2. Trained in the proper care and use of protective equipment in accordance with established safety procedures.
 3. Trained in rendering first aid.
-

Use for intended purpose only

The equipment may be used only for the application stated in the manual and only in conjunction with devices and components recommended and authorized by Siemens.

Contact address

Should any questions or problems arise while reading this manual, please contact the Siemens office concerned using the form provided at the back this manual.

Safety Instructions

The following Warnings, Cautions and Notes are provided for your safety and as a means of preventing damage to the product or components in the machines connected. This section lists Warnings, Cautions and Notes, which apply generally when handling COMBIMASTER 411 & MICROMASTER 411 Inverters, classified as **General, Transport & Storage, Commissioning, Operation, Repair and Dismantling & Disposal**.

Specific Warnings, Cautions and Notes that apply to particular activities are listed at the beginning of the relevant chapters and are repeated or supplemented at critical points throughout these chapters.

Please read the information carefully, since it is provided for your personal safety and will also help prolong the service life of your COMBIMASTER 411 & MICROMASTER 411 Inverter and the equipment you connect to it.

General



Warnings

- ◆ This equipment contains dangerous voltages and controls potentially dangerous rotating mechanical parts. Non-compliance with **Warnings** or failure to follow the instructions contained in this manual can result in loss of life, severe personal injury or serious damage to property.
 - ◆ Only suitable qualified personnel should work on this equipment, and only after becoming familiar with all safety notices, installation, operation and maintenance procedures contained in this manual. The successful and safe operation of this equipment is dependent upon its proper handling, installation, operation and maintenance.
 - ◆ Risk of electric shock. The DC link capacitors remain charged for five minutes after power has been removed. **It is not permissible to open the equipment until 5 minutes after the power has been removed.**
 - ◆ HP ratings are based on the Siemens 1LA motors and are given for guidance only; they do not necessarily comply with UL or NEMA HP ratings.
 - ◆ Do not operate the equipment in direct sunlight.
-



Caution

- ◆ Children and the general public must be prevented from accessing or approaching the equipment!
 - ◆ This equipment may only be used for the purpose specified by the manufacturer. Unauthorized modifications and the use of spare parts and accessories that are not sold or recommended by the manufacturer of the equipment can cause fires, electric shocks and injuries.
-

Notes

- ◆ Keep these operating instructions within easy reach of the equipment and make them available to all users
 - ◆ Whenever measuring or testing has to be performed on live equipment, the regulations of Safety Code VBG 4.0 must be observed, in particular § 8 "Permissible Deviations when Working on Live Parts". Suitable electronic tools should be used.
 - ◆ Before installing and commissioning, please read these safety instructions and warnings carefully and all the warning labels attached to the equipment. Make sure that the warning labels are kept in a legible condition and replace missing or damaged labels
-

Transport & Storage



Warnings

- ◆ Correct transport, storage, erection and mounting, as well as careful operation and maintenance are essential for proper and safe operation of the equipment.
 - ◆ Use the lifting eyes provided if a motor has to be lifted. Do not lift machine sets by suspending the individual machines! Always check the capacity of the hoist before lifting any equipment.
 - ◆ Do not paint over the black case finish of the inverter, as this will affect the unit's thermal performance.
-



Caution

- ◆ Protect the inverter against physical shocks and vibration during transport and storage. Also be sure to protect it against water (rainfall) and excessive temperatures.
-

Commissioning



Warnings

- ◆ Work on the device/system by **unqualified** personnel or failure to comply with warnings can result in severe personal injury or serious damage to material. Only suitably qualified personnel trained in the setup, installation, commissioning and operation of the product should carry out work on the device/system.
 - ◆ Only permanently wired input power connections are allowed. This equipment must be grounded (IEC 536 Class 1, NEC and other applicable standards).
 - ◆ If a Residual Current-operated protective Device (RCD) is to be used, it must be an RCD type B.
 - ◆ Machines with a three-phase power supply, fitted with EMC filters, must not be connected to a supply via an ELCB (Earth Leakage Circuit-Breaker - see *DIN VDE 0160, section 5.5.2 and EN50178 section 5.2.11.1*).
 - ◆ The following terminals can carry dangerous voltages even if the inverter is inoperative:
 - power supply terminals L1, L2, L3.
 - motor terminals U, V, W.
 - ◆ This equipment must not be used as an 'Emergency Stop mechanism' (see *EN 60204, 9.2.5.4*).
 - ◆ The inverter electronics contain static sensitive devices therefore precautions must be taken against electrostatic discharge (ESD) when handling the separated inverter assembly (See Figure 2-2). These include not touching the internal surfaces of the inverter and ensuring that personnel are earthed while handling the unit. The terminal housing, including Filter and I/O modules, contain no sensitive components and therefore no special handling precautions are required when separated.
-



Caution

The connection of power, motor and control cables to the inverter must be carried out as shown in Figure 2-9 and Figure 2-10 respectively, to prevent inductive and capacitive interference from affecting the correct functioning of the inverter.

Operation



Warnings

- ◆ MICROMASTER 411/COMBIMASTER 411 operate at high voltages.
- ◆ When operating electrical devices, it is impossible to avoid applying hazardous voltages to certain parts of the equipment.
- ◆ Emergency Stop facilities according to EN 60204 IEC 204 (VDE 0113) must remain operative in all operating modes of the control equipment. Any disengagement of the Emergency Stop facility must not lead to uncontrolled or undefined restart.
- ◆ Wherever faults occurring in the control equipment can lead to substantial material damage or even grievous bodily injury (i.e. potentially dangerous faults), additional external precautions must be taken or facilities provided to ensure or enforce safe operation, even when a fault occurs (e.g. independent limit switches, mechanical interlocks, etc.).
- ◆ Certain parameter settings may cause the inverter to restart automatically after an input power failure.
- ◆ This equipment is capable of providing internal motor overload protection. Refer to P0610 (level 3) and P0335, I²T is ON by default. Motor overload protection can also be provided using an external PTC via a digital input.
- ◆ This equipment is suitable for use in a circuit capable of delivering not more than 10,000 symmetrical amperes (rms), for a maximum voltage of 460V when protected by an H or K Class fuse. (See *Table on page 85*).
- ◆ This equipment must not be used as an 'emergency stop mechanism' (see *EN 60204, 9.2.5.4*)

Repair



Warnings

- ◆ Repairs on equipment may only be carried out by **Siemens Service**, by repair centers **authorized by Siemens** or by qualified personnel who are thoroughly acquainted with all the warnings and operating procedures contained in this manual.
- ◆ Any defective parts or components must be replaced using parts contained in the relevant spare parts list.
- ◆ Disconnect the power supply before opening the equipment for access.

Dismantling & Disposal

Notes

- ◆ Inverter packaging is re-usable. Retain the packaging for future use or return it to the manufacturer.
- ◆ Easy-to-release screw and snap connectors allow you to break the unit down into its component parts. You can then re-cycle these component parts, dispose of them in **accordance with local requirements or return them to the manufacturer.**

Table of Contents

1	Overview	15
1.1	COMBIMASTER 411 & MICROMASTER 411	16
1.2	Design Features	16
2	Installation	19
2.1	General	20
2.2	Ambient operating conditions	21
2.3	Mechanical Installation MICROMASTER 411	21
2.4	Mechanical Installation COMBIMASTER 411	29
2.5	Electrical Installation.....	32
3	Commissioning	39
3.1	Block Diagram	41
3.2	General Information.....	42
3.3	Commissioning Procedure Overview	42
3.4	General operation.....	56
4	Using the COMBIMASTER 411 & MICROMASTER 411	57
4.1	Frequency Setpoint	58
4.2	Command Sources (P0700).....	58
4.3	OFF and Braking Functions	59
4.4	Control Modes (P1300)	60
4.5	Faults and warnings	60
5	System Parameters.....	61
5.1	Introduction to COMBIMASTER 411/MICROMASTER 411 System Parameters.....	62
5.2	Parameter List (short form)	64
6	Troubleshooting.....	73
6.1	Troubleshooting with the Inverter LED.....	74
6.2	Troubleshooting with the Basic Operator Panel.....	74
7	MICROMASTER 411/COMBIMASTER 411 Specifications	81
7.1	Technical Data.....	82
7.2	Case Size Rating Information.....	83
7.3	Tightening Torque, Cable cross sections for Power Supply and Motor Terminals	84
7.4	Tightening Torque for Fixing Screws	84
7.5	Fuses and Circuit Breakers	85

8	Options	87
8.1	MICROMASTER 411/COMBIMASTER 411 User Options	88
8.2	MICROMASTER 411/COMBIMASTER 411 Programming Options	89
8.3	Basic Operator Panel (BOP)	90
8.4	Advanced Operator Panel (AOP).....	91
8.5	PROFIBUS Module (for MICROMASTER 411)	92
8.6	Electromechanical Brake Control Module	93
8.7	MICROMASTER 411 Operator Panel Mounting Kit.....	94
8.8	PC to Inverter Connection Kit.....	95
8.9	PC to AOP Connection Kit	96
8.10	Door Mounting Kit for Single Inverter control	97
8.11	Wall Mounting Kit.....	98
9	Electro-Magnetic Compatibility (EMC)	99
9.1	Electro-Magnetic Compatibility (EMC)	100
10	Engineering Information	105
10.1	Current Limit and Overload Operation	106
10.2	Control and Operating Modes	109
10.3	Braking	118
10.4	Derating Factors	120
10.5	Thermal Protection and Automatic De-rating	121
10.6	Operation from Unearthed Supplies.....	122
10.7	Lifetime of Inverters	122
10.8	Working with Binary Connectors (BiCo).....	122
10.9	Harmonic Currents	129
10.10	Use of MM4 Input Chokes	129
10.11	Power Losses	130
10.12	Shock and Vibration.....	131
10.13	PROFIBUS.....	132
10.14	PROFIBUS Module.....	133
10.15	Variant Independent Options	136
	Appendices	139
A-	Applicable Standards	140
B-	List of Abbreviations	141
C-	MICROMASTER 411/COMBIMASTER 411 Parts Identification.	142
Index	143

List of Illustrations

Figure 1-1 MICROMASTER 411 and COMBIMASTER 411 Variable Frequency Inverters.17

Figure 2-1 Installation of Cable Gland.....23

Figure 2-2 MICROMASTER 411 Internal Layout.....26

Figure 2-3 MICROMASTER 411 General Layout.....27

Figure 2-4 MICROMASTER 411 Gland Dimensions27

Figure 2-5 MICROMASTER 411 Case Size B Dimensions28

Figure 2-6 MICROMASTER 411 Case Size C Dimensions.....28

Figure 2-7 COMBIMASTER 411 Case Size B Dimensional Detail.....30

Figure 2-8 COMBIMASTER 411 Case Size C Dimensional Detail.....31

Figure 2-9 Motor and Power Supply Connections35

Figure 2-10 COMBIMASTER 411 & MICROMASTER 411 Control Terminals36

Figure 2-11 PTC Connections37

Figure 3-1 COMBIMASTER 411 & MICROMASTER 411 Block Diagram.....41

Figure 3-2 MICROMASTER 411/COMBIMASTER 411 Commissioning Guide42

Figure 3-3 Ramp Time Jumpers43

Figure 3-4 Control Circuit Jumpers44

Figure 3-5 Default Setup Terminal Connections.....46

Figure 3-6 Typical Motor Rating Plate Example.....55

Figure 5-1 Parameter Structure with Filter (P0004)63

Figure 10-1 Current Limit Interaction.....106

Figure 10-2 PTC Resistor Connections.....108

Figure 10-3 Boost Level.....109

Figure 10-4 Quick response with overshoot: P2280 = 0.30; P2285 = 0.03s.....112

Figure 10-5 Quick response with overshoot, but instability:P2280 = 0.55; P2285 = 0.03s.....112

Figure 10-6 Damped response: P2280 = 0.20; P2285 = 0.15s.....113

Figure 10-7 Response to 5 Hz step: L = 100 ms.....114

Figure 10-8 Response to 5 Hz step: T = 700 ms.....114

Figure 10-9 Step Response in PI control with P2280 = 9.84 and P2285 = 0.30.....115

Figure 10-10 PI Basic Block Diagram.....116

Figure 10-11 Energy Saving Mode.....117

Figure 10-12 Frequency Ramp Down118

Figure 10-13 DC Braking118

Figure 10-14 Compound Braking119

Figure 10-15 Derating with Temperature.....120

Figure 10-16 Derating with Altitude120

Figure 10-17 Power Losses CM411/MM411130

List of Tables

Table 2-1	Gland Plate Detail.....	27
Table 2-2	MICROMASTER 411 Dimension Detail	28
Table 3-1	Ramp Time Adjustment Jumpers	43
Table 3-2	Ramp Time Jumper Behaviour	44
Table 3-3	Control Circuit Jumper Settings	44
Table 3-4	Control Circuit Jumper Behaviour.....	45
Table 3-5	Default Settings for BOP Operation.....	51
Table 3-6	Basic Operator Panel Controls	53
Table 3-7	Changing Drive Parameters with the BOP	54
Table 6-1	Inverter LED Indication	74
Table 6-2	MICROMASTER411/COMBIMASTER411 Fault Codes	75
Table 6-3	COMBIMASTER 411/MICROMASTER 411 Warning Codes.....	77
Table 7-1	MICROMASTER 411/COMBIMASTER 411 Performance Ratings.....	82
Table 7-2	Case Size B	83
Table 7-3	Case Size C	83
Table 8-1	Key to Programming Options.....	89
Table 9-1	Environment - General Industrial.....	101
Table 9-2	Environment - Filtered Industrial.....	101
Table 9-3	Environment - Filtered for Residential, Commercial and Light Industry	102
Table 9-4	EMC Compliance Table.....	103
Table 9-5	MICROMASTER 411 Measured Results.....	103
Table 10-1	Current Limit and Overload.....	106
Table 10-2	Measured Current Monitoring Accuracy	107
Table 10-3	Trip Levels	109
Table 10-4	Boost Parameters	110
Table 10-5	Derating with Switching Frequencies	121
Table 10-6	BiCo Connections (r0019 to r0054)	125
Table 10-7	BiCo Connections (r0055 to r1119)	126
Table 10-8	BiCo Connections (r1170 to r2050)	127
Table 10-9	BiCo connections (r2053 to r2294).....	128
Table 10-10	Three Phase 400V Connection	129
Table 10-11	Maximum Cable Lengths for Data Transfer Rates.....	135
Table 10-12	Technical data – 411 PROFIBUS Module	136
Table 10-13	PROFIBUS Ordering information.....	136

1 Overview

This Chapter contains:

A summary of the major features of the COMBIMASTER 411 & MICROMASTER 411 range.

1.1	COMBIMASTER 411 & MICROMASTER 411	16
1.2	Design Features	16

1.1 COMBIMASTER 411 & MICROMASTER 411

The Siemens COMBIMASTER 411 & MICROMASTER 411 variable frequency (V/f) range of inverters are used to control the speed of three phase AC induction motors.

MICROMASTER 411 offers an Inverter for adaptation to a compatible motor frame and COMBIMASTER 411 provides for a ready to use Inverter/Motor combination unit. Inverters are available in the following ranges:

- 370 W to 3.0 kW 380/480 VAC for three phase units.

Inverters are microprocessor-controlled and use state-of-the-art Insulated Gate Bipolar Transistor (IGBT) technology. This makes them reliable and versatile. A special pulse-width modulation method with selectable Pulse frequency permits quiet motor operation. Comprehensive protection is included as standard for both motor and inverter circuits.


Operating modes, parameters and menus can be modified and the performance enhanced if the inverter is equipped with one of several options; these are described in the Appendices at the rear of this manual.

MICROMASTER 411/COMBIMASTER 411 can be used in 'stand-alone' applications as well as being integrated into complete automation systems.


1.2 Design Features

Key design features include:

- Easy to install, parameterize and commission.
- Closed loop control using Proportional, Integral (PI) control loop function.
- High starting torque with programmable starting boost.
- Optional remote control capability via serial interface.
- Factory default parameter settings pre-programmed for European and North American requirements.
- Output frequency (and hence motor speed) can be controlled by one of four methods:
 - ◆ Internal Speed Control Potentiometer.
 - ◆ Analogue setpoint (voltage or current input).
 - ◆ Fixed frequencies via binary inputs.
 - ◆ Serial interface.
- Built-in dc injection braking.
- Acceleration/deceleration timed with programmable smoothing.
- Programmable signal relay output incorporated.
- Options for external control from: Basic Operator Panel (BOP) Advanced Operator Panel (AOP), RS232 serial interface.
- Options Case provides for the addition of Fieldbus (e.g., PROFIBUS DP) and/or Electromechanical Brake Control.
- Fast Current Limit (FCL) for reliable trip-free operation.
- Optional Integrated class B filter (Radiated emissions Class A).
- MICROMASTER 411 Protection to IP66. Approximately equivalent to NEMA 4X.
- COMBIMASTER 411 Protection to IP55. Equivalent to NEMA 4.

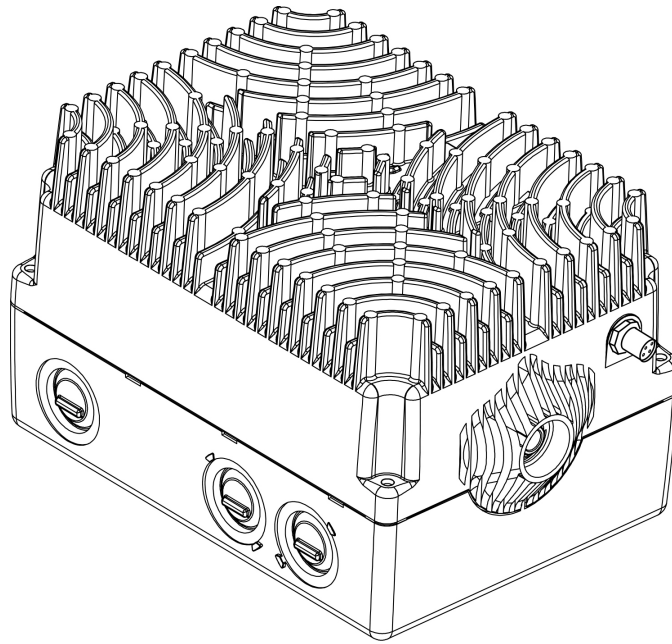

MICROMASTER 411 Variable Frequency Inverter

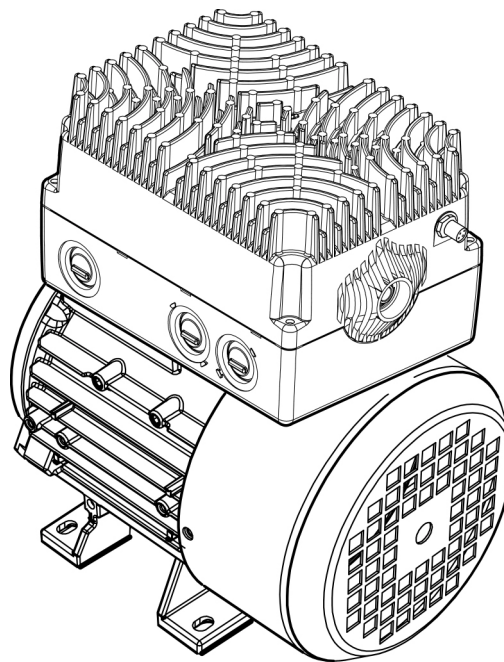

COMBIMASTER 411 Variable Frequency Inverter – Motor Combination

Figure 1-1 MICROMASTER 411 and COMBIMASTER 411 Variable Frequency Inverters.

2 Installation

This Chapter contains:

- General data relating to installation
- Inverter Dimensions
- Wiring guidelines to minimize the effects of EMI
- Details concerning electrical installation

2.1	General	20
2.2	Ambient operating conditions	21
2.3	Mechanical Installation MICROMASTER 411	21
2.4	Mechanical Installation COMBIMASTER 411	29
2.5	Electrical Installation.....	32



Warnings

- ◆ Work on the device/system by **unqualified** personnel or failure to comply with warnings can result in severe personal injury or serious damage to material. Only suitably qualified personnel trained in the setup, installation, commissioning and operation of the product should carry out work on the device/system.
- ◆ Only permanently wired input power connections are allowed. This equipment must be grounded (IEC 536 Class 1, NEC and other applicable standards).
- ◆ If a Residual Current-operated protective Device (RCD) is to be used, it must be an RCD type B.
- ◆ Machines with a three-phase power supply, fitted with EMC filters, must not be connected to a supply via an ELCB (Earth Leakage Circuit-Breaker EN50178 Section 5.2.11.1).
- ◆ The following terminals can carry dangerous voltages even if the inverter is inoperative:
 - power supply terminals L1, L2, L3.
 - motor terminals U, V, W.
- ◆ Always wait **5 minutes** to allow the unit to discharge after switching off before carrying out any installation work.
- ◆ This equipment must not be used as an 'emergency stop mechanism' (see *EN 60204, 9.2.5.4*)
- ◆ The minimum size of the earth-bonding conductor must be equal to or greater than the cross-section of the power supply cables.



Caution

The connection of power and motor cables to the inverter must be carried out as shown Figure 2-9 to prevent inductive and capacitive interference from affecting the correct functioning of the inverter.

2.1 General

Installation after a Period of Storage

Following a prolonged period of storage, you must reform the capacitors in the inverter. The requirements are listed below. The period of storage should be calculated from the date of manufacture and not from the time of delivery by your supplier.

Period of Storage	Required Action	Preparation Time
1 year or less	No reforming required	No preparation
1 to 2 years	Apply power to the inverter for one hour before issuing the run command	1 hour
2 to 3 years	<ul style="list-style-type: none"> ☞ Use a variable AC supply. ☞ Apply 25% of input voltage for 30 minutes. ☞ Increase volts to 50% for a further 30 minutes. ☞ Increase volts to 75% for a further 30 minutes. ☞ Increase volts to 100% for a further 30 minutes. ☑ Inverter ready for run signal. 	2 hours
3 years and over	<ul style="list-style-type: none"> ☞ Use a variable AC supply. ☞ Apply 25% of input voltage for 2 hours. ☞ Increase volts to 50% for a further 2 hours. ☞ Increase volts to 75% for a further 2 hours. ☞ Increase volts to 100% for a further 2 hours. ☑ Inverter ready for run signal. 	8 hours

2.2 Ambient operating conditions

Temperature

Frame Size	B	C
Min. [° C]	-10	-10
Max. [° C]	40	40

Humidity Range

99% Non-condensing

Altitude

If the inverter is to be installed at an altitude > 1000m, derating will be required. Refer to Section 10.4.2 for details.

Shock

Do not drop the inverter or expose to sudden shock.

Electromagnetic Radiation

Do not install the inverter near sources of electromagnetic radiation.

Overheating

MICROMASTER 411/COMBIMASTER 411 are cooled by natural convection. Mount the inverter with the heatsink fins above to ensure optimum cooling.

Mounting the inverter with the heatsink upside down is not allowed.

Ensure that airflow around the inverter housing is not obstructed. Allow 100 mm clearance above and below the inverter.

2.3 Mechanical Installation MICROMASTER 411



Warning

- ◆ **THIS EQUIPMENT MUST BE GROUNDED.**
- ◆ To ensure safe operation of the equipment, it must be installed and commissioned by qualified personnel in full compliance with the warnings laid down in these operating instructions.
- ◆ Take particular note of the general and regional installation and safety regulations regarding work on dangerous voltage installations (e.g. EN 50178), as well as the relevant regulations regarding the correct use of tools and personal protective gear.
- ◆ The Power supply, DC and motor terminals, can carry dangerous voltages even if the inverter is inoperative; wait **5 minutes** to allow the unit to discharge after switching off before carrying out any installation work.

2.3.1 Preparation

Remove the MICROMASTER 411 installation kit from the packing. Check packing box contents against the advice note supplied.

The installation kit should comprise the following items:

- | | |
|--|---|
| 1. Inverter cover | 9. 2 off M25 sealing plugs |
| 2. Terminal Housing | 10. 2 off M25 Gland Fixing Plates |
| 3. Filter Module & screws (captive) | 11. 2 off U-clamp & screws (for earth/ground connection) |
| 4. Input – Output Board & screws (captive) | 12. 4 off M4 Inverter to Motor fixing screws (CSC only: additional 4 off M5 screws) |
| 5. Earth Lead | 13. Motor Cable Sheath |
| 6. 10 Off Terminal Jumpers | 14. 1 off Motor Gasket (CSC only: additional 1 off Motor Gasket) |
| 7. Getting Started Guide and CD | 15. 1 off M12 connector blanking plug |
| 8. 2 off Glands M25 IP68 with O-ring | |

Any defective or missing items should be reported immediately to your local Siemens Distributor or Sales Office.

2.3.2 Installation Procedure

Note:

MICROMASTER 411 ONLY:

Prior to installation it may be necessary to fit an Adaptation Plate to a non-Siemens motor. The Adaptation Plate is prepared by the respective motor manufacturer.

Normally the Adaptation Plate makes use of the existing motor gasket.

Physical dimensions and characteristics for installation of MICROMASTER 411 are given in section 2.3.7. and in section 2.4.2 for COMBIMASTER 411.

With the product items removed from their packaging carry out the following installation procedure.

1. Separate the two halves (Inverter Cover and Terminal Housing).
2. Remove the Filter Module and I/O board.



Caution

Do not knock out cable gland blanking plates unless the inverter 'electronics' (Filter & I/O boards) have been removed.

3. Remove the cable gland blanking plates (knockouts) as required. See Figure 2-1. The preferred gland arrangements are shown in the General Layout Diagram – Figure 2-3.
4. Fit cable glands to terminal housing, ensuring the O-rings are fitted to ensure the seal is maintained.
5. Fit the earth lead to the earth terminal within the motor terminal box. If required fit a Motor PTC cable (not supplied).
6. Run all cables between the motor and inverter within the cable sheath provided.

7. Using the appropriate motor gasket, fix the terminal housing to the motor.
Screw fixing torque values are: 1.5 Nm – M4 and 2.5 Nm – M5.
8. Insert power and control cables through glands and make off ends as required.
9. Fit the Filter board (See Figure 2-2).
10. Secure Filter board with M3 taptite screws (see Table on Page 84 for torque values).
11. Connect power cables as detailed in section 2.5.2.
12. Connect up the motor terminals in either star or delta configuration as explained in section 2.5.2.
13. Connect control wires as detailed in section 2.5.2.
14. Fit the I/O board (See Figure 2-2).
15. Secure I/O board with M3 taptite screws.
16. Fit jumpers as required – see Section 3.3.
17. Place the inverter cover onto the assembled terminal housing.
18. Secure the inverter cover with the four M5 captive screws.
Use either a 4-5 mm flat bladed screwdriver or a 2pt Pozidrive Head screwdriver.

2.3.3 Installation of Cable Glands

Before power and control cables can be connected to their respective circuits it will first be necessary to fit the cable glands supplied.

Each gland should be located ideally to allow for convenient cable runs to the terminals located on the Filter and I/O boards.

1. Using a hammer and a flat-head screwdriver as shown opposite strike the gland plate or 'knockout' to obtain a clearance for the 25 mm cable gland.

Note:

Care must be taken to prevent damage to the Terminal Housing, as this may affect the IP rating of the inverter.

2. Remove any sharp edges from the gland area and any swarf from the terminal housing.

3. After the knockout has been removed it should be safely discarded and the cable glands fitted as shown in the assembly diagram opposite.


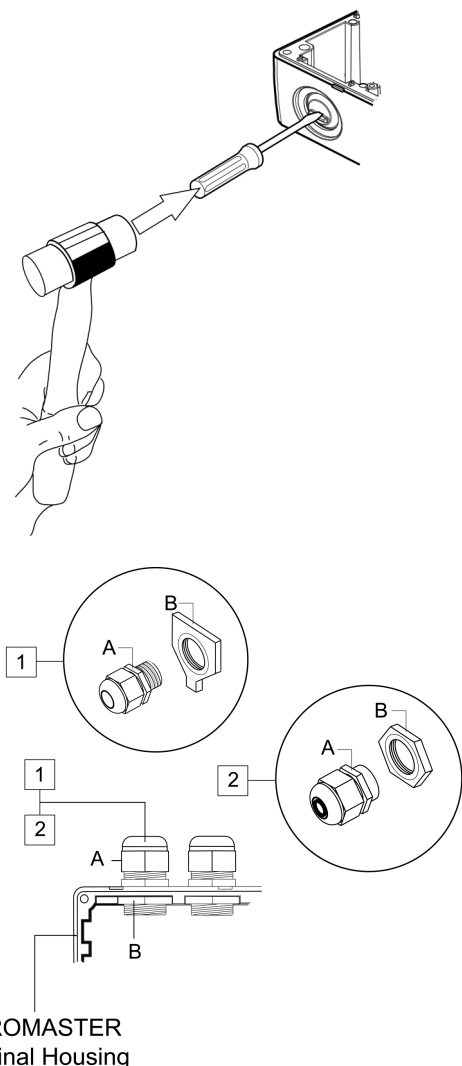



Figure 2-1 Installation of Cable Gland


2.3.4 Mounting the Inverter on a Siemens Motor

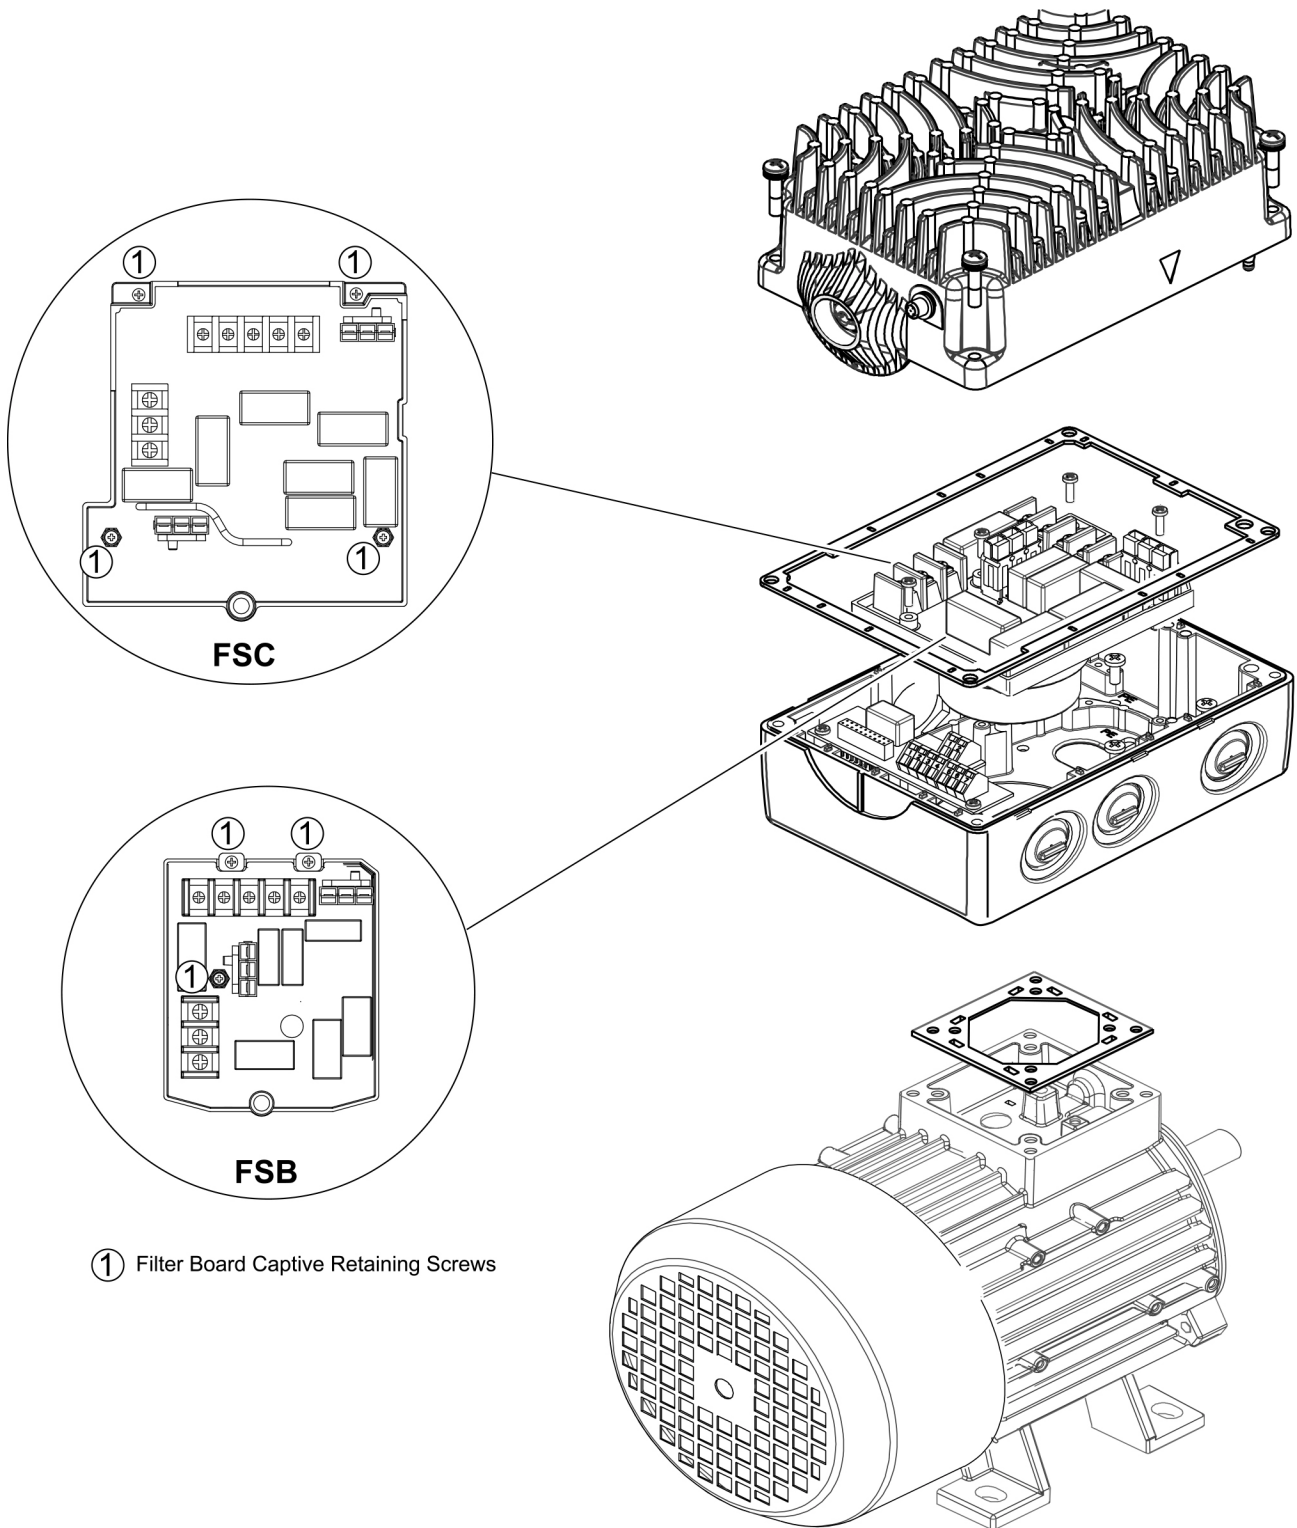


① Filter Board Captive Retaining Screws

2.3.5 Wall Mounting the Inverter

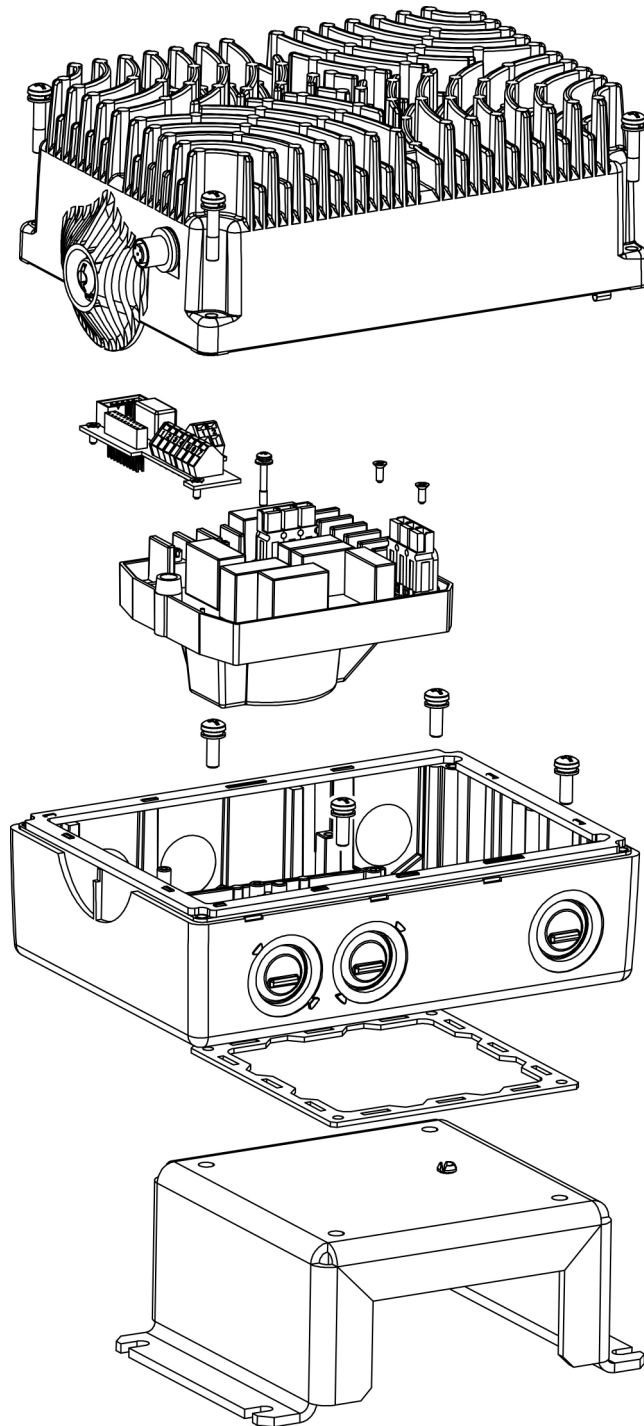

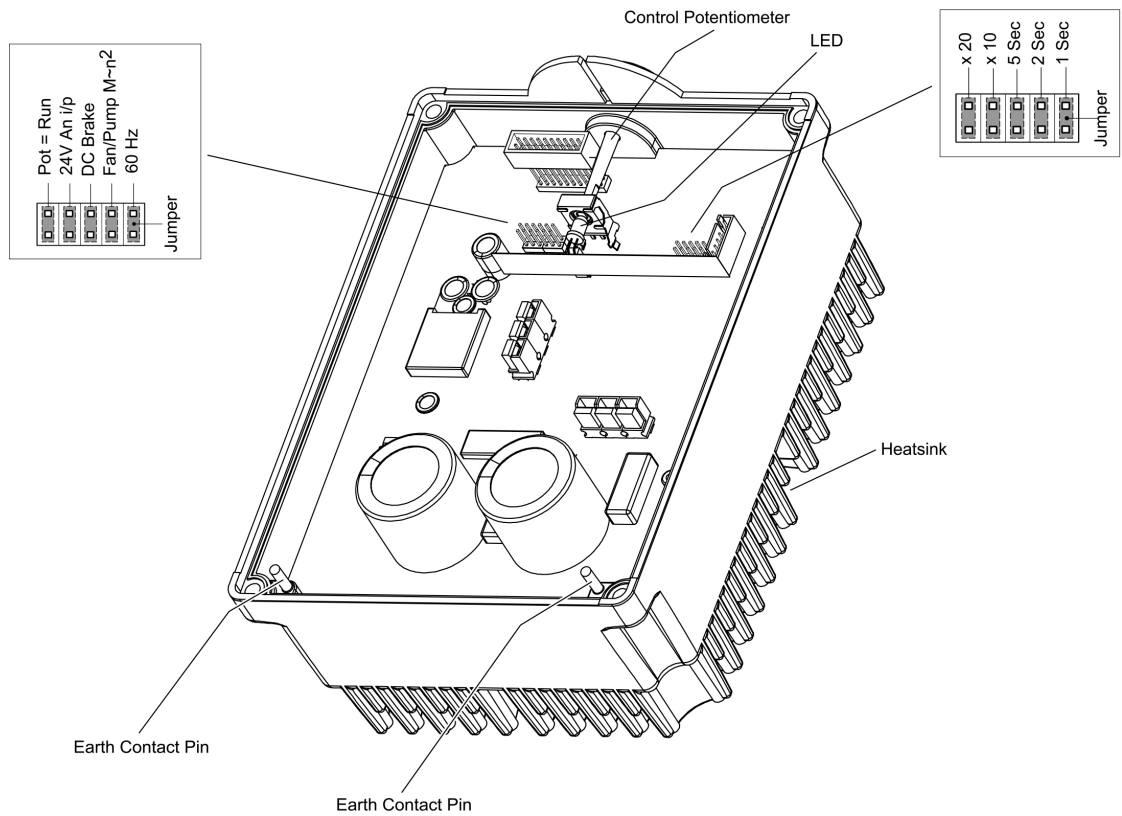

Inverter Cover (CSB)

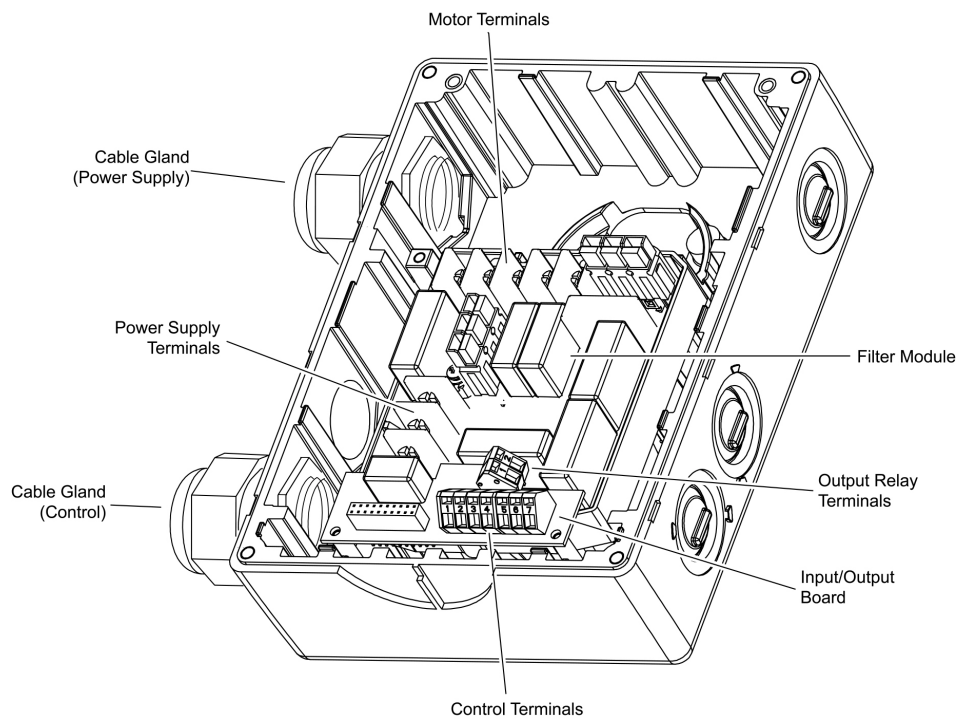

Terminal Housing (CSB)
(Cable glands shown in preferred positions)

Figure 2-2 MICROMASTER 411 Internal Layout

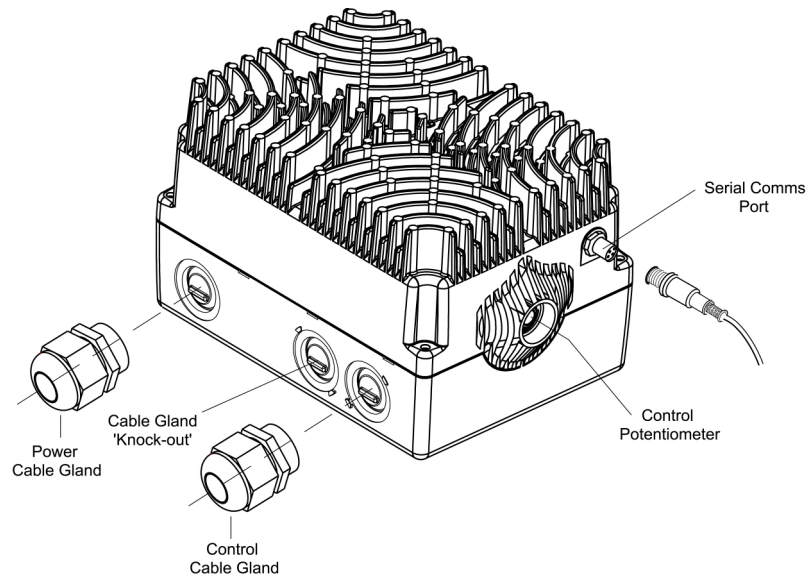


Figure 2-3 MICROMASTER 411 General Layout

2.3.6 MICROMASTER 411 – Cable Gland Dimensions.

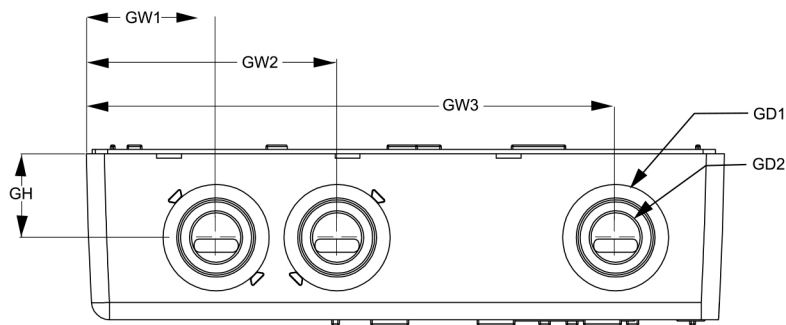


Figure 2-4 MICROMASTER 411 Gland Dimensions

Table 2-1 Gland Plate Detail

Case Size	Gland Pitch mm (Inches)			Height mm (Inches)	Sealing surface mm (Inches)	Knock-out Diameter mm (Inches)
	GW1	GW2	GW3			
B	42.9 (1.68)	82.9 (3.26)	175.0 (6.89)	27.6 (1.09)	35 (1.38)	26 (1.02)
C	43.0 (1.69)	83.0 (3.27)	203.4 (8.01)	38.3 (1.51)	36 (1.42)	26 (1.02)

2.3.7 MICROMASTER 411 Dimensional Detail

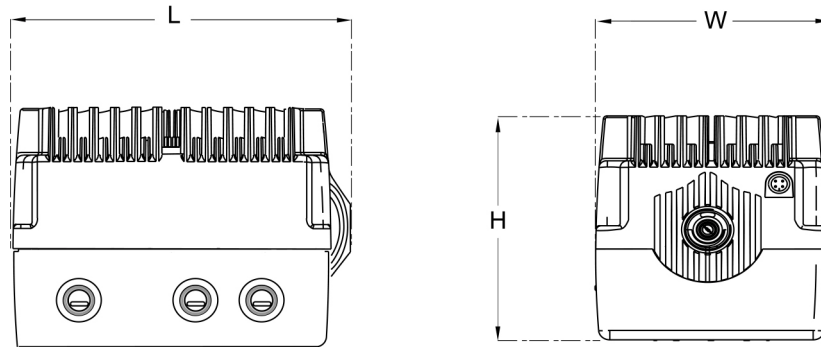


Figure 2-5 MICROMASTER 411 Case Size B Dimensions

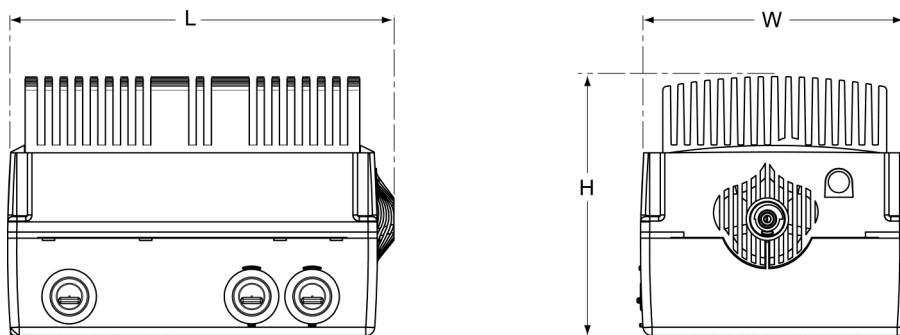


Figure 2-6 MICROMASTER 411 Case Size C Dimensions

Table 2-2 MICROMASTER 411 Dimension Detail

Case Size	Overall Dimensions mm (Inches)			Weight kg (lbs)	Power Range kW (hp)
	Height (H)	Length (L)	Width (W)		
B	135.6 (5.31)	222 (8.74)	154 (6.06)	4.9 (10.77)	0.37 – 1.5 (0.5 – 2.0)
C	170.6 (6.61)	255 (10.04)	177 (6.97)	7.4 (16.34)	2.2 – 3.0 (3.0 – 4.0)

2.4 Mechanical Installation COMBIMASTER 411

2.4.1 COMBIMASTER 411 Installation Procedure

Ensure that any lifting eyes are tightened down prior to moving the COMBIMASTER into position.

Use the lifting eyes provided if a motor has to be lifted. Always check the capacity of the hoist before lifting any equipment.



Warning

Do not attempt to lift the COMBIMASTER 411 using the inverter housing as this could result in severe damage to the inverter or motor and possibly severe personal injury.

Move the COMBIMASTER 411 into the required position and secure by inserting suitable foundation bolts through the motor feet (see Figure 2-7 and Figure 2-8). Allow adequate clearance of 100mm minimum around the unit to provide for air circulation.

COMBIMASTER 411 is supplied with a Power Supply Gland fitted to the preferred cable entry port (see Figure 2-3). Should it become necessary to select other cable entry ports for either Power supply or Control then cable glands must be removed and the redundant port blanked off. Always remember to remove Inverter electronics before knocking out blanking plates. Blank off all redundant cable ports.



Caution


Do not knock out cable gland blanking plates unless inverter 'electronics' (Filter & I/O boards) have been removed

Carry out the following checks prior to commissioning the COMBIMASTER 411:

1. The rotor is correctly aligned and free to rotate without obstruction.
2. Transmission elements are adjusted correctly (e.g. belt tensioned) and suitable for the given operating conditions.
3. All electrical connections, mounting screws and connecting elements tightened and fitted correctly.
4. Protective conductors installed properly
5. Any auxiliary equipment that might be fitted (e.g. mechanical brake) is in working order.
6. Protection guards are installed around all moving and live parts and any relevant safety notices displayed.

2.4.2 COMBIMASTER 411 Dimensional Detail

2.4.2.1 COMBIMASTER 411- Case Size B

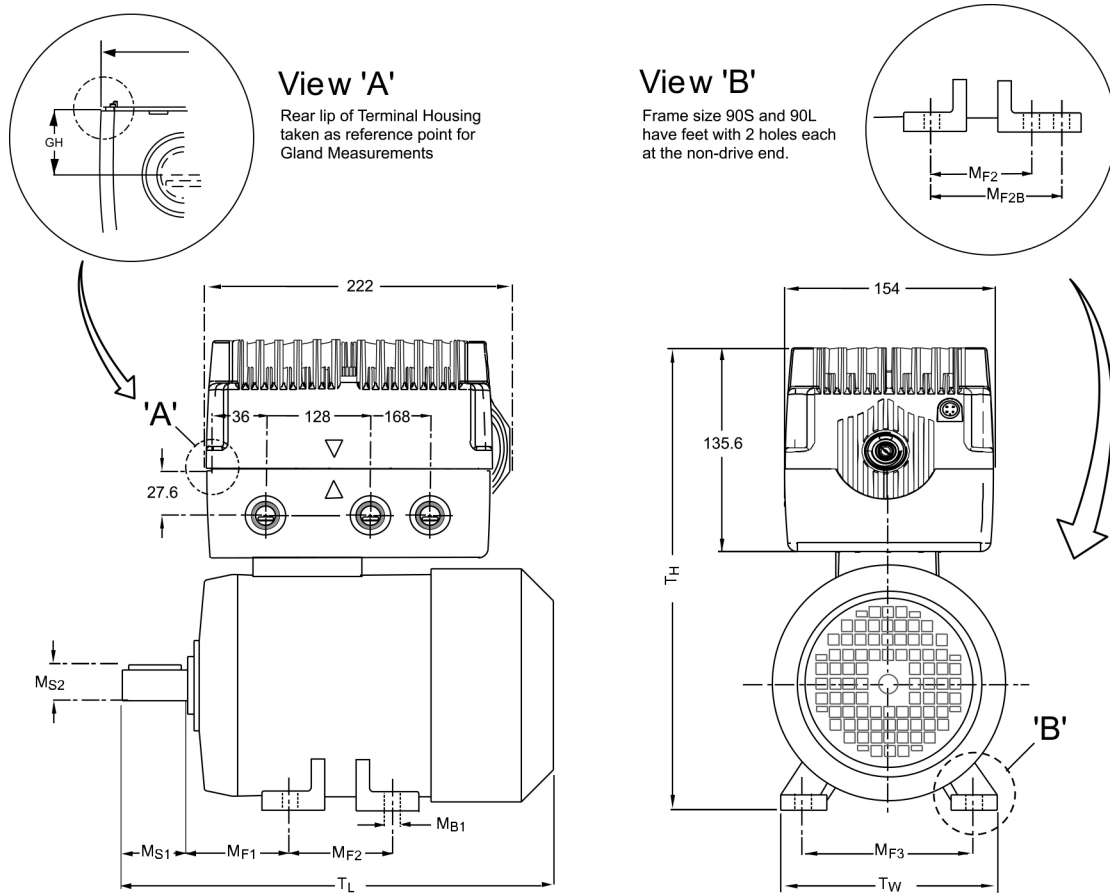


Frame Size	Motor	Poles	TL	TW	TH	MF1	MF2	MF3	MS1	MS2	MB1
71M	1LA7 070	2-4	240 (9.4)	132 (5.2)	278.6 (11.0)	45 (1.8)	90 (3.5)	112 (4.4)	30 (1.2)	14 (0.6)	7 (0.3)
	1LA7 073										
80M	1LA7 080	2-4	274 (10.8)	150 (5.9)	296.6 (11.7)	50 (2.0)	100 (3.9)	125 (4.9)	40 (1.6)	19 (0.7)	9.5 (0.4)
	1LA7 083										
			309 (12.2)								
90S	1LA7 090	2-4	331 (13.0)	165 (6.5)	314.6 (12.4)	56 (2.2)	100 (3.9)	140 (5.5)	50 (2.0)	24 (0.9)	10 (0.4)
	1LA7 096										

Notes

1. All dimensions given in millimeters (and inches).
2. MF dimensions use Motor construction type IMB3.

Figure 2-7 COMBIMASTER 411 Case Size B Dimensional Detail

2.4.2.2 COMBIMASTER 411 - Case Size C

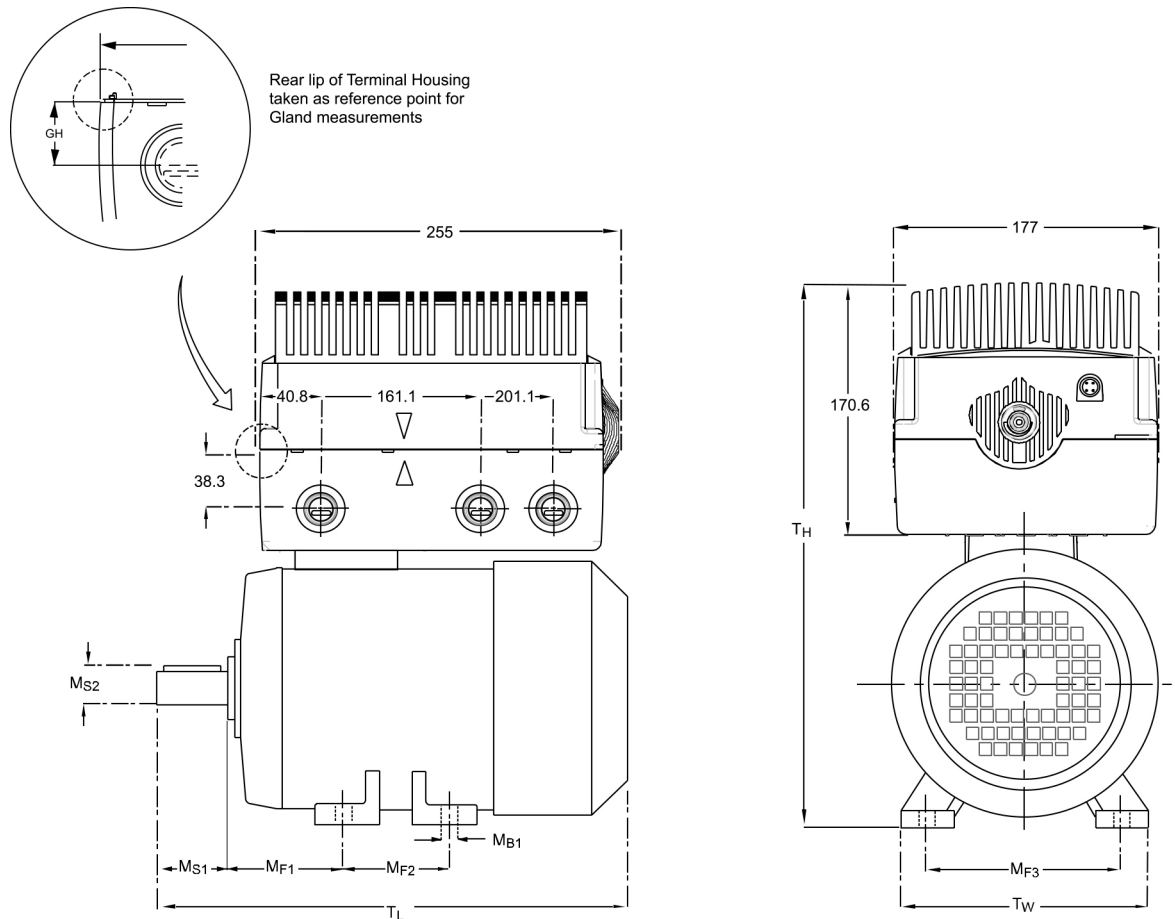

Frame Size	Motor	Poles	T _L	T _W	T _H	M _{F1}	M _{F2}	M _{F3}	M _{S1}	M _{S2}	M _{B1}
90L	1LA7 096	4	332 (13.1)	165 (6.5)	349.5 (13.8)	56 (2.2)	100 (3.9)	140 (5.5)	50 (2.0)	24 (0.9)	10 (0.4)
100L	1LA7 100	2-4	373 (14.6)	196 (7.7)	370 (14.6)	63 (2.5)	140 (5.5)	160 (6.3)	60 (2.4)	28 (1.1)	12 (0.5)

Notes

1. All dimensions given in millimeters (and inches).
2. MF dimensions use Motor construction type IMB3.

Figure 2-8 COMBIMASTER 411 Case Size C Dimensional Detail

2.5 Electrical Installation



Warning

- ◆ **THIS EQUIPMENT MUST BE GROUNDED.**
 - ◆ To ensure the safe operation of the equipment, it must be installed and commissioned by qualified personnel in full compliance with the warnings laid down in these operating instructions.
 - ◆ Take particular note of the general and regional installation and safety regulations regarding work on dangerous voltage installations (e.g. EN 50178), as well as the relevant regulations regarding the correct use of tools and personal protective gear.
 - ◆ Power supply and motor terminals can carry dangerous voltages even if the inverter is inoperative; wait **5 minutes** to allow the unit to discharge after switching off before carrying out any installation work.
-

2.5.1 General



Warning

The inverter must always be grounded. If the inverter is not grounded correctly, extremely dangerous conditions may arise within the inverter which could prove potentially fatal.

Operation with Residual Current Device

If an RCD (also referred to as ELCB or RCCB) is fitted, the MICROMASTER 411 Inverters will operate without nuisance tripping, provided that:

- A type B RCD is used.
- The trip limit of the RCD is 300mA.
- The neutral of the supply is grounded.
- Only one inverter is supplied from each RCD.

Operation with long cables



Caution

The control and power supply cables **must** be laid separately. Do not feed them through the same cable conduit/trunking. Never use high voltage insulation test equipment on cables connected to the inverter.

2.5.2 Cable Connections



Warning

- ◆ Isolate the electrical power supply before making or changing connections to the unit.
- ◆ Ensure that the motor is configured for the correct supply voltage – 380 to 480 V three-phase supply.
- ◆ When synchronous motors are connected or when coupling several motors in parallel, the inverter must be operated with voltage/frequency control characteristic (P1300 = 0, 2 or 3).



Caution

After connecting the power and motor cables to the proper terminals, make sure that the cover has been replaced properly before supplying power to the unit!

Note

- ◆ Ensure that the appropriate circuit-breakers/fuses with the specified current rating are connected between the power supply and inverter. (Refer to Section 7.5)
- ◆ Use Class 1 75°C copper wire only (for UL compliance). For tightening torque see table on Page 84.
- ◆ To tighten up the power terminal screws use either a 4-5 mm flat bladed screwdriver or a 2pt Pozidrive Head screwdriver.

Access to the power and motor terminals

The procedure for accessing the power and motor terminals on the COMBIMASTER 411 & MICROMASTER 411 Inverter is illustrated in Figure 2-9 Motor and Power Supply Connections.

2.5.2.1 Power Connections

The information given in Figure 2-9 shows the connection of the motor wires to the filter board terminals. Power cables should be connected to the inverter terminals as detailed in the following procedure. For cable size and rating refer to the Table on Page 84.

1. If the Inverter cover (the top-half) has already been fitted, unscrew the four M5 cross-head captive screws on the inverter cover.
2. Remove inverter (cover) to access the connection terminals.
3. Feed the power cable into the terminal housing via the appropriate gland hole.
4. Connect power leads to terminals L1, L2, L3 and to the separate earth.

To avoid snagging on components when the inverter halves are brought together, run cables along the base of the terminal housing.

5. Use Class 1 75° C copper wire only. Use a 4-core cable. If crimp terminals are used they must be insulated. If crimps are not used, the strip length must not exceed 5mm. Use a 4 - 5 mm cross-tip screwdriver to tighten the terminal screws.
6. Recommended tightening torque for power supply terminals is as given in the Table on Page 84.
7. A 'drip loop' is recommended when connecting the mains and control cables.

8. Ensure that the power source provides the correct voltage and is designed for the rated current. Use appropriate circuit-breakers with specified current rating between the power supply and inverter.
9. Ensure the appropriate circuit breakers/fuses with the specified current rating are connected between the power supply and the inverter. (See Section 7.5)



Warning

- ◆ It is essential that the Inverter be correctly earthed to the motor earth. Severe injury may result if the motor is not correctly earthed.
 - ◆ If the Inverter is being installed after a period of storage please refer to the information in Section 2.1.
-

2.5.2.2 Motor Connections for Star/Delta.

The information given in Figure 2-9 also shows the connection of motor wires to the filter board inverter/motor terminals. Motor wires should be connected in either star or delta configuration in accordance with the motor rating plate. For cable size and rating refer to the Table on Page 84.

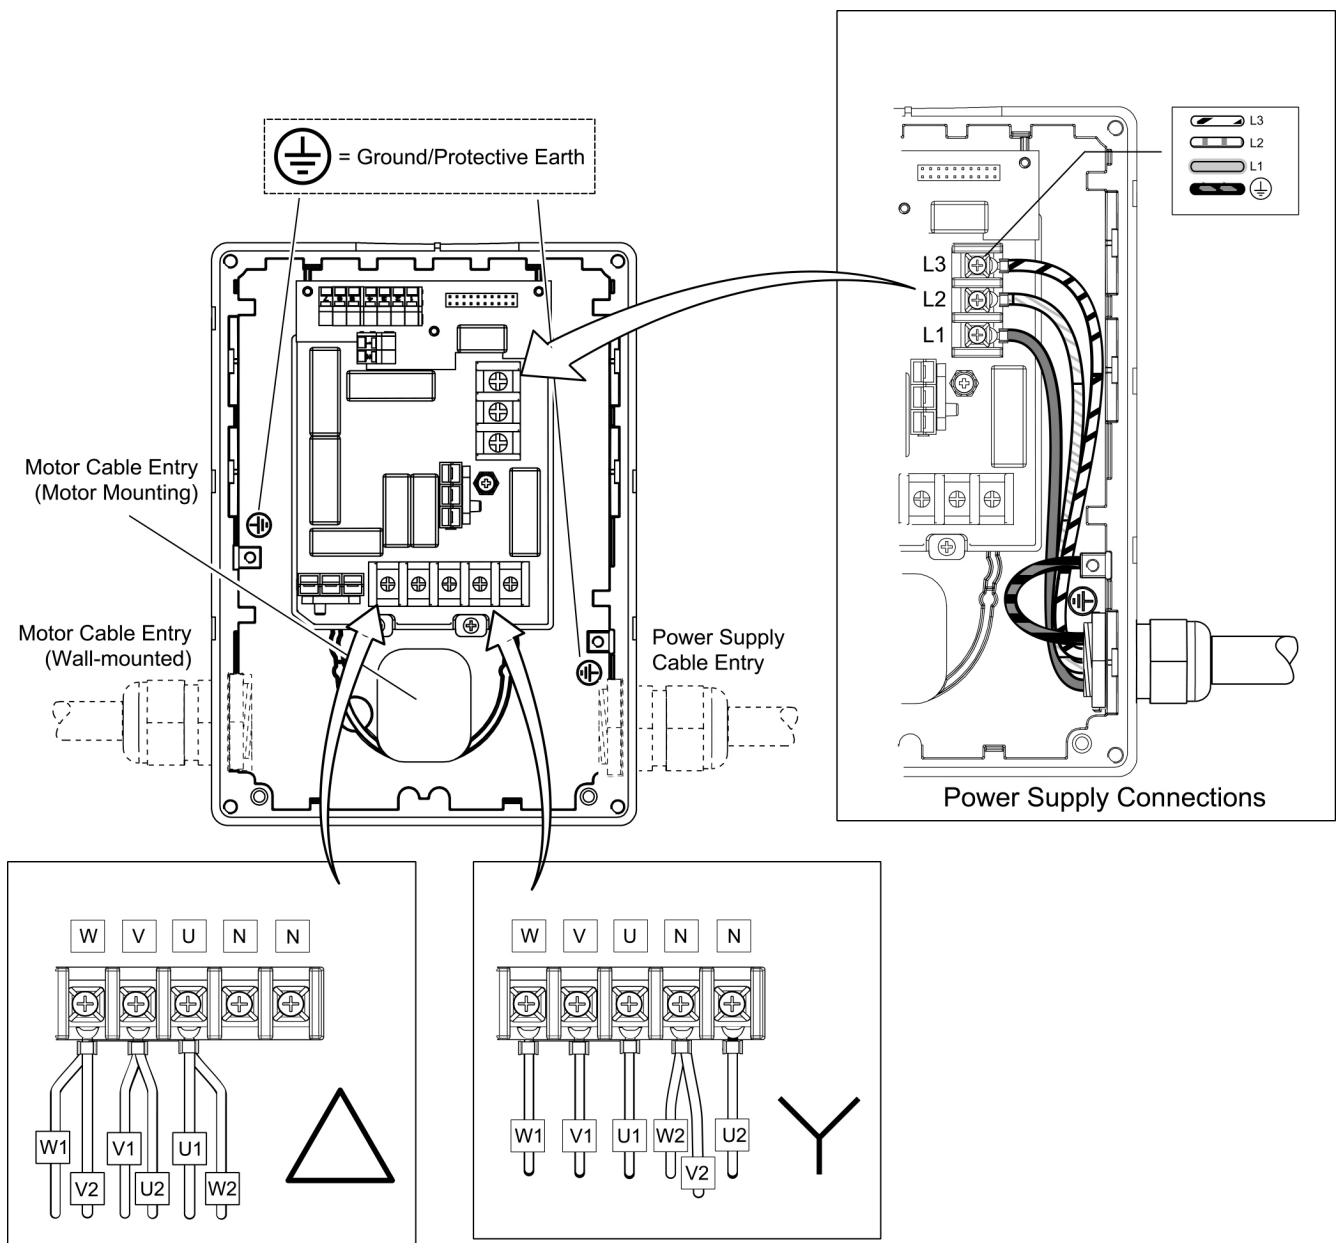



Figure 2-9 Motor and Power Supply Connections

2.5.2.3 Control Cable Connections

1. Feed the control cables into the inverter via one of the gland holes at the I/O module end of the terminal housing.
2. Run the control cable underneath the I/O board toward the control terminals.
3. Connect the control wires in accordance with the terminal information given in Figure 2-10.
4. Use screened cable for all control wiring.

Note:

If a PTC resistor is fitted, this should be connected between 4 (+24 V) and 3 (DIN 3).

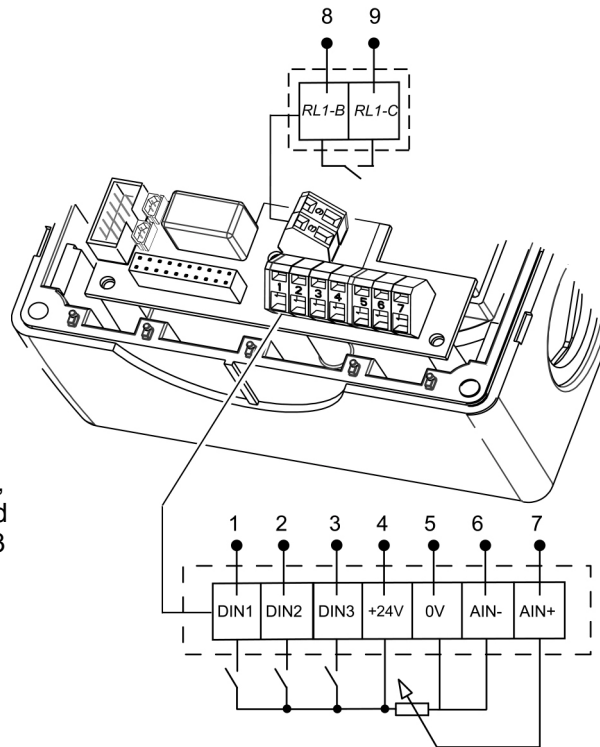

Terminal	Inputs	Parameter	Default operation
1	DIN 1	P0701 = '1'	ON/OFF1
2	DIN 2	P0702 = '12'	Reverse
3	DIN 3	P0703 = '9'	Fault Acknowledge
6/7	AIN (-/+)	P0756 = 0	0 – 10 V Analogue Input
	Option: DIN 4	P0704 ≠ 0	
8/9	Output Relay	P0731 = '52.3'	Fault identification

Figure 2-10 COMBIMASTER 411 & MICROMASTER 411 Control Terminals

2.5.2.4 Motor PTC Connections

In order for the inverter to monitor the motor PTC (if fitted) it will be necessary to connect the Motor PTC to the Inverter Digital input 3 (DIN3) terminal. Connect the Motor PTC extension cable (provided with the Inverter) between the Inverter I/O terminals 3 & 4 and the Motor PTC terminals within the motor terminal housing. The arrangement is as shown in Figure 2-11 below.

Note

DIN 3 must be configured to read the PTC input [(P0703 = 29) (external trip)]

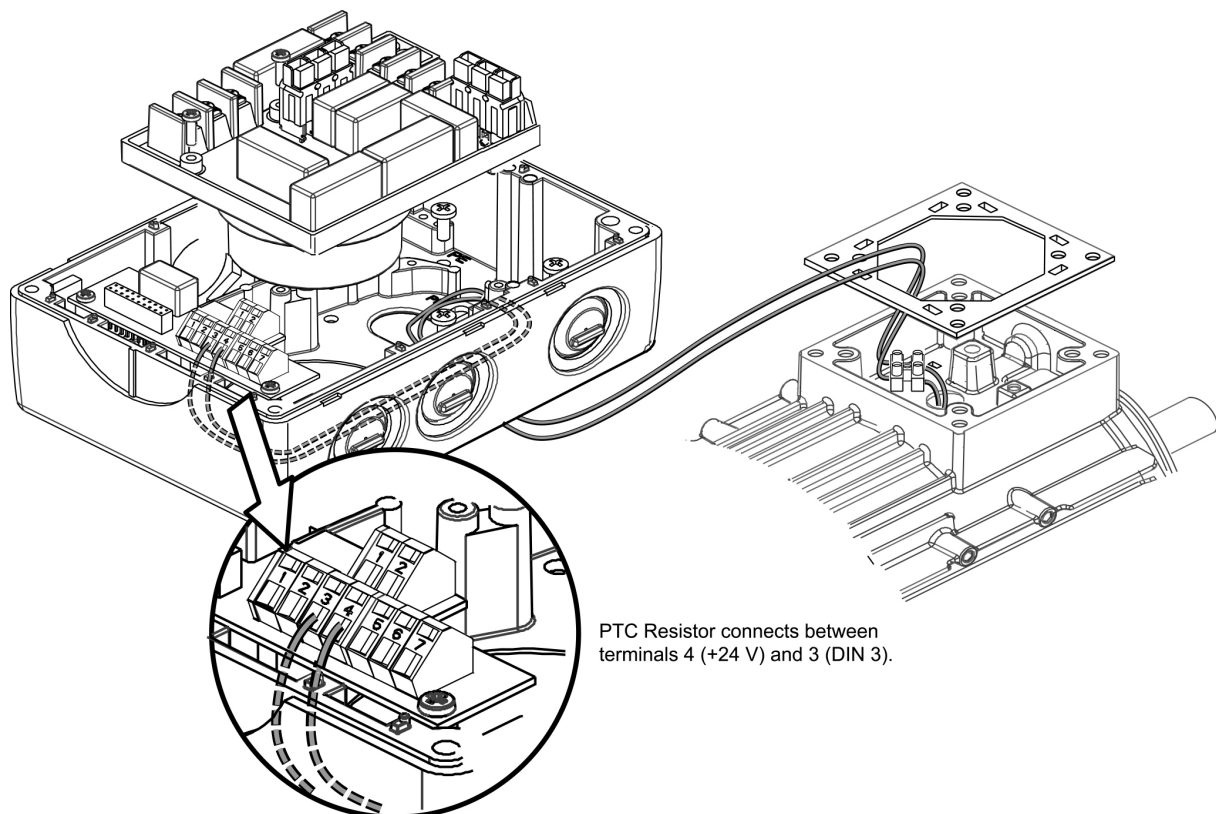


Figure 2-11 PTC Connections

2.5.3 Avoiding Electro-Magnetic Interference

The inverters are designed to operate in an industrial environment where a high level of EMI can be expected. Usually, good installation practices will ensure safe and trouble-free operation. If you encounter problems, follow the guidelines stated below.

Action to Take

- Make sure that any control equipment connected to the inverter (such as a PLC) is connected to the same ground or star point as the inverter via a short, thick link.
- Flat conductors are preferred as they have lower impedance at higher frequencies.
- Separate the control cables from the power connections as much as possible, using separate trunking, if necessary at 90° right angles.
- Whenever possible, use screened leads for the connections to the control circuitry.

- Ensure that contactors are suppressed, either with R-C suppressors for AC contactors, or 'flywheel' diodes for DC contactors, **fitted to the coils**. Varistor suppressors are also effective. This is important when the contactors are controlled from the inverter relay.
- Screened motor cables should be used when the motor is mounted separately from the inverter.
- Maximum motor cable length is 5 meters (16.40 feet).



Warning

Safety regulations **must not** be compromised when installing inverters!

3 Commissioning

This Chapter contains:

- Description of the Operator Panel controls.
- A brief description of the optional Operator Panels available and an explanation of the operation of the Basic Operator Panel (BOP).
- An 8-step guide at the end of the Chapter, which provides a simple procedure for changing parameters.

3.1	Block Diagram	41
3.2	General Information.....	42
3.3	Commissioning Procedure Overview	42
3.4	General operation.....	56



Warning

- ◆ COMBIMASTER411/MICROMASTER 411 operates at high voltages.
 - ◆ When operating electrical devices, it is impossible to avoid applying hazardous voltages to certain parts of the equipment.
 - ◆ Emergency Stop facilities according to EN 60204 IEC 204 (VDE 0113) must continue to function in all operating modes of the control equipment. Any disengagement of the Emergency Stop facility must not lead to uncontrolled or undefined restart.
 - ◆ Wherever faults occurring in the control equipment may lead to substantial material damage, or even grievous bodily injury, (i.e. potentially dangerous faults), additional external precautions must be taken or facilities provided to ensure or enforce safe operation, even when a fault occurs (e.g. independent limit switches, mechanical interlocks, etc.).
 - ◆ Certain parameter settings may cause the inverter to restart automatically after an input power failure.
 - ◆ This equipment is capable of providing internal motor overload protection. Refer to P0610 (level 3) and P0335, I²T is ON by default. Motor overload protection can also be provided using an external PTC via a digital input.
 - ◆ This equipment is suitable for use in a circuit capable of delivering not more than 10,000 symmetrical amperes (rms), for a maximum voltage of 460V when protected by an H or K Class fuse (see *Table on Page 85*).
 - ◆ This equipment must not be used as an 'emergency stop mechanism' (see *EN 60204, 9.2.5.4*).
-



Caution

Only qualified personnel may enter settings in the control panels. Particular attention must be paid to safety precautions and warnings at all times.

The COMBIMASTER 411 & MICROMASTER 411 is supplied with default parameter settings that cover the following requirements:

- The motor rating data, voltage, current and frequency are all compatible with the inverter data.
- Linear V/f motor speed, controlled by the control potentiometer.
- Maximum speed 3000 min⁻¹ with 50 Hz (3600 min⁻¹ with 60 Hz), controllable via the control potentiometer or by using a potentiometer via the inverter's analogue input.
- Ramp-up time / Ramp-down time = 10 s.

If more complex application settings are required, please refer to the parameter listing in these Operating Instructions.

To change parameters you will need one of the optional modules "Basic Operator Panel" (BOP) or the "Advanced Operator Panel" (AOP) described in later sections.

3.1 Block Diagram


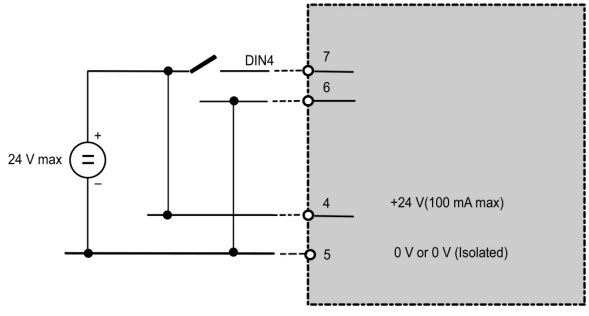


Figure 3-1 COMBIMASTER 411 & MICROMASTER 411 Block Diagram

3.2 General Information

For basic operation no additional equipment is required. However, for more complex operation either the Basic Operator Panel (BOP), Advanced Operator Panel (AOP) or Fieldbus options can be used. These are available as non-standard options and must be ordered separately.

When delivered the inverter has a frequency setpoint range of between 0 Hz and 50 Hz. Regardless of its initial position the Control Potentiometer must be turned fully counter-clockwise before the inverter can start.

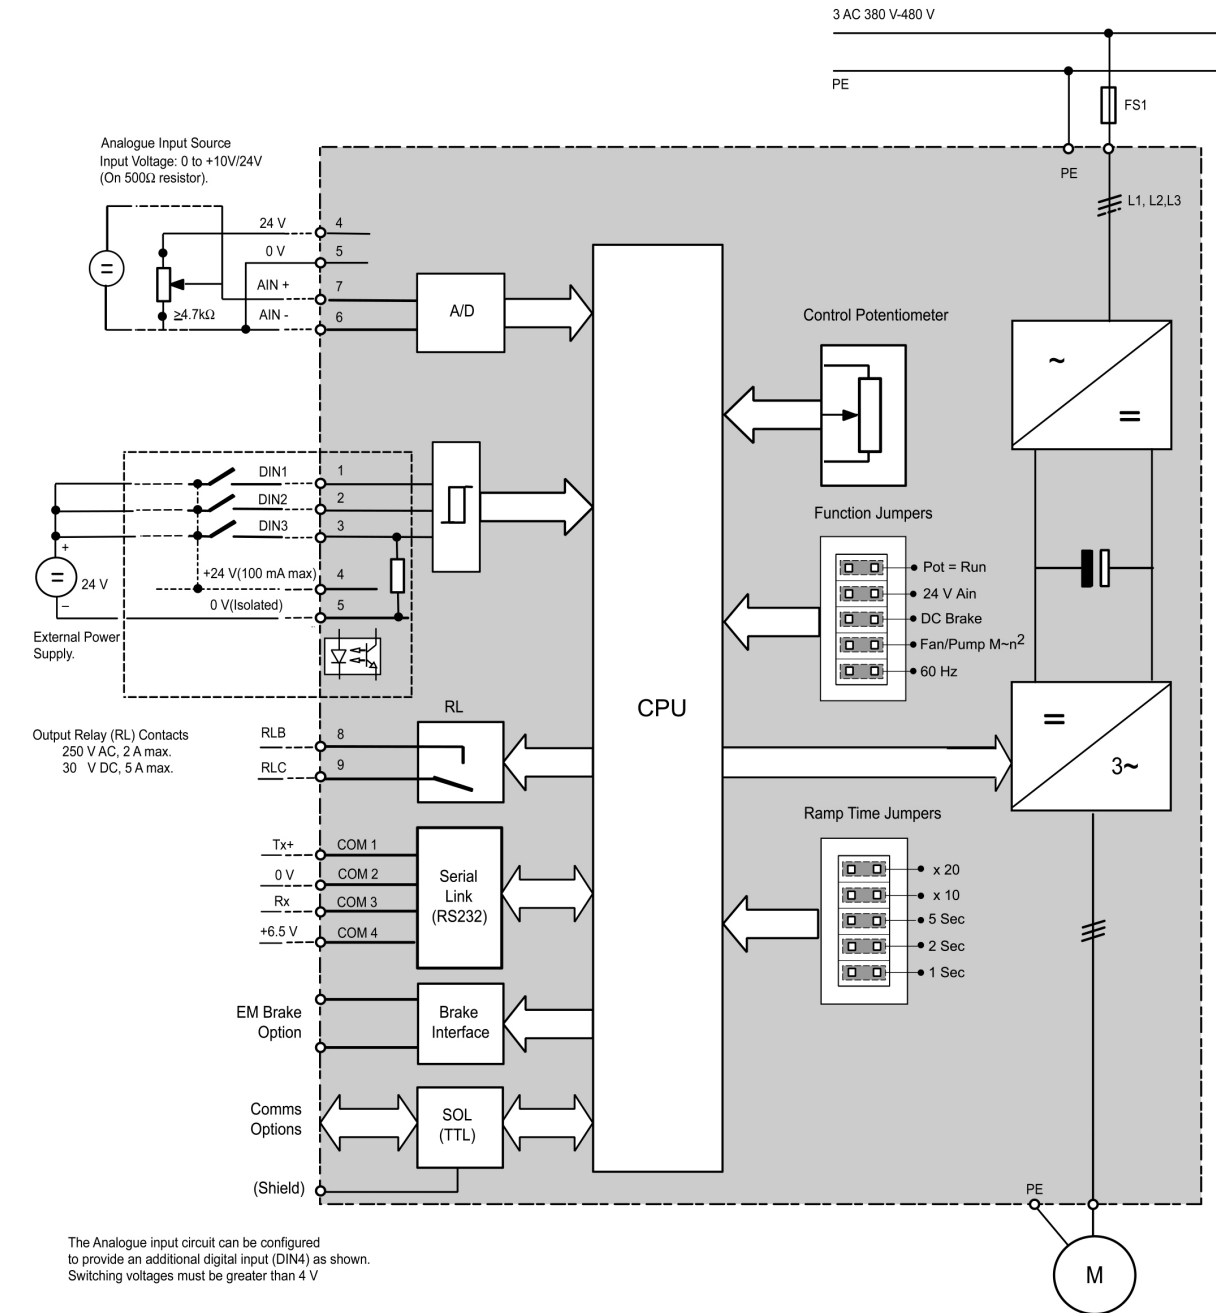

Warning

The inverter does not have a power supply switch and is therefore live when the power supply is connected.

3.3 Commissioning Procedure Overview

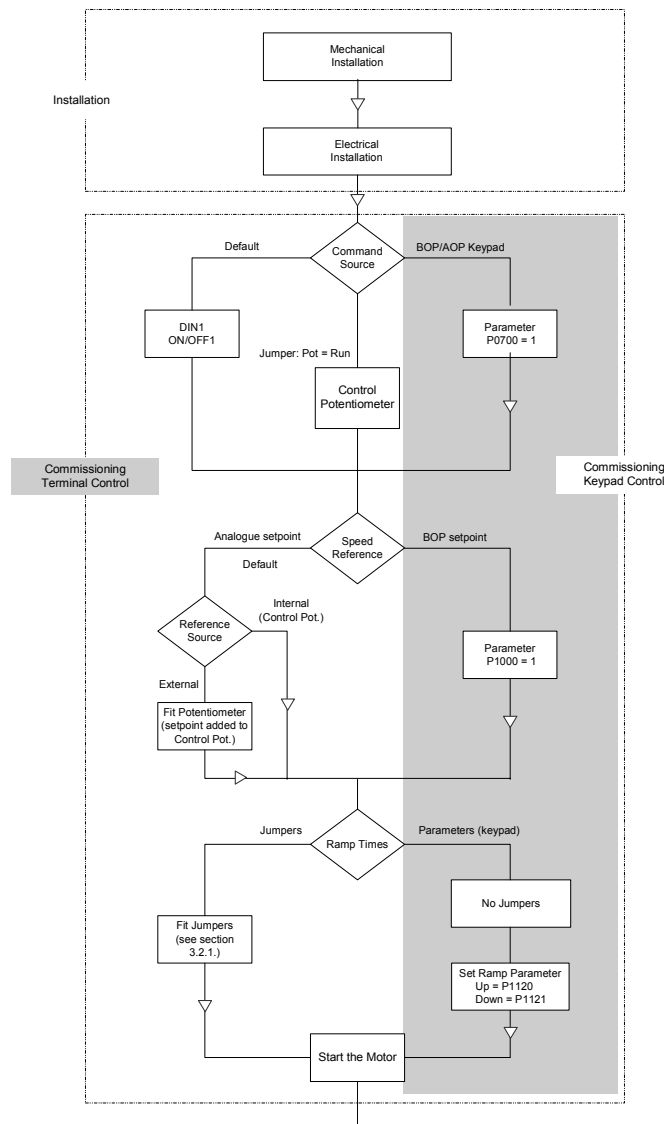


Figure 3-2 MICROMASTER 411/COMBIMASTER 411 Commissioning Guide

3.3.1 Ramp Times Using Jumpers

Inverter ramp times are set using a series of 5 jumpers (fit jumper to enable function). When jumpers are used, the Inverter ramp times are reset from their default (or current) values. The inverter recognizes when jumper values have been set when power is re-applied.

Caution

Jumpers have priority in setting ramp times. When the jumpers are removed the ramp times are not changed. It is then possible to change ramp times via the parameters (using the BOP).

Ramp times apply to Ramp Up and Ramp Down. Jumper locations are as shown below:

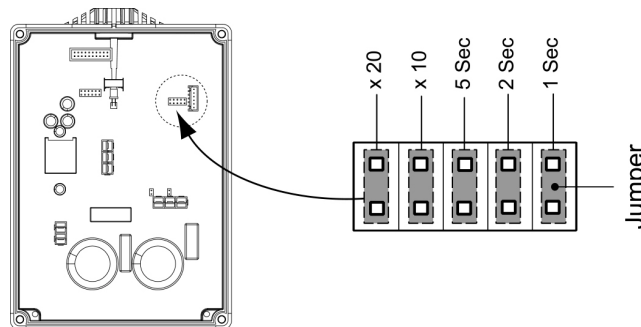


Figure 3-3 Ramp Time Jumpers

Using up to 5 jumpers allows ramp times to be set between 1 - 240 secs. See Jumper Reference Table for further clarification.

Table 3-1 Ramp Time Adjustment Jumpers

Time	1sec	2sec	5sec	X10	X20
1s	✓				
2s		✓			
3s	✓	✓			
5s			✓		
6s	✓		✓		
7s		✓	✓		
8s	✓	✓	✓		
10s	✓			✓	
20s		✓		✓	
30s	✓	✓		✓	
50s			✓	✓	
60s	✓		✓	✓	
70s		✓	✓	✓	
80s	✓	✓	✓	✓	
90s	✓	✓		✓	✓
100s			✓		✓
120s	✓		✓		✓
140s		✓	✓		✓
150s			✓	✓	✓
160s	✓	✓	✓		✓
180s	✓		✓	✓	✓
210s		✓	✓	✓	✓
240s	✓	✓	✓	✓	✓

Ramp Time Jumpers

In Table 3-2 the behaviour of the Ramp Time Jumpers are explained:

Table 3-2 Ramp Time Jumper Behaviour

Status before action(s)	Action(s)	Reaction(s) of the inverter
<ul style="list-style-type: none"> ➤ No jumper fitted ➤ Ramp times have arbitrary setting 	<ul style="list-style-type: none"> ➤ Power down ➤ Fit jumper(s) ➤ Power up 	<ul style="list-style-type: none"> ➤ Inverter uses the ramp times defined by the current jumper setting
<ul style="list-style-type: none"> ➤ At least 1 jumper is fitted ➤ Ramp times have arbitrary setting 	<ul style="list-style-type: none"> ➤ Cycle power 	<ul style="list-style-type: none"> ➤ Inverter uses the ramp times defined by the current jumper setting
<ul style="list-style-type: none"> ➤ At least 1 jumper is fitted ➤ Ramp times have arbitrary setting 	<ul style="list-style-type: none"> ➤ Power down ➤ Remove jumper(s) ➤ Power up 	<ul style="list-style-type: none"> ➤ Inverter uses the ramp times that were used before removing the jumper(s)

3.3.2 Control Circuit Jumpers

Control Jumpers are provided for the following functions (fit jumper to enable function). Jumpers can only be accessed when the cover is removed (see Table 3-3):

1. Pot = Run: Enables the control potentiometer as the Command Source (auto restart is enabled).
2. 24 V Analogue input: to change analogue input range from 0 -10V to 0 - 24V.
3. DC Brake: to change Stop function from OFF1 to DC Brake.
4. Fan/Pump: $M \sim n^2$: to change V/f curve from Linear to Quadratic curve.
5. 60Hz operation: to change motor default settings from 50Hz to 60 Hz.

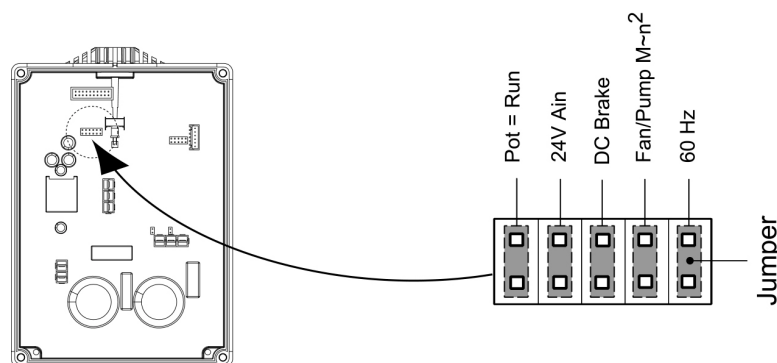


Figure 3-4 Control Circuit Jumpers

Table 3-3 Control Circuit Jumper Settings

Jumper	Jumper Fitted	Jumper Removed
Pot = Run	P0700 = 2 P0705 = 1 P1210 = 6	P0700 = 2 P0701 = 1 P1210 = 0
24 Ain	No software effect	No software effect
DC Brake	Uses the ramp jumper setting to derive the ramp down value. Otherwise the value in P1233 (DC Brake Duration) is ramp down time multiplied by motor nominal current, divided by the inverter nominal current if the value is within the range of P1233 otherwise it is clamped at the upper limit.	P1233 = 0
Fan/Pump	P1300 = 2 (fan curve/quadratic vf)	P1300 = 0 (linear vf)
50/60 Hz	Rated Motor Frequency = 60 Hz	Rated Motor Frequency = 50 Hz

Control Jumpers

In Table 3-4 the behaviour of the Control Jumpers are explained:

Table 3-4 Control Circuit Jumper Behaviour

Status before action(s)	Action(s)	Reaction(s) of the inverter
➤ Jumper not fitted	➤ Power down ➤ Fit jumper(s) ➤ Power up	➤ Parameters influenced by jumper will have jumper default values
➤ Jumper not fitted	➤ Cycle power	➤ Parameters influenced by jumper are not changed
➤ Jumper fitted	➤ Power down ➤ Remove jumper ➤ Power up	➤ Parameters influenced by jumper will have "jumper removed" default values (normally factory default)
➤ Jumper not fitted	➤ Cycle power	➤ Parameters influenced by jumper are not changed



Warning

With the DC Brake jumper set, when stopping the inverter, DC Braking is applied for a period proportional to the Ramp Down Time. Frequency use of long periods of DC injection braking can cause the motor and the inverter to overheat.

3.3.3 Default setup

To change parameters it is necessary to use a Basic Operator Panel (BOP), Advanced Operator Panel (AOP) or an external serial interface. The CM411 is therefore delivered with the following default settings:

- ◆ Setpoint control from the Analog input in addition to Control Potentiometer.
- ◆ Supply frequency set for 0 to 50 Hz.
- ◆ Digital inputs:
DIN 1 ON/OFF1.
DIN 2 Reverse.
DIN 3 Fault Acknowledge
- ◆ Jumpers for Ramp and Control circuits set to open (CM411 default settings). Refer to Commissioning Procedure in section 3.3 for jumper selection.
- ◆ Relay – Fault conditions.

3.3.4 Default Operation

For default operation, connect the terminals as shown in Figure 3-5 below.

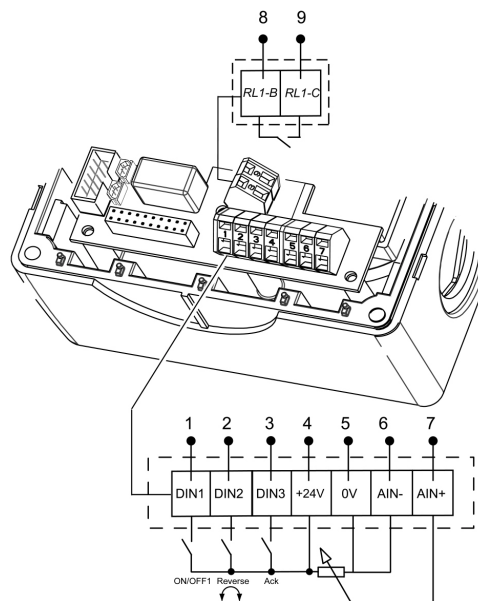


Figure 3-5 Default Setup Terminal Connections

- **FREQUENCY SETPOINT** – Setpoint addition: Control potentiometer and Analog input (P1000 = 27).

In order to provide the unit with a Frequency Setpoint the user can either:

1. Turn the control potentiometer.
2. Fit an external potentiometer, or apply an external analog control voltage across the terminals 6 & 7 AIN.

Note

When using the analog input only, the control potentiometer should be turned fully anti-clockwise to ensure that the control potentiometer is de-activated.

3.3.5 Operation using “Pot = Run” Jumper

With the “Pot = Run” jumper fitted, the control potentiometer provides the ON/OFF command source.

In order to provide the unit with a Run command the Control Potentiometer must be turned in a clockwise direction. To switch the unit OFF, turn the Control Potentiometer fully anti-clockwise (OFF position).



Warning

If the unit is powered up when the Control Potentiometer is not in the OFF position, the unit may automatically restart and ramp-up to the frequency setpoint (Auto-restart function is active by default).

- FREQUENCY SETPOINT – Setpoint addition: Control potentiometer and Analog input (P1000 = 27).

In order to provide the unit with a Frequency Setpoint the user can either:

1. Turn the control potentiometer.
2. Fit an external potentiometer, or apply an external analog control voltage across the terminals 6 & 7 AIN.


Notes:

- ◆ The 'Internal' frequency setpoint set by the Control Potentiometer is ADDED to the external frequency setpoint (set by either external potentiometer or control voltage).
 - ◆ On mains break or fault, the inverter will automatically re-start on power-up (Auto restart P1210 = 6 – default).
-

3.3.6 Non - Default Modes of Operation

Non-default modes of operation require the use of either a Keypad (e.g., Basic Operator Panel or Advanced Operator Panel) or a Commissioning tool (e.g., Drive Monitor) in order to change from the default parameter settings.

The Basic Operator Panel (BOP) – Part Number: 6SE6400-0BP00-0AA0 is housed in an Operator Panel Mounting Kit (6SE6401-1DF00-0AA0) and connected via the Interface Link Cable to the Inverter serial comms port. This arrangement is shown below.

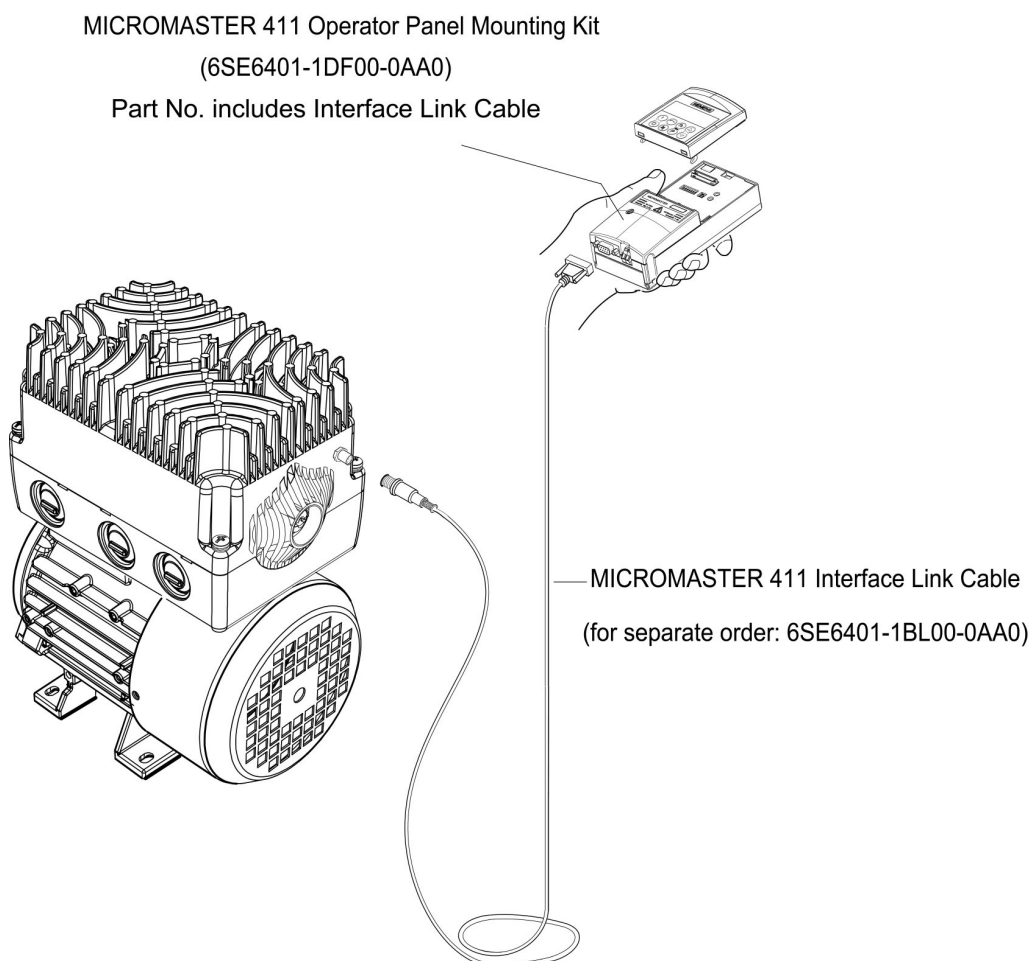

3.3.6.1 Stopping the Motor


When the inverter is being operated using the Run/Stop switch (connected to DIN1) setting the switch to OFF will override the potentiometer setting and bring the motor to a controlled stop.

3.3.7 Operation - Keypad Control

This method of operation requires either a Basic Operating Panel (BOP) (Order No. 6SE6400-0BP00-0AA0) or a serial link connection.

When using the BOP it will be necessary to set parameter P0700 to 1. This changes the command source to BOP control. For details on using the BOP refer to Commissioning with the Basic Operator Panel (BOP) on page 51.

3.3.7.1 Stopping the Motor

Where the inverter is being operated using digital control from the BOP the inverter can be stopped by pressing the Stop Inverter button .

3.3.8 If the Motor does not start up

Refer to Section 6 – Troubleshooting for further information.

3.3.9 If a fault occurs:


- 1) Switch the Inverter off.
- 2) Disconnect the power supply.
- 3) Reconnect the power supply.
- 4) Switch on again.
- 5) Faults are acknowledged by using digital input DIN 3 (default setting).

Switch off if the fault condition persists.

3.3.10 Commissioning Overview with BOP or AOP

Prerequisites:

Mechanical and electrical Installation is completed.

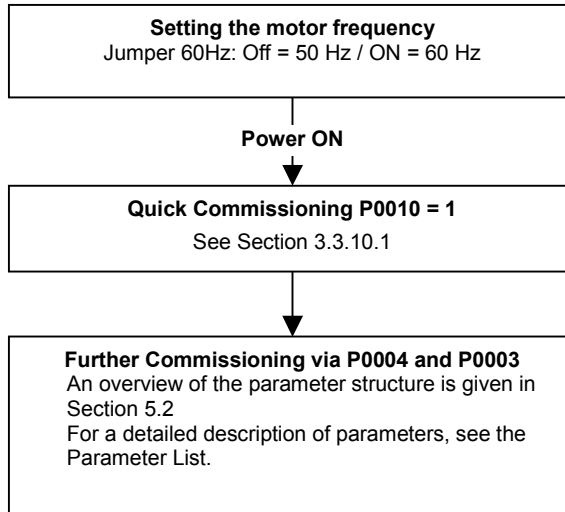

Note


We recommend the commissioning according to this scheme. Nevertheless an expert user is allowed to do the commissioning without the filter functions of P0004.

3.3.10.1 Quick commissioning (P0010=1)

It is **important** that parameter P0010 is used for commissioning and P0003 is used to select the number of parameters to be accessed. This parameter allows a group of parameters to be selected that will enable quick commissioning. Parameters such as Motor settings and Ramp settings are included.

At the end of the quick commissioning sequence, P3900 should be selected, which, when set to 1, will carry out the necessary motor calculations and clear all other parameters (not included in P0010=1) to the default settings. This will only happen in the Quick Commissioning mode.

Flow chart Quick Commissioning (Level 1 Only)

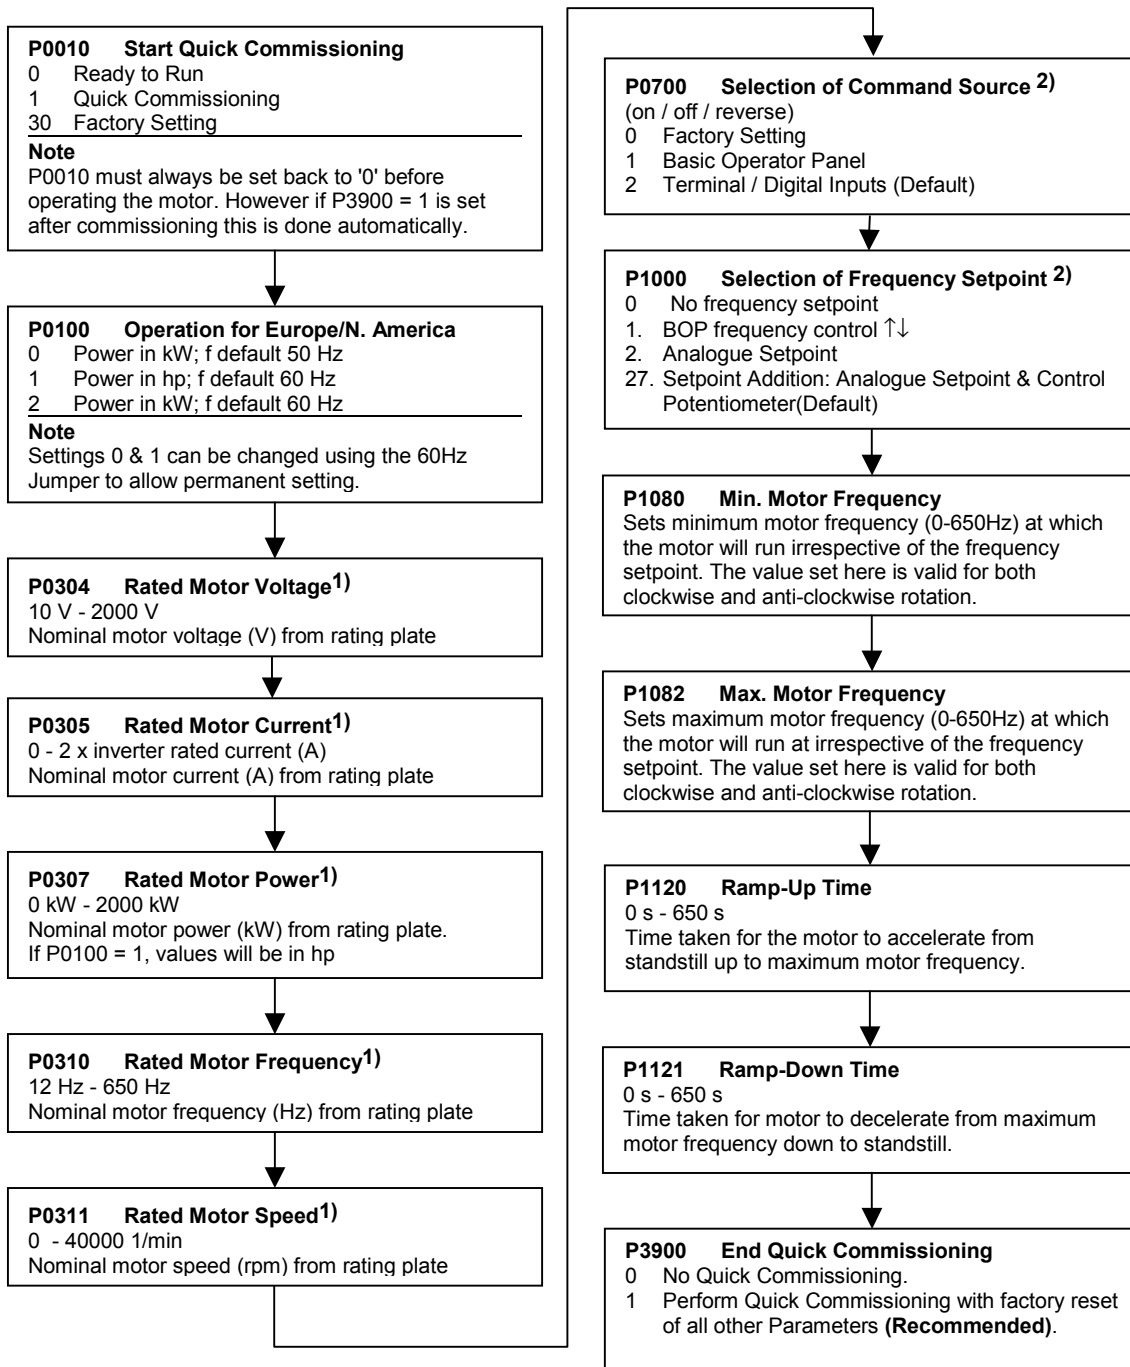

1) Motor related parameters – please refer to motor rating plate drawing.

2) Denotes parameters that contain more detailed lists of possible settings for use in specific applications. Please refer to the Parameter List and Operating Instructions on the CD.

3.3.11 Commissioning with the Basic Operator Panel (BOP)



The Basic Operator Panel (BOP), which is available as an optional accessory, provides the user with access to the inverter parameters and enables you to customize the settings of your COMBIMASTER 411 & MICROMASTER 411. The BOP can be used to configure several COMBIMASTER 411 & MICROMASTER 411 Inverters. There is no need to purchase a separate BOP for each inverter. The BOP is mounted in an Operator Panel Mounting Kit, as shown in Section 8.7

It should be noted that the BOP motor control functions are disabled by default. To control the motor via the BOP, parameter P0700 should be set to 1.

If the BOP connection is removed during normal running the drives is stopped and the motor coasts to standstill.

Table 3-5 shows the factory default settings for operation via the Basic Operator Panel.

Table 3-5 Default Settings for BOP Operation

Parameter	Meaning	Default Europe (North America)
P0100	Operating Mode Europe/US	50 Hz, kW (60Hz, hp)
P0307	Power (rated motor)	kW (hp)
P0310	Motor frequency rating	50 Hz (60 Hz)
P0311	Motor speed rating	1395 (1680) rpm [depending on variant]
P1082	Maximum Motor Frequency	50 Hz (60 Hz)

3.3.12 Basic operation with the BOP

Prerequisites

- P0010 = 0 (in order to initiate the run command correctly).
- P0700 = 1 (enables the start/stop button on the BOP).
- P1000 = 1 (this enables the motor potentiometer setpoints).

1. Press the green (RUN) button to start the motor.
2. Press the 'UP' button while the motor is turning. Motor speed increases to 50 Hz.
3. When the inverter reaches 50 Hz, press the 'DOWN' button. Motor speed and display is decreased.
4. Change the direction of rotation with the FORWARD/REVERSE button.
5. The red button STOPS the motor.

3.3.13 Basic Operator Panel Function (Fn) Button

Use of Function button.

The Function button is used to view additional information. To view additional information the following actions should be performed:

From any parameter, press and hold the function button during operation.

1. The display will change to show the DC link voltage (indicated by d).
2. Press the function button again to show the output current (A).
3. Press the function button again to show the output frequency (Hz).
4. Press the function button again to show the output voltage (indicated by o).



5. Press the function button again to show the function that has been selected for display in P0005. (If P0005 is set to show any of the above (3, 4, or 5) then this will not be shown again.)

Note

Additional presses will toggle around the above displays.






Press and hold the function button at any point in the cycle to display the parameter number you started from (e.g. r0000) and release to return to the previous display.

Scrolling Function

When the user is required to change a value of a parameter, the  button and the  button on the BOP are used to increase and decrease the value respectively.

Changing single digits in Parameter values

For changing the parameter value rapidly, the single digits of the display can be changed by performing the following actions:

1. Ensure you are in the parameter value changing level.
2. Press  (function button), which causes the right hand digit to blink.
3. Change the value of this digit by pressing  / .
4. Press  (function button) again causes the next digit to blink.
5. Perform steps 2 to 4 until the required value is displayed.
6. Press the  to leave the parameter value changing level.

Note

The function button may also be used to acknowledge a fault condition.

Jump Function

From any parameter (rXXXX or PXXXX) a short press of the Fn button will immediately jump to r0000, you can then change another parameter, if required. Upon returning to r0000, pressing the Fn button will return you to your starting point.

3.3.14 Reset to Factory default

To reset all parameters to the factory default settings; the following parameters should be set as follows:










1. Set P0010=30.
2. Set P0970=1.

Notes

1. The reset process can take up to 3 minutes to complete.
 2. Refer to Parameter P0399 for description on saving motor data sets while performing a reset to the factory defaults.
-

Buttons on the Basic Operator Panel

Table 3-6 Basic Operator Panel Controls












Panel/Button	Function	Effects
	Indicates Status	The LCD displays the settings currently used by the inverter.
	Inverter Start	Pressing the button starts the inverter. This button is disabled by default. To enable this button set P0700 = 1.
	Inverter Stop	OFF1 Pressing the button causes the inverter to come to a standstill at the selected ramp down rate. Disabled by default, to enable set P0700 = 1. OFF2 Pressing the button twice (or once long) causes the motor to coast to a standstill. This function is always enabled.
	Change direction	Press this button to change the direction of rotation of the motor. Reverse is indicated by a minus (-) sign or a flashing decimal point. Disabled by default, to enable set P0700 = 1.
	Jog motor	Pressing this button while the inverter has no output causes the motor to start and run at the preset jog frequency. The inverter stops when the button is released. Pressing this button when the inverter/motor is running has no effect.
	Functions	This button can be used to view additional information. See also Section 5.1.2. It works by pressing and holding the button. It shows the following, starting from any parameter during operation: <ol style="list-style-type: none"> 1. DC link voltage (indicated by d – units V). 2. Output current. (A) 3. Output frequency (Hz) 4. Output voltage (indicated by o – units V). 5. The value (selected in P0005).
	Access parameters	Pressing this button allows access to the parameters.
	Increase value	Pressing this button increases the displayed value. To change the Frequency Setpoint via the BOP set P1000 = 1.
	Decrease value	Pressing this button decreases the displayed value. To change the Frequency Setpoint via the BOP set P1000 = 1.

Changing parameters with the BOP




 

 

 


 

 

 

Table 3-7 Changing Drive Parameters with the BOP

The following descriptions show how to change the parameters; use this description as a guide for setting any parameters using the 'BOP'.

Changing P0004 – parameter filter function

Step	Result on display
1 Press  to access parameters	 P(1) r0000 Hz
2 Press  until P0004 is displayed	 P(1) P0004 Hz
3 Press  to access the parameter value level	 P(1) 0 Hz
4 Press  or  to the required value	 P(1) 3 Hz
5 Press  to confirm and store the value	 P(1) P0004 Hz
6 Only the motor parameters are visible to the user.	


Changing P1082 an indexed parameter – setting maximum motor frequency

Step	Result on display
1 Press  to access parameters	 P(1) r0000 Hz
2 Press  until P1082 is displayed	 P(1) P1082 Hz
3 Press  to access the parameter value level	 P(1) r0000 Hz
4 Press  to display current set value	 P(1) 50.00 Hz
5 Press  or  to the required value	 P(1) 75.00 Hz
6 Press  to confirm and store the value	 P(1) P1082 Hz
7 Press  until r0000 is displayed	 P(1) r0000 Hz
8 Press  to return the display to the standard drive display (as defined by the customer)	

The required maximum frequency has now been stored.

Note - Busy Message

 In some cases - when changing parameter values - the display on the BOP shows

. This means the inverter is busy with tasks of higher priority.

Motor data for CM411 parameterization


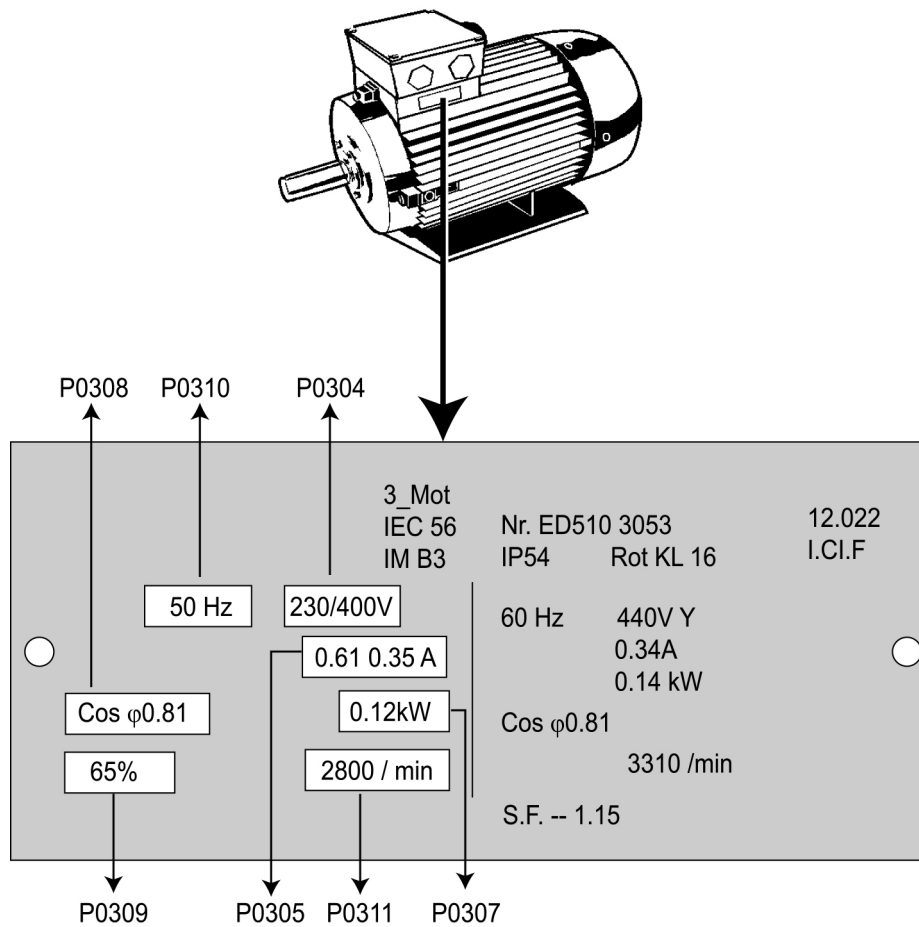


Figure 3-6 Typical Motor Rating Plate Example

Note

- ◆ P0308 & P0309 are only visible if P0003 \geq 2. Only one of the parameters is shown depending on the settings of P0100.
- ◆ Changing motor parameters is not possible unless P0010=3.
- ◆ Ensure that the inverter is configured correctly to the motor.
- ◆ To enable the trip function, set parameter P0701, P0702 or P0703 = 29.

3.3.15 Commissioning with the Advanced Operator Panel (AOP)

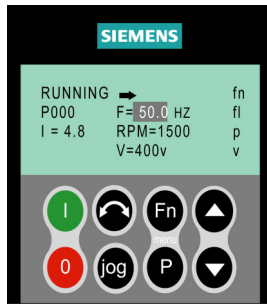

The Advanced Operator Panel (AOP) is available as an option. Its advanced features include the following:

- Multilingual clear text display
- Upload/download facility for multiple parameter sets
- Programmable via PC
- Multidrop capability to drive up to 30 MICROMASTER 4's

Please refer to the AOP Manual for details or contact your local Siemens sales office for assistance.

3.4 General operation

For a full description of standard and extended parameters refer to the Parameter List.

Notes

- ◆ The inverter does not have a main power switch and is live when the power supply is connected. It waits, with the output disabled, until the RUN button is pressed or for the presence of a digital ON signal at terminal 1 (ON/OFF1).
 - ◆ If a BOP or an AOP is fitted and the output frequency is selected to be displayed (P0005 = 21) the corresponding setpoint is displayed approximately every 1.0 seconds while the inverter is stopped.
 - ◆ The inverter is programmed at the factory for standard applications on Siemens four-pole standard motors that have the same power rating as the inverters. When using other motors it is necessary to enter the specifications from the motor's rating plate. See Figure 3- for details on how to read motor data.
 - ◆ Changing motor parameters is not possible unless P0010 = 1.
 - ◆ You must set P0010 back to 0 in order to initiate a run.
-

4 Using the COMBIMASTER 411 & MICROMASTER 411

This Chapter contains:

- An explanation of the various methods of controlling the inverter
- An outline of some of the more commonly used parameters of the COMBIMASTER 411/MICROMASTER 411 which will allow the user to configure the inverter for a number of applications.
- A brief summary of all the inverter's control modes and an introduction to the inverter's fault and warning reporting capability.
- More detailed information can be found in the Parameter List associated with the COMBIMASTER 411/MICROMASTER 411.

4.1	Frequency Setpoint	58
4.2	Command Sources (P0700).....	58
4.3	OFF and Braking Functions	59
4.4	Control Modes (P1300)	60
4.5	Faults and warnings	60



Warnings

- ◆ When operating electrical devices, it is impossible to avoid applying hazardous voltages to certain parts of the equipment.
- ◆ Emergency Stop facilities according to EN 60204 IEC 204 (VDE 0113) must remain functional in all operating modes of the control equipment. Any disengagement of the Emergency Stop facility must not lead to uncontrolled or undefined restarts.
- ◆ Faults occurring in the control equipment can lead to substantial material damage, or even grievous bodily injury (i.e. potentially dangerous faults). Additional external precautions must be taken, or facilities provided, to ensure safe operation, (e.g. independent limit switches, mechanical interlocks, etc.).
- ◆ COMBIMASTER 411/MICROMASTER 411 operate at high voltages.
- ◆ Certain parameter settings may cause the inverter to restart automatically after an input power failure.
- ◆ This equipment is capable of providing internal motor overload protection. Refer to P0610 (level 3) and P0335. I²T is ON by default. Motor overload protection can also be provided using an external PTC via a digital input.
- ◆ This equipment is suitable for use in a circuit capable of delivering not more than 10,000 symmetrical amperes (rms), for a maximum voltage of 460V when protected by a H or K Class fuse (see *Table on page 85*)
- ◆ This equipment must not be used as an 'Emergency Stop mechanism' (see *EN 60204, 9.2.5.4*)

4.1 Frequency Setpoint

- Default: Setpoint Addition: Terminal 6/7 (AIN+/ AIN -)/Control Potentiometer
- Options see P1000

Notes

For frequency setpoint via PROFIBUS see PROFIBUS Instructions.

4.2 Command Sources (P0700)

Starting the motor

- Default Terminal 1 (DIN 1): (P0700=2)
- Other Settings see P0700 to P0704

Stopping the motor

There are several ways to stop the motor:

- Default
 - ◆ OFF1 Terminal 1 (DIN 1): (P0700=2)
 - ◆ OFF2 Off button on BOP/AOP. Pressing the Off button once (two seconds) or twice (with default settings). This is not possible without BOP/AOP.
 - ◆ OFF3 no standard setting
- Other Settings see P0700 to P0704

Reversing the motor

- Default Terminal 2 (DIN 2)
- Other Settings see P0700 to P0704

4.3 OFF and Braking Functions

4.3.1 OFF1

This command (produced by canceling the ON command) causes the inverter to come to a standstill at the selected ramp-down rate.

- Parameter to change ramp time see P1121

Notes

- ON and the following OFF1 command must have the same source.
 - If the ON/OFF1 Command is set to more than one Digital input, only the last set Digital Input is active e.g. DIN3 active.
 - OFF1 can be combined with DC braking or Compound braking
-

4.3.2 OFF2

This command causes the motor to coast to a standstill.

Note

The OFF2 command can have one or more sources. By default the OFF2 command is set to BOP/AOP. This source still exists even if other sources are defined by one of the following parameters, P0700, P0701, P0702, P0703 and P0704.

4.3.3 OFF3

An OFF3 command causes the motor to decelerate rapidly.

For starting the motor when OFF3 is set, the binary input has to be closed (high). If OFF3 is high, the motor can be started and stopped by ON/OFF1 or ON/OFF2.

If OFF3 is low the motor cannot be started.

- Ramp down time: see P1135
-

Note

OFF3 can be combined with DC braking or compound braking

4.3.4 DC braking

DC braking is possible together with OFF1 and OFF3. A DC current is applied to stop the motor quickly.

- set DC braking: see P0701 to P0704
 - set braking period: see P1233
 - set braking current: see P1232
-

Note

If no digital input is set to DC braking and P1233 ≠ 0, DC braking will be active after every OFF1 command.

4.3.5 Compound Braking

Compound Braking is possible with both OFF1 and OFF3. For Compound Braking a DC component is added to the AC current.

- Set the braking current: see P1236

4.4 Control Modes (P1300)

The various modes of operation of the MICROMASTER 411 control the relationship between the speed of the motor and the voltage supplied by the inverter. A summary of the control modes available are listed below:

- **Linear V/f control,** **P1300 = 0**
Can be used for variable and constant torque applications, such as conveyors and positive displacement pumps.
- **Linear V/f control with FCC (Flux Current Control),** **P1300 = 1**
This control mode can be used to improve the efficiency and dynamic response of the motor.
- **Quadratic V/f control** **P1300 = 2**
This mode can be used for variable torque loads, such as fans and pumps.
- **Multi-point V/f control** **P1300 = 3**
Multi-point V/f allows the user to define their own V/f Characteristics.
This characteristic uses two fixed coordinates and three pairs of variable coordinates.
Fixed co-ordinates are: -
Boost as defined in P1310 at 0Hz.
Nominal voltage P0304 at nominal frequency P0310

Variable co-ordinates may be obtained from the following three pairs of coordinates
P1320 (frequency) -P1321 (voltage)
P1322 (frequency) -P1323 (voltage)
P1324 (frequency) -P1325 (voltage)

User programmable V/f characteristics are often used to provide correct torque at correct frequency, which can be useful when using the Inverter with synchronous motors. See Parameter List for further detail.

4.5 Faults and warnings

LED Fault Indication

Fault states and warnings are indicated by the LED within the control potentiometer on the inverter, see section 6.1 for further information.

BOP fitted

If a BOP is fitted, the fault states (P0947) and warnings (P2110) are displayed should a fault condition occur. For further details, please refer to section 6.2.

AOP fitted

If the AOP is fitted, fault and warning codes are displayed on the LCD panel.

5 System Parameters

This Chapter contains:

- A functional overview of the parameters available for customizing your COMBIMASTER411 or MICROMASTER CM411 Inverter

Note

For an in-depth description of Parameters refer to the Parameter List (see Documentation CD-ROM).

5.1	Introduction to COMBIMASTER 411/MICROMASTER 411 System Parameters.....	62
5.2	Parameter List (short form)	64

5.1 Introduction to COMBIMASTER 411/MICROMASTER 411 System Parameters

 
 
Parameters can only be changed by using the Basic Operator Panel (BOP), the Advanced Operator Panel (AOP) or Serial Interface.

Note

Full details of the COMBIMASTER 411 /MICROMASTER 411 Parameters can be found in the separate document "COMBIMASTER 411/MICROMASTER 411 – Parameter List".

This document is included in the CD ROM delivered with the product.

Parameters may be changed and set (using the BOP) to adjust the desired properties of the inverter, such as ramp times, minimum and maximum frequencies etc. The parameter numbers selected and the setting of the parameter values are indicated on the optional five-digit LCD display.

- ◆ Read only parameters are indicated with **r** instead of **P**.
- ◆ P0010 initiates "Quick Commissioning". Set P0010 to 1.
- ◆ The inverter will not run unless P0010 is set to 0 after it has been accessed. This function is automatically performed if P3900 > 0.
- ◆ P0004 acts as a filter, allowing access to parameters according to their functionality group.
- ◆ If an attempt is made to change a parameter that cannot be changed in this status, for example, cannot be changed whilst running or can only be changed in quick commissioning, then ^{P11)}  will be displayed.
- ◆ **Busy Message**
In some cases - when changing parameter values - the display on the BOP shows  for maximum of five seconds. This means the inverter is busy with tasks of higher priority.

5.1.1 Access Levels

There are three access levels available to the user; Standard, Extended and Expert. The level of access is set by parameter P0003. For most applications, the Standard and Extended levels are sufficient.

The number of parameters that appear within each functional group depends on the access level set in parameter P0003. For further details regarding parameters, see the Parameter List on the Documentation CD-ROM.

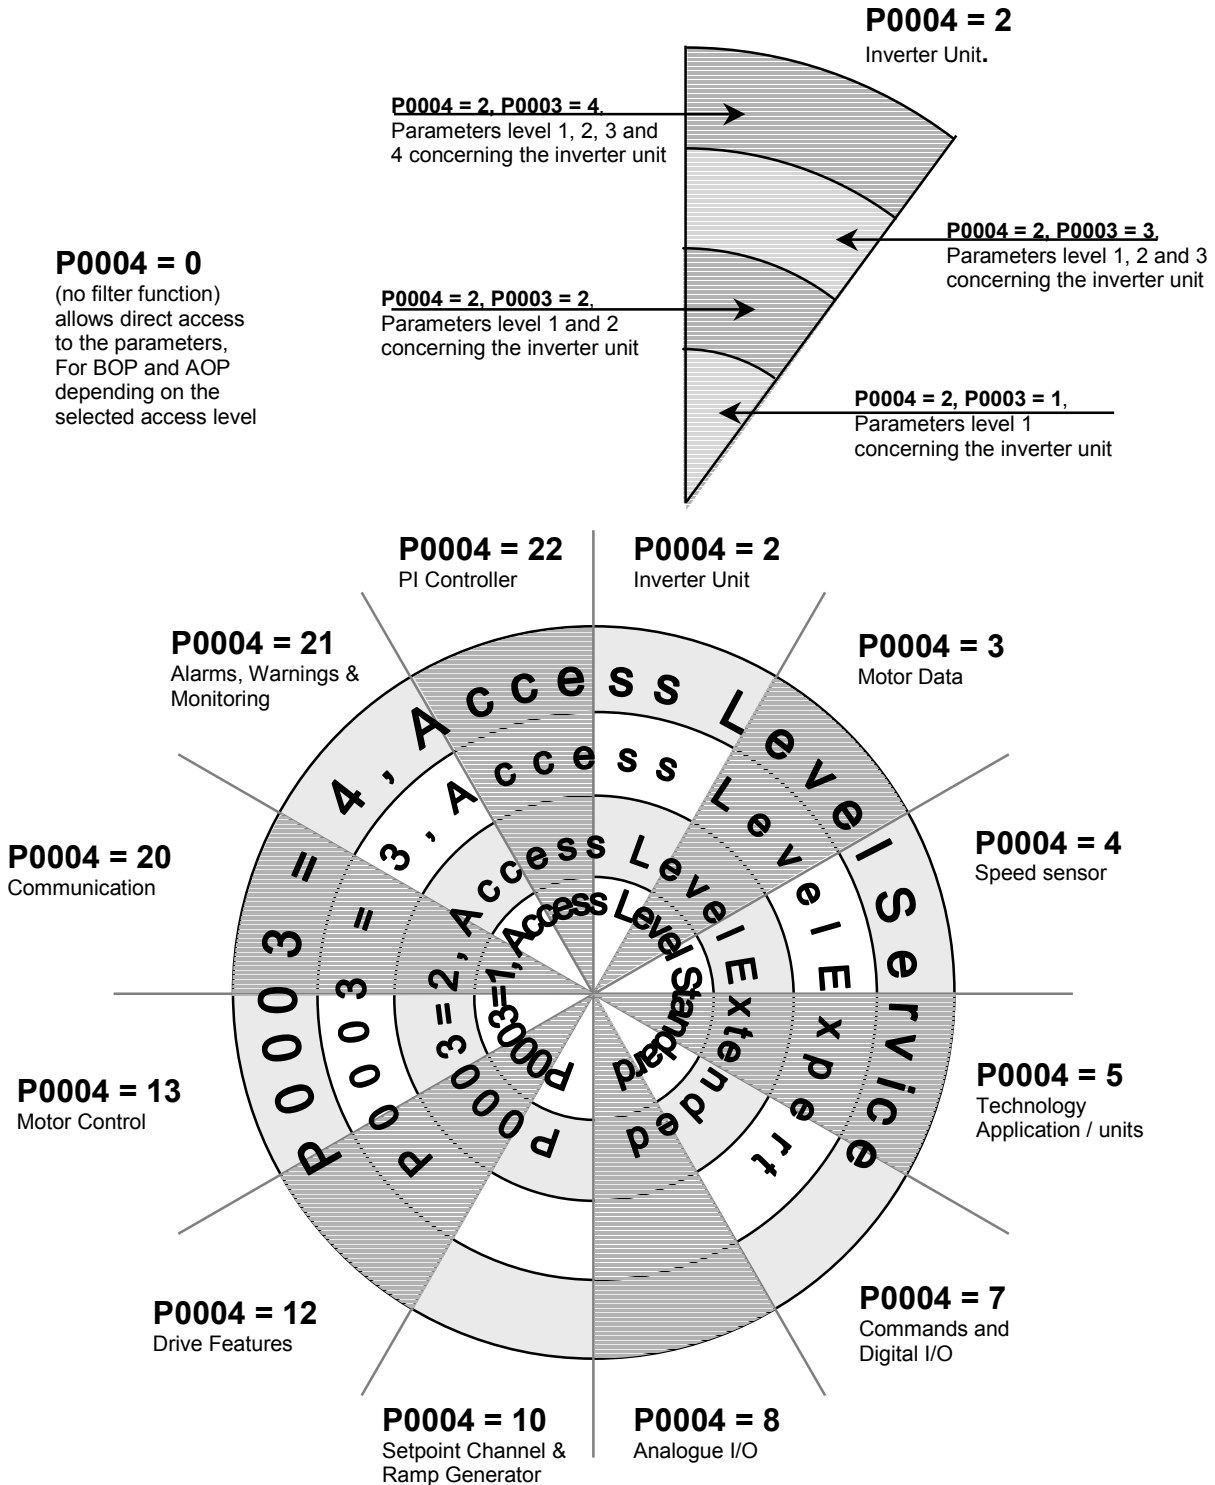


Figure 5-1 Parameter Structure with Filter (P0004)

5.2 Parameter List (short form)

Three states are possible for all the parameters:

- Commissioning C
- Ready to run T
- Run U

This indicates when the parameter can be changed. One, two or all three states may be specified. If all three states are specified, this means that it is possible to change this parameter setting in all three inverter states.

Always

ParNr	ParText	Default	Acc	WS	QC
r0000	Drive display	-	1	-	-
P0003	User access level	1	1	CUT	N
P0004	Parameter filter	0	1	CUT	N
P0010	Commissioning parameter	0	1	CT	N
P0199	Equipment system number	0	2	UT	N

Quick Commissioning

ParNr	ParText	Default	Acc	WS	QC
P0100	Europe / North America	0	1	C	Q
P3900	End of quick commissioning	0	1	C	Q

Parameter reset

ParNr	ParText	Default	Acc	WS	QC
P0970	Factory reset	0	1	C	N

Inverter Unit (P0004 = 2)

ParNr	ParText	Default	Acc	WS	QC
r0018	Firmware version	-	1	-	-
r0026[1]	CO: Act. filtered DC-link volt.	-	2	-	-
r0037[1]	CO: Inverter temperature [°C]	-	3	-	-
r0039	CO: Energy consumpt. meter [kWh]	-	2	-	-
P0040	Reset energy consumption meter	0	2	CT	N
r0200	Act. power stack code number	-	3	-	-
P0201	Power stack code number	0	3	C	N
r0203	Act. inverter type	-	3	-	-
r0204	Power stack features	-	3	-	-
r0206	Rated inverter power [kW] / [hp]	-	2	-	-
r0207	Rated inverter current	-	2	-	-
r0208	Rated inverter voltage	-	2	-	-
r0209	Maximum inverter current	-	2	-	-
P0210	Supply voltage	230	3	CT	N
P0290	Inverter overload reaction	2	3	CT	N
P0292	Inverter overload warning	5	3	CUT	N
P1800	Pulse frequency	4	2	CUT	N
r1801	CO: Act. pulse frequency	-	3	-	-
P1802	Modulator mode	0	3	CUT	N

ParNr	ParText	Default	Acc	WS	QC
P1820[1]	Reverse output phase sequence	0	2	CT	N

Motor data (P0004 = 3)

ParNr	ParText	Default	Acc	WS	QC
r0034[1]	CO: Motor temperature (i2t)	-	2	-	-
P0300[1]	Select motor type	1	2	C	Q
P0304[1]	Rated motor voltage	230	1	C	Q
P0305[1]	Rated motor current	3.25	1	C	Q
P0307[1]	Rated motor power	0.75	1	C	Q
P0308[1]	Rated motor cosPhi	0.000	2	C	Q
P0309[1]	Rated motor efficiency	0.0	2	C	Q
P0310[1]	Rated motor frequency	50.00	1	C	Q
P0311[1]	Rated motor speed	0	1	C	Q
r0313[1]	Motor pole pairs	-	3	-	-
P0320[1]	Motor magnetizing current	0.0	3	CT	Q
r0330[1]	Rated motor slip	-	3	-	-
r0331[1]	Rated magnetization current	-	3	-	-
r0332[1]	Rated power factor	-	3	-	-
P0335[1]	Motor cooling	0	2	CT	Q
P0340[1]	Calculation of motor parameters	0	2	CT	N
P0344[1]	Motor weight	9.4	3	CUT	N
P0346[1]	Magnetization time	1.000	3	CUT	N
P0347[1]	Demagnetization time	1.000	3	CUT	N
P0350[1]	Stator resistance (line-to-line)	4.00000	2	CUT	N
r0384[1]	Rotor time constant	-	3	-	-
r0395	CO: Total stator resistance [%]	-	3	-	-
P0399	Motor mirror mode	2	3	CT	N
P0610[1]	Motor I2t temperature reaction	2	3	CT	N
P0611[1]	Motor I2t time constant	100	2	CT	N
P0614[1]	Motor I2t overload warning level	100.0	2	CUT	N
P0640[1]	Motor overload factor [%]	150.0	2	CUT	Q
P1910	Select motor data identification	0	2	CT	Q
r1912[1]	Identified stator resistance	-	2	-	-

Command and Digital I/O (P0004 = 7)

ParNr	ParText	Default	Acc	WS	QC
r0002	Drive state	-	2	-	-
r0019	CO/BO: BOP control word	-	3	-	-
r0052	CO/BO: Act. status word 1	-	2	-	-
r0053	CO/BO: Act. status word 2	-	2	-	-
r0054	CO/BO: Act. control word 1	-	3	-	-
r0055	CO/BO: Act. control word 2	-	3	-	-
P0700[1]	Selection of command source	2	1	CT	Q
P0701[1]	Function of digital input 1	1	2	CT	N
P0702[1]	Function of digital input 2	12	2	CT	N
P0703[1]	Function of digital input 3	9	2	CT	N
P0704[1]	Function of digital input 4	0	2	CT	N
P0705[1]	Function of digital input 5	0	2	CT	N
r0720	Number of digital inputs	-	3	-	-

ParNr	ParText	Default	Acc	WS	QC
P0719[2]	Selection of cmd. & freq. setp.	0	3	CT	N
r0722	CO/BO: Binary input values	-	2	-	-
P0724	Debounce time for digital inputs	3	3	CT	N
r0730	Number of digital outputs	-	3	-	-
P0731[1]	BI: Function of digital output 1	52:3	2	CUT	N
r0747	CO/BO: State of digital outputs	-	3	-	-
P0748	Invert digital outputs	0	3	CUT	N
P0800[1]	BI: Download parameter set 0	0:0	3	CT	N
P0801[1]	BI: Download parameter set 1	0:0	3	CT	N
P0810	BI: CDS bit 0 (Local / Remote)	0:0	2	CUT	N
P0840[1]	BI: ON/OFF1	722:0	3	CT	N
P0842[1]	BI: ON reverse/OFF1	0:0	3	CT	N
P0844[1]	BI: 1. OFF2	1:0	3	CT	N
P0845[1]	BI: 2. OFF2	19:1	3	CT	N
P0848[1]	BI: 1. OFF3	1:0	3	CT	N
P0849[1]	BI: 2. OFF3	1:0	3	CT	N
P0852[1]	BI: Pulse enable	1:0	3	CT	N
P1020[1]	BI: Fixed freq. selection Bit 0	0:0	3	CT	N
P1021[1]	BI: Fixed freq. selection Bit 1	0:0	3	CT	N
P1022[1]	BI: Fixed freq. selection Bit 2	0:0	3	CT	N
P1035[1]	BI: Enable MOP (UP-command)	19:13	3	CT	N
P1036[1]	BI: Enable MOP (DOWN-command)	19:14	3	CT	N
P1055[1]	BI: Enable JOG right	0:0	3	CT	N
P1056[1]	BI: Enable JOG left	0:0	3	CT	N
P1074[1]	BI: Disable additional setpoint	0:0	3	CUT	N
P1110[1]	BI: Inhibit neg. freq. setpoint	0:0	3	CT	N
P1113[1]	BI: Reverse	722:1	3	CT	N
P1124[1]	BI: Enable JOG ramp times	0:0	3	CT	N
P1140[1]	BI: RFG enable	1:0	3	CT	N
P1141[1]	BI: RFG start	1:0	3	CT	N
P1142[1]	BI: RFG enable setpoint	1:0	3	CT	N
P1230[1]	BI: Enable DC braking	0:0	3	CUT	N
P2103[1]	BI: 1. Faults acknowledgement	722:2	3	CT	N
P2104[1]	BI: 2. Faults acknowledgement	0:0	3	CT	N
P2106[1]	BI: External fault	1:0	3	CT	N
P2220[1]	BI: Fixed PID setp. select Bit 0	0:0	3	CT	N
P2221[1]	BI: Fixed PID setp. select Bit 1	0:0	3	CT	N
P2222[1]	BI: Fixed PID setp. select Bit 2	0:0	3	CT	N
P2235[1]	BI: Enable PID-MOP (UP-cmd)	19:13	3	CT	N
P2236[1]	BI: Enable PID-MOP (DOWN-cmd)	19:14	3	CT	N

Analogue I/O (P0004 = 8)

r0750	Number of ADCs	-	3	-	-
r0752[2]	Act. input of ADC [V]	-	2	-	-
P0753[1]	Smooth time ADC	3	3	CUT	N
r0754[2]	Act. ADC value after scaling [%]	-	2	-	-
r0755[2]	CO: Act. ADC after scal. [4000h]	-	2	-	-
P0756[1]	Type of ADC	0	2	CT	N
P0757[1]	Value x1 of ADC scaling [V]	0	2	CUT	N
P0758[1]	Value y1 of ADC scaling	0.0	2	CUT	N

P0759[1]	Value x2 of ADC scaling [V]	10	2	CUT	N
P0760[1]	Value y2 of ADC scaling	100.0	2	CUT	N
P0761[1]	Width of ADC deadband [V]	0	2	CUT	N
P0762[1]	Delay for loss of signal action	10	3	CUT	N

Setpoint Channel and Ramp Generator (P0004 = 10)

ParNr	ParText	Default	Acc	WS	QC
P1000[1]	Selection of frequency setpoint	27	1	CT	Q
P1001[1]	Fixed frequency 1	0.00	2	CUT	N
P1002[1]	Fixed frequency 2	5.00	2	CUT	N
P1003[1]	Fixed frequency 3	10.00	2	CUT	N
P1004[1]	Fixed frequency 4	15.00	2	CUT	N
P1005[1]	Fixed frequency 5	20.00	2	CUT	N
P1006[1]	Fixed frequency 6	25.00	2	CUT	N
P1007[1]	Fixed frequency 7	30.00	2	CUT	N
P1016	Fixed frequency mode – Bit 0	1	3	CT	N
P1017	Fixed frequency mode – Bit 1	1	3	CT	N
P1018	Fixed frequency mode – Bit 2	1	3	CT	N
r1024	CO: Act. fixed frequency	-	3	-	-
P1031[1]	Setpoint memory of the MOP	0	2	CUT	N
P1032	Inhibit reverse direction of MOP	1	2	CT	N
P1040[1]	Setpoint of the MOP	5.00	2	CUT	N
r1050	CO: Act. Output freq. of the MOP	-	3	-	-
P1058[1]	JOG frequency right	5.00	2	CUT	N
P1059[1]	JOG frequency left	5.00	2	CUT	N
P1060[1]	JOG ramp-up time	10.00	2	CUT	N
P1061[1]	JOG ramp-down time	10.00	2	CUT	N
P1070[1]	CI: Main setpoint	755:0	3	CT	N
P1071[1]	CI: Main setpoint scaling	1:0	3	CT	N
P1075[1]	CI: Additional setpoint	755:1	3	CT	N
P1076[1]	CI: Additional setpoint scaling	1:0	3	CT	N
r1078	CO: Total frequency setpoint	-	3	-	-
r1079	CO: Selected frequency setpoint	-	3	-	-
P1080[1]	Min. frequency	0.00	1	CUT	Q
P1082[1]	Max. frequency	50.00	1	CT	Q
P1091[1]	Skip frequency 1	0.00	3	CUT	N
P1092[1]	Skip frequency 2	0.00	3	CUT	N
P1093[1]	Skip frequency 3	0.00	3	CUT	N
P1094[1]	Skip frequency 4	0.00	3	CUT	N
P1101[1]	Skip frequency bandwidth	2.00	3	CUT	N
r1114	CO: Freq. setp. after dir. ctrl.	-	3	-	-
r1119	CO: Freq. setpoint before RFG	-	3	-	-
P1120[1]	Ramp-up time	10.00	1	CUT	Q
P1121[1]	Ramp-down time	10.00	1	CUT	Q
P1130[1]	Ramp-up initial rounding time	0.00	2	CUT	N
P1131[1]	Ramp-up final rounding time	0.00	2	CUT	N
P1132[1]	Ramp-down initial rounding time	0.00	2	CUT	N
P1133[1]	Ramp-down final rounding time	0.00	2	CUT	N
P1134[1]	Rounding type	0	2	CUT	N
P1135[1]	OFF3 ramp-down time	5.00	2	CUT	Q

ParNr	ParText	Default	Acc	WS	QC
r1170	CO: Frequency setpoint after RFG	-	3	-	-

Drive Features (P0004 = 12)

ParNr	ParText	Default	Acc	WS	QC
P0005[1]	Display selection	21	2	CUT	N
P0006	Display mode	2	3	CUT	N
P0007	Backlight delay time	0	3	CUT	N
P0011	Lock for user defined parameter	0	3	CUT	N
P0012	Key for user defined parameter	0	3	CUT	N
P0013[20]	User defined parameter	0	3	CUT	N
P1200	Flying start	0	2	CUT	N
P1202[1]	Motor-current: Flying start	100	3	CUT	N
P1203[1]	Search rate: Flying start	100	3	CUT	N
P1210	Automatic restart	1	2	CUT	N
P1211	Number of restart attempts	3	3	CUT	N
P1215	Holding brake enable	0	2	T	N
P1216	Holding brake release delay	1.0	2	T	N
P1217	Holding time after ramp down	1.0	2	T	N
P1232[1]	DC braking current	100	2	CUT	N
P1233[1]	Duration of DC braking	0	2	CUT	N
P1236[1]	Compound braking current	0	2	CUT	N
P1240[1]	Configuration of Vdc controller	1	3	CT	N
r1242	CO: Switch-on level of Vdc-max	-	3	-	-
P1243[1]	Dynamic factor of Vdc-max	100	3	CUT	N
P1253[1]	Vdc-controller output limitation	10.00	3	CUT	N
P1254	Auto detect Vdc switch-on levels	1	3	CT	N

Motor Control (P0004 = 13)

ParNr	ParText	Default	Acc	WS	QC
r0020	CO: Freq. setpoint before RFG	-	3	-	-
r0021	CO: Act. frequency	-	2	-	-
r0022	Act. filtered rotor speed	-	3	-	-
r0024	CO: Act. output frequency	-	3	-	-
r0025	CO: Act. output voltage	-	2	-	-
r0027	CO: Act. output current	-	2	-	-
r0056	CO/BO: Status of motor control	-	3	-	-
r0057	Jumper status	-	2	-	-
r0067	CO: Act. output current limit	-	3	-	-
r0071	CO: Max. output voltage	-	3	-	-
r0078	CO: Act. current Isq	-	3	-	-
r0086	CO: Act. active current	-	3	-	-
P1300[1]	Control mode	0	2	CT	Q
P1310[1]	Continuous boost	50.0	2	CUT	N
P1311[1]	Acceleration boost	0.0	2	CUT	N
P1312[1]	Starting boost	0.0	2	CUT	N
P1316[1]	Boost end frequency	20.0	3	CUT	N
P1320[1]	Programmable V/f freq. coord. 1	0.00	3	CT	N
P1321[1]	Programmable V/f volt. coord. 1	0.0	3	CUT	N
P1322[1]	Programmable V/f freq. coord. 2	0.00	3	CT	N

ParNr	ParText	Default	Acc	WS	QC
P1323[1]	Programmable V/f volt. coord. 2	0.0	3	CUT	N
P1324[1]	Programmable V/f freq. coord. 3	0.00	3	CT	N
P1325[1]	Programmable V/f volt. coord. 3	0.0	3	CUT	N
P1333[1]	Start frequency for FCC	10.0	3	CUT	N
P1335[1]	Slip compensation	0.0	2	CUT	N
P1336[1]	Slip limit	250	2	CUT	N
r1337	CO: V/f slip frequency	-	3	-	-
P1338[1]	Resonance damping gain V/f	0.00	3	CUT	N
P1340[1]	I _{max} controller prop. gain	0.000	3	CUT	N
P1341[1]	I _{max} controller integral time	0.300	3	CUT	N
r1343	CO: I _{max} controller freq. output	-	3	-	-
r1344	CO: I _{max} controller volt. output	-	3	-	-
P1350[1]	Voltage soft start	0	3	CUT	N

Communication (P0004 = 20)

ParNr	ParText	Default	Acc	WS	QC
P0918	CB address	3	2	CT	N
P0927	Parameter changeable via	15	2	CUT	N
r0965	Profibus profile	-	3	-	-
r0967	Control word 1	-	3	-	-
r0968	Status word 1	-	3	-	-
r0964[5]	Firmware version data	-	3	-	-
P0971	Transfer data from RAM to EEPROM	0	3	CUT	N
P2000[1]	Reference frequency	50.00	2	CT	N
P2001[1]	Reference voltage	1000	3	CT	N
P2002[1]	Reference current	0.10	3	CT	N
P2009[2]	USS normalization	0	3	CT	N
P2010[2]	USS baudrate	6	2	CUT	N
P2011[2]	USS address	0	2	CUT	N
P2012[2]	USS PZD length	2	3	CUT	N
P2013[2]	USS PKW length	127	3	CUT	N
P2014[2]	USS telegram off time	0	3	CT	N
r2015[4]	CO: PZD from BOP link (USS)	-	3	-	-
P2016[4]	CI: PZD to BOP link (USS)	52:0	3	CT	N
r2018[4]	CO: PZD from COM link (USS)	-	3	-	-
P2019[4]	CI: PZD to COM link (USS)	52:0	3	CT	N
r2024[2]	USS error-free telegrams	-	3	-	-
r2025[2]	USS rejected telegrams	-	3	-	-
r2026[2]	USS character frame error	-	3	-	-
r2027[2]	USS overrun error	-	3	-	-
r2028[2]	USS parity error	-	3	-	-
r2029[2]	USS start not identified	-	3	-	-
r2030[2]	USS BCC error	-	3	-	-
r2032	BO: CtrlWrd1 from BOP link (USS)	-	3	-	-
r2031[2]	USS length error	-	3	-	-
r2033	BO: CtrlWrd2 from BOP link (USS)	-	3	-	-
r2036	BO: CtrlWrd1 from COM link (USS)	-	3	-	-
r2037	BO: CtrlWrd2 from COM link (USS)	-	3	-	-
P2040	CB telegram off time	20	3	CT	N
P2041[5]	CB parameter	0	3	CT	N

ParNr	ParText	Default	Acc	WS	QC
r2050[4]	CO: PZD from CB	-	3	-	-
P2051[4]	CI: PZD to CB	52:0	3	CT	N
r2053[5]	CB identification	-	3	-	-
r2054[7]	CB diagnosis	-	3	-	-
r2090	BO: Control word 1 from CB	-	3	-	-
r2091	BO: Control word 2 from CB	-	3	-	-

Alarms and Warnings (P0004 = 21)

ParNr	ParText	Default	Acc	WS	QC
P0952	Total number of faults	0	3	CT	N
r0947[8]	Last fault code	-	2	-	-
r0949[8]	Fault value	-	3	-	-
r0948[12]	Fault time	-	3	-	-
P2100[3]	Alarm number selection	0	3	CT	N
P2101[3]	Stop reaction value	0	3	CT	N
P2111	Total number of warnings	0	3	CT	N
r2110[4]	Warning number	-	2	-	-
r2114[2]	Run time counter	-	3	-	-
P2150[1]	Hysteresis frequency f_hys	3.00	3	CUT	N
P2155[1]	Threshold frequency f_1	30.00	3	CUT	N
P2156[1]	Delay time of threshold freq f_1	10	3	CUT	N
P2164[1]	Hysteresis frequency deviation	3.00	3	CUT	N
P2167[1]	Switch-off frequency f_off	1.00	3	CUT	N
P2168[1]	Delay time T_off	10	3	CUT	N
P2170[1]	Threshold current I_thresh	100.0	3	CUT	N
P2171[1]	Delay time current	10	3	CUT	N
P2172[1]	Threshold DC-link voltage	800	3	CUT	N
P2173[1]	Delay time DC-link voltage	10	3	CUT	N
P2179	Current limit for no load ident.	3.0	3	CUT	N
P2180	Delay time for load missing	2000	3	CUT	N
r2197	CO/BO: Monitoring word 1	-	2	-	-

PI Controller (P0004=22)

ParNr	ParText	Default	Acc	WS	QC
P2200[1]	BI: Enable PID controller	0:0	2	CUT	N
P2201[1]	Fixed PID setpoint 1	0.00	2	CUT	N
P2202[1]	Fixed PID setpoint 2	10.00	2	CUT	N
P2203[1]	Fixed PID setpoint 3	20.00	2	CUT	N
P2204[1]	Fixed PID setpoint 4	30.00	2	CUT	N
P2205[1]	Fixed PID setpoint 5	40.00	2	CUT	N
P2206[1]	Fixed PID setpoint 6	50.00	2	CUT	N
P2207[1]	Fixed PID setpoint 7	60.00	2	CUT	N
P2216	Fixed PID setpoint mode - Bit 0	1	3	CT	N
P2217	Fixed PID setpoint mode - Bit 1	1	3	CT	N
P2218	Fixed PID setpoint mode - Bit 2	1	3	CT	N
r2224	CO: Act. fixed PID setpoint	-	2	-	-
P2231[1]	Setpoint memory of PID-MOP	0	2	CUT	N
P2232	Inhibit rev. direct. of PID-MOP	1	2	CT	N
P2240[1]	Setpoint of PID-MOP	10.00	2	CUT	N

ParNr	ParText	Default	Acc	WS	QC
r2250	CO: Output setpoint of PID-MOP	-	2	-	-
P2253[1]	CI: PID setpoint	0:0	2	CUT	N
P2254[1]	CI: PID trim source	0:0	3	CUT	N
P2255	PID setpoint gain factor	100.00	3	CUT	N
P2256	PID trim gain factor	100.00	3	CUT	N
P2257	Ramp-up time for PID setpoint	1.00	2	CUT	N
P2258	Ramp-down time for PID setpoint	1.00	2	CUT	N
r2260	CO: PID setpoint after PID-RFG	-	2	-	-
P2261	PID setpoint filter timeconstant	0.00	3	CUT	N
r2262	CO: Filtered PID setp. after RFG	-	3	-	-
P2264[1]	CI: PID feedback	755:0	2	CUT	N
P2265	PID feedback filter timeconstant	0.00	2	CUT	N
r2266	CO: PID filtered feedback	-	2	-	-
P2267	Max. value for PID feedback	100.00	3	CUT	N
P2268	Min. value for PID feedback	0.00	3	CUT	N
P2269	Gain applied to PID feedback	100.00	3	CUT	N
P2270	PID feedback function selector	0	3	CUT	N
P2271	PID transducer type	0	2	CUT	N
r2272	CO: PID scaled feedback	-	2	-	-
r2273	CO: PID error	-	2	-	-
P2280	PID proportional gain	3.000	2	CUT	N
P2285	PID integral time	0.000	2	CUT	N
P2291	PID output upper limit	100.00	2	CUT	N
P2292	PID output lower limit	0.00	2	CUT	N
P2293	Ramp-up /-down time of PID limit	1.00	3	CUT	N
r2294	CO: Act. PID output	-	2	-	-
P2390	Energy saving setpoint	0	3	CUT	N
P2391	Energy saving timer	0	3	CT	N
P2392	Energy saving restart setpoint	0	3	CT	N

6 Troubleshooting

This Chapter contains:

- An overview of the inverter state indicated by the LED on the Inverter. The LED is located within the control potentiometer.
- Some general information on a variety of troubleshooting measures.
- A list of the fault codes that may appear on the display of the BOP. The cause and recommended corrective action are indicated for each fault code listed.

6.1	Troubleshooting with the Inverter LED.....	74
6.2	Troubleshooting with the Basic Operator Panel.....	74



Warnings

- ◆ Repairs on equipment may only be carried out by **Siemens Service**, by repair centers **authorized by Siemens** or by qualified personnel who are thoroughly acquainted with all the warnings and operating procedures contained in this manual.
- ◆ Any defective parts or components must be replaced using parts contained in the relevant spare parts list.
- ◆ Disconnect the power supply before opening the equipment for access.

6.1 Troubleshooting with the Inverter LED.

Check the status of the LED located within the control potentiometer. A list of the LED status indications are given in Table 6-1 below.

Table 6-1 Inverter LED Indication

Condition	Status
200 ms on/800 ms off	Power On/Ready
Continuous on	Running
800 ms on/200 ms off	Warning (general)
500 ms on/500 ms off	Trip (general)
Off	Off/Mains supply fault/No inverter power

6.2 Troubleshooting with the Basic Operator Panel

If the display shows a fault or warning code, please refer to Table 6.2 for CM411 Fault Codes or Table 6-3 CM411 Warning Codes.

If the motor fails to start when the ON command has been given:

- Check that P0010 = 0.
- Check that a valid ON signal is present.
- Check that P0700 = 2 (for Terminal I/O control) or P0700 = 1 (for BOP control).
- Check that the setpoint is present (0 to 10V on Terminal 7) or the setpoint has been entered into the correct parameter, depending upon the setpoint source (P1000). For further details see the Parameter List.

If the motor fails to run after changing the parameters, set P0010 = 30 then P0970 = 1 and press **P** to reset the inverter to the factory default parameter values.

By using a switch between terminals **1** and **4** on the I/O board, the drive should now run to the defined setpoint (established by analog input and/or control potentiometer).

Note

For the MICROMASTER 411 the motor data must relate to the inverter data power range and voltage.

6.2.1 MICROMASTER 411/COMBIMASTER 411 Fault Codes

Please note that in the event of a fault, the inverter switches off and a fault code appears on the display.

NOTE

To reset the fault code, one of three methods listed below can be used:


1. Cycle the power to the drive.
2. Press the  button on the BOP or AOP.
3. Via Digital Input 3 (Default Setting).

Table 6-2 MICROMASTER411/COMBIMASTER411 Fault Codes

Fault	Possible Causes	Diagnose & Remedy	Quit
F0001 OverCurrent	<ul style="list-style-type: none"> ➤ Motor power (P0307) does not correspond to the inverter power (r0206) ➤ Motor lead short circuit ➤ Earth faults 	Check the following: <ol style="list-style-type: none"> 1. Motor power (P0307) must correspond to inverter power (r0206). 2. Cable length limits must not be exceeded. 3. Motor cable and motor must have no short-circuits or earth faults 4. Motor parameters must match the motor in use 5. Value of stator resistance (P0350) must be correct 6. Motor must not be obstructed or overloaded <ul style="list-style-type: none"> ➤ Increase the ramp time ➤ Reduce the boost level 	OFF2
F0002 OverVoltage	<ul style="list-style-type: none"> ➤ DC-link voltage (r0026) exceeds trip level (P2172) ➤ Overvoltage can be caused either by too high main supply voltage or if motor is in regenerative mode. Regenerative mode can be caused by fast ramp downs or if the motor is driven from an active load. 	Check the following: <ol style="list-style-type: none"> 1. Supply voltage (P0210) must lie within limits indicated on rating plate . 2. DC-link voltage controller must be enabled (P1240) and parameterized properly. 3. Ramp-down time (P1121) must match inertia of load. 4. Required braking power must lie within specified limits. <p>NOTE Higher inertia requires longer ramp times; otherwise, apply braking resistor.</p>	OFF2
F0003 UnderVoltage	<ul style="list-style-type: none"> ➤ Main supply failed. ➤ Shock load outside specified limits. 	Check the following: <ol style="list-style-type: none"> 1. Supply voltage (P0210) must lie within limits indicated on rating plate. 2. Supply must not be susceptible to temporary failures or voltage reductions. 	OFF2
F0004 Inverter Over Temperature	<ul style="list-style-type: none"> ➤ Ventilation inadequate ➤ Ambient temperature is too high. 	Check the following: <ul style="list-style-type: none"> ➤ Fan must turn when inverter is running ➤ Pulse frequency must be set to default value ➤ Ambient temperature could be higher than specified for the inverter ➤ Additional meaning for Mega Master: <ul style="list-style-type: none"> ➤ P949 = 1: Rectifier overtemperature ➤ P949 = 2: Ambient overtemperature ➤ P949 = 3: EBOX overtemperature 	OFF2
F0005 Inverter I2T	<ul style="list-style-type: none"> ➤ Inverter overloaded. ➤ Duty cycle too demanding. ➤ Motor power (P0307) exceeds inverter power capability (r0206). 	Check the following: <ol style="list-style-type: none"> 1. Load duty cycle must lie within specified limits. 2. Motor power (P0307) must match inverter power (r0206) 	OFF2
F0011 Motor Over Temperature	<ul style="list-style-type: none"> ➤ Motor overloaded 	Check the following: <ol style="list-style-type: none"> 1. Load duty cycle must be correct 2. Motor thermal time constant (P0611) must be correct 3. Motor I²t warning level must match 	OFF1

Fault	Possible Causes	Diagnose & Remedy	Quit
F0041 Motor Data Identification Failure	Motor data identification failed. <ul style="list-style-type: none"> ➤ Alarm value =0: Load missing ➤ Alarm value =1: Current limit level reached during identification. ➤ Alarm value =2: Identified stator resistance less than 0.1% or greater than 100%. ➤ Alarm value = 30: Current controller at voltage limit ➤ Alarm value = 40: Inconsistence of identified data set, at least one identification failed Percentage values based on the impedance $Z_b = V_{mot,nom} / \sqrt{3} / I_{mot,nom}$	0: Check that the motor is connected to the inverter. 1-40: Check if motor data in P304-311 are correct. Check what type of motor wiring is required (star, delta).	OFF2
F0051 Parameter EEPROM Fault	<ul style="list-style-type: none"> ➤ Read or write failure while saving non-volatile parameter. 	<ul style="list-style-type: none"> ➤ Factory Reset and new parameterization ➤ Change drive 	OFF2
F0052 power stack Fault	<ul style="list-style-type: none"> ➤ Read failure for power stack information or invalid data. 	<ul style="list-style-type: none"> ➤ Change drive 	OFF2
F0060 Asic Timeout	<ul style="list-style-type: none"> ➤ Internal communications failure 	<ul style="list-style-type: none"> ➤ If fault persists, change inverter ➤ Contact Service Department 	OFF2
F0070 CB setpoint fault	<ul style="list-style-type: none"> ➤ No setpoint values from CB (communication board) during telegram off time 	<ul style="list-style-type: none"> ➤ Check CB and communication partner 	OFF2
F0071 USS (BOP-link) setpoint fault	<ul style="list-style-type: none"> ➤ No setpoint values from USS during telegram off time 	<ul style="list-style-type: none"> ➤ Check USS master 	OFF2
F0072 USS (COMM link) setpoint fault	<ul style="list-style-type: none"> ➤ No setpoint values from USS during telegram off time 	<ul style="list-style-type: none"> ➤ Check USS master 	OFF2
F0085 External Fault	<ul style="list-style-type: none"> ➤ External fault triggered via terminal inputs 	<ul style="list-style-type: none"> ➤ Disable terminal input for fault trigger. 	OFF2
F0090 Encoder feedback loss	<ul style="list-style-type: none"> ➤ Signal from Encoder lost 	1. Check encoder fitted. If encoder not fitted, set P400 = 0 and select SLVC mode (P1300 = 20 or 22) 2. Check connections between encoder and inverter 3. Check encoder not faulty (select P1300 = 0, run at fixed speed, check encoder feedback signal in P66) Increase encoder loss threshold in P492	OFF2
F0101 Stack Overflow	<ul style="list-style-type: none"> ➤ Software error or processor failure 	<ul style="list-style-type: none"> ➤ Run self test routines 	OFF2
F0221 PID Feedback below min. value	<ul style="list-style-type: none"> ➤ PID Feedback below min. value P2268. 	<ul style="list-style-type: none"> ➤ Change value of P2268. Adjust feedback gain. 	OFF2
F0222 PID Feedback above max. value	<ul style="list-style-type: none"> ➤ PID feedback above max. value P2267. 	<ul style="list-style-type: none"> ➤ Change value of P2267. Adjust feedback gain. 	OFF2
F0450 BIST Tests Failure	Fault value: <ol style="list-style-type: none"> 1. Some power section tests have failed 2. Some control board tests have failed 4. Some functional tests have failed 8. Some IO module tests have failed. (MM 420 only) 16. Internal RAM failed on power-up check 	<ul style="list-style-type: none"> ➤ Drive may run but some features will not work properly. ➤ Replace drive. 	OFF2
F0452 Belt Failure Detected	<ul style="list-style-type: none"> ➤ Load conditions on motor indicate belt failure or mechanical fault. 	Check the following: <ol style="list-style-type: none"> 1. No breakage, seizure or obstruction of drive train. 2. If using an external speed sensor, check for correct function. Check parameters: <ul style="list-style-type: none"> ➤ P0409 (pulse per min at rated speed). ➤ P2191 (Belt failure speed tolerance). ➤ P2192 (delay time for permitted deviation) 3. If using the torque envelope, check parameters: <ul style="list-style-type: none"> ➤ P2182 (threshold frequency f1) ➤ P2183 (threshold frequency f2) ➤ P2184 (threshold frequency f3) ➤ P2185 (upper torque threshold 1) ➤ P2186 (lower torque threshold 1) ➤ P2187 (upper torque threshold 2) ➤ P2188 (lower torque threshold 2) ➤ P2189 (upper torque threshold 3) ➤ P2190 (lower torque threshold 3) ➤ P2192 (delay time for permitted deviation) 4. Apply lubrication if required. 	OFF2

Table 6-3 COMBIMASTER 411/MICROMASTER 411 Warning Codes

Alarms	Possible Causes	Diagnose & Remedy	Quit
A0501 Current Limit	<ul style="list-style-type: none"> ➤ Motor power does not correspond to the inverter power ➤ Motor leads are too long ➤ Earth faults 	Check the following: <ol style="list-style-type: none"> 1. Motor power (P0307) must correspond to inverter power (r0206). 2. Cable length limits must not be exceeded. 3. Motor cable and motor must have no short-circuits or earth faults 4. Motor parameters must match the motor in use 5. Value of stator resistance (P0350) must be correct 6. Motor must not be obstructed or overloaded <ul style="list-style-type: none"> ➤ Increase the ramp-up-time. ➤ Reduce the boost. 	---
A0502 Overvoltage limit	Overvoltage limit is reached. This warning can occur during ramp down, if the dc-link controller is disabled (P1240 = 0).	If this warning is displayed permanently, check drive input voltage .	---
A0503 UnderVoltage Limit	Main supply failed Main supply (P0210) and consequently DC-link voltage (R0026) below specified limit (P2172).	Check main supply voltage (P0210).	---
A0504 Inverter OverTemperature	Warning level of inverter heat-sink temperature (P0614) is exceeded, resulting in pulse frequency reduction and/or output frequency reduction (depending on parametrization in (P0610)	Check the following: <ol style="list-style-type: none"> 1. Ambient temperature must lie within specified limits 2. Load conditions and duty cycle must be appropriate 	---
A0505 Inverter I2T	➤ Warning level exceeded, current will be reduced if parameterized (P0610 = 1)	Check that duty cycle lies within specified limits	---
A0511 Motor OverTemperature I2T	<ul style="list-style-type: none"> ➤ Motor overloaded. ➤ Load duty cycle too high. 	Check the following: <ol style="list-style-type: none"> 1. P0611 (motor I²t time constant) should be set to appropriate value 2. P0614 (Motor I²t overload warning level) should be set to suitable level 	---
A0535 Braking Resistor Hot			---
A0541 Motor Data Identification Active	Motor data identification (P1910) selected or running		---
A0600 RTOS Overrun Warning			---
A0700 CB warning 1 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0701 CB warning 2 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0702 CB warning 3 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0703 CB warning 4 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0704 CB warning 5 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0705 CB warning 6 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0706 CB warning 7 see CB manual for details.	CB (communication board) specific	See CB user manual	---

Alarms	Possible Causes	Diagnose & Remedy	Quit
A0707 CB warning 8 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0708 CB warning 9 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0709 CB warning 10 see CB manual for details.	CB (communication board) specific	See CB user manual	---
A0710 CB communication error	Communication with CB (communication board) is lost	Check CB hardware	---
A0711 CB configuration error	CB (communication board) reports a configuration error.	Check CB parameters	---
A0910 Vdc-max controller de-activated	Vdc max controller has been de-activated, since controller is not capable of keeping DC- link voltage (r0026) within limits (P2172). ➤ Occurs if main supply voltage (P0210) is permanently too high. ➤ Occurs if motor is driven by an active load, causing motor to go into regenerative mode. ➤ Occurs at very high load inertias, when ramping down.	Check the following: 1. Input voltage (P0210) must lie within range. 2. Load must be match.	---
A0911 Vdc-max controller active	➤ Vdc max controller is active; so ramp- down times will be increased automatically to keep DC-link voltage (r0026) within limits (P2172).		---
A0912 Vdc-min controller active	Vdc min controller will be activated if DC-link voltage (r0026) falls below minimum level (P2172). ➤ The kinetic energy of the motor is used to buffer the DC-link voltage, thus causing deceleration of the drive! ➤ So short mains failures do not necessarily lead to an undervoltage trip.		---
A0920 ADC parameters not set properly.	ADC parameters should not be set to identical values, since this would produce illogical results. ➤ Index 0: Parameter settings for output identical ➤ Index 1: Parameter settings for input identical ➤ Index 2: Parameter settings for input do not correspond to ADC type		---
A0921 DAC parameters not set properly.	DAC parameters should not be set to identical values, since this would produce illogical results. ➤ Index 0: Parameter settings for output identical ➤ Index 1: Parameter settings for input identical ➤ Index 2: Parameter settings for output do not correspond to DAC type		---
A0922 No load applied to inverter	No Load is applied to the inverter. As a result, some functions may not work as under normal load conditions.		---
A0923 Both JOG Left and JOG Right are requested	Both JOG right and JOG left (P1055/P1056) have been requested. This freezes the RFG output frequency at its current value.		---

Alarms	Possible Causes	Diagnose & Remedy	Quit
A0952 Belt Failure Detected	Load conditions on motor indicate belt failure or mechanical fault.	Apply lubrication if required. Check the following: <ol style="list-style-type: none"> 1. No breakage, seizure or obstruction of drive train. 2. If using an external speed sensor, check for correct function. Check parameters: <ul style="list-style-type: none"> ➤ P0409 (pulse per min at rated speed). ➤ P2191 (Belt failure speed tolerance). ➤ P2192 (delay time for permitted deviation) 3. If using the torque envelope, check parameters: <ul style="list-style-type: none"> ➤ P2182 (threshold frequency f1) ➤ P2183 (threshold frequency f2) ➤ P2184 (threshold frequency f3) ➤ P2185 (upper torque threshold 1) ➤ P2186 (lower torque threshold 1) ➤ P2187 (upper torque threshold 2) ➤ P2188 (lower torque threshold 2) ➤ P2189 (upper torque threshold 3) ➤ P2190 (lower torque threshold 3) ➤ P2192 (delay time for permitted deviation) 4. Apply lubrication if required. 	---

7 MICROMASTER 411/COMBIMASTER 411 Specifications

This Chapter contains:

- In Table 7-1 the common technical data to the MICROMASTER 411/COMBIMASTER 411 Inverters
- In Table 7-3 divided into several tables - an overview of the specific technical data of every MICROMASTER 411/COMBIMASTER 411 Inverter.
- In Table 7- the wire sizes and terminal torques

7.1	Technical Data.....	82
7.2	Case Size Rating Information.....	83
7.3	Tightening Torque, Cable cross sections for Power Supply and Motor Terminals	84
7.4	Tightening Torque for Fixing Screws	84
7.5	Fuses and Circuit Breakers	85

7.1 Technical Data

Table 7-1 MICROMASTER 411/COMBIMASTER 411 Performance Ratings

Feature	Specification
Power supply Operating Voltage & Power Ranges	380 to 480 V \pm 10% 3AC 0.37 kW – 3.0 kW
Protection Level	IP66 for MICROMASTER 411 IP55 for COMBIMASTER 411
Operating Temperature	-10°C to +40°C (50°C with derating)
Storage Temperature	-40°C to +70°C
Humidity	99% RH – non-condensing
Operational Altitudes	Up to 1000m above sea level without derating
Control Method	Linear V/f; Flux Current Control (FCC); Quadratic V/f; Multi-point V/f.
Overload Capability	1.5 * nominal output current for 60 seconds (every 300 seconds)
Electromagnetic Compatibility	Optional EMC filters to EN55011 Class B. (Radiated Emission: Class A)
Protection Features	Undervoltage, Overvoltage, Short circuit, Stall Prevention, Motor Overtemperature I^2t , (Option for PTC) Inverter Overtemperature
Input Frequency	47 to 63 Hz
Setpoint Resolution	0.01Hz Digital, 0.01 Hz Serial, 10 bit Analog
Output Frequency Resolution	0.01Hz Digital, 0.01 Hz Serial, 10 bit Analog
Pulse Frequency	2kHz to 16kHz (2kHz steps) 4kHz default
Digital Inputs	3 programmable inputs. 3 Digital Inputs & 1 Analog input which can be configured as a fourth digital input.
Fixed Frequencies	7 programmable
Skip Frequencies	4 programmable
Relay Outputs	1 programmable 30 V DC / 5 A (resistive), 250 V AC 2 A (inductive)
Analogue Input	1 for setpoint or PI 0 to +10/24 V Input (Also used for DIN4) NOTE: 0 to 10 V input – calibrated input range. For 0 to 24 V, full scale reached at 22.5 V (6% tolerance) – scaling programmable using parameters.
Serial Interfaces	RS-232.
Design/Manufacture	In accordance with ISO 14001
Standards	CE
CE Marked	Conformity with EC Low Voltage Directive 73/23/EEC and Electromagnetic Compatibility Directive 89/336/EEC
Cos ϕ	≥ 0.95
Inverter Efficiency	94% to 97% at maximum power
Inrush Current	Less than 4 A for CSB and less than 7.7 A for CSC.
Braking	DC Braking, Compound Braking and Electro-mechanical Brake control as option.

7.2 Case Size Rating Information

Table 7-2 Case Size B

MICROMASTER 411/COMBIMASTER 411					
Case Size B					
Frame size:					
2 pole	71	71	80	80M	90S
4 pole	71	80	80	90S	90S
Motor Output Rating:	0.37kW 0.5hp	0.55kW 0.75hp	0.75kW 1.0hp	1.1kW 1.5hp	1.5kW 2.0hp
Operating Input Voltage:	AC 380V – 480 V _{rms} ± 10% Three phase				
Operating Input Frequency:	47 – 63 Hz				
Output Frequency	0 – 650Hz				
2 pole					
4 pole					
Inrush Current:	Less than 4 A				
Input Current:	1.6 A rms	2.1 A rms	2.8 A rms	4.2 A rms	5.8 A rms
Output Current (max):	1.2 A	1.6 A	2.1 A	3.0 A	4.0 A
Power Supply fuse:	10 A				
Power Supply Lead cross-section	4 mm ² (max)				

Table 7-3 Case Size C

MICROMASTER 411/COMBIMASTER 411		
High Voltage Three Phase Units for Case Size C		
Frame size:		
2 pole	90L	100L
4 pole	100L	100L
Motor Output Rating:	2.2kW 3.0hp	3.0 kW 4.0 hp
Operating Input Voltage:	AC 380 – 480 V _{rms} ± 10% Three phase	
Operating Input Frequency:	47 – 63 Hz	
Output Frequency	0 – 650Hz	
2 pole		
4 pole		
Inrush Current:	Less than 7.7 A	
Input Current:	7.8 A rms	10 A rms
Output Current (max):	5.9 A	7.7 A
Power Supply fuse:	16 A	
Power Supply Lead cross-section	4 mm ² (max)	

7.3 Tightening Torque, Cable cross sections for Power Supply and Motor Terminals

Table 7-4 Power Supply & Motor Terminal Wire Sizes/Tightening Torques (per case size)

Terminals	Units of measurement	CSB	CSC
Terminal Tightening Torque	[Nm]	1.3	1.3
	[lbf.in]	12	12
Minimum Cable Cross Section	[mm ²]	1.5	2.5
	[AWG]	16	14
Maximum Cable Cross Section	[mm ²]	4	4
	[AWG]	12	12

7.4 Tightening Torque for Fixing Screws

Table 7-5 Fixing Screw Recommended Tightening Torque

Description	Units of measurement	CSB		CSC	
Inverter Cover Screws	[Nm]	2.5	(M5)	2.5	(M5)
	[lbf.in]	21.3	(M5)	21.3	(M5)
Filter Board Retention Screws	[Nm]	0.8	(M3)	0.8	(M3)
	[lbf.in]	7.0	(M3)	7.0	(M3)
I/O Board Retention Screws	[Nm]	0.8	(M3)	0.8	(M3)
	[lbf.in]	7.0	(M3)	7.0	(M3)
Terminal Housing to Motor Fixing Screws	[Nm]	1.5/2.5	M4/M5	2.5	(M5)
	[lbf.in]	10.6/21.3	M4/M5	21.3	(M5)

7.5 Fuses and Circuit Breakers

Table 7-6 MICROMASTER 411/COMBIMASTER 411 Fuses and Circuit Breakers

Inverter	Power		Case Size	Fuses	Circuit Breakers
	kW	Hp			
MICROMASTER 411 COMBIMASTER 411 (without filter) 380 V to 480 V 3 AC	0.37	0.5	B	3NA3803	3RV1021-1CA10
	0.55	0.75	B	3NA3803	3RV1021-1DA10
	0.75	1.0	B	3NA3803	3RV1021-1EA10
	1.1	1.5	B	3NA3803	3RV1021-1GA10
	1.5	2.0	B	3NA3803	3RV1021-1HA10
	2.2	3.0	C	3NA3805	3RV1021-1JA10
	3.0	4.0	C	3NA3805	3RV1021-4KA10
MICROMASTER 411 COMBIMASTER 411 (with Class B filter) 380 V to 480 V 3 AC	0.37	0.5	B	3NA3803	3RV1021-1CA10
	0.55	0.75	B	3NA3803	3RV1021-1DA10
	0.75	1.0	B	3NA3803	3RV1021-1EA10
	1.1	1.5	B	3NA3803	3RV1021-1GA10
	1.5	2.0	B	3NA3803	3RV1021-1HA10
	2.2	3.0	C	3NA3805	3RV1021-1JA10
	3.0	4.0	C	3NA3805	3RV1021-1KA10

8 Options

This Chapter contains:

- The following accessories are available as options for your COMBIMASTER 411/MICROMASTER 411 Inverter.

8.1	MICROMASTER 411/COMBIMASTER 411 User Options	88
8.2	MICROMASTER 411/COMBIMASTER 411 Programming Options	89
8.3	Basic Operator Panel (BOP)	90
8.4	Advanced Operator Panel (AOP)	91
8.5	PROFIBUS Module (for MICROMASTER 411)	92
8.6	Electromechanical Brake Control Module	93
8.7	MICROMASTER 411 Operator Panel Mounting Kit.....	94
8.8	PC to Inverter Connection Kit.....	95
8.9	PC to AOP Connection Kit	96
8.10	Door Mounting Kit for Single Inverter control	97
8.11	Wall Mounting Kit.....	98

8.1 MICROMASTER 411/COMBIMASTER 411 User Options

Description	Reference	Order No
Basic Operator Panel (BOP)	See Section 8.3 See Section 10.15.1	6SE6400-0BP00-0AA0
Advanced Operator Panel (AOP)	See Section 8.4 See Section 10.15.2	6SE6400-0AP00-0AA0
PROFIBUS Module (for MICROMASTER 411)	See Section 8.5 See Section 10.15.3	6SE6401-1PB00-0AA0
Electromechanical Brake Control Module	See Section 8.6	6SE6401-1EM00-0AA0
MICROMASTER 411 Operator Panel Mounting Kit	See Section 8.7	6SE6401-1DF00-0AA0
MICROMASTER 411 Interface Link Cable	See Section 8.7	6SE6401-1BL00-0AA0
PC to Inverter Connection Kit	See Section 8.8 See Section 10.15.4	6SE6400-1PC00-0AA0
PC to AOP Connection Kit	See Section 8.9	6SE6400-0PA00-0AA0
BOP/AOP door mounting kit for single inverter control	See Section 8.10 See Section 10.15.5	6SE6400-0PM00-0AA0
MICROMASTER 411 5m Cable Assembly for Door Mount Kit	See Section 8.10	6SE6401-1CA00-0AA0
Wall Mount Kit	See Section 8.11	6SE6401-0WM00-0AA0

8.2 MICROMASTER 411/COMBIMASTER 411 Programming Options


Table 8-1 Key to Programming Options

Component	Option 1	Option 2	Option 3	Option 4	Option 5
	Operator Panel programming	PC Programming (without Isolation)	PC Programming (with Isolation)	Desk Programming of AOP for Inverter programming	Door mounted operator panel
MICROMASTER 411 Operator Panel Mounting Kit	<input checked="" type="checkbox"/> 2)		<input checked="" type="checkbox"/> 2)		
Interface Link Cable		<input checked="" type="checkbox"/>		<input checked="" type="checkbox"/>	
PC-Inverter Connection Kit			<input checked="" type="checkbox"/>		
PC-AOP Connection Kit				<input checked="" type="checkbox"/>	
BOP/AOP door mounting kit					<input checked="" type="checkbox"/>
BOP	<input checked="" type="checkbox"/> 1)				<input checked="" type="checkbox"/> 1)
AOP	<input checked="" type="checkbox"/> 1)			<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> 1)
5m cable assembly (M12 connector)					<input checked="" type="checkbox"/>


Notes

1. Either BOP or AOP is required.
 2. The Operator Panel Mounting Kit includes an Operator Desktop Frame and Interface Cable Link.
 3. Options 2 and 3 are for use with DriveMonitor Commissioning Software Tool.
-

8.3 Basic Operator Panel (BOP)

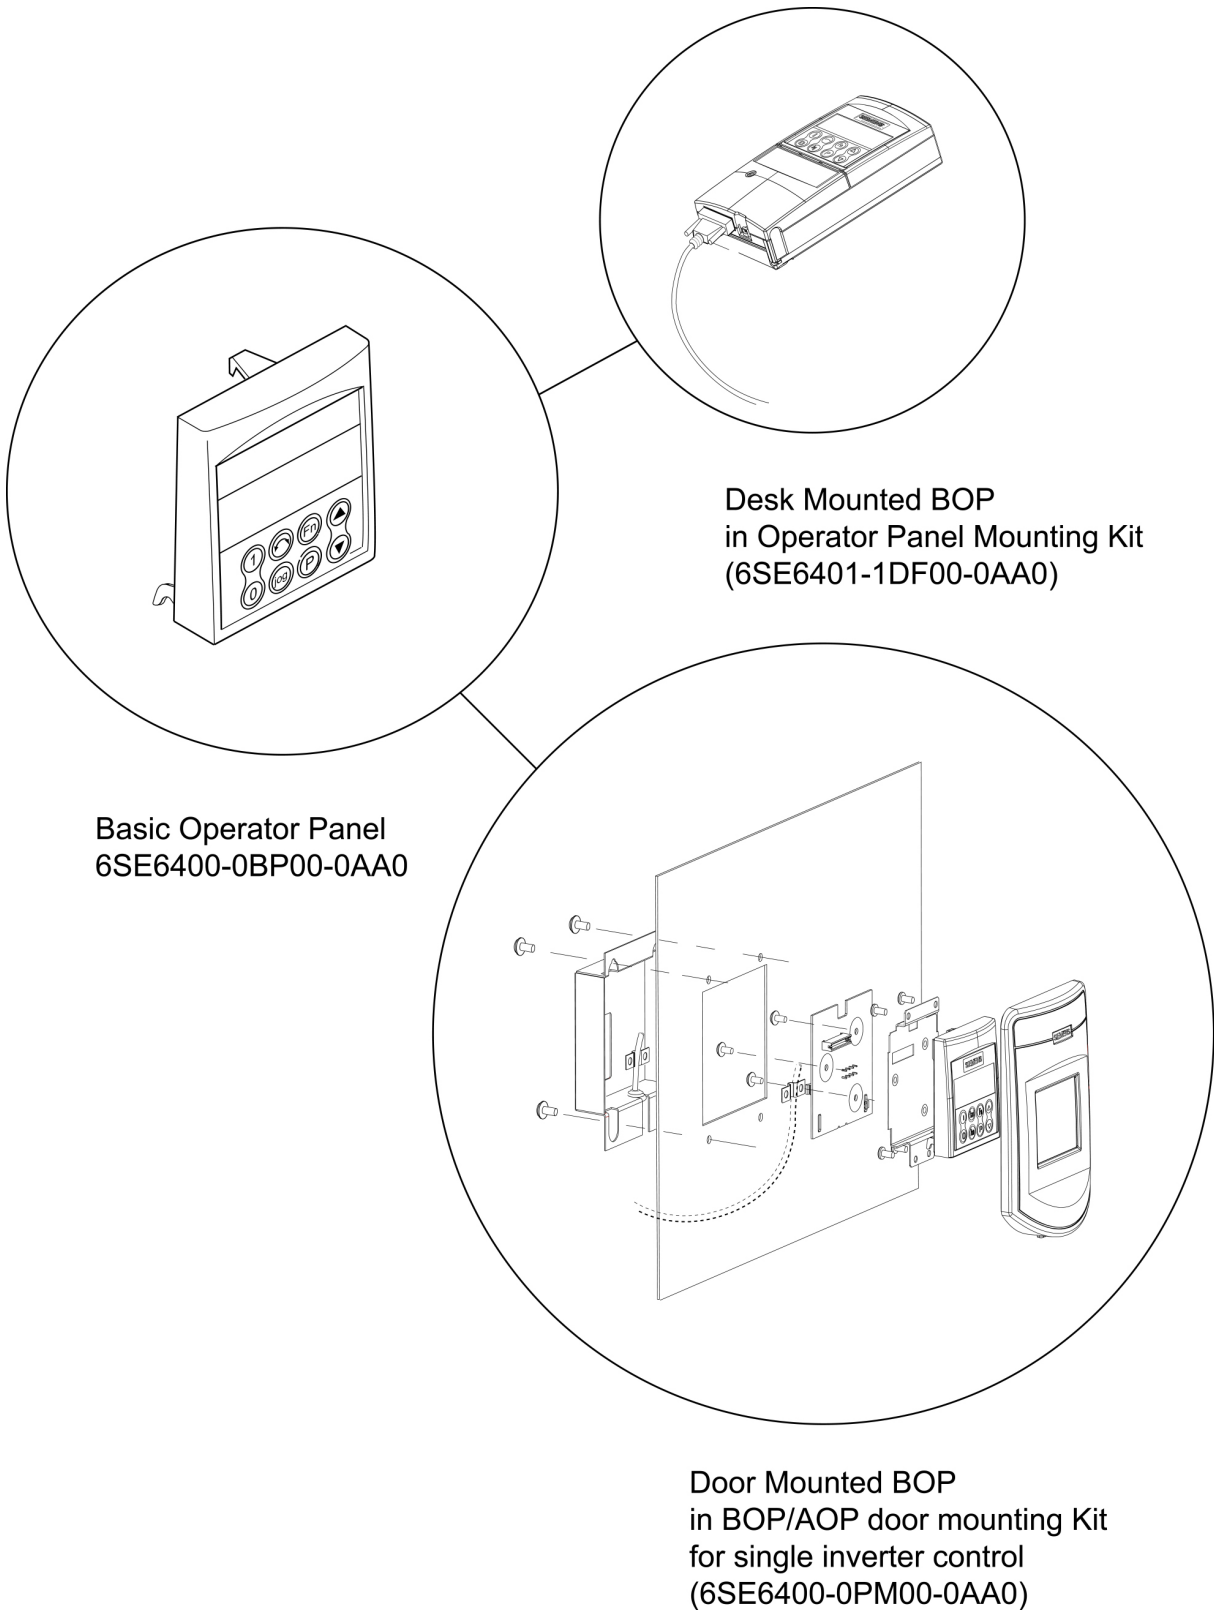


8.4 Advanced Operator Panel (AOP)

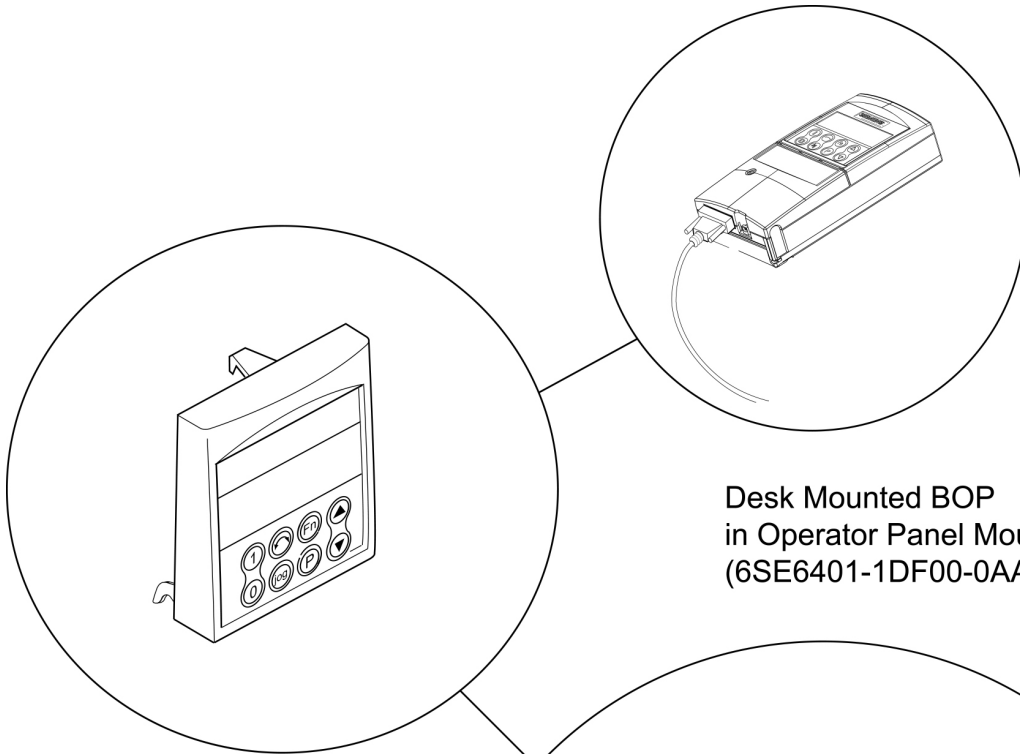

Advanced Operator Panel
6SE6400-0AP00-0AA0


Desk Mounted BOP
in Operator Panel Mounting Kit
(6SE6401-1DF00-0AA0)

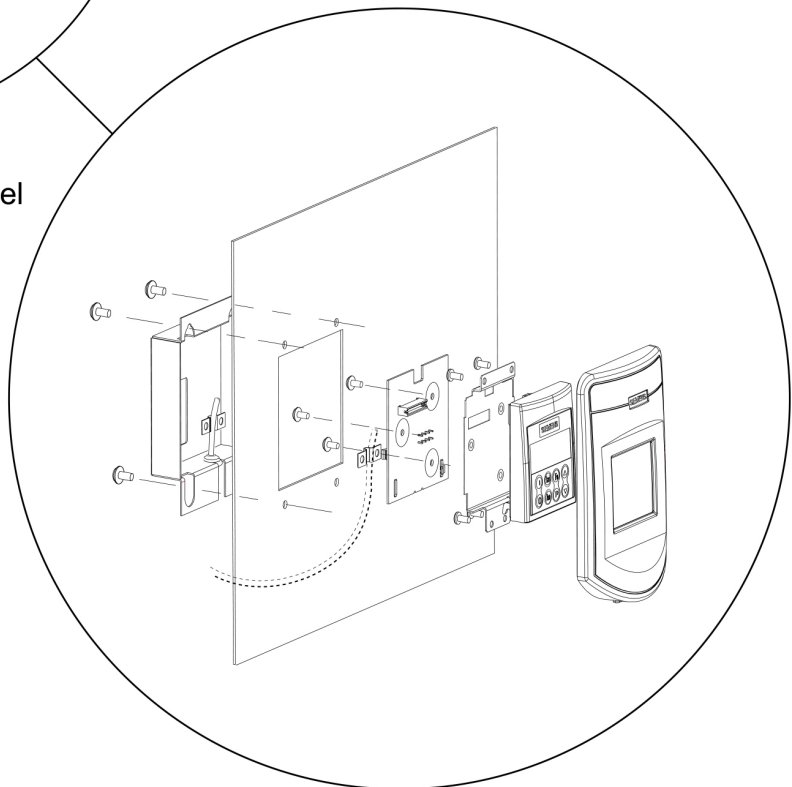

Door Mounted BOP
in BOP/AOP door mounting Kit
for single inverter control
(6SE6400-0PM00-0AA0)

8.5 PROFIBUS Module (for MICROMASTER 411)


PROFIBUS Module (CM411 & MM411)
6SE6401-1PB00-0AA0

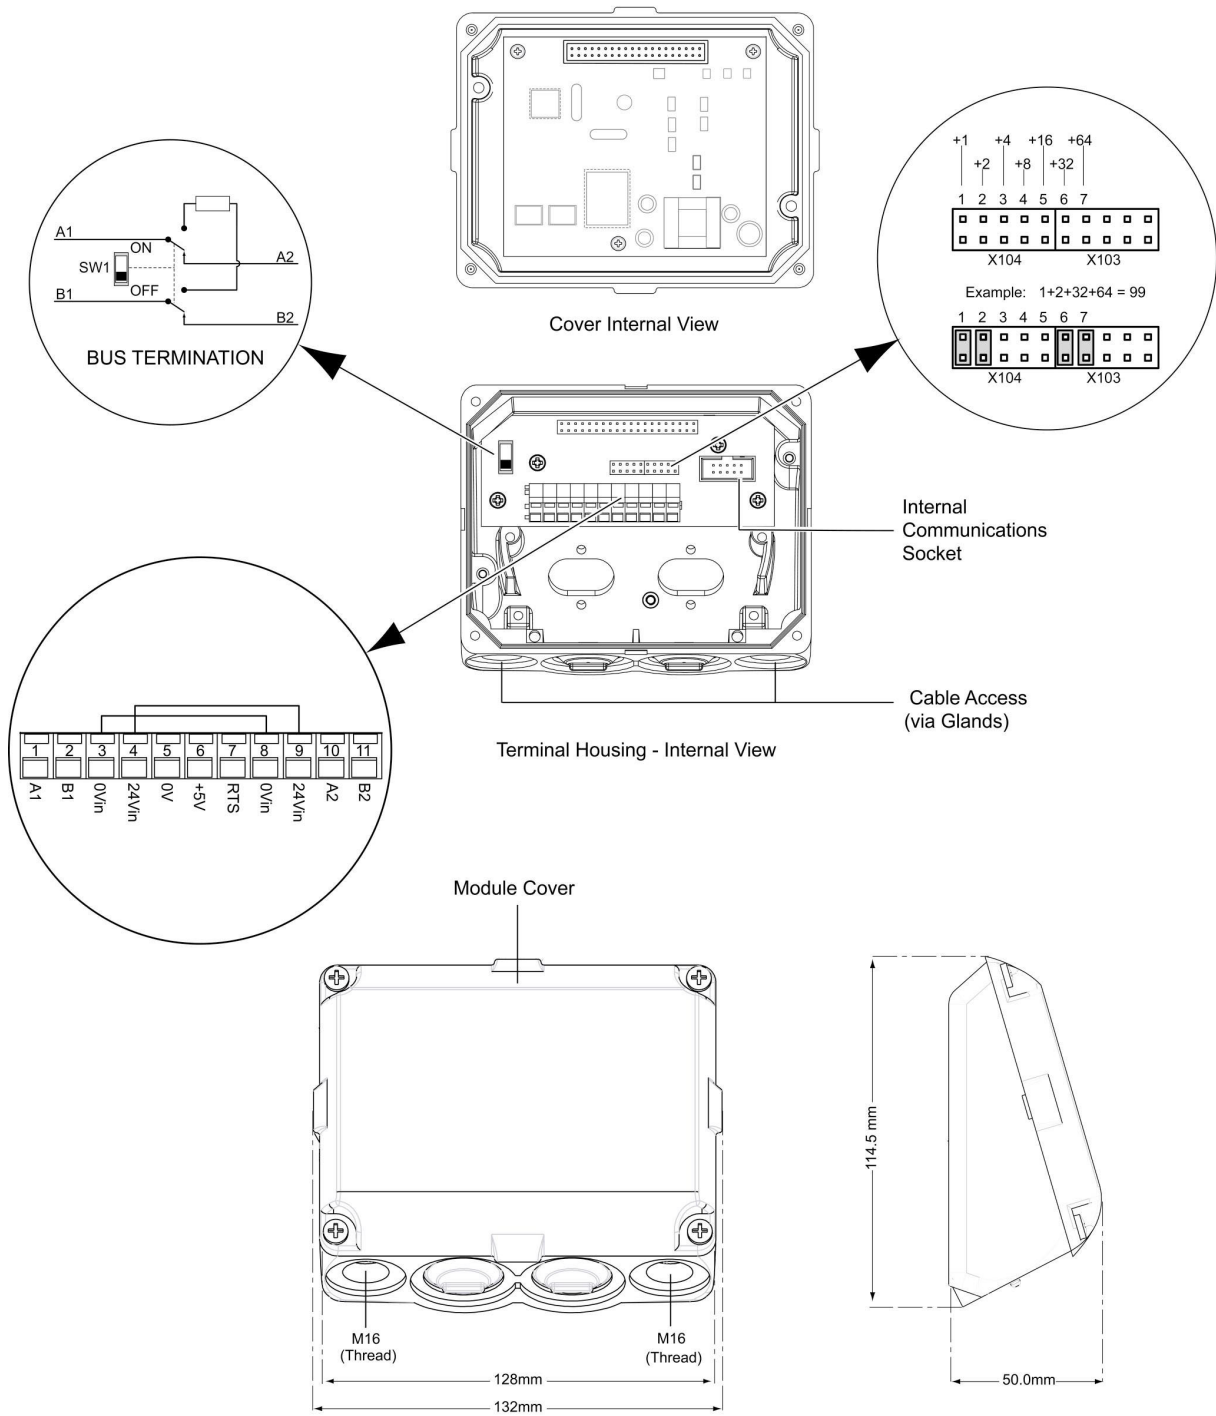


8.6 Electromechanical Brake Control Module

Electromechanical Brake Control Module


6SE6401-1EM00-0AA0

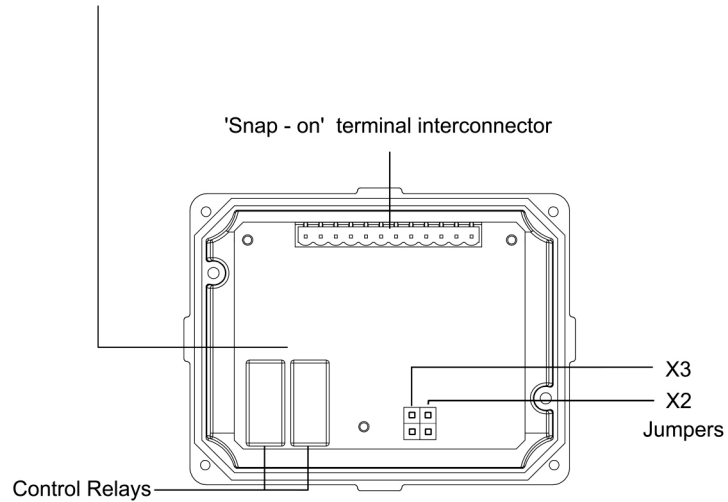

EM Brake Control Module Cover - internal view

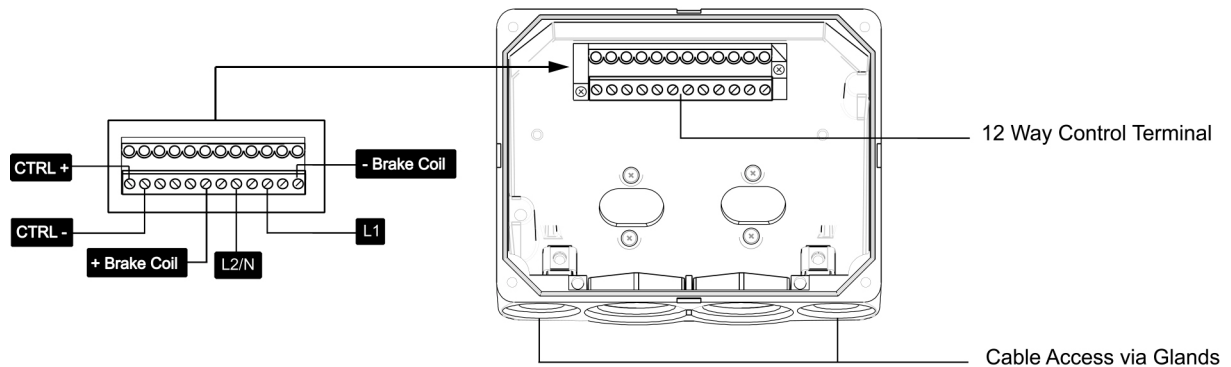


EM Brake Control Module Terminal Housing - internal view

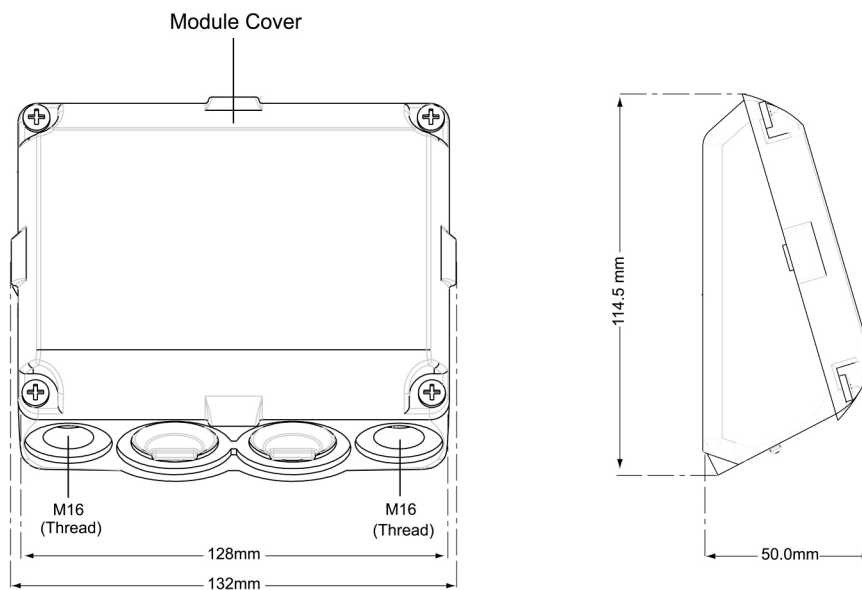


8.7 MICROMASTER 411 Operator Panel Mounting Kit

MICROMASTER 411 Operator Panel Mounting Kit
(6SE6401-1DF00-0AA0)


Part No. includes Interface Link Cable

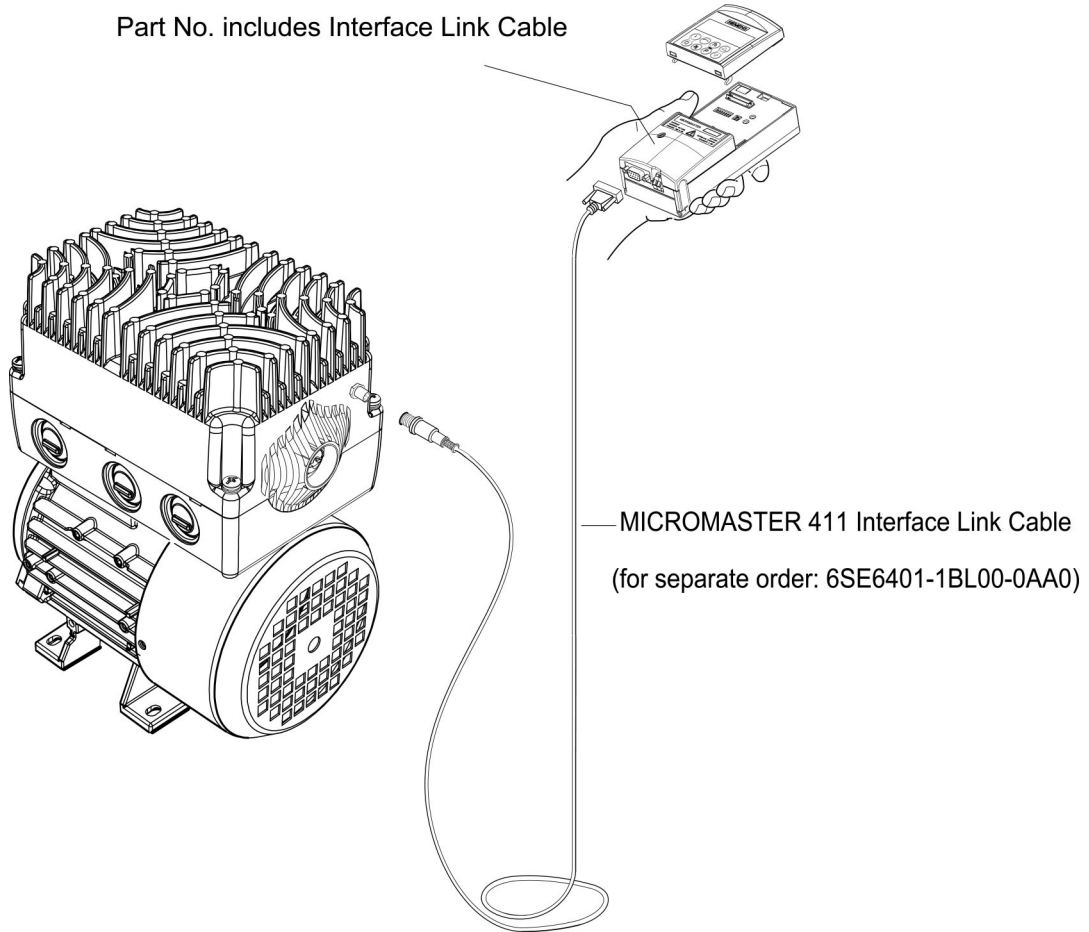


8.8 PC to Inverter Connection Kit

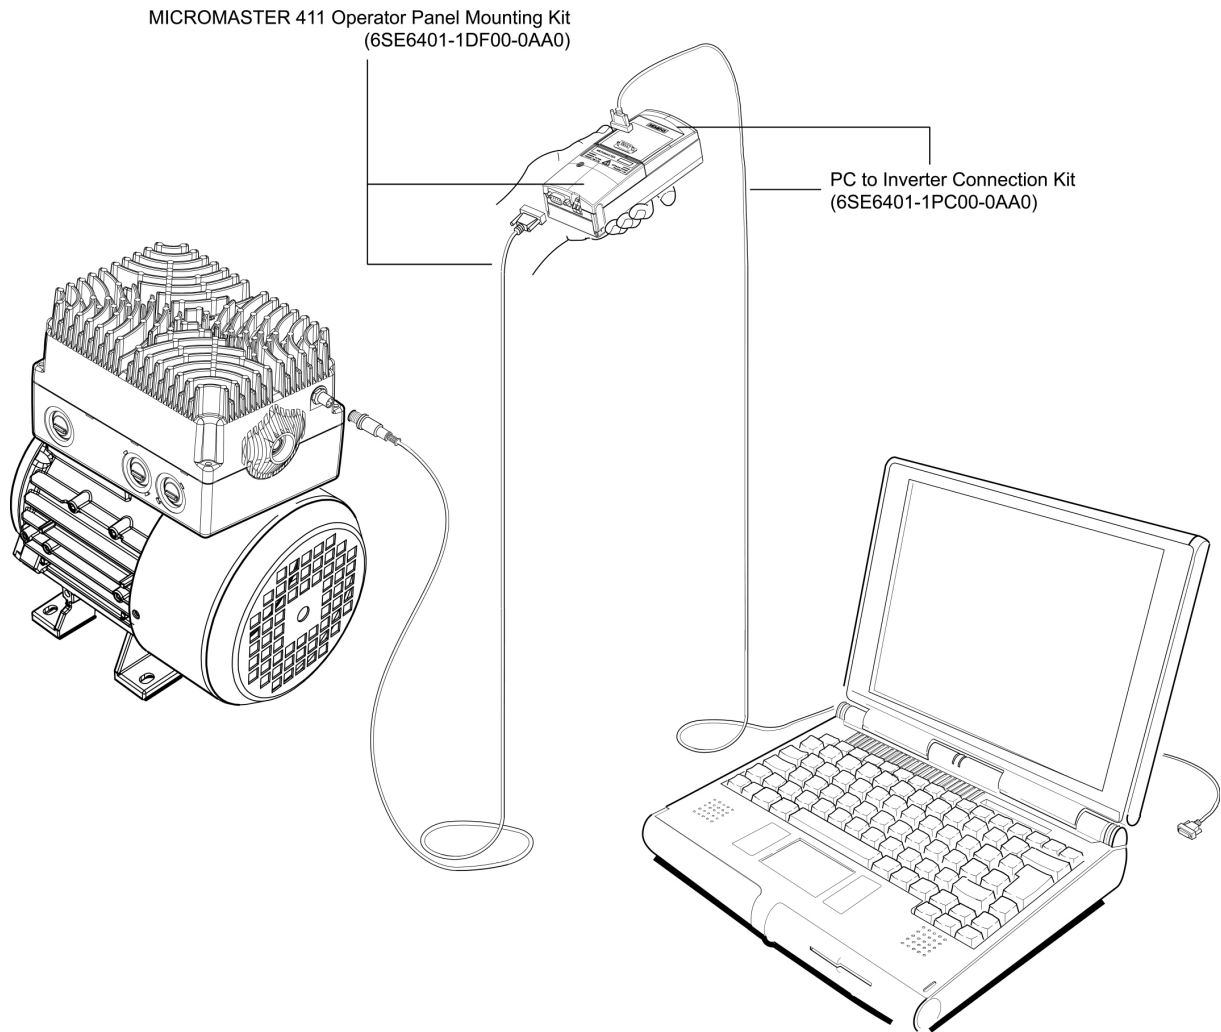


8.9 PC to AOP Connection Kit

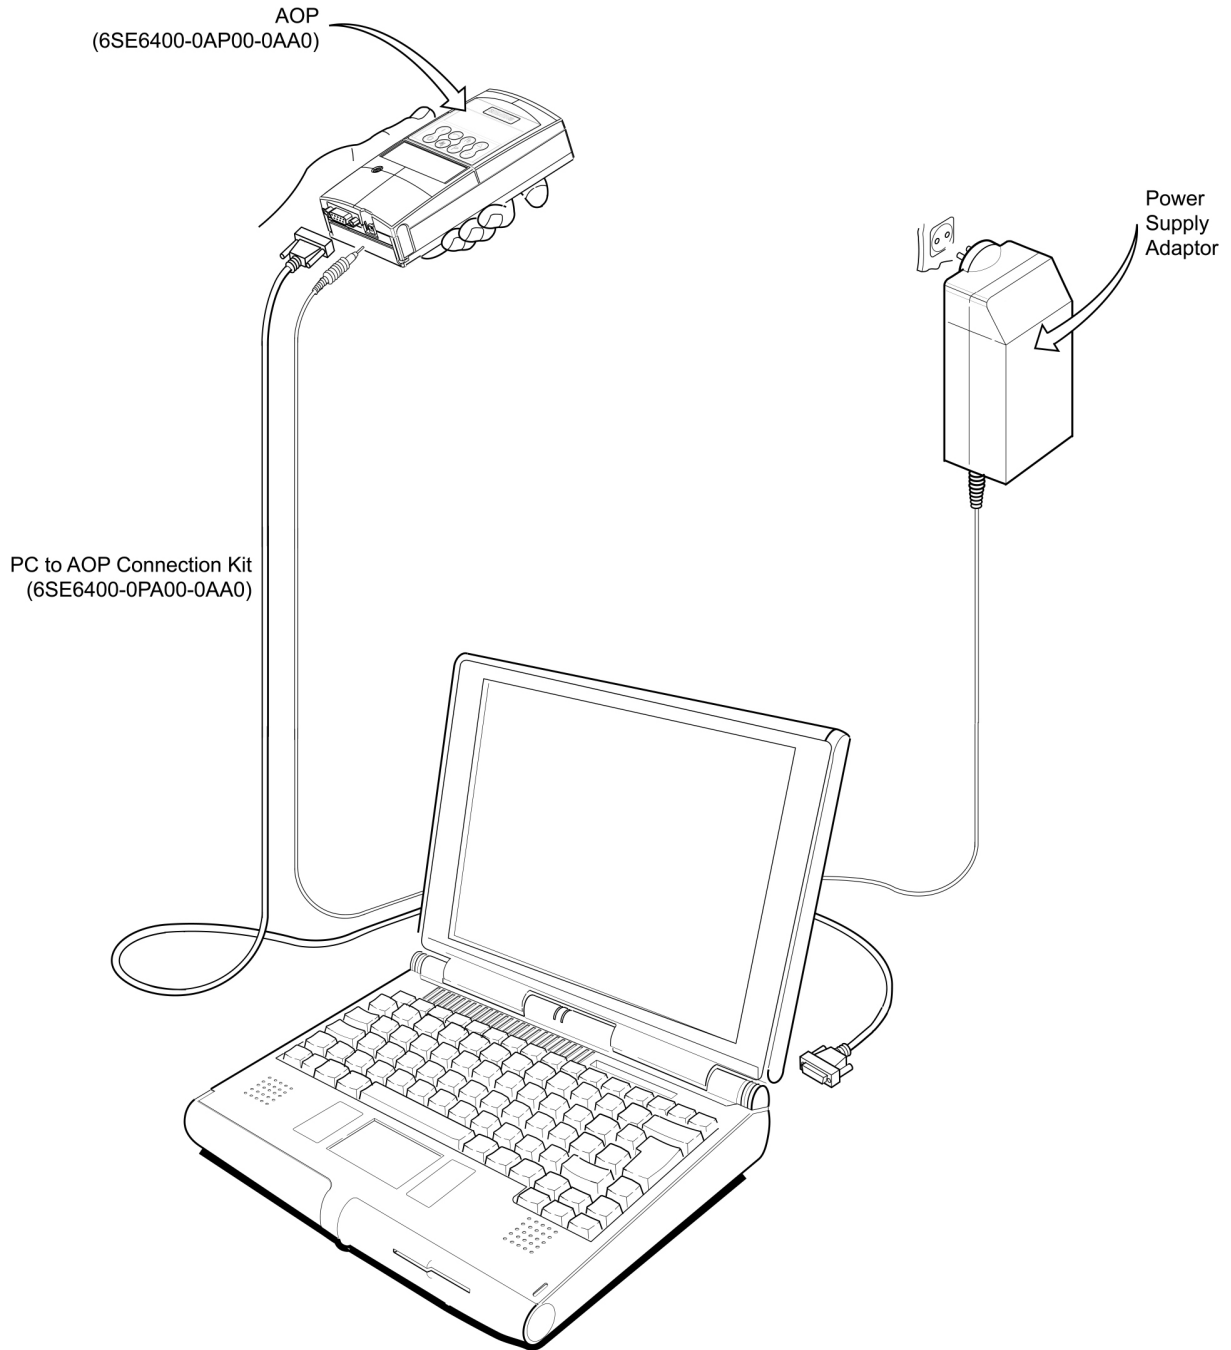

8.10 Door Mounting Kit for Single Inverter control

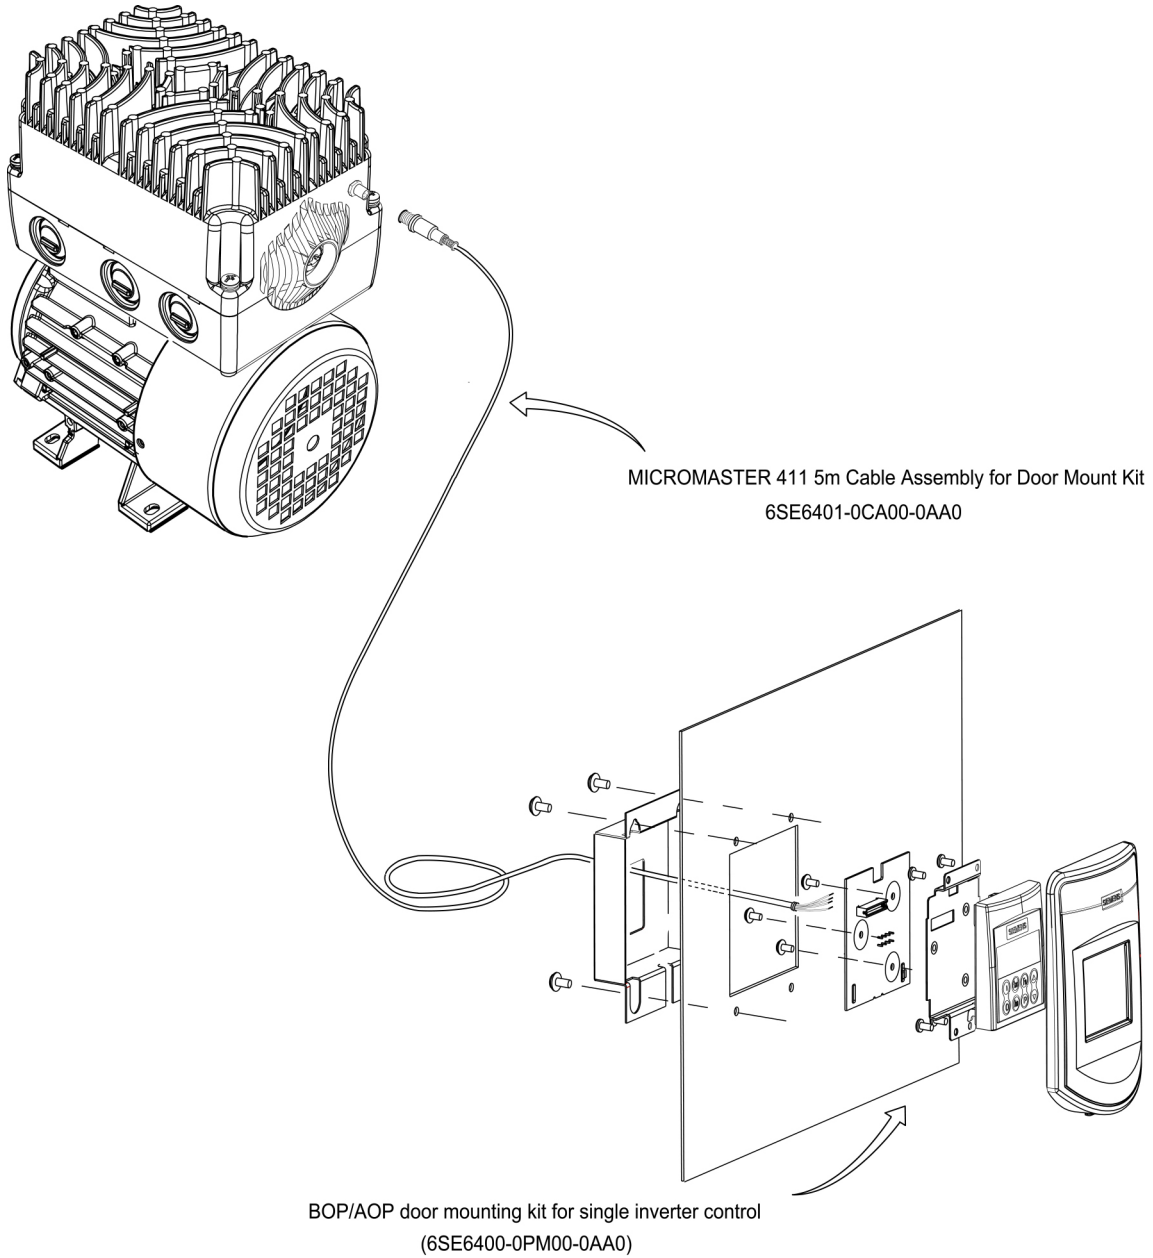

8.11 Wall Mounting Kit

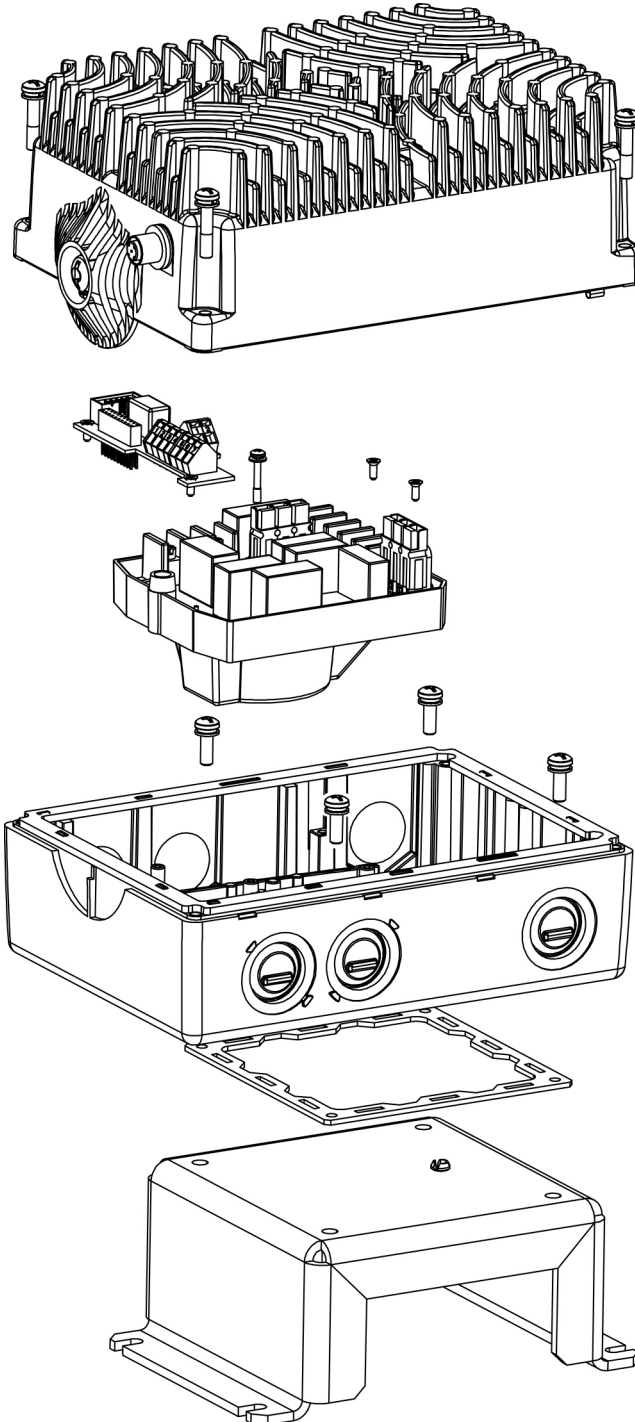

Wall Mounting Kit
(6SE6401-0WM00-0AA0)
Contents:

- 1 x Wall Mounting Bracket
- 1 x Gortex Membrane
- 1 x Gasket
- 1 x Cable Gland
- 1 x Gland Fixing Plate
- 4 x Fixing Screws (M5 x 16 mm)

9 Electro-Magnetic Compatibility (EMC)

This Chapter contains:

- EMC information.

9.1 Electro-Magnetic Compatibility (EMC)100

9.1 Electro-Magnetic Compatibility (EMC)

All manufacturers / assemblers of electrical apparatus which “performs a complete intrinsic function and is placed on the market as a single unit intended for the end user” must comply with the EMC directive EEC/89/336.

There are three routes for the manufacturer/assembler to demonstrate compliance:

9.1.1 Self-Certification

This is a manufacturer's declaration that the European standards applicable to the electrical environment for which the apparatus is intended have been met. Only standards that have been officially published in the Official Journal of the European Community can be cited in the manufacturer's declaration.

9.1.2 Technical Construction File

A technical construction file can be prepared for the apparatus describing its EMC characteristics. This file must be approved by a ‘Competent Body’ appointed by the appropriate European government organization. This approach allows the use of standards that are still in preparation.

9.1.3 EC Type Examination Certificate

This approach is only applicable to radio communication transmitting apparatus. All MICROMASTER units are certified for compliance with the EMC directive, when installed in accordance with the recommendations in Section 2 of this document.

9.1.4 EMC Directive Compliance with Harmonics Regulations

EN 61000-3-2 "Limits for harmonic current emissions (equipment input ≤ 16 A per phase)".

All Siemens variable speed drives of the MICROMASTER, MIDIMASTER, MICROMASTER Eco and COMBIMASTER ranges, which are classified as "Professional Equipment" within the terms of the standard, fulfill the requirements of the standard.

9.1.5 Environment Classes of EMC performance

Environment: General Industrial

Compliance with the EMC Product Standard for Power Drive Systems EN 61800-3 for use in **Second Environment (Industrial)** and **Restricted Distribution**.

Table 9-1 Environment - General Industrial

EMC Phenomenon	Standard	Level
Emissions:		
Radiated Emissions	EN 55011	Level A1
Conducted Emissions	EN 61800-3	European Amendment EN61800-3-A13
Immunity:		
Electrostatic Discharge	EN 61000-4-2	8 kV air discharge
Burst Interference	EN 61000-4-4	2 kV power cables, 1 kV control
Radio Frequency Electromagnetic Field	IEC 1000-4-3	26-1000 MHz, 10 V/m

Environment: Filtered Industrial

This level of performance will allow the manufacturer/assembler to self-certify their apparatus for compliance with the EMC directive for the industrial environment as regards the EMC performance characteristics of the power drive system. Performance limits are as specified in the Generic Industrial Emissions and Immunity standards EN 50081-2 and EN 50082-2.

Table 9-2 Environment - Filtered Industrial

EMC Phenomenon	Standard	Level
Emissions:		
Radiated Emissions	EN 55011	Level A1
Conducted Emissions	EN 55011	Level A1
Immunity:		
Supply Voltage Distortion	IEC 1000-2-4 (1993)	
Voltage Fluctuations, Dips, Unbalance, Frequency Variations	IEC 1000-2-1	
Magnetic Fields	EN 61000-4-8	50 Hz, 30 A/m
Electrostatic Discharge	EN 61000-4-2	8 kV air discharge
Burst Interference	EN 61000-4-4	2 kV power cables, 2 kV control
Radio Frequency Electromagnetic Field, amplitude modulated	ENV 50 140	80-1000 MHz, 10 V/m, 80% AM, power and signal lines
Radio-frequency Electromagnetic Field, pulse modulated	ENV 50 204	900 MHz, 10 V/m 50% duty cycle, 200 Hz repetition rate

9.1.6 Environment: Filtered - for residential, commercial and light industry

This level of performance will allow the manufacturer / assembler to self-certify compliance of their apparatus with the EMC directive for the residential, commercial and light industrial environment as regards the EMC performance characteristics of the power drive system. Performance limits are as specified in the generic emission and immunity standards EN 50081-1 and EN 50082-1.

Table 9-3 Environment - Filtered for Residential, Commercial and Light Industry

EMC Phenomenon	Standard	Level
Emissions:		
Radiated Emissions	EN 55011	Level A (Restricted Distribution)
Conducted Emissions	EN 55011	Level B
Immunity:		
Supply Voltage Distortion	IEC 1000-2-4 (1993)	
Voltage Fluctuations, Dips, Unbalance, Frequency Variations	IEC 1000-2-1	
Magnetic Fields	EN 61000-4-8	50 Hz, 30 A/m
Electrostatic Discharge	EN 61000-4-2	8 kV air discharge
Burst Interference	EN 61000-4-4	2 kV power cables, 2 kV control
Radio Frequency Electromagnetic Field, amplitude modulated	ENV 50 140	80-1000 MHz, 10 V/m, 80% AM, power and signal lines
Radio-frequency Electromagnetic Field, pulse modulated	ENV 50 204	900 MHz, 10 V/m 50% duty cycle, 200 Hz repetition rate

Notes

- MICROMASTER 411/COMBIMASTER 411 inverters are intended **exclusively for professional applications**. Therefore, they do not fall within the scope of the harmonics emissions specification EN 61000-3-2.
- Class A filtered inverters can be used in this environment under "Restricted Distribution" (Professional Applications) in accordance with EN61800 Part 3.
- Dedicated EMC Product Standards can exist for this equipment/units/machine/plant, which the manufacturer must then observe.

9.1.7 EMC Compliance Tests

Table 9-4 EMC Compliance Table

Model	Remarks
<i>Environment – General Industrial</i>	
6SE6411-6U***-**A1 1UA1**-**U**	Unfiltered units, all voltages and powers.
<i>Environment – Filtered Industrial (All EU countries for year 2002)</i>	
6SE6411-6B***-**A1 1UA1**-**B**	Filtered units all voltages and powers.
<i>Environment – Filtered for residential, commercial and light industry</i>	
6SE6411-6B***-**A1 1UA1**-**B**	Filtered units all voltages and powers.
* Denotes any value is allowed.	

9.1.8 MICROMASTER 411 – EMC Compliance

The MICROMASTER 411 inverters will, when correctly installed and put to their intended use, satisfy the requirements of the EEC Directive 89/336/EEC concerning electromagnetic compatibility.

If the guidelines on installation to reduce the effects of electromagnetic interference are followed, the devices are suitable for installation in machines. According to the machinery directive, these machines must be separately certified.

TABLE below lists the measured results for emissions of an immunity to interference for the MICROMASTER 411 inverters.

Table 9-5 MICROMASTER 411 Measured Results

Test Standard	Measurement	Test Value	Limit Value
RFI Emissions	Conducted via Mains Cable	150 kHz to 30 MHz	Unfiltered – not tested Class B
	Emitted by the inverter	30 MHz to 1 GHz	All devices – Class A

10 Engineering Information

This Chapter contains:

- Operating Modes.
- Derating Factors.
- Motor and Inverter Protection.

10.1	Current Limit and Overload Operation	106
10.2	Control and Operating Modes	109
10.3	Braking	118
10.4	Derating Factors	120
10.5	Thermal Protection and Automatic De-rating	121
10.6	Operation from Unearthed Supplies	122
10.7	Lifetime of Inverters	122
10.8	Working with Binary Connectors (BiCo)	122
10.9	Harmonic Currents	129
10.10	Use of MM4 Input Chokes	129
10.11	Power Losses	130
10.12	Shock and Vibration	131
10.13	PROFIBUS	132
10.14	PROFIBUS Module	133
10.15	Variant Independent Options	136

10.1 Current Limit and Overload Operation

The inverter will always protect itself, the motor and the system from possible damage. Where a short circuit exists on the output of the inverter, the unit will trip almost instantaneously to protect itself. In the event of short and/or long term overload conditions, current limit protection now operates rapidly to reduce inverter current and prevent a trip occurring. Table 10-1 describes the levels available.

Table 10-1 Current Limit and Overload

Electronic Trip	This is a very fast current limit, which operates if there is a short circuit (line to line or most of line to earth faults) on the output. It is a fixed level trip and operates within a few microseconds.
Overload Limit	This is a very fast limit, which operates within a few microseconds and removes some of the output pulses to limit the current and protect the inverter. If this pulse dropping occurs during overload, the operating condition will usually recover and the motor will continue to run without tripping.
Long Term Overload Limit	This is a slower limit which allows an overload of at least 60 seconds where the current lies above the motor limit but below the Electronic Trip and Overload Limit.
Continuous Limit	This is the level set as the maximum continuous motor current. The inverter will control the current to this level after other overloads have timed out.

Figure 10-1 illustrates the interaction of parameters associated with current limit. Read Only parameters r0027, r0034, r0037 and r0067 help with fault diagnosis.

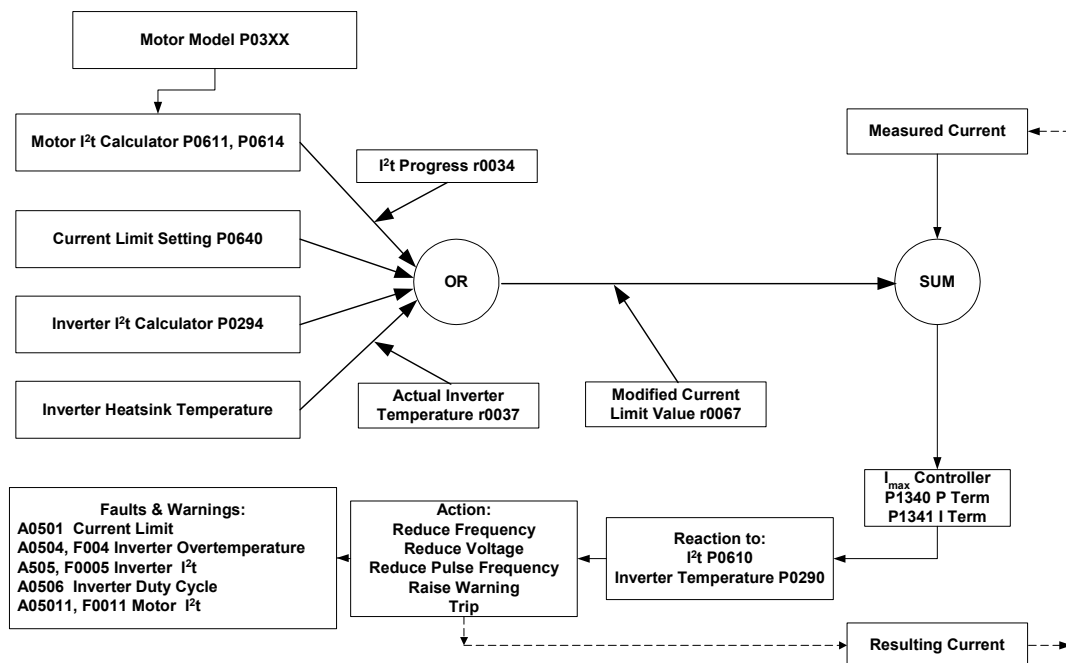


Figure 10-1 Current Limit Interaction

10.1.1 Current Monitoring Accuracy

Table 10-2 shows sample results comparing current measured with a current scope, and the current displayed on the inverter, using measurements taken from a variety of inverters at various switching frequencies, current loads, frequency setpoints and cable lengths.

Table 10-2 Measured Current Monitoring Accuracy

Inverter	CSB 1.5kW 400 V	CSC 3.0 kW 400 V
Switching frequency	4 kHz	4 kHz
Load on inverter	Nominal load 4.0 A	Nominal load 7.7 A
Frequency setpoint	45 Hz	45 Hz
Scope current (long cable)*	4.00 A	7.70 A
Drive current	4.05 A	7.46 A
% difference (inverter/scope)*	1.32%	-3.9%

*Typical % error from 5 Hz to 50 Hz at nominal Current

10.1.2 Fast Current Limit

Fast Current Limit (FCL) is a cycle-by-cycle hardware current limit built into the inverter. The current is rapidly reduced by pulse dropping, that is by turning off the Insulated Gate Bipolar Transistors (IGBTs) on a pulse by pulse (cycle by cycle) basis. The normal current limit operation then takes over.

The FCL threshold is set slightly below the software overcurrent trip threshold and reacts much quicker (i.e. in milliseconds), thus preventing spurious and unwanted trips when sudden loads are applied or fast accelerations requested.

FCL is especially useful when working in open loop control to override unwanted currents.

10.1.3 Positive Temperature Coefficient Resistor Use

Many motors are available with a Positive Temperature Coefficient (PTC) resistor built into the windings. The resistance of the resistor rises rapidly at a particular temperature and this change can be detected by the inverter. If the resistor is connected to the inverter terminals as shown in Figure 10-2, and the PTC input enabled by setting parameter P0703=29, then if the resistance rises above 2 k Ω , the inverter will trip and Fault Code F004 displayed.

Most Motor Protection PTC resistors have a resistance of 2-300 ohms when cold and this value rises rapidly at the 'knee point' to typically 10 k Ω and greater. The PTC input is set so that it will operate at 1 k Ω minimum, 1.5 k Ω nominal, and 2 k Ω maximum. On this basis two or three PTCs may be connected in series when a motor has more than one PTC built in, or if two or three motors are connected to the inverter output and require individual protection.

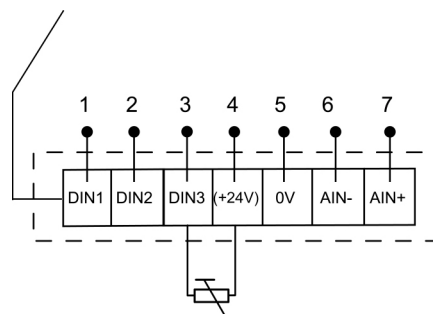


Figure 10-2 PTC Resistor Connections

10.1.4 I²t Performance

When the motor is running at low speed and high load, the built-in cooling fan may not provide enough cooling and the motor may overheat. Parameter P074 allows a frequency dependent I²t limit to be enabled to protect the motor.

When the inverter is operating in the region above the selected curve (i.e. at low frequency and high current), a timer is started, and after some time, (based on the current, the motor size and previous operating history), the inverter will trip or reduce output frequency. Trip or reduction of output frequency will depend on the parameter setting.

10.1.5 Internal Overtemperature

Under normal circumstances, the inverter will not overheat. The heatsink maintains the inverter at normal operating temperature. Careful consideration when mounting the inverter will ensure adequate ventilation and reduce the likelihood of overheating. Check to see that airflow remains unrestricted. There should be a minimum clearance of 100 mm free space around the Inverter.

Heatsink temperature is monitored using a PTC resistor and the inverter will trip if the maximum temperature is exceeded. If the inverter persistently trips, you should check for high ambient temperature or blocked airflow.

You can verify heatsink temperature by displaying Parameter r0037. Units are given in degrees Celsius (°C).

10.1.6 Overvoltage and Trip Levels

The inverter will protect itself from both supply overvoltage and undervoltage. Trip levels are shown in Table 10-3. Internal overvoltage can occur during braking where internal voltages are forced high by energy from an external load.

Table 10-3 Trip Levels

Input Supplies	Undervoltage trip levels	Overvoltage trip levels
3 Phase 400 V	410 V DC	820 V DC

When output pulses are disabled from the inverter an undervoltage trip will not occur. An overvoltage trip will occur at any time when the overvoltage threshold is exceeded.



Caution

Check to ensure you have matched the input supply to the inverter. If the supply voltage is too high, you may damage the inverter even if it trips.

10.2 Control and Operating Modes

10.2.1 Boost

Boost is used to increase the output voltage in order to overcome losses and non-linearity at low frequencies. If the correct amount of boost is applied, the current and torque will be increased at low frequencies. However, if too much boost is applied, the motor may overheat if run at low frequencies for a long time and excessive boost may also saturate the motor, leading to loss of torque.

The I^2t function helps protect the motor under these circumstances. Boost is calculated such that 100% boost is the voltage given by:

Stator resistance (P0350) multiplied by rated motor current (P0305).
Which means that changing the value of these parameters will affect the boost level.

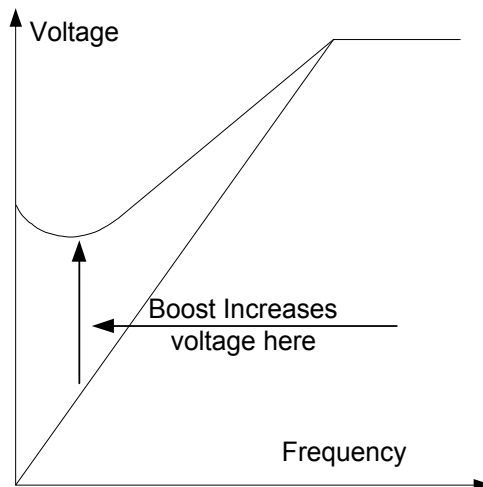


Figure 10-3 Boost Level

Table 10-4 Boost Parameters

Parameter	Description
P1310	This parameter sets the % boost applied at 0 Hz. The boost level is then reduced with increasing frequency to a minimum value, set by P1316, typically around about 10 Hz.
P1311	This parameter sets a boost voltage, as P1310, except that the boost is applied only during acceleration, either following a start command or from set point changes.
P1312	This parameter allows a constant linear boost, again as P1310, to be applied following a start command only to improve 'first time' starting.

Maximum values of P1310, 1311, and 1312 are 250%, but the overall maximum boost is limited by P0640, the motor overload setting. The boost voltage will also be limited by the operation of the I^2t function, so boost may be reduced further if the motor is in danger of overheating. The progress of the I^2t function can be monitored by parameter r0034.

The default settings (P1310 = 50, P1311 and P1312 = 0) allow satisfactory operation with most loads. Increasing the boost up to say 200% (note that P0640 setting will limit) on smaller motors and 100% on larger motors will often give improved torque at low frequencies. Use P1311 and P1312 to limit this to accelerating boost only (e.g. P1310 = 100, P1312 = 100), to reduce the possibility of overheating.

10.2.2 Proportional and Integral Control (PI)

Note

MICROMASTER 411/COMBIMASTER 411 have a built-in PI controller. References to "PID" control within parameter descriptions relates to "PI" control.

10.2.2.1 What is Closed Loop control?

Closed loop control is widely used in industrial applications to control a wide variety of processes. Control engineering is a complex subject, but a simple closed loop control uses a feedback signal from the process (such as temperature, pressure, speed) a desired value or setpoint (often set manually) and a control system that compares the two and derives an error signal. The error signal is then processed and used to control the inverter and motor (in this case) to try to reduce the error.

The error signal processing can be very complex because of delays in the system. The error signal is usually processed using a Proportional and Integral (PI) controller whose parameters can be adjusted to optimize the performance and stability of the system. Once a system is set up and stable, very efficient and accurate control can be achieved. See Figure on Page 116.

10.2.2.2 Implementation on MICROMASTER 411/COMBIMASTER 411

MICROMASTER 411/COMBIMASTER 411 have a built in PI controller that can be enabled by the user to allow for closed loop control. Once the PI controller is enabled (using P2200), the PI controller internally generates the motor frequency necessary to minimize the error between the PI setpoint and the PI feedback. It does this by continuously comparing the feedback signal with the setpoint and uses the PI controller to determine the necessary motor frequency. The normal frequency setpoint (P1000 setting) and ramp times (P1120 & P1121) are automatically disabled but the minimum and maximum output frequency settings (P1080 and P1082) remain active.

10.2.2.3 Setting up the PI controller

Accessing PI parameters

The PI parameters are in the range between P2200 and P2294. For most applications, the level 2 parameters are sufficient for setting up the PI controller. To access only the PI controller parameters, you can use the parameter filter as follows:

P0003 = 2
P0004 = 22

Enabling PI control

PI control is enabled using parameter P2200. For constant enabling of the PI controller this should be set to 1. It is also possible to use a digital input (or other BiCo functions) to enable the PI controller, e.g. the PI controller can be enabled using DIN 2 by setting P0702 = 99 and P2200 = 722.1. This allows the user to switch between frequency control and PI control when the inverter is not running.

PI Feedback signal

PI control requires a feedback signal from the process to monitor how the system is behaving. For the majority of applications, this will be in the form of an analogue sensor.

The MICROMASTER 411/COMBIMASTER 411 has one analogue input, terminal connections 6 & 7, and the feedback signal can be connected to this input. The source of the PI feedback signal must then be defined using P2264 = 755 (source of PI feedback = analogue input 1). If required the analogue input can be scaled using parameters P0757 – P0760. If a different source of feedback signal is used (e.g. USS), P2264 must be set appropriately. The value of the feedback signal can be viewed via parameter r2266.

The relation between the sensor signal and the manner in which the PI controller changes the motor frequency must also be defined at this point. This is done using P2271 (PI transducer type). There are 2 possible settings for this parameter, 0 and 1. The difference between these settings is whether the PI controller increases or decreases output frequency as a response to a positive error signal (i.e. where the feedback signal is less than the setpoint). The parameter description for P2271 describes in detail how to determine which setting is correct for your application.

PI setpoint

The PI controller controls the inverter frequency by comparing the actual system behavior (via the feedback signal) with the desired system behavior. The desired behavior is defined using a setpoint. The user selects the source of the setpoint with parameter P2253. MICROMASTER 411/COMBIMASTER 411 only have one analogue input and this is most commonly used for the feedback signal, so an internal digital setpoint is usually used. There are two methods of doing this, either using the “fixed PI setpoint” or the “keypad (motorized potentiometer) setpoint”.

- | | | |
|----|--|---|
| 1. | P2253 = 2224
Fixed PI setpoint | This method allows the user to define up to 7 setpoint values using parameters P2201 to P2207 and select between these using binary signals, usually via the digital inputs. The different selection methods are described in the parameter list under P2201. |
| 2. | P2253 = 2250
Keypad (motorized potentiometer) setpoint. | This method allows the user to set a fixed value in P2240. The setpoint can be increased or decreased either with the arrow keys on the BOP or more commonly via digital inputs (e.g. P0702 = 13 “increase” and P0703 = 14 “decrease”). |

Note

Values are given in % rather than Hz, and the running frequency of the inverter is determined by the difference between the setpoint and feedback signals and the action of the PI controller.

10.2.2.4 PI Setpoint ramp times

When PI control is enabled using P2200, the normal frequency ramp up and ramp down times (P1120 and P1121) are bypassed. The PI setpoint has its own ramp times, P2257 and P2258, which allow ramped PI setpoint changes.

The ramp up time, P2257, is active when the PI setpoint is changed or when a RUN command is given. The ramp down time, P2258 is only effective on PI setpoint changes. The ramp down times used after OFF1 and OFF3 commands are set in P1121 and P1135 respectively.

10.2.2.5 PI Controller Proportional and Integral terms

The user can tune the performance of the PI controller to suit the process demands by adjusting P and I terms, P2280 and P2285. The demands of the process will determine the optimal type of response, from a rapid recovery response with overshoot to a damped response. By adjusting the P and I parameters it is possible to achieve different types of response.

Example:

The following figures show how different responses to a 5% PI setpoint step change on a pressure control system. The traces show the PI feedback signal, with 1 V = 10%. The different responses are achieved by varying the settings of P2280 and P2285.

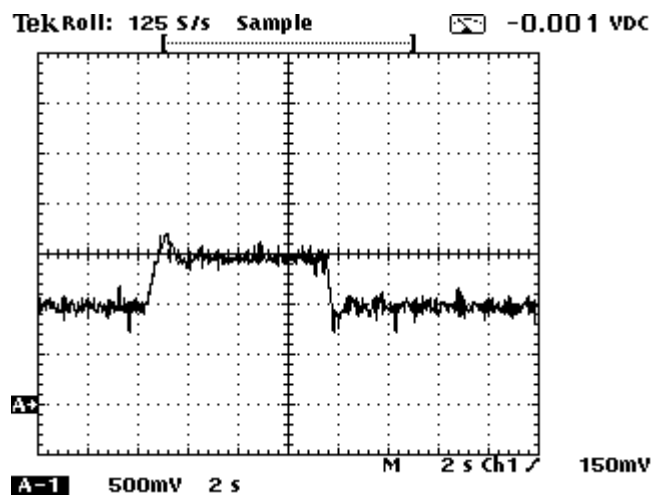


Figure 10-4 Quick response with overshoot: P2280 = 0.30; P2285 = 0.03s

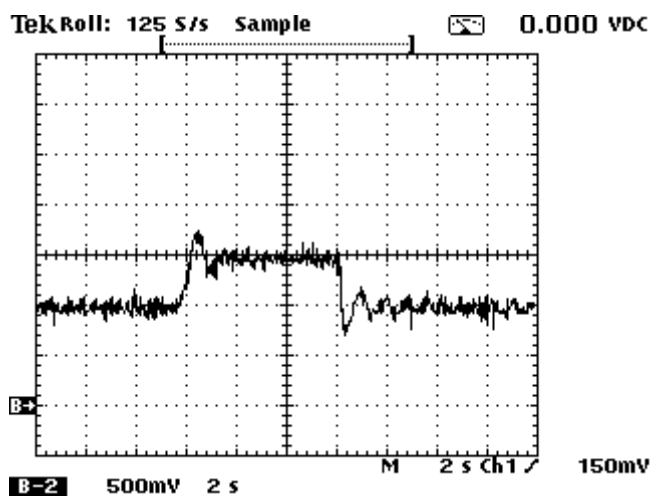


Figure 10-5 Quick response with overshoot, but instability: P2280 = 0.55; P2285 = 0.03s

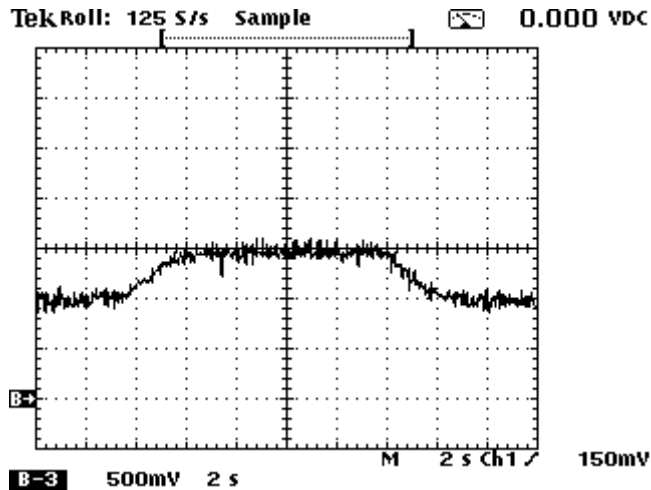


Figure 10-6 Damped response: P2280 = 0.20; P2285 = 0.15s

Values of P2280 and P2285 are determined by the relationship between motor frequency and the PI control quantity (e.g. pressure).

When optimizing a control process an oscilloscope is recommended to monitor the feedback signal to see the system response. Most commonly small PI setpoint step changes (1- 10%) without the PI ramp times (P2257 = P2258 = 0.0 s) are used to evaluate the system response. Once the desired response profile has been achieved, the operational ramp times are then set.

It is recommended to start with a small P term (e.g. P2280 = 0.20) and adjust the I term until stable operation constant is achieved. A small PI setpoint change should then be given and depending on the system response the parameters adjusted according to the tendencies shown in the figures above.

In general, the most stable control is achieved by using both proportional and integral terms, and if the system is liable to experience sudden disturbances we would not recommend setting the P term (P2280) greater than 0.50.

A block diagram showing the relationships and interaction between PI Setpoint and PI Feedback is shown on Page 116.

10.2.3 Ziegler-Nichols method of Optimization

The Ziegler-Nichols method is a means of calculating the Proportional gain and Integral time by measuring the system response to a step change in open loop. This is done by putting the inverter in frequency control and monitoring the feedback signal. From the feedback response, the time before the system starts to respond, **L**, and the dominant time constant, **T**, which is measured by estimating when the system response would have reached its stationary value if the maximum slope were maintained. (Typically measure to where the system response has reached 85% of its final value).

From **L**, **T** and the ratio between the frequency step Δf (as % of F_{max}) to the feedback value change Δx (%), it is possible to calculate the P and I terms for a PI control process as follows:

$$\begin{aligned} \text{P gain} &= (0.9)(T)(\Delta f) / (L)(\Delta x) \\ \text{I time} &= 3L \end{aligned}$$

Example:

With the inverter in frequency control, a frequency step of 5 Hz is given and the feedback signal monitored. To allow this, the following parameters are set:

P2200 = 0
 P1120 = 0.0 s
 P1121 = 0.0 s
 P1080 = 50.0 Hz.

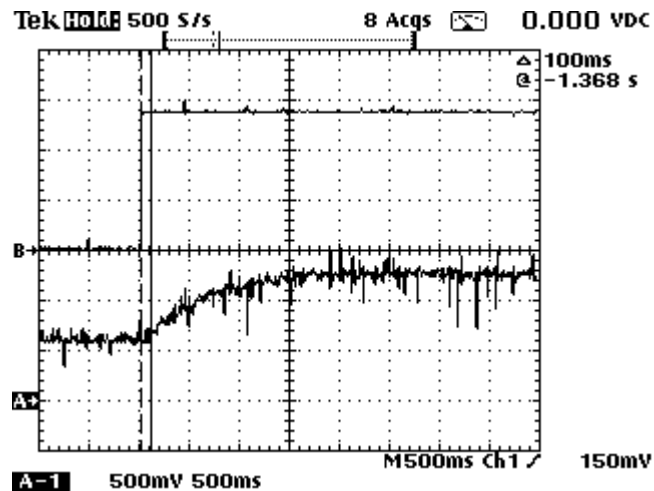


Figure 10-7 Response to 5 Hz step: L = 100 ms

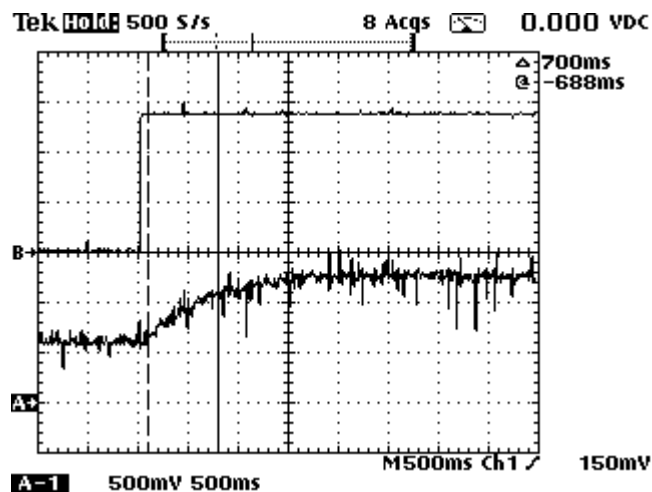


Figure 10-8 Response to 5 Hz step: T = 700 ms

The frequency step $\Delta f = 5 \text{ Hz} / 50 \text{ Hz} = 10\%$

The feedback step $\Delta x = 0.64 \text{ V} / 10 \text{ V} = 6.4\%$

P gain = $(0.9)(T)(\Delta f) / (L)(\Delta x) = 9.84 = \text{P2280}$

I time = $3L = 0.30 \text{ s} = \text{P2285}$

The PI controller should now be enabled (P2200 = 1).

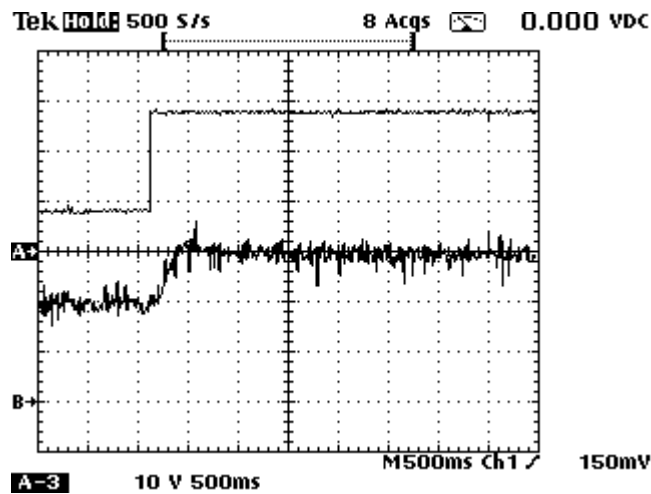


Figure 10-9 Step Response in PI control with P2280 = 9.84 and P2285 = 0.30

10.2.4 PI Output Limits

The PI controller generates the frequency at which the inverter runs. This is generated as a % which is normalized into Hz via P2000. The user can limit the output range of the controller using parameters P2291 and P2292. While the inverter will only operate within the frequency range defined by F_{\min} (P1080) and F_{\max} (P1082), the PI output limits can be used to further limit the output frequency. Once one of the limits has been reached a bit is set (P0053.A or P0053.B) which can be connected to the digital output via P0731, or used for internal control purposes using BiCo.

Note

If F_{\max} (P1082) is greater than the value in P2000, then either P2000 or P2291 should be adjusted to allow F_{\max} to be reached.

Setting P2292 to a negative value allows bipolar operation of the PI controller.

10.2.5 Further features

Further features, such as a PI setpoint trim can be accessed in user access level 3 (P0003 = 3). These features are described in the Parameter List.

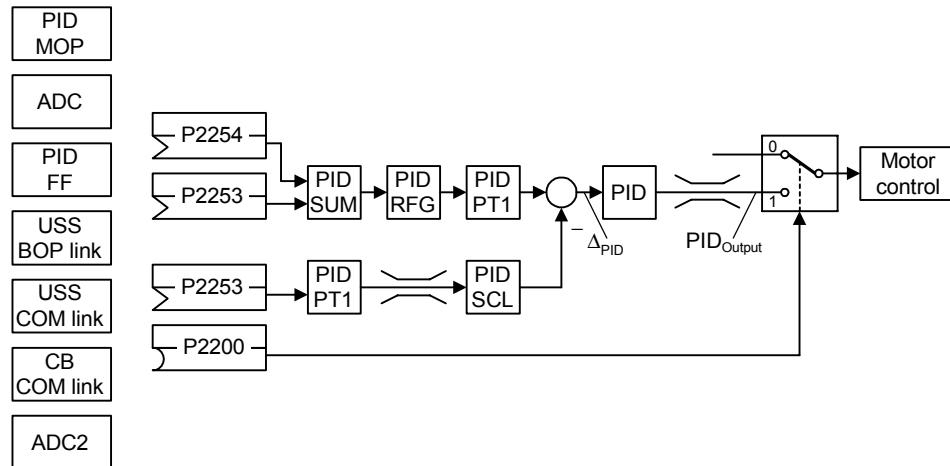


Figure 10-10 PI Basic Block Diagram

10.2.6 Energy Saving Mode

When the PI controller output goes below the Energy Saving Setpoint (P2390) a timer is started. If the PI output returns above the Energy Saving Setpoint before the timer expires, then the timer is aborted.

When the timer (P2391) expires, Energy Saving Mode takes control of the output and the inverter performs an OFF1 command. The inverter is now in an Energy Saving state; a substate of the running state. This state enables the running status to remain set; indicating that the inverter has a valid run signal and can start up at any time.



Once the PI error (P2273) exceeds the Energy Saving Restart Error (P2392) the inverter exits Energy Saving Mode and ramps the inverter back up to the value set in P2390 + 5% and then passes control back to the PI controller. It should be noted that this must be a POSITIVE error when operating in a positive direction.

Should the inverter be required to restart having been powered off and on in Energy Saving Mode, it is necessary to activate the Auto-restart function of the inverter (using P1210=6).

Figure 10-11 illustrates the Energy Saving Mode function.

Notes

- Energy Saving Mode only operates in a positive direction.
 - Energy Saving Setpoint (P2390) must be greater than F_{min} .
-

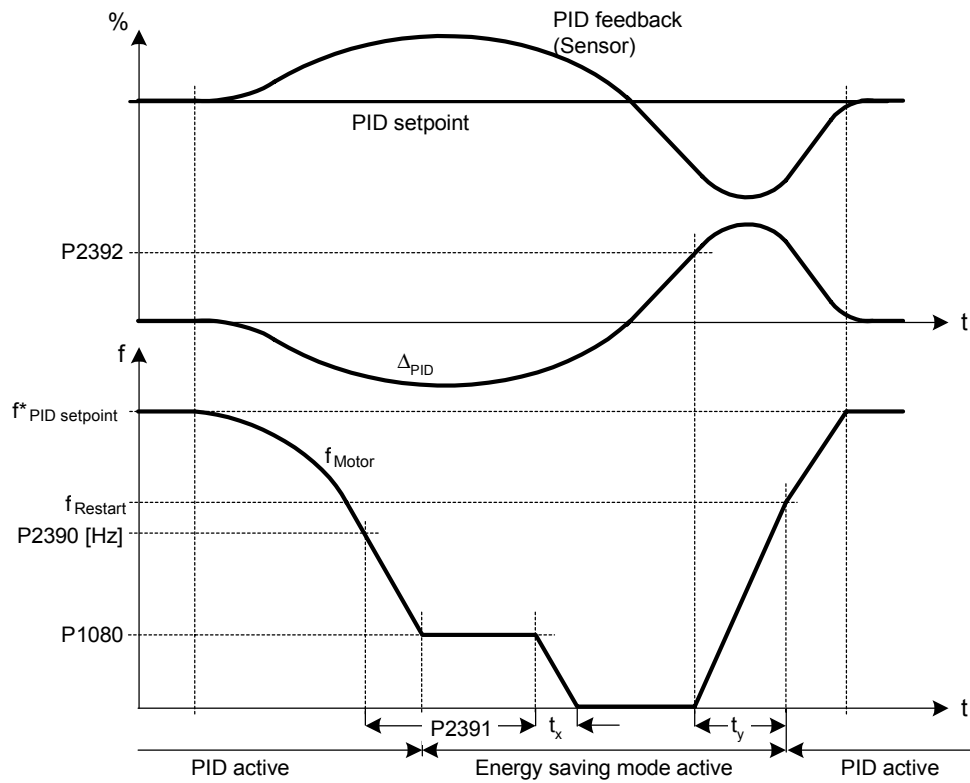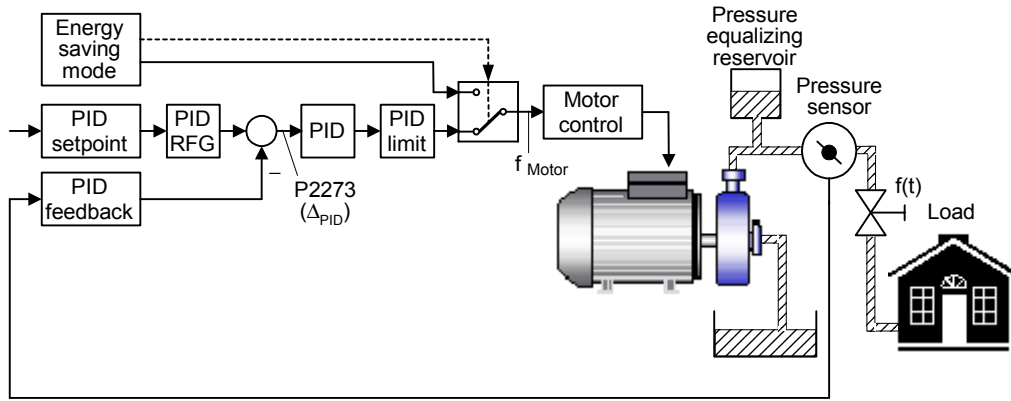

$$f_{Restart} = P2000 \cdot \frac{P2390 + 5\%}{100\%}$$

$$P2390 [Hz] = P2000 \cdot \frac{P2390}{100\%}$$

$$t_x = \frac{P1080}{P1082} \cdot P1121$$

$$t_y = \frac{f_{Restart}}{P1082} \cdot P1120$$

Figure 10-11 Energy Saving Mode

10.3 Braking

Reducing the output frequency of the inverter will cause the motor to slow down and as the frequency is gradually reduced to zero the motor will stop. Reducing the output frequency too rapidly may cause the motor to act as a generator and cause a negative current (regeneration) to return to the DC link. To overcome this possibility the MICROMASTER 411/COMBIMASTER 411 employs a number of methods to control braking. These options are described in the following paragraphs.

The method of bringing the motor to a standstill is selected by the user depending on operational requirements.

10.3.1 Normal Braking

The usual or normal braking method is to allow the motor to come to a standstill at the selected ramp-down rate (OFF1), to coast to a standstill (OFF2) or to quickly ramp down (OFF3) without applying any additional braking. (Refer to parameters P0701, P0702 and P0703). However, if regeneration does cause tripping, DC or Compound braking methods may be considered.

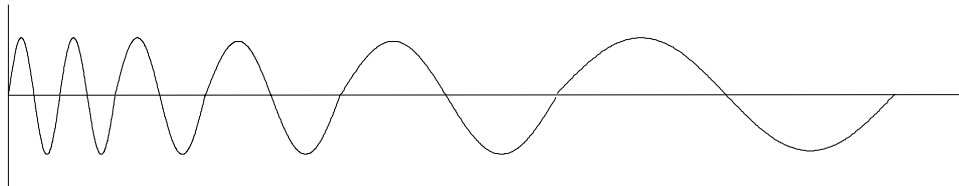


Figure 10-12 Frequency Ramp Down

10.3.2 DC Braking

In this method a controlled DC voltage is applied to the rotor. When using DC braking, the inverter output pulses are disabled and the actual time taken to bring the motor to a standstill cannot be predicted. Stored energy in the motor and the load is dissipated in the rotor therefore no regeneration occurs.

The DC braking current is defined as a percentage of nominal motor current using parameter P1232. The current will be applied only when the motor is sufficiently demagnetized. If the demagnetization time for the motor (P0347), is reduced too much then the drive will trip on over current (F0001) when DC braking is activated. DC braking can be enabled by an external source such as a digital input.

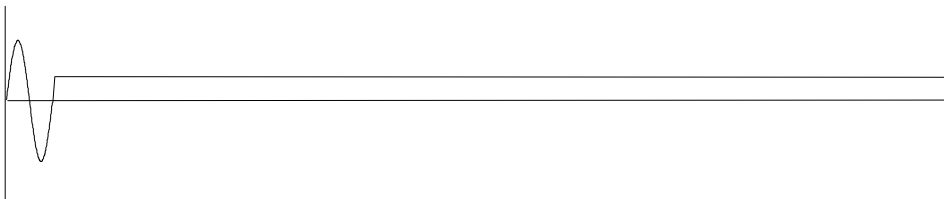


Figure 10-13 DC Braking

Caution

- When DC Braking is applied via P1230 (BICO Source) and an ON-Command is present; when DC Braking is removed the motor will automatically ramp up to the configured frequency setpoint.
 - Frequent use of DC Braking can cause the motor to overheat.
-

10.3.3 Vdc Max Controller

The MICROMASTER 411/COMBIMASTER 411 has a controller to limit the DC voltage (Vdc Max controller). When braking a load faster than would normally be possible, excess energy has to be dissipated. This energy is unable to go back into the input supply so the result is that the DC link voltage rises. If this voltage rises too high, the trip level will be reached and the output pulses disabled to prevent damage to the inverter.

The Vdc Max controller automatically increases the frequency and extends the ramp down period so that the braking is not as fast, thus reducing the risk of an overvoltage trip and keeping the system running. This means that the system will ramp down on the voltage limit until a standstill or a new setpoint is reached. (Refer to Parameter P1240 for configuration details).

10.3.4 Compound Braking

When Compound braking is used, most of the energy is dissipated in the motor instead of coming back into the DC link. This has the advantage that the braking performance of the inverter can be increased, without tripping the inverter and without the use of a braking resistor.

Compound braking combines the braking power of DC braking with the control offered by a ramp down. When using Compound braking, the ramp-down time is defined and the level of current to be used in Compound Braking is defined using P1236.

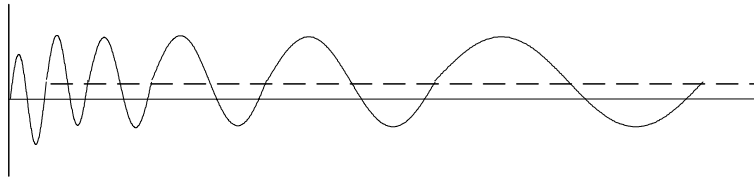


Figure 10-14 Compound Braking

10.4 Derating Factors

10.4.1 Derating with Temperature

Operation of the inverter outside its recommended ambient operating temperature would normally cause the inverter to trip with an overtemperature fault code. To avoid such tripping, the inverter automatically reduces its switching frequency (e.g. from 16kHz to 8kHz), thus reducing the temperature of the heatsink, enabling the application to continue running trip free. Should the load or ambient temperature then reduce, the inverter will first check to see if it is safe to increase the switching frequency again and if considered safe will then do so.

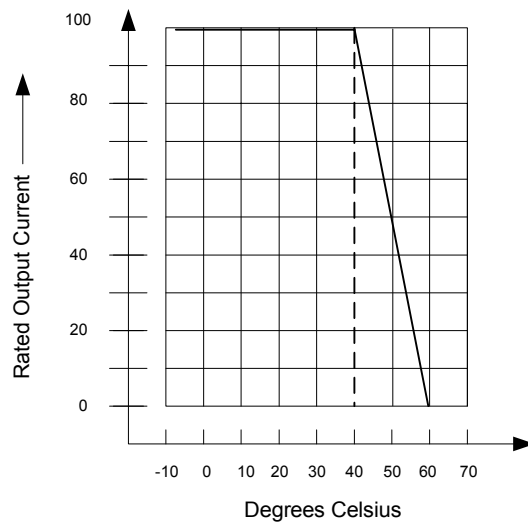


Figure 10-15 Derating with Temperature

10.4.2 Derating with Altitude

Figure 10- shows the permissible rated input voltage and output current for inverter installations from 500 m to 4000 m above sea level.

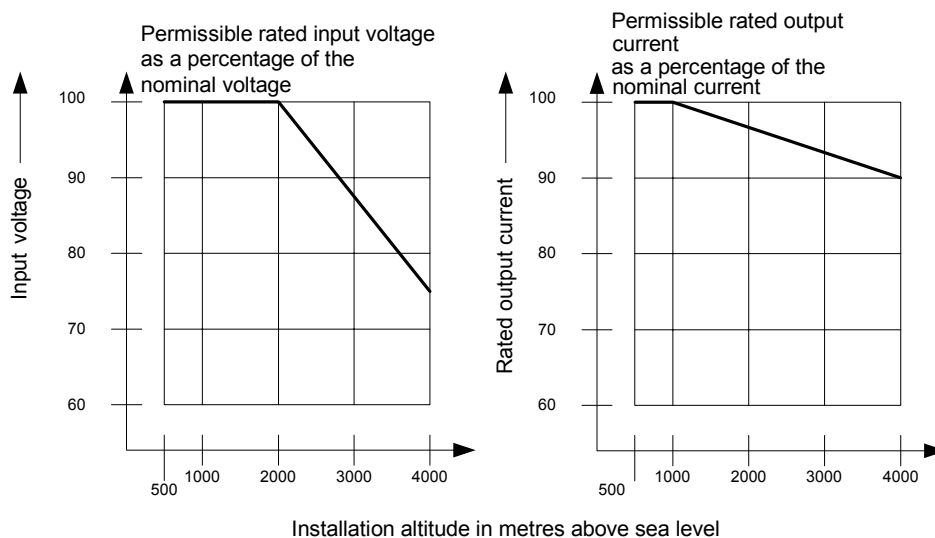


Figure 10-16 Derating with Altitude

10.4.3 Derating with Switching Frequency

Losses within the power module rise with increasing switching frequencies, leading to higher heatsink temperatures.

The default switching frequency of the MICROMASTER 411/COMBIMASTER 411 is 4 kHz for high voltage units (400 V). This is usually adequate for most applications and will allow full performance to be obtained from all products over the full temperature range.

Select the switching frequency using P1800. High voltage units are automatically derated by reducing the continuous output current if switching frequencies above 4 kHz are selected. Deratings are shown at P1800 in the System Parameter list.

The switching frequency will be automatically reduced if the internal temperature of the inverter becomes too high (see r0037, inverter temperature). This reduces losses and allows continued operation. This feature is controlled by P0290.

Under extreme conditions of overload, the switching frequency may momentarily reduce to protect the inverter.

Derating applies to constant torque and variable torque settings. Table 10-5 shows the value to which the maximum outputs are reduced.

Table 10-5 Derating with Switching Frequencies

Power kW (hp)	Measured Output Current						
	4 kHz	6 kHz	8 kHz	10 kHz	12 kHz	14 kHz	16 kHz
0.37 (0.5)	1.2	1.2	1.2	1.2	1.2	1.2	1.2
0.55 (0.75)	1.6	1.6	1.6	1.6	1.6	1.6	1.2
0.75 (1.0)	2.1	2.1	2.1	2.1	1.8	1.8	1.2
1.10 (1.5)	3.0	3.0	2.7	2.7	1.8	1.8	1.2
1.50 (2.0)	4.0	4.0	2.7	2.7	1.8	1.8	1.2
2.20 (3.0)	5.9	5.9	5.1	5.1	3.5	3.5	2.3
3.00 (4.0)	7.7	7.7	5.1	5.1	3.5	3.5	2.3

10.4.4 Derating for Inverter Orientation

The inverter **must not** be mounted in an upside down orientation. Other mounting orientations are possible without derating.

10.5 Thermal Protection and Automatic De-rating

The MICROMASTER 411/COMBIMASTER 411 has comprehensive hardware and software thermal protection.

Hardware: Fitted to the heatsink is a PTC resistor that will cause the inverter to trip if the temperature reaches 95 °C.

Software: When the heatsink reaches a temperature of within 5°C of the trip level, the switching frequency and output frequency of the inverter will both be reduced. This reduces the Inverter losses and current and attempts to prevent an overtemperature trip. It is possible to prevent this reduction and select an immediate trip if desired. See parameters P0290, P0292 for further details.

The inverter is further protected by an Inverter I^2t calculation that determines how hot the Insulated Gate Bipolar Transistors (IGBTs) are and will reduce the current limit (P0640) when this calculation reaches 95%. (User defined in P0294). If the I^2t continues to rise to 100% an Inverter I^2t trip will occur (F0005).

Overtemperature in the inverter is usually caused by a high ambient temperature or blocked convection.

10.6 Operation from Unearthed Supplies

The MICROMASTER 411 cannot be used on unearthed input supplies.

10.7 Lifetime of Inverters

When the inverters are used in conjunction with Siemens motors (1LA7 and 1LA9) the lifetime of the inverter is $\geq 20,000$ hours.

10.8 Working with Binary Connectors (BiCo)

10.8.1 Introduction

To make use of BiCo you will need access to the full parameter list. At this level many new parameter settings are possible, including BiCo functionality. BiCo functionality is a more flexible way of setting and combining input and output functions. It can be used in most cases in conjunction with the simple, level 2 settings.

10.8.2 How does BiCo work?

The BiCo system, used on more complex drives such as Masterdrives, allows complex functions to be programmed. Boolean and mathematical relationships can be set up between inputs (digital, analogue, serial etc.) and outputs (inverter current, frequency, analogue output, relays etc.).

The MICROMASTER 411/COMBIMASTER 411 uses a simplified version of BiCo, (which is still very flexible) contained within the parameter set. The system can be set up without using additional software or hardware.

Example 1

Use BiCo parameterization to enable the output relay using Digital Input 2.

Step	Action
1	Set P0003 to 3 to access all parameters.
2	Set P0702 to 99 to enable BiCo parameterization on Digital Input 2. Note: If P0701, 2, 3, or 4 are set to 99, it is not possible to change them to another value; the inverter must be reset to factory defaults.
3	Because Digital input 2 is 'open' to BiCo settings, a new value 722.1 now appears in P0731. The value 722.1 means 'connect to digital input 2' (722.0 = input 1, 722.2 = input 3 etc.). Set P0731 to 722.1
4	Run the inverter using input 1 and operate the relay using input 2.

Note

BiCo is a 'reverse' connection. That is, the output function is connected back to the input so it is not possible to tell from P0702 (99) what the digital input is controlling. However, there are many diagnostic parameters that can assist in setting up BiCo functions. (See following examples).

Example 2

Using OFF3 instead of OFF1.

Set P0701 = 99 to enable BiCo function.
Set P0840 = 722.0 (On right via digital input 1).
Set P0848 = 722.0 (OFF3 via digital input 1).

Now the inverter will ramp between set points using the normal ramp time as set in P1120 and 1121. However, at switch off from digital input 1, the inverter will turn off with an OFF3, using the ramp rate set in P1135, which may be different to P1121. An additional advantage is that the OFF3 function usually requires a second digital input; here the BiCo function permits digital input 1 to perform a run right and an OFF3.

Example 3

Selecting an alternative ramp time when a certain fixed frequency is selected.

Three fixed frequencies are selected using three digital inputs.

The digital inputs also select 'on right'.

The third digital input also selects the alternative (Jog) ramp times.

Note:

This will only enable an alternative ramp up time, because, when digital input 3 is switched low it will also de-select the alternative ramp time. Normal ramp down time will therefore be used.

Step	Definition	Action	Result
1	Use fixed frequencies.	P1000 = 3	
2	Enable BiCo functionality.	P0701 = 99 P0702 = 99 P0703 = 99	
3	Define source of Fixed Frequencies.	P1020 = 722.1 P1021 = 722.2 P1022 = 722.3	Defines the source of each fixed frequency as digital input 1, 2, and 3.
4	Define mode of operation.	P1016 = 2 P1017 = 2 P1018 = 2	Sets the mode of operation of fixed frequencies to "select fixed frequency and on right command".
5	Select Jog ramp times instead of normal ramp times.	P1124 = 722.2	Enables digital input 3.

Note

Steps 3 and 4 use BiCo functions to set digital input 1 and 2. This function can also be set using normal parameterization in Level 2.

10.8.3 Using Control and Status Words with BiCo

Many MICROMASTER 411/COMBIMASTER 411 read only parameters consist of control words. The parameter is made up of a 16-bit number, each bit representing a particular value. For example, parameter P0052 (Status Word 1) gives various value settings such as Inverter ready (bit 0), or Motor Current Limit (bit b).

This parameter is displayed using the vertical segments of the BOP display to show status; that is the status of each bit can be read from the BOP display. These bits can also be accessed by BiCo using the parameter number and bit state. Set parameter P0731 to 52.b (i.e. parameter P0052, bit b), for the relay to operate at current limit. This is actually a level 2 setting but many more settings can be selected in level 3 using BiCo functions.

Each bit of the control and status words (r0052 to r0056) can be connected to several output functions.

For example:

Setting P0731 to 56.5 (i.e. parameter P0056, bit 5) will indicate that starting boost is active. That is, if P1312 (Starting Boost) is set to enable some starting boost, the relay will be active during the ramping phase as starting boost is applied.

Similarly, if P0731 is set to 56.6, and P1311 (Acceleration Boost) enabled, the relay will be energized any time that the set point is changed.

Setting P0731 to 56.C would enable the relay when the Voltage Controller is active. As this occurs during regeneration it could be used to indicate excessive load, or too fast a ramp down.

Table 10-6 to Table 10-9 show the BiCo connections. The shaded/green boxes indicate the applicable cross connections.

10.8.4 BiCo Connections

Table 10-6 BiCo Connections (r0019 to r0054)

Parameter Number	Source	Name	Functional Grouping	COBO	CO	CO	CO	CO	CO	CO	CO	CO	CO	CO	COBO	COBO	COBO
arNr	BiCo			0019	0020	0021	0024	0025	0026	0027	0034	0036	0037	0039	0052	0053	0054
				CO/BO: BOP control word	CO: Frequency setpoint	CO: Act. frequency	CO: Act. output frequency	CO: Act. output voltage	CO: Act. DC-link voltage	CO: Act. output current	CO: Motor utilization	CO: Drive utilization	CO: Drive temperatures	CO: Power consumption [kWh]	CO/BO: Statusword 1	CO/BO: Statusword 2	CO/BO: Controlword 1
0731	CIB	BI: Binary output	7														
0800	CIB	BI: Download parameter set 0	7														
0801	CIB	BI: Download parameter set 1	7														
0810	CIB	BI: CDS Bit 0 (local/remote)	7														
0840	CIB	BI: ON/OFF1	7														
0842	CIB	BI: ON/OFF1 reverse	7														
0844	CIB	BI: 1. OFF2	7														
0845	CIB	BI: 2. OFF2	7														
0848	CIB	BI: 1. OFF3	7														
0849	CIB	BI: 2. OFF3	7														
0852	CIB	BI: Pulse enable	7														
1020	CIB	BI: Fixed frequency selection bit 0	7														
1021	CIB	BI: Fixed frequency selection bit 1	7														
1022	CIB	BI: Fixed frequency selection bit 2	7														
1035	CIB	BI: Enable MOP (UP-command)	7														
1036	CIB	BI: Enable MOP (DOWN-command)	7														
1055	CIB	BI: Enable JOG right	7														
1056	CIB	BI: Enable JOG left	7														
1074	CIB	BI: Disable additional setpoint	7														
1110	CIB	BI: Inhibit reverse direction	7														
1113	CIB	BI: Reverse	7														
1124	CIB	BI: Enable JOG ramp times	7														
1140	CIB	BI: RFG enable	7														
1141	CIB	BI: RFG start	7														
1142	CIB	BI: RFG enable setpoint	7														
1230	CIB	BI: Enable DC braking	7														
2103	CIB	BI: 1. Faults acknowledgement	7														
2104	CIB	BI: 2. Faults acknowledgement	7														
2106	CIB	BI: External fault	7														
2220	CIB	BI: Fixed PID setpoint selection bit	7														
2221	CIB	BI: Fixed PID setpoint selection bit	7														
2222	CIB	BI: Fixed PID setpoint selection bit	7														
2235	CIB	BI: Enable MOP (UP-command)	7														
2236	CIB	BI: Enable MOP (DOWN-command)	7														
1070	CID	CI: Main setpoint	10														
1071	CIF	CI: Main setpoint scaling	10														
1075	CID	CI: Additional setpoint	10														
1076	CIF	CI: Additional setpoint scaling	10														
2016	CIW	CI: PZD to BOP-Link (USS)	20														
2019	CIW	CI: PZD to Comm-Link (USS)	20														
2051	CIW	CI: PZD to CB	20														
2200	CIB	BI: Enable PID controller	22														
2253	CIF	CI: PID setpoint	22														
2254	CIF	CI: PID trim source	22														
2264	CIF	CI: PID feedback	22														

Table 10-7 BiCo Connections (r0055 to r1119)

Parameter Number	Source	Name	Functional Grouping	CO/BO: Controlword 2	CO/BO: Statusword 1 for V/F and VC	CO: Act. max. current	CO: Max. output voltage	CO: Connector	CO: Act. active current	CO/BO: Binary input values	CO/BO: State of binary outputs	CO: Act. ADC characteristic value [40	CO: Act. fixed frequency	CO: Output frequency of the MOP	CO: Total frequency setpoint	CO: Selected frequency setpoint	CO: Frequency setpoint after DIR ctrl	CO: Frequency setp. of the AFM module
arNr	BiCo			0055	0056	0067	0071	0078	0086	0722	0747	0755	1024	1050	1078	1079	1114	1119
0731	CIB	BI: Binary output	7															
0800	CIB	BI: Download parameter set 0	7															
0801	CIB	BI: Download parameter set 1	7															
0810	CIB	BI: CDS Bit 0 (local/remote)	7															
0840	CIB	BI: ON/OFF1	7															
0842	CIB	BI: ON/OFF1 reverse	7															
0844	CIB	BI: 1. OFF2	7															
0845	CIB	BI: 2. OFF2	7															
0848	CIB	BI: 1. OFF3	7															
0849	CIB	BI: 2. OFF3	7															
0852	CIB	BI: Pulse enable	7															
1020	CIB	BI: Fixed frequency selection bit 0	7															
1021	CIB	BI: Fixed frequency selection bit 1	7															
1022	CIB	BI: Fixed frequency selection bit 2	7															
1035	CIB	BI: Enable MOP (UP-command)	7															
1036	CIB	BI: Enable MOP (DOWN-command)	7															
1055	CIB	BI: Enable JOG right	7															
1056	CIB	BI: Enable JOG left	7															
1074	CIB	BI: Disable additional setpoint	7															
1110	CIB	BI: Inhibit reverse direction	7															
1113	CIB	BI: Reverse	7															
1124	CIB	BI: Enable JOG ramp times	7															
1140	CIB	BI: RFG enable	7															
1141	CIB	BI: RFG start	7															
1142	CIB	BI: RFG enable setpoint	7															
1230	CIB	BI: Enable DC braking	7															
2103	CIB	BI: 1. Faults acknowledgement	7															
2104	CIB	BI: 2. Faults acknowledgement	7															
2106	CIB	BI: External fault	7															
2220	CIB	BI: Fixed PID setpoint selection bit	7															
2221	CIB	BI: Fixed PID setpoint selection bit	7															
2222	CIB	BI: Fixed PID setpoint selection bit	7															
2235	CIB	BI: Enable MOP (UP-command)	7															
2236	CIB	BI: Enable MOP (DOWN-command)	7															
1070	CID	CI: Main setpoint	10															
1071	CIF	CI: Main setpoint scaling	10															
1075	CID	CI: Additional setpoint	10															
1076	CIF	CI: Additional setpoint scaling	10															
2016	CIW	CI: PZD to BOP-Link (USS)	20															
2019	CIW	CI: PZD to Comm-Link (USS)	20															
2051	CIW	CI: PZD to CB	20															
2200	CIB	BI: Enable PID controller	22															
2253	CIF	CI: PID setpoint	22															
2254	CIF	CI: PID trim source	22															
2264	CIF	CI: PID feedback	22															

Table 10-8 BiCo Connections (r1170 to r2050)

Parameter Number	Source	Name	Functional Grouping	CO: Frequency setpoint	CO: Switch-on level Vdc-max controle	CO: Slip frequency	CO: I _{max} controller freq. limit outpu	CO: I _{max} controller voltage output	CO: Act. switching frequency	CO: PZD from BOP-Link (USS)	CO: PZD from Comm-Link (USS)	BO: ControlWord1 from BOP-Link (USS)	BO: ControlWord2 from BOP-Link (USS)	BO: ControlWord1 from COMM-Link (USS)	BO: ControlWord2 from COMM-Link (USS)	CO: PZD from CB
arNr	BiCo			1170	1242	1337	1343	1344	1801	2015	2018	2032	2033	2036	2037	2050
0731	CIB	BI: Binary output	7													
0800	CIB	BI: Download parameter set 0	7													
0801	CIB	BI: Download parameter set 1	7													
0810	CIB	BI: CDS Bit 0 (local/remote)	7													
0840	CIB	BI: ON/OFF1	7													
0842	CIB	BI: ON/OFF1 reverse	7													
0844	CIB	BI: 1. OFF2	7													
0845	CIB	BI: 2. OFF2	7													
0848	CIB	BI: 1. OFF3	7													
0849	CIB	BI: 2. OFF3	7													
0852	CIB	BI: Pulse enable	7													
1020	CIB	BI: Fixed frequency selection bit 0	7													
1021	CIB	BI: Fixed frequency selection bit 1	7													
1022	CIB	BI: Fixed frequency selection bit 2	7													
1035	CIB	BI: Enable MOP (UP-command)	7													
1036	CIB	BI: Enable MOP (DOWN-command)	7													
1055	CIB	BI: Enable JOG right	7													
1056	CIB	BI: Enable JOG left	7													
1074	CIB	BI: Disable additional setpoint	7													
1110	CIB	BI: Inhibit reverse direction	7													
1113	CIB	BI: Reverse	7													
1124	CIB	BI: Enable JOG ramp times	7													
1140	CIB	BI: RFG enable	7													
1141	CIB	BI: RFG start	7													
1142	CIB	BI: RFG enable setpoint	7													
1230	CIB	BI: Enable DC braking	7													
2103	CIB	BI: 1. Faults acknowledgement	7													
2104	CIB	BI: 2. Faults acknowledgement	7													
2106	CIB	BI: External fault	7													
2220	CIB	BI: Fixed PID setpoint selection bit	7													
2221	CIB	BI: Fixed PID setpoint selection bit	7													
2222	CIB	BI: Fixed PID setpoint selection bit	7													
2235	CIB	BI: Enable MOP (UP-command)	7													
2236	CIB	BI: Enable MOP (DOWN-command)	7													
1070	CID	CI: Main setpoint	10													
1071	CIF	CI: Main setpoint scaling	10													
1075	CID	CI: Additional setpoint	10													
1076	CIF	CI: Additional setpoint scaling	10													
2016	CIW	CI: PZD to BOP-Link (USS)	20													
2019	CIW	CI: PZD to Comm-Link (USS)	20													
2051	CIW	CI: PZD to CB	20													
2200	CIB	BI: Enable PID controller	22													
2253	CIF	CI: PID setpoint	22													
2254	CIF	CI: PID trim source	22													
2264	CIF	CI: PID feedback	22													

Table 10-9 BiCo connections (r2053 to r2294)

Parameter Number	Source	Name	Functional Grouping	CO: CB identification	CO: CB diagnosis	BO: ControlWord 1 from CB	BO: ControlWord 2 from CB	CO/BO: Statusword 1 of monitor	CO: Act. fixed PID setpoint	CO: Output setpoint of the MOP	CO: PID setpoint	CO: PID filtered setpoint	CO: PID feedback	CO: PID scaled feedback	CO: PID error	CO: PID output
arNr	BiCo			2053	2054	2090	2091	2197	2224	2250	2260	2262	2266	2272	2273	2294
0731	CIB	BI: Binary output	7													
0800	CIB	BI: Download parameter set 0	7													
0801	CIB	BI: Download parameter set 1	7													
0810	CIB	BI: CDS Bit 0 (local/remote)	7													
0840	CIB	BI: ON/OFF1	7													
0842	CIB	BI: ON/OFF1 reverse	7													
0844	CIB	BI: 1. OFF2	7													
0845	CIB	BI: 2. OFF2	7													
0848	CIB	BI: 1. OFF3	7													
0849	CIB	BI: 2. OFF3	7													
0852	CIB	BI: Pulse enable	7													
1020	CIB	BI: Fixed frequency selection bit 0	7													
1021	CIB	BI: Fixed frequency selection bit 1	7													
1022	CIB	BI: Fixed frequency selection bit 2	7													
1035	CIB	BI: Enable MOP (UP-command)	7													
1036	CIB	BI: Enable MOP (DOWN-command)	7													
1055	CIB	BI: Enable JOG right	7													
1056	CIB	BI: Enable JOG left	7													
1074	CIB	BI: Disable additional setpoint	7													
1110	CIB	BI: Inhibit reverse direction	7													
1113	CIB	BI: Reverse	7													
1124	CIB	BI: Enable JOG ramp times	7													
1140	CIB	BI: RFG enable	7													
1141	CIB	BI: RFG start	7													
1142	CIB	BI: RFG enable setpoint	7													
1230	CIB	BI: Enable DC braking	7													
2103	CIB	BI: 1. Faults acknowledgement	7													
2104	CIB	BI: 2. Faults acknowledgement	7													
2106	CIB	BI: External fault	7													
2220	CIB	BI: Fixed PID setpoint selection bit	7													
2221	CIB	BI: Fixed PID setpoint selection bit	7													
2222	CIB	BI: Fixed PID setpoint selection bit	7													
2235	CIB	BI: Enable MOP (UP-command)	7													
2236	CIB	BI: Enable MOP (DOWN-command)	7													
1070	CID	CI: Main setpoint	10													
1071	CIF	CI: Main setpoint scaling	10													
1075	CID	CI: Additional setpoint	10													
1076	CIF	CI: Additional setpoint scaling	10													
2016	CIW	CI: PZD to BOP-Link (USS)	20													
2019	CIW	CI: PZD to Comm-Link (USS)	20													
2051	CIW	CI: PZD to CB	20													
2200	CIB	BI: Enable PID controller	22													
2253	CIF	CI: PID setpoint	22													
2254	CIF	CI: PID trim source	22													
2264	CIF	CI: PID feedback	22													

10.9 Harmonic Currents

10.9.1 Harmonic currents with 1% mains impedance

Table 10-10 Three Phase 400V Connection

MLFB	Filter Type	Power CT (kW)	Fundamenta l Amps	5th Amps	7th Amps	11th Amps	13 th Amps	17th Amps	19 th Amps
6SE6411-6UD13-7AA1	UNFILTERED	0.37	1.50	1.29	1.10	0.67	0.46	0.15	0.09
6SE6411-6BD13-7AA1	Class B								
6SE6411-6UD15-5AA1	UNFILTERED	0.55	2.00	1.69	1.42	0.79	0.51	0.14	0.11
6SE6411-6BD15-5AA1	Class B								
6SE6411-6UD17-5AA1	UNFILTERED	0.75	2.60	2.13	1.75	0.87	0.51	0.13	0.15
6SE6411-6BD17-5AA1	Class B								
6SE6411-6UD21-1AA1	UNFILTERED	1.1	3.71	2.98	2.35	1.05	0.53	0.18	0.22
6SE6411-6BD21-1AA1	Class B								
6SE6411-6UD21-5AA1	UNFILTERED	1.5	4.92	3.80	2.95	1.11	0.49	0.26	0.28
6SE6411-6BD21-5AA1	Class B								
6SE6411-2UD22-2AA1	UNFILTERED	2.2	7.89	7.01	6.18	4.19	3.11	1.30	0.60
6SE6411-6BD22-2AA1	Class B								
6SE6411-2UD23-0AA1	UNFILTERED	3	10.09	8.69	7.69	4.68	3.45	1.05	0.39
6SE6411-6BD23-0AA1	Class B								

10.10 Use of MM4 Input Chokes

When the inverter is operating it gives rise to a non-sinusoidal current from the mains supply with harmonics. The amplitude of the harmonics can be reduced by fitting input chokes.

When the mains supply impedance is less than 1% it is necessary to use an input choke with the inverter.

It is recommended to use the standard MM4 range of input chokes, details of which can be obtained from the DA51.2 MICROMASTER 420/440 Catalogue.

The choke must be housed in a mechanical enclosure appropriate to the environment.

10.10.1 Mains Supply Impedance

This is the ratio of the inverter rated power to mains short-circuit power. If the mains supply impedance is below 1%, the lifetime of the electrolytic capacitors could be reduced.

The mains short-circuit power may be obtained from the power supply company, or may be read from the Type Plate of the supplying power transformer.

10.11 Power Losses

Figure 10-16 below shows the power loss for the MICROMASTER 411/COMBIMASTER 411 Inverters.

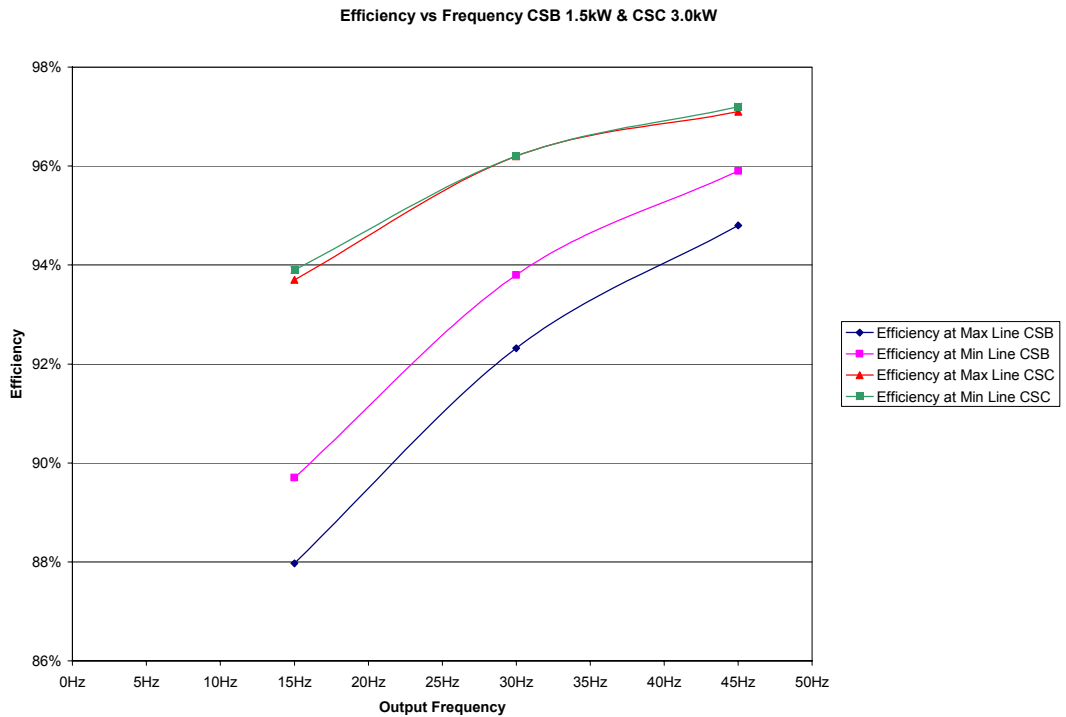


Figure 10-17 Power Losses CM411/MM411

10.12 Shock and Vibration

The inverter has been tested for compliance with the following standards.

10.12.1 Vibration Stress during Operation (Single Sine Sweep)

Required Standards: EN 60721-3-3 class 3M6 and 3M8
Test standards: EN60068-2-6, test Fc

Case Size B: Class 3M6: 10-58Hz/ 0.15mm, 58-200Hz/ 2g
Case Size C: Class 3M6: 10-58Hz/ 0.15mm, 58-200Hz/ 2g

10.12.2 Shock Stress during Operation (Half Sine Shock)

Required Standards: EN 60721-3-3
Test standards: EN 60068-2-27, test Ea

Case Size B: Peak acceleration 5g - duration of shock 30ms
Case Size C: Peak acceleration 5g - duration of shock 30ms

10.12.3 Vibration and Shock stress during Transport

Required Standards: EN 60721-3-3
Test standards: EN 60068-2-27, Test Ea

Class 2M2: 5-9Hz/ 3.5mm, 9-200Hz/ 1g
Class 2M1: Peak acceleration 15g - duration of shock 11ms.

The inverter meets class 2M2 for Vibration stress and 2M1 for shock stress in product packaging.

10.13 PROFIBUS

10.13.1 Overview

PROFIBUS is an open standard communication protocol which has been designed and developed for use in general industrial applications. The standard is defined in EN50170 (volume 2) and has been developed, agreed and adopted by many manufacturers worldwide.

PROFIBUS control is now available for a wide variety of products, from many different companies manufacturing drives, actuators, valves, as well as Programmable Logic Controllers (PLCs) and other system controllers. PROFIBUS operates over a variety of hardware interconnections such as fiber optics and RS485.

There are three versions of PROFIBUS: FMS, DP and PA and all these versions will work together. The most commonly used version is the DP version, intended for general industrial applications. This is the version supported by Siemens Drives.

10.13.2 Using the PROFIBUS

In order to connect to a PROFIBUS system, a PROFIBUS module is required. This module mounts on the side of the drive and uses a TTL serial port to communicate with the drive.

The drive may be controlled and monitored via the main PROFIBUS system.

A PROFIBUS system offers the following advantages:

- Open, clearly defined system.
- Many different products from many different manufacturers.
- Well proven in many industrial applications.
- Reduced wiring; easy set up re-programming, monitor and control.
- Ease of commissioning with the SIMATIC S7 PLC System at a later date.
- Flexibility to expand and modify the automatic system at a later date.
- Remote diagnostics reduce the downtime in the event of a problem.
- Very fast; up to 12Mbaud.
- Up to 125 slaves on one DP system.
- Single or Multi-master operation.
- One to one or broadcast communications.
- Support and development software available.
- Routing Functionality.

10.14 PROFIBUS Module

This option allows the MICROMASTER 411/COMBIMASTER 411 to be controlled via a PROFIBUS-DP serial bus (SINEC L2-DP).

PROFIBUS-DP is a cost-effective high-speed serial communication system optimized for the actuator/sensor area where very short system reaction times are critical. It operates as a decentralized I/O system whereby the traditional wiring to sensors and actuators is replaced by an RS485 serial bus system linking the stations together.

The suitability of the system for such applications has been enhanced by an extension of the bus speed up to 12 MBd. Protocol is defined as DIN19245 and also as EN50170 guaranteeing open, multi-vendor communications between PROFIBUS-DP stations.

Up to 125 stations can be networked together using this single bus system and a very flexible data structure allows the system to be optimized to exactly match the requirements of each device.

PROFIBUS-DP lies at the heart of the new generation of SIMATIC S7 automation systems offered by Siemens. Using this single bus system, all engineering, visualization and PLC control operations can be integrated. To configure a SIMATIC based automation system, all that is required is the associated STEP7 configuration tool running on a PC. Bus configuration is performed by using a drag and drop technique in a graphically displayed PROFIBUS-DP network.

10.14.1 Features of PROFIBUS Module

- Permits fast cyclic communications via a PROFIBUS connection.
- Supports all PROFIBUS baud rates up to 12 MBd.
- Control of up to 125 inverters using PROFIBUS-DP protocol (with repeaters).
- Conforms to EN50170 guaranteeing open communications on a serial bus system. It can be used with other PROFIBUS-DP/SINEC L2-DP peripheral devices on the serial bus. Data format conforms to the VDI/VDE directive 3689 "PROFIBUS Profile for Variable Speed Drives".
- Acyclic communications channel for connecting SIMOVIS or other service tools.
- Support for the PROFIBUS control commands SYNC and FREEZE.
- Can be easily configured using the S7 Manager software, or any proprietary PROFIBUS commissioning tool.
- Simple integration into a SIMATIC S7 PLC system using specially designed software modules (S7).
- Module can be powered by external +24V Power Supply if required.
- No separate power supply necessary.
- Digital and analog inputs can be read and digital output is controlled via the serial bus.
- 5 msec response time to process data.
- Output frequency (and therefore motor speed) can be controlled locally on the drive or over the serial bus.
- Multi-mode operation possible, whereby control data can be input via the terminal block (digital inputs) and setpoint over the serial bus. Alternatively, the setpoint can be from a local source (analogue input) with the drive control over the serial bus.
- Inverter parameters are accessible over the serial link.

Caution

- The PROFIBUS Module can only be fitted and removed from the inverter when the inverter is powered off.
 - The PROFIBUS Module must be connected to the drive using the cable supplied.
-

The data structure for communication over PROFIBUS-DP can be either PPO type 1 or PPO type 3 as specified in VDI/VDE 3689. This means in practice that process data (control words, setpoints in the transmitted telegram and status words, actual values in the received telegram) are always sent. Parameter data exchange may, however, be blocked if bus bandwidth or PLC memory space is at a premium. The data structure, and thus the PPO type, is normally specified by the bus master. If no PPO type is specified (e.g. if a combined PROFIBUS DP/PROFIBUS FMS bus master is used), the default PPO type is type 1 (parameter data exchange enabled).

Process data from the serial link always has a higher priority than parameter data. This means that a setpoint change or drive control change command will be processed faster than a parameter change command.

Parameter write access over the serial link can be enabled or blocked as required. Parameter read access is permanently enabled, allowing continuous read-out of drive data, diagnostics, fault messages etc. A visualization system can thus be realized with minimal effort.

Local control of the drive with the On, Off, Jog and Reverse buttons is possible at all times in an identical fashion to when the module is not present.

PROFIBUS cables are connected to terminals within the Module. Cables are fed into the module via cable glands.

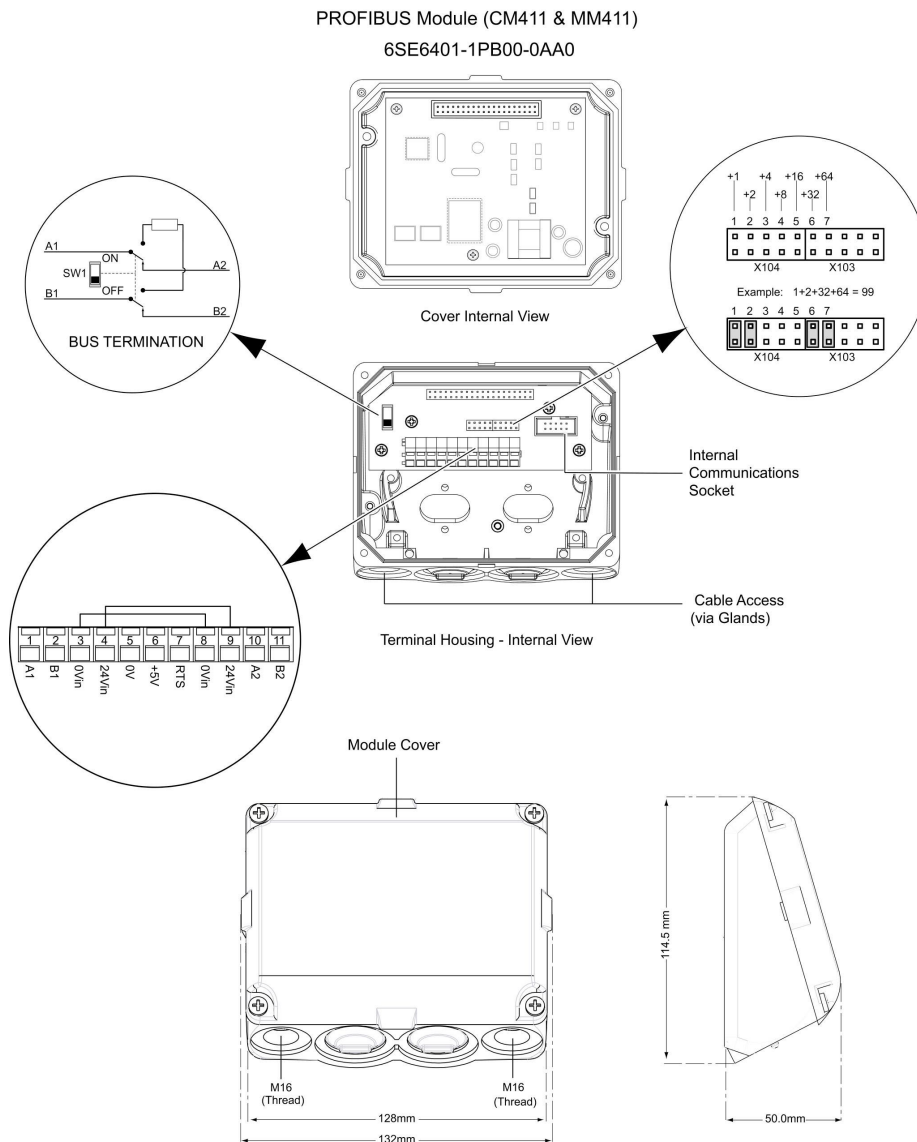


Table 10-11 Maximum Cable Lengths for Data Transfer Rates

Data transfer rate (Kbit/s)	Max. cable length of a segment (m)
9.60	1200
19.20	1200
93.75	1200
187.50	1000
500.00	400
500.00	200
12000.00	100

The shield of the cable must be connected to the housing of the PROFIBUS Module (i.e., recommended use of metal cable glands for this purpose).

A segment can be extended by using RS485 repeaters.

Recommendation: SINEC L2 repeater RS485 (Order No: 6ES7972-0AA00-0XA0). For reliable operation of the serial bus system, the cable must be terminated at both ends using terminating resistors. Bus terminations with the MICROMASTER 411 PROFIBUS Module is achieved using the Bus Termination Switch (see above). Additionally, for 12 MBd operation, no stub length from the main bus cable is allowed.

10.14.2 Quick Guide to setting up PROFIBUS

The bus cable between the master device and the drive must be connected correctly. this includes the necessary termination resistors.

Bus Termination within the PROFIBUS module can be achieved using the termination switch (SW1). See illustration on previous page.

The bus cable must be screened and the screen must be connected to the housing of the cable connector.

The PROFIBUS master must be configured correctly so that communications can be realized with a DP slave using PPO type 1 or PPO type 3 (only PPO type 1, if the PPO type cannot be configured via remote operator control).

Installation should be in conformance with EMC directives and regulations (this is described in detail in the operating manuals for the drive and the PLC).

10.14.3 PROFIBUS Module - Data

Table 10-12 Technical data – 411 PROFIBUS Module

Item	Description
Dimensions H x W x D	107.8 mm x 128 mm x 40.5mm
Degree of protection	IP66
Maximum bus speed	12 MBd

Table 10-13 PROFIBUS Ordering information

Designation	Order No.
PROFIBUS module	6SE6401-1PB00-0AA0

10.15 Variant Independent Options

Several options are available for use with Siemens Standard inverters. These are intended to assist product selection, installation and commissioning in certain applications.

10.15.1 Basic Operating Panel (BOP)

MICROMASTER default settings can be changed through the Basic Operator Panel (BOP) drive option. The BOP provides direct access to the MICROMASTER 411 operating parameters. Speed, frequency, motor direction, current and torque values can all be accessed and displayed. The BOP has the capacity to actively interface with the parameter sets stored in the drive.

The BOP consists of a keypad control panel array and a 5-digit LCD display with backlight. Available in hand held or panel-mounted form the unit provides a visual interface with the inverter control. Access to internal parameters and functions is achieved from the pushbutton set on the panel fascia. Navigational push-buttons are provided for movement through parameters and values.

10.15.2 Advanced Operating Panel (AOP)

The Advanced Operator Panel (AOP) enhances the interface/communication capability of the MICROMASTER range of frequency inverters. Available in either Desk or Panel mounted form the unit provides the user with an intelligent, clear text inverter interface. This gives direct access to the control, programming, storage and monitoring of MICROMASTER series operating parameters.

For local control of individual inverters the AOP is mounted into a Desk Mount platform. Each unit supports software capable of carrying out configuration and storage of inverter parameter sets. Software menus, inverter parameters, associated values and help text is displayed on a compact dot matrix LCD screen. Operator commands for software are derived from a keypad located directly below the LCD screen. Communication with dependent inverters is achieved via RS232 interface terminals.

Summary

The AOP has several practical uses. For example:

- The AOP may be Desk Panel mounted and used to control the inverter directly.
- The AOP can be mounted on a Door Mount Kit (using an optional cable of up to 5 m) to enable remote control and monitoring of the inverter.
- The AOP can be used to allow for communication with a PC.
- Parameter sets can be stored in the AOP and uploaded or downloaded as required. Particularly useful where many inverters require programming in production.

10.15.3 PROFIBUS Module

The PROFIBUS module allows full PROFIBUS connection of up to 12 Mbaud. You can supply the module from an external 24 V supply which keeps PROFIBUS active even when the inverter is removed from its power. The module permits full remote control of PROFIBUS or local control or a mixture of both.

10.15.4 PC to Inverter Connection Kit

The PC to Inverter Connection Kit is used for controlling an inverter directly from a PC provided the correct software has been installed. The hardware includes an opto-isolated RS232 adapter board and a RS 232 Serial Comms cable for reliable point-to-point connection.

10.15.5 BOP/AOP Door Mounting Kit for Single Inverter Control

This kit is used to mount an operator panel in a cabinet door. It must be used in conjunction with a MICROMASTER 411 5m cable assembly.

This kit extends the existing RS232 interface, bringing connections and power from the interface connector to terminals, which can then be wired to the AOP or BOP mounted in the door. Although RS232 should be limited to 3 m of cable, up to 20 m of cable can operate satisfactorily, but this is not guaranteed.

10.15.6 Electromechanical Brake Module

The Electromechanical Brake Control Module is used to provide an output to the drive coil of a DC electromechanical motor brake. The brake output can be software configured for fast and slow coil operation.

The coil voltages of the respective motor brakes are listed in the Electromechanical Brake Module Operating Instructions.

Appendices

This Appendices contains:

A-	Applicable Standards	140
B-	List of Abbreviations	141
C-	MICROMASTER 411/COMBIMASTER 411 Parts Identification.....	142

A- Applicable Standards



European Low Voltage Directive

The MICROMASTER product range complies with the requirements of the Low Voltage Directive 73/23/EEC as amended by Directive 98/68/EEC. The units are certified for compliance with the following standards:

EN 60146-1-1 Semiconductor inverters – General requirements and line commutated inverters

EN 60204-1 Safety of machinery – Electrical equipment of machines

European Machinery Directive

The MICROMASTER product range does not fall under the scope of the Machinery Directive. However, the products have been fully evaluated for compliance with the essential Health & Safety requirements of the directive when used in a typical machine application. A Declaration of Incorporation is available on request.

European EMC Directive

When installed according to the recommendations described in this manual, the MICROMASTER product range fulfils all requirements of the EMC Directive as defined by the EMC Product Standard for Power Drive Systems EN61800-3.

ISO 14001

Siemens plc operates a quality and environmental management system, which complies with the requirements of ISO 14001.


ISO 9001

Siemens plc operates a quality management system, which complies with the requirements of ISO 9001.

B- List of Abbreviations

AOP	Advanced Operator Panel
AC	Alternating Current
AIN	Analog Input
BI	Binector Input
BO	Binector Output
BOP	Basic Operator Panel
CI	Connector Input
CIB	Connector Input Byte
CID	Connector Input Double Word
CIF	Connector Input Floating
CIW	Connector Input Word
CO	Connector Output
DC	Direct Current
DIN	Digital Input
EU	European Union
ELCB	Earth Leakage Circuit Breaker
EMC	Electro-Magnetic Compatibility
EMI	Electro-Magnetic Interference
FCC	Flux Current Control
FCL	Fast Current Limitation
IGBT	Insulated Gate Bipolar Transistor
LCD	Liquid Crystal Display
LED	Light Emitting Diode
MOP	Motor Potentiometer
PI	Proportional and Integral
PLC	Programmable Logic Controller
PTC	Positive Temperature Coefficient
RCCB	Residual Current Circuit breaker
RCD	Residual Current Device
RH	Relative Humidity
RPM	Revolutions Per Minute

C- MICROMASTER 411/COMBIMASTER 411 Parts Identification.

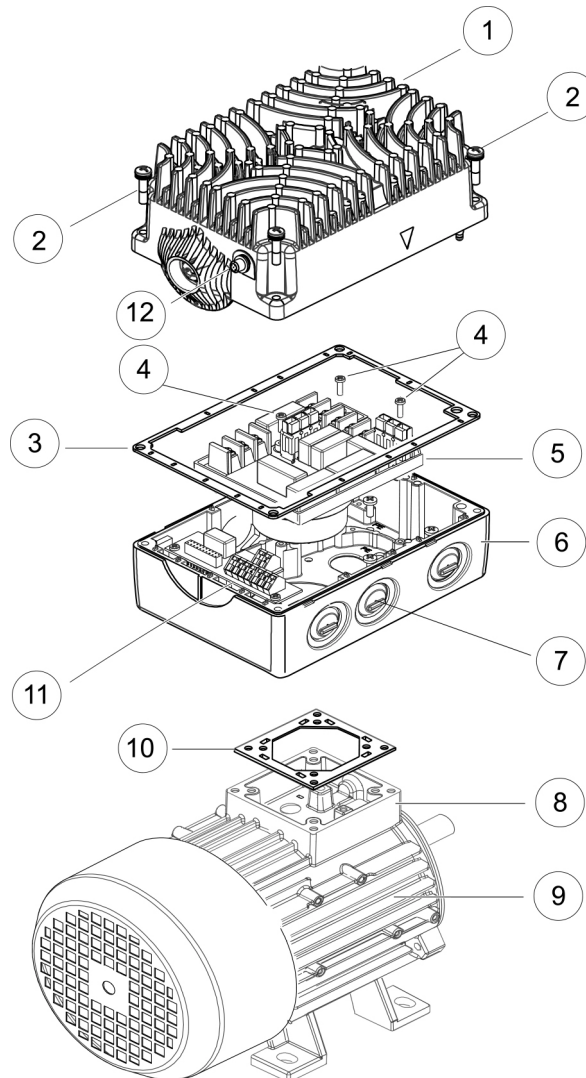

Item	Description
1	Inverter Cover
2	Inverter Retaining Screw
3	Sealing Gasket
4	Filter Module retaining screws
5	Filter Module
6	Terminal Housing
7	Gland Knock – outs
8	Motor Terminal Box
9	Motor Frame
10	Motor Terminal Box Gasket
11	Input Output Board
12	Serial Interface Socket

Index

A

Access Levels · 62
 Advanced Operating Panel (AOP) · 137
 Advanced Operator Panel (AOP) · 56, 91
 Altitude · 21
 Ambient operating conditions · 21
 AOP
 details · 137
 Applicable standards
 European EMC Directive · 140
 European Low Voltage Directive · 140
 European Machinery Directive · 140
 ISO 14001 · 140
 ISO 9001 · 140
 Automatic De-rating · 121

B

Basic Operating Panel (BOP) · 136
 Basic operation
 changing parameters with BOP · 54
 Basic Operation · 46
 Basic Operator Panel (BOP) · 51, 90
 BiCo · 122
 cross connections · 125
 operation · 122
 using control words · 124
 using status words · 124
 worked examples · 123
 Binary Connectors · 122
 BiCo · 122
 Block Diagram · 41
 Boost · 109
 BOP/AOP Door Mounting Kit · 137
 Braking · 118
 compound · 119
 dc · 118
 normal · 118
 Vdc max controller · 119

C

Cable Connections · 33
 Case Size Rating Information · 83
 Changing single digits · 52
 Chokes · 129
 Closed Loop
 control · 110
 implementation · 110
 setting up · 111
 COMBIMASTER 411 & MICROMASTER 411
 fault codes · 75
 specifications · 81
 COMBIMASTER 411 Installation Procedure · 29
 Command Sources · 58
 Commission Overview · 49
 Commissioning · 39
 Commissioning Procedure · 42
 Compound Braking · 59, 119
 Control and Operating Modes · 109
 Control Cable Connections · 36
 Control Circuit Jumpers · 44
 Control Modes · 60
 Current Limit · 106

COMBIMASTER 411 & MICROMASTER 411 Operating Instructions
 6SE6400-5CA00-0BP0

parameter interaction · 106
 parameters controlling · 106
 Current Monitoring · 107
 accuracy · 107

D

DC braking · 59
 DC Braking · 118
 Default setup · 45
 Derating
 automatic · 121
 for sideways installation · 121
 with altitude · 120
 with switching frequency · 121
 with temperature · 120
 Derating Factors · 120
 Design Features · 16
 Dimensional Detail · 28, 30
 Dimensions · 27
 Door Mounting Kit · 97

E

Electrical Installation · 32
 Electro-Magnetic Compatibility
 EC type-examination certificate · 100
 general · 99, 100, 139
 self-certification · 100
 technical construction file · 100
 Electro-Magnetic Interference · 37
 Electromagnetic radiation · 21
 Electromechanical Brake Control Module · 93
 EMC · 100
 EMC Compliance Tests · 103
 EMC Directive Compliance · 100
 EMC performance
 filtered for residential, commercial and light industry
 · 102
 filtered industrial class · 101
 general industrial class · 101

F

Fast Current Limit · 107
 Fault codes
 with the Basic Operator Panel fitted · 74
 Faults and warnings · 60
AOP fitted · 60
BOP fitted · 60
 SDP fitted · 60
 Flow chart Quick Commissioning · 50
Flux Current Control · 60
 Frequency Setpoint · 58
 Function (Fn) Button · 51
 Fuses and Circuit Breakers · 85

G

General operation · 56
 Gland Dimensions · 27

H

Harmonic Currents · 129
 tables · 129

Humidity Range · 21

I

Installation · 19
 Installation after a Period of Storage · 20
 Installation of Cable Glands · 23
 Installation Procedure · 22
 Intended purpose · 6
 Internal Overtemperature · 108
 Internet Home Address · 5

J

Jump Function · 52

L

Linear V/f control · 60

M

Mechanical Installation · 21, 29
 Motor Connections for Star/Delta · 34
 Motor data for CM411 parameterization · 55
 Motor PTC Connections · 37
Multi-point V/f control · 60

N

Non - Default Modes of Operation · 47

O

Operation
 starting and stopping the motor · 59
 Operation with long cables · 32
 Operation with Residual Current Device · 32
 Operator Panel Mounting Kit · 94
 Options · 136
 Overheating · 21
 Overload Operation · 106
 Overvoltage · 109

P

Parameter List (short form) · 64
 Parameters
 changing parameters with BOP · 54
 system parameters · 61
 Parts Identification · 142
 PC to AOP Connection Kit · 96
 PC to Inverter Connection Kit · 95, 137
 PI Controller
 limits · 115
 responses · 112
 PI Output Limits · 115
 PI setpoint · 111
 Power Connections · 33
 Power Losses · 130
 output graphs · 130
 Preparation · 22
 PROFIBUS · 132
 characteristics · 132
 setting up · 136
 PROFIBUS Module · 92

Programming Options · 89
 Proportional and Integral Control (PI) · 110
 Protection Characteristics
 fast current limit · 107
 overtemperature · 108
 overvoltage and trip · 109
 thermal · 121
 using PTC resistors · 108

Q

Quadratic V/f control · 60
 Qualified personnel · 6
 Quick commissioning · 49

R

Ramp Times Using Jumpers · 43
 Reset to Factory default · 52
 Reversing the motor · 58

S

Safety instructions · 7
 Scrolling Function · 52
 Shock · 21, 131
 Starting the motor · 58
 Status Display Panel
 default settings with BOP · 51
 Stopping the motor · 58
 Stopping the Motor · 48
 System Parameters · 62

T

Technical Data · 82
 Technical Support · 5
 Temperature · 21
 Temperature Coefficient · 108
 Thermal Protection · 121
 Tightening Torque & Cable cross section · 84
 Trip Levels · 109
 Troubleshooting · 73

U

Unearthed Supplies · 122
 operation · 122
 User Options · 88

V

Variant Independent Options · 136
 Vibration · 131

W

Wall Mounting Kit · 25, 98
 Warnings, cautions & notes
 definitions · 6
 general · 7

Z

Ziegler-Nichols · 113

Suggestions and/or Corrections

To: Technical Documentation Manager
Siemens Automation & Drives

Siemens plc
Automation & Drives
Varey Road, Congleton, CW12 1PH

Fax: +44 (0)1260 262143

Email: [Technical Documentation Department](#)

Suggestions

Corrections

For Publication/Manual:

COMBIMASTER 411 & MICROMASTER 411

User Documentation

From

Name:

Company/Service Department

Address: _____

Telephone: _____ / _____

Telefax: _____ / _____

Operating Instructions

Order Number.: 6SE6400-5CA00-0BP0

Date of Issue: 03/02

Should you come across any printing errors when reading this publication, please notify us on this sheet.

Suggestions for improvement are also welcome.

Order Number



6 S E 6 4 0 0 - 5 C A 0 0 - 0 B P 0

Drawing Number



G 8 5 1 3 9 - K 1 7 9 0 - U 3 4 5 - A 1

A&D SD SM4

© Siemens AG, 2002
Subject to change without prior
notice



Siemens Aktiengesellschaft

Order No.: 6SE6400-5CA00-0BP0
Printed in UK.
Date: February 2002