

DCS800

Firmware manual
DCS800 Drives (25 to 5200 A)



Safety instruction

What this chapter contains




This chapter contains the safety instructions which you must follow when installing, operating and servicing the drive. If ignored, physical injury or death may follow, or damage may occur to the drive, the motor or driven equipment. Read the safety instructions before you work on the unit.

To which products this chapter applies

This chapter applies to the DCS800... Size D1 to D7 and field exciter units DCF800.

Use of warnings and notes

There are two types of safety instructions throughout this manual: warnings and notes. Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment. They also tell you how to avoid the danger. Notes draw attention to a particular condition or fact, or give information on a subject. The warning symbols are used as follows:

	Dangerous voltage warning warns of high voltage which can cause physical injury and/or damage to the equipment.
	General warning warns about conditions, other than those caused by electricity, which can result in physical injury and/or damage to the equipment.
	Electrostatic discharge warning warns of electrostatic discharge which can damage the equipment.

Installation and maintenance work

These warnings are intended for all who work on the drive, motor cable or motor. Ignoring the instructions can cause physical injury or death.



Only qualified electricians are allowed to install and maintain the drive.

- Never work on the drive, motor cable or motor when main power is applied.

Always ensure by measuring with a multimeter (impedance at least 1 Mohm) that:

1. Voltage between drive input phases U1, V1 and W1 and the frame is close to 0 V.
 2. Voltage between terminals C+ and D- and the frame is close to 0 V.
- Do not work on the control cables when power is applied to the drive or to the external control circuits. Externally supplied control circuits may cause dangerous voltages inside the drive even when the main power on the drive is switched off.
 - Do not make any insulation or voltage withstand tests on the drive or drive modules.
 - When reconnecting the motor cable, always check that the C+ and D- cables are connected with the proper terminal.

Note:

- The motor cable terminals on the drive are at a dangerously high voltage when the input power is on, regardless of whether the motor is running or not.
 - Depending on the external wiring, dangerous voltages (115 V, 220 V or 230 V) may be present on the terminals of relay outputs SDCS-IOB-2 and RDIO.
 - DCS800 with enclosure extension: Before working on the drive, isolate the whole drive from the supply.
-



WARNING! The printed circuit boards contain components sensitive to electrostatic discharge. Wear a grounding wrist band when handling the boards. Do not touch the boards unnecessarily.

Grounding

These instructions are intended for all who are responsible for the grounding of the drive. Incorrect grounding can cause physical injury, death or equipment malfunction and increase electromagnetic interference



-
- Ground the drive, motor and adjoining equipment to ensure personnel safety in all circumstances, and to reduce electromagnetic emission and pick-up.
 - Make sure that grounding conductors are adequately sized as required by safety regulations.
 - In a multiple-drive installation, connect each drive separately to protective earth (PE).
 - Minimize EMC emission and make a 360° high frequency grounding of screened cable entries at the cabinet lead-through.
 - Do not install a drive with EMC filter on an ungrounded power system or a high resistance-grounded (over 30 ohms) power system.

Note:

- Power cable shields are suitable for equipment grounding conductors only when adequately sized to meet safety regulations.
 - As the normal leakage current of the drive is higher than 3.5 mA AC or 10 mA DC (stated by EN 50178, 5.2.11.1), a fixed protective earth connection is required.
-

Fibre optic cables



WARNING! Handle the fibre optic cables with care. When unplugging optic cables, always grab the connector, not the cable itself. Do not touch the ends of the fibres with bare hands as the fibre is extremely sensitive to dirt. The minimum allowed bend radius is 35 mm (1.4 in.).

Mechanical installation

These notes are intended for all who install the drive. Handle the unit carefully to avoid damage and injury.



- DCS800 sizes D4...D7: The drive is heavy. Do not lift it alone. Do not lift the unit by the front cover. Place units D4 and D5 only on its back.



DCS800 sizes D5...D7: The drive is heavy. Lift the drive by the lifting lugs only. Do not tilt the unit. The unit will overturn from a tilt of about 6 degrees.

- Make sure that dust from drilling does not enter the drive when installing. Electrically conductive dust inside the unit may cause damage or lead to malfunction.
- Ensure sufficient cooling.
- Do not fasten the drive by riveting or welding.

Operation

These warnings are intended for all who plan the operation of the drive or operate the drive. Ignoring the instructions can cause physical injury or death or damage the equipment.



- Before adjusting the drive and putting it into service, make sure that the motor and all driven equipment are suitable for operation throughout the speed range provided by the drive. The drive can be adjusted to operate the motor at speeds above and below the base speed.
- Do not activate automatic fault reset functions of the Standard Application Program if dangerous situations can occur. When activated, these functions will reset the drive and resume operation after a fault.
- Do not control the motor with the disconnecting device (disconnecting means); instead, use the control panel keys  and , or commands via the I/O board of the drive.

- **Mains connection**
You can use a switch disconnecter (with fuses) in the power supply of the thyristor power converter to disconnect the electrical components of the unit from the power supply for installation and maintenance work. The type of disconnecter used must be a switch disconnecter as per EN 60947-3, Class B, so as to comply with EU regulations, or a circuit-breaker type which switches off the load circuit by means of an auxiliary contact causing the breaker's main contacts to open. The mains disconnecter must be locked in its "OPEN" position during any installation and maintenance work.
- **EMERGENCY STOP buttons must be installed at each control desk and at all other control panels requiring an emergency stop function.** Pressing the STOP button on the control panel of the thyristor power converter will neither cause an emergency motor stop, nor will the drive be disconnected from any dangerous potential.
To avoid unintentional operating states, or to shut the unit down in case of any imminent danger according to the standards in the safety instructions it is not sufficient to merely shut down the drive via signals "RUN", "drive OFF" or "Emergency Stop" respectively "control panel" or "PC tool".
- **Intended use**
The operating instructions cannot take into consideration every possible case of configuration, operation or maintenance. Thus, they mainly give such advice only, which is required by qualified personnel for normal operation of the machines and devices in industrial installations.

If in special cases the electrical machines and devices are intended for use in non-industrial installations - which may require stricter safety regulations (e.g. protection against contact by children or similar) -, these additional safety measures for the installation must be provided by the customer during assembly.

Note:


- When the control location is not set to Local (L not shown in the status row of the display), the stop key on the control panel will not stop the drive. To stop the drive using the control panel, press the LOC/REM key and then the stop key  .

Table of contents

Safety instruction	2
What this chapter contains.....	2
To which products this chapter applies	2
Use of warnings and notes	2
Installation and maintenance work.....	3
Grounding.....	4
Mechanical installation.....	5
Operation	5
Table of contents	7

Chapters not yet available **12**

Introduction to this manual	12
Start-up	12
Firmware description	12
General	12
Firmware handling.....	12
Drive logic	12
Speed reference selection	12
Speed ramp.....	12
Speed actual selection.....	12
Speed controller	12
Torque reference.....	12
Torque selection.....	12
Torque limitation.....	12
Armature current control	12
Armature current measurement and motor data	12
EMF and flux control	12
Field current control	12
Field current measurement	12
Shared motion.....	12
Analog and digital I/O.....	12
Field exciter mode.....	12

Adaptive Program	13
Chapter overview.....	13
Compatibility	13
Safety instructions	13
Reader.....	13
Use	13
Related publications	13
What is the Adaptive Program.....	14
Features	14
How to build the program	15

How to connect the program to the drive application	15
How to control the execution of the program	17
Function blocks	18
Chapter overview	18
General rules	18
Block inputs	18
Block input attributs	19
Parameter value as an integer input	20
How the block handles the input	20
How to select the input	20
Constant as an integer input	21
How to set and connect the input	21
Parameter value as a boolean input	22
How the block handles the input	22
Constant as a boolean input	23
How to set and connect the input	23
String input	23
How to select the input	23
Function blocks details	24
ABS	24
ADD	24
AND	25
Bitwise	25
Bset	26
Compare	26
Count	27
D-Pot	27
Event	28
Filter	28
Limit	29
MaskSet	30
Max	31
Min	31
MulDiv	31
Not Used	32
OR	32
ParRead	32
ParWrite	33
PI	33
PI-Bal	34
Ramp	34
SqWav	35
SR	35
Switch-B	36
Switch-I	36
TOFF	37
TON	38
Trigg	39
XOR	39
Customer diagrams	40

Signal and parameter list	41
Signals and parameters	41
Signals	41
Parameters	43
Group 1	46
Physical actual values	46
Group 2	49
Speed controller signals	49
Group 3	52
Reference actual values	52
Group 4	54
Information	54
Group 5	60
Analog I/O	60
Group 6	61
Drive logic signals	61
Group 7	64
Control words	64
Group 8	69
Status / limit words	69
Group 9	74
Fault / alarm words	74
Group 10	83
Start / stop select	83
Group 11	92
Speed reference input	92
Group 12	98
Constant speeds	98
Group 13	99
Analog inputs	99
Group 14	104
Digital outputs	104
Group 15	106
Analog outputs	106
Group 16	108
System control inputs	108
Group 19	110
Data storage	110
Group 20	112
Limits	112
Group 21	115
Start / stop	115
Group 22	117
Speed ramp	117
Group 23	120
Speed reference	120
Group 24	124
Speed control	124
Group 25	129
Torque reference	129

Group 26.....	130
Torque reference handling	130
Group 30.....	132
Fault functions.....	132
Group 31.....	141
Motor 1 temperature.....	141
Group 34.....	142
Control panel display.....	142
Group 42.....	144
Brake control	144
Group 43.....	146
Current control	146
Group 44.....	151
Field excitation	151
Group 45.....	156
Field converter settings.....	156
Group 49.....	160
Shared motion.....	160
Group 50.....	167
Speed measurement.....	167
Group 51.....	169
Fieldbus.....	169
Group 83.....	170
Adaptive program control	170
Group 84.....	172
Adaptive program.....	172
Group 85.....	175
User constants	175
Group 86.....	176
Adaptive program outputs	176
Group 97.....	179
Measurement	179
Group 98.....	184
Option modules	184
Group 99.....	189
Start-up data	189
Overview of the control panel (DCS800PAN)	194
Overview	194
Panel operation.....	194
Panel wizard	194
Fault tracing	195
Converter protection	195
Motor protection	195
Status messages	196
Display of status, fault and alarm signals	196
Categories of signals and display options.....	196
General messages	197
Power-up errors (E).....	197

Fault signals (F).....	198
Alarm signals (A).....	212
User defined alarm by adaptive program	220
Appendix A: Firmware structure diagram	222
Appendix B: Index of signals and parameters	227
Index of signals and parameters (alphabetic order).....	227

Chapters not yet available

Introduction to this manual

Start-up

Firmware description

General

Firmware handling

Drive logic

Speed reference selection

Speed ramp

Speed actual selection

Speed controller

Torque reference

Torque selection

Torque limitation

Armature current control

Armature current measurement and motor data

EMF and flux control

Field current control

Field current measurement

Shared motion

Analog and digital I/O

Field exciter mode

Adaptive Program

Chapter overview

The chapter describes the basics of the Adaptive Program and instructs in building a program.

Compatibility

The guide complies with the drive application programs in which the Adaptive Programming features are included.

Safety instructions

Follow all safety instructions delivered with the drive.

- Read the **complete safety instructions** before you install, commission or use the drive. The complete safety instructions are given at the beginning of the Hardware Manual or QuickGuide.
- Read the **software function specific warnings and notes** before changing the default settings of the function. For each function, the warnings and notes are given in the Firmware Manual in the subsection describing the related user-adjustable parameters.

Reader

The reader of the manual is expected to:

- know the standard electrical wiring practices, electronic components and electrical schematic symbols.
- have no experience or training in installing, operating or servicing of ABB drives.

Use

The guide is to be used together with DCS800 firmware manual of the drive application program. The firmware manual contains the basic information on the drive parameters including the parameters of the Adaptive Program. The guide gives more detailed information on the Adaptive Program:

- what the Adaptive Program is
- how to build a program
- how the function blocks operate
- how to document the program

Related publications

The user documentation of the drive also includes:

- Firmware manual (3ADW 000 193)
- Hardware manual (3ADW 000 194)
- Guides/supplements for the optional equipment and programs (appropriate manuals are included in the delivery).

What is the Adaptive Program

Conventionally, the user can control the operation of the drive by parameters. Each parameter has a fixed set of choices or a setting range. The parameters make the programming easy, but the choices are limited: you cannot customize the operation any further. The Adaptive Program makes freer customising possible without the need of a special programming tool or language, even though the PC programming tool "Drive AP program" makes it easier.

- The program is built of function blocks.
- The control panel is the programming tool.
- The user can document the program by drawing it on block diagram template sheets.

The maximum size of the Adaptive Program is 16 function blocks. The program may consist of several separate functions.

Features

The adaptive programming of DCS800 provides the following features:

- 16 function blocks
- more than 20 block types
- password protection
- 4 different time levels selectable
- check against unconnected blocks
- shift functions
- debug functions
 - output forcing
 - breakpoint
 - single step
 - single cycle
- 10 constant value parameters
- additional output write pointer parameter for each block

How to build the program

The programmer connects a function block to other blocks through a Block Parameter Set. The sets are also used for reading values from the drive application program and transferring data to the drive application program. Each Block Parameter Set consists of six parameters in group 84 and a write pointer in group 86.

The figure below shows the use of Block Parameter Set 1 in the DCS800 firmware (parameters 84.04 to 84.09 and 86.01):

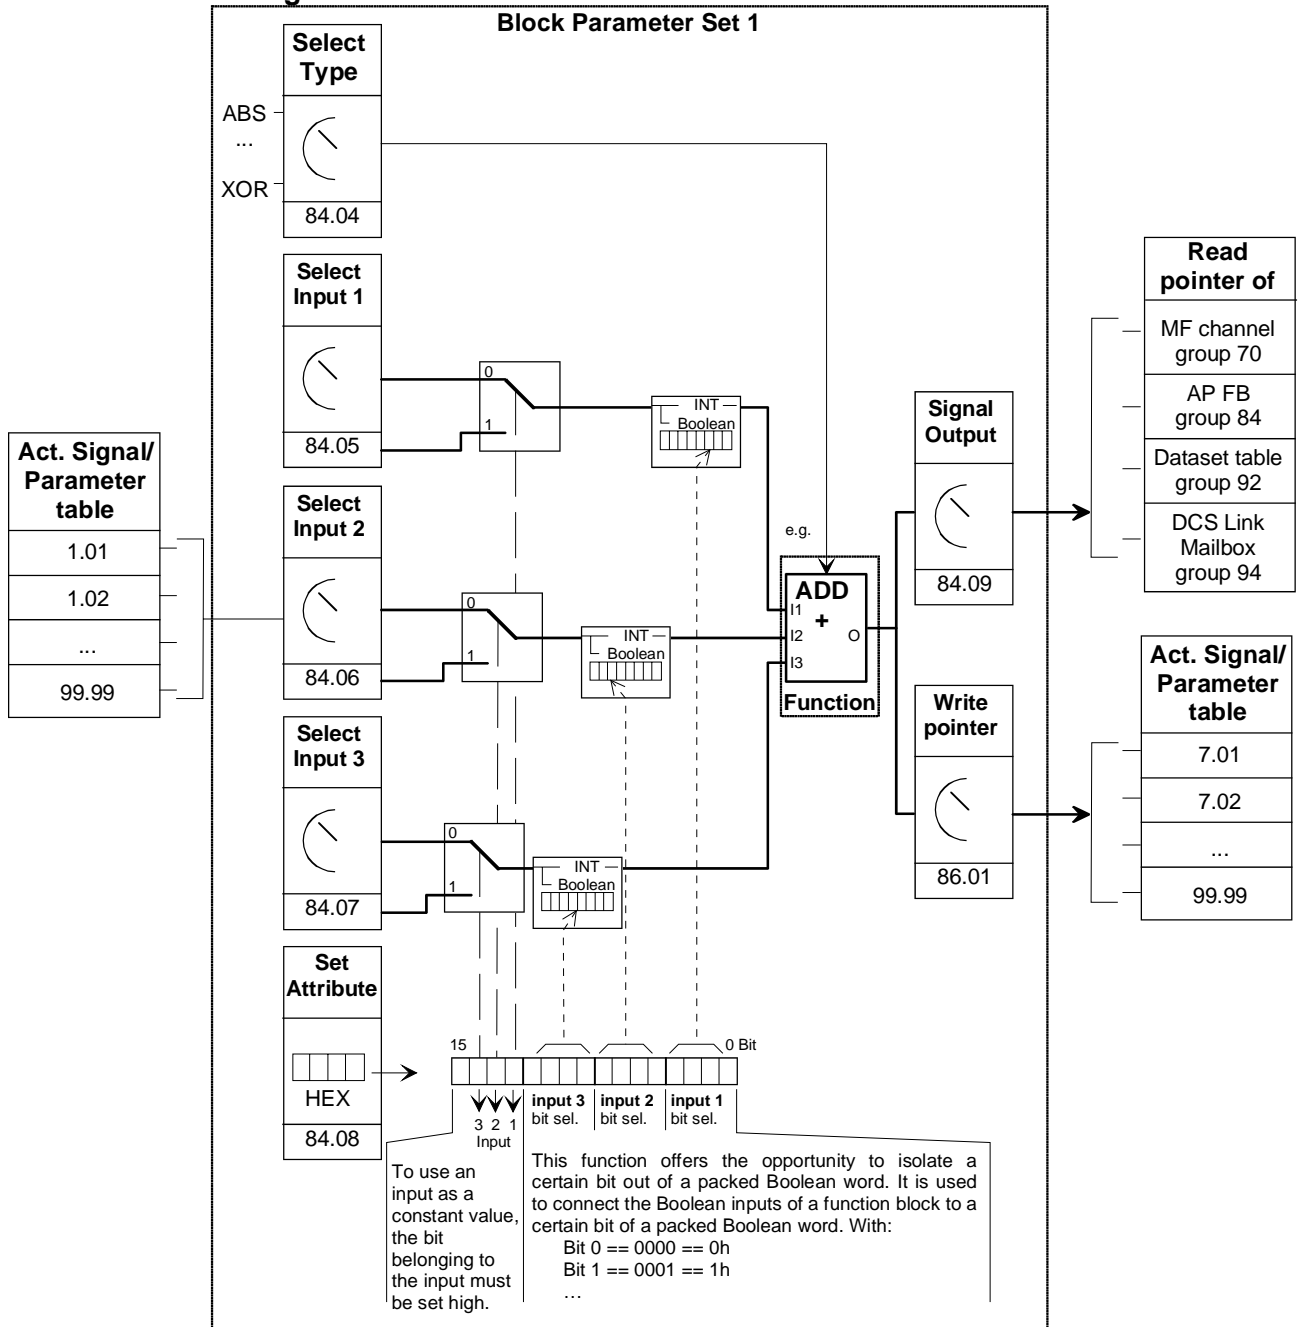
- Parameter 84.04 selects the function block type.
- Parameter 84.05 selects the source that input IN1 of the function block is connected to. A negative value means that the signal will be inverted.
- Parameter 84.06 selects the source that input IN2 of the function block is connected to. A negative value means that the signal will be inverted.
- Parameter 84.07 selects the source that input IN3 of the function block is connected to. A negative value means that the signal will be inverted.
- Parameter 84.08 defines the attributes of inputs.
- Parameter 84.09 contains the signal of this function block, which can be used further for other input selections. The user cannot edit this parameter value.
- The signal output is also available with the write pointer 86.01. Parameter 86.01 gets the destination parameter, which should get the signal.

How to connect the program to the drive application

The output of the Adaptive Program needs to be connected to the drive application program. For that purpose there are two possibilities:

- The signal, e.g. 84.09, can be selected for further functions.
- The signal output is available with the write pointer, e.g. 86.01. This parameter is to be set with the destination parameter, which needs the signal output of this function block.

Using of Block Parameter Set 1



Example

Add to speed reference a constant value and an external additional reference value:

1. Set 84.04=2 (selection of ADD function)
2. Set 84.05=xx.xx (selection of speed reference for Input 1)
3. Set 84.06=xx.xx (selection of external ref (AIx) for Input 2)
4. Set 84.07=1500 (constant value for Input 3)
5. Set 84.08=4000h (because Input 3 = constant -> Bit 14=1 --> 4000h)
6. 84.09=xxxx (contains the computed value; can be read from system's parts e.g. Master Follower channel, other Block Parameter Set Inputs)
7. Set 86.01=xx.xx (write computed value to destination for further processing)

How to control the execution of the program

The Adaptive Program executes the function blocks in numerical order, all blocks on the same time level. This cannot be changed by the user. The user can:

- select the operation mode of the program (stop, start, editing, single cycling, single stepping)
- adjust the execution time level of the program
- delete or add blocks.

Function blocks

Chapter overview

The chapter describes the function blocks.

General rules

The use of block input 1 (BlockxIn1) is compulsory (it must not be left unconnected). Use of input 2 (BlockxIn2) and input 3 (BlockxIn3) is voluntary for the most blocks. As a rule of thumb, an unconnected input does not affect the output of the block.

The Attribute Input (BlockxAttrib) is to set with the attributes, like declaration of constant and bits, of all three inputs.

Block inputs

The blocks use two input formats:

- integer
- boolean

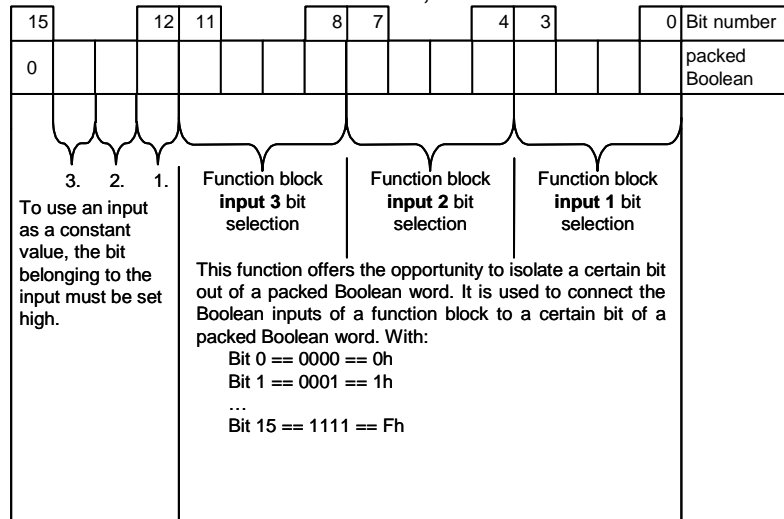
The used format varies depending on the block. For example, the ADD block uses integer inputs and the OR block boolean inputs.

Note: The inputs of the block are read when the execution of the block starts, not simultaneously for all blocks!

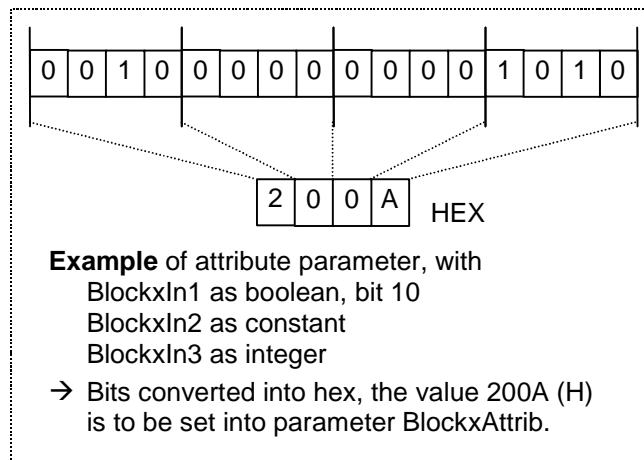
Block input attributs

Block inputs gets the parameter of signal source or the value of a constant. Depending on the used block function and depending on on the desired function the attributes of all three inputs are to be set as integer, constant or as selection of a bit of a 16-bit word source.

Therefor it is used a 16-bit word, which is defined as following:



Example:



Parameter value as an integer input

How the block handles the input

The block reads the selected value in as an integer.

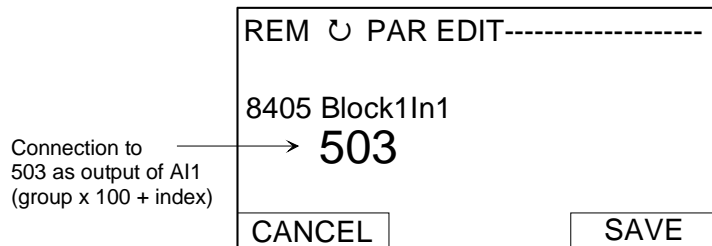
Note: The parameter selected as an input should be an integer value. The internal scaling for each parameter is given in the Firmware Manual.

How to select the input

- Scroll to the input selection parameter of the block and switch to edit mode (Enter).
- Set the address, from which the input value is to be read, with group x 100 + index (e.g. parameter 22.01 = 2201). A negative address (e.g. -2201) will act an inversion of the connected value.

The figure below shows the panel display when the input BlockxIn1 (with e.g. x = 1 for 1. block) selection parameter is in edit mode. The value is inverted if there is a minus (-) sign in the inversion field. The bit selection field is not effective for an integer or string type input.

Display of panel



Example: Analogue input AI1, which is supplied with a voltage source of 5.8 V, in a drive equipped with the DCS800 firmware. How is the signal connected to the MAX block as function block 1 in the Adaptive Program? What is the value at the block input?

AI1 is connected to the block as follows:

- Scroll to the input Block1In1 selection parameter 84.05 and shift to edit mode (Enter).
- Set the address of 503, because group 5 and index 3 contains the input value of AI1 ($05.03 = 05 \times 100 + 3 = 503$).

The value at the input of the block is 5800, since the integer scaling of actual signal 5.03 is: $0.001 \text{ V} = 1$ (with default setting of AI1, given in the Firmware Manual).

Constant as an integer input

How to set and connect the input

Option 1

- Scroll to the input selection parameter of the block and switch to edit mode (Enter).
- Give the constant value to this input parameter (double arrow and arrow keys).
- Accept by Enter.
- Scroll to attribute parameter (BlockxAttrib)
- Set the bit for constant attribute of this input in BlockxAttrib parameter.
- Accept by Enter.

The figure below shows the panel display when the input BlockxIn1 selection parameter is in edit mode and the constant field is visible. The constant may have a value from -32768 to 32767. The constant cannot be changed while the adaptive program is running.

Display of panel

Value of the desired constant →

REM ⌚ PAR EDIT-----

8406 Block1In2

-10000

CANCEL SAVE

Display of panel

Setting of constant value of Block1In2 input →

REM ⌚ PAR EDIT-----

8408 Block1Attrib

2000 hex

CANCEL SAVE

Option 2

- Set the constant to one of the parameters 85.01 to 85.10 reserved for the constants.
- Connect the constant value to a block as usual by the input selection parameter.

The constants can be changed while the adaptive program is running. They may have values from -32767 to 32767.

Note: A constant like option 1 can only be changed in Edit mode. If the constant may be modified during running, a constant parameter like option 2 is more expediently

Parameter value as a boolean input

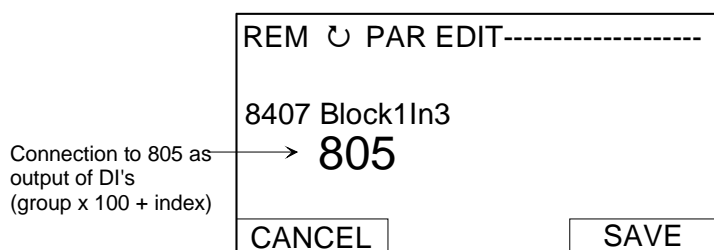
How the block handles the input

- The block reads the selected value as an integer.
- The block uses the bit defined by the bit field as the boolean input.

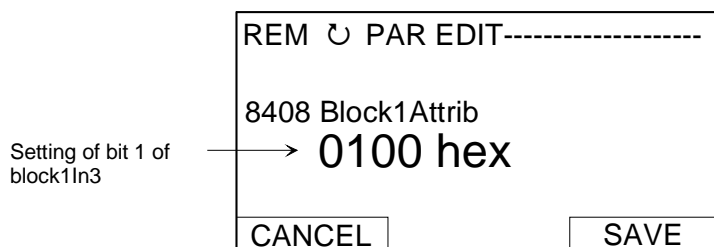
Bit value 1 is boolean value true and 0 is boolean value false

Example: The figure below shows the value of input BlockxIn1 selection parameter when the input is connected to a bit indicating the status of digital input DI2. In DCS800 firmware, the digital input states are internally stored as actual signal 8.05 DI StatWord. Bit 1 corresponds to DI2, bit 0 to DI1.

Display of panel



Display of panel



How to select the input

See the section Parameter value as an integer input above.

Note: The parameter selected as an input should have a packed boolean value (binary data word). See the Firmware Manual.

Constant as a boolean input

How to set and connect the input

- Scroll to the input selection parameter of the block and switch to edit mode (Enter).
- Give the constant. If boolean value true is needed, set the constant to -1. If boolean value false is needed, set to 0.
- Accept by Enter.
- Scroll to attribute parameter (BlockxAttrib)
- Set the bit for constant attribute of this input in BlockxAttrib parameter.
- Accept by Enter.

String input

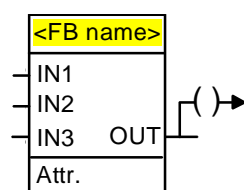
How to select the input

String input is not needed yet. With the EVENT block the text out of the fault, alarm or notice lists will be selected; *see chapter "Status"*.
For changing this text another tool is necessary.

Function blocks details

General

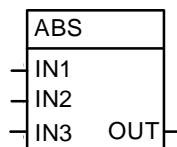
Each of the 16 function blocks has one up to max. three input parameters (group 84), which contains either an output address or a value of constant. One further parameter is used for the attributes of these inputs. This attribute parameter is to be edited manually, if functions blocks are edited by using panel or by using parameter browser of DriveWindow (light). By using Adaptive Programming PC tool this attribute parameter will be set automatically. The output OUT, group 84, can be used for further inputs of function blocks. For writing the output value into standard parameters the output pointer, marked with - ()→, is to be set to the desired standard parameter. Output pointers can be found in group 86.



ABS

Type Arithmetic function

Illustration



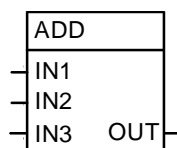
Operation The output is the absolute value of input IN1 multiplied by IN2 and divided by IN3.
 $OUT = |IN1| * IN2 / IN3$

Connections Input IN1, IN2 and IN3 : 16 bit integer values (15 bits + sign)
 Output (OUT) : 16 bit integer (15 bits + sign)

ADD

Type Arithmetic function

Illustration

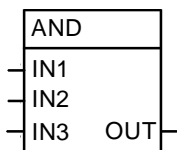


Operation The output is the sum of the inputs.
 $OUT = IN1 + IN2 + IN3$

Connections Input IN1, IN2 and IN3 : 16 bit integer values (15 bits + sign)
 Output (OUT) : 16 bit integer (15 bits + sign)

AND Type Logical function

Illustration



Operation

The output is true if all connected inputs are true. Otherwise the output is false. Truth table:

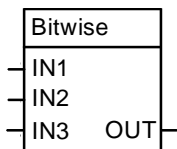
IN1	IN2	IN3	OUT (binary)	OUT (value on display)
0	0	0	False (All bits 0)	0
0	0	1	False (All bits 0)	0
0	1	0	False (All bits 0)	0
0	1	1	False (All bits 0)	0
1	0	0	False (All bits 0)	0
1	0	1	False (All bits 0)	0
1	1	0	False (All bits 0)	0
1	1	1	True (All bits 1)	-1

Connections

Input IN1, IN2 and IN3 : boolean values
 Output (OUT) : 16 bit integer value (packed boolean)

Bitwise Type Logical function

Illustration



Operation

The block compares bits of three 16 bit word inputs and forms the output bits as follows:

$$OUT = (IN1 \text{ OR } IN2) \text{ AND } IN3.$$

Example, operation shown with only one bit:

IN1	IN2	IN3	OUT
0	0	0	0
0	1	0	0
1	0	0	0
1	1	0	0
0	0	1	0
0	1	1	1
1	0	1	1
1	1	1	1

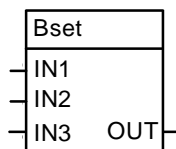
Example, operation shown with whole word:

Input [word]		bits																Output [word]	
		15									0								
20518 => IN1		0	1	0	1	0	0	0	0	0	0	1	0	0	0	1	1	0	
4896 => IN2		0	0	0	1	0	0	1	1	0	0	0	0	0	0	0	0	0	
17972 => IN3		0	1	0	0	0	1	1	0	0	0	1	1	0	1	0	0	0	
		0	1	0	0	0	0	1	0	0	0	1	0	0	1	0	0	=> OUT	
																		16932	

Connections Input IN1, IN2 and IN3 : 16 bit integer values (packed boolean)
Output (OUT) : 16 bit integer values (packed boolean)

Bset

Type Logical function

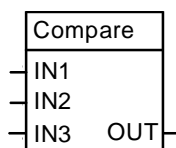
Illustration

Operation Before the value of input IN1 will be set to the output (OUT), the bit number (IN2) of input word (IN1) will be set to the value of IN3.
Input IN1 is to be a packed word. The value of input IN2 IN3 should have the value 1 for true and 0 for false.

Connections Input IN1 : packed 16-bit word
Input IN2 : 16 bit integer value, used 0 ... 15 as bit number.
Input IN3 : boolean value
Output (OUT) : 16 bit packed word

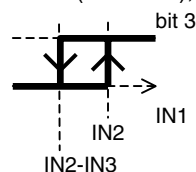
Compare

Type Logical function

Illustration

Operation Output bits 0, 1 and 2:
- If $IN1 > IN2$, $OUT = 001$ Output bit 0 is true.
- If $IN1 = IN2$, $OUT = 010$ Output bit 1 is true.
- If $IN1 < IN2$, $OUT = 100$ Output bit 2 is true.

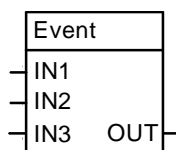
Output bit 3:
- If $IN1 > IN2$, $OUT = 1ddd$ Output bit 3 is true and remains true until $IN1 < (IN2 - IN3)$, after which bit 3 is false.



Output integer value, which is shown on display, is the sum of the bits :

bit 0	bit 1	bit 2	bit 3	OUT (value on display)
0	0	0	0	0
1	0	0	0	1
0	1	0	0	2
0	0	1	0	4
0	0	0	1	8
1	0	0	1	9
0	1	0	1	10
0	0	1	1	12

Event **Type** Viewing function

Illustration**Operation**

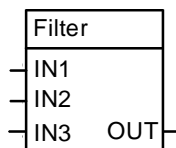
Input IN1 triggers the event. IN2 selects the number of fault, alarm, notice or trip texts. IN3 selects the type of the event (alarm, fault, notice or trip).

IN1	Activation input (boolean)		
	0->1	block activates the event	
	0	block deactivates the event	
IN2	Selection of displayed message. There exists 5 different messages, which are selected by using numbers depending on the type of event: The default message will be found in brackets.		
	Alarms		
	Faults and Trips		
	Notices		
	301 (APAlarm1)	601 (APFault1)	801 ()
	302 (APAlarm2)	602 (APFault2)	802 ()
	303 (APAlarm3)	603 (APFault3)	803 ()
304 (APAlarm4)	604 (APFault4)	804 ()	
305 (APAlarm5)	605 (APFault5)	805 ()	
IN3	Selection of type of event		
	0	Alarm ; shown as A30x	
	1	Fault ; shown as F60x. Faults have to be reset.	
	2	Notice, shown as N80x	
	3	Trip ; shown as fault F60x. A Trip will also open a connected DC breaker. Trips have to be reset.	

Connections

Input IN1 : 16 bit integer values (15 bits + sign)
 Input IN2, IN3 : Selection of byte (compulsory)

Filter **Type** Arithmetic function

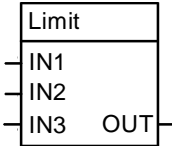
Illustration**Operation**

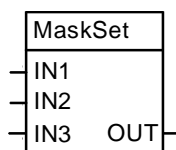
The output is the filtered value of input IN1. Input IN2 is the filtering time.
 $OUT = IN1 \cdot (1 - e^{-t/IN2})$

Note: The internal calculation uses 32 bits accuracy to avoid offset errors.

Connections

Input IN1 : 16 bit integer value (15 bits + sign)
 Input IN2 : 16 bit integer value (15 bits + sign). One corresponds to 1 ms.
 Output (OUT) : 16 bit integer (15 bits + sign)

Limit	Type	Logical function
Illustration		
Operation	<p>Value, connected to input IN1 will be limited with input IN2 as upper limit and with input IN3 as lower limit.</p> <p>The output OUT makes the limited input value available.</p> <p>The output stays with 0, if the lower limit (input IN3) is greater or equal than the upper limit (input IN2).</p>	
Connections	Input IN1, IN2 and IN3 : 16 bit integer value (15 bits + sign) Output (OUT) : 16 bit integer value (15 bits + sign)	

MaskSet Type Logical function
Illustration**Operation**

The block function sets or resets the bits defined in IN1 and IN2.

Input IN1: Word input
 Input IN2: Set word input
 Input IN3: Set/Reset IN2 in IN1.

Example, operation shown with only one bit:

... with IN3 = Set

IN1	IN2	IN3	OUT
0	0	True	0
1	0	True	1
1	1	True	1
0	1	True	1

... with IN3 = Reset

IN1	IN2	IN3	OUT
0	0	False	0
1	0	False	1
1	1	False	0
0	1	False	0

Example, operation shown with whole word:

... with IN3 = true (=> Set)

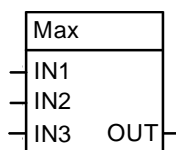
Input [word]		bits					Output [word]										
		15			0												
26214 => IN1		0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0
-13108 => IN2		1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0
		1	1	1	0	1	1	1	0	1	1	1	0	1	1	1	0
		=> OUT														-4370	

... with IN3 = false (=> Reset)

Input [word]		bits					Output [word]										
		15			0												
26214 => IN1		0	1	1	0	0	1	1	0	0	1	1	0	0	1	1	0
-13108 => IN2		1	1	0	0	1	1	0	0	1	1	0	0	1	1	0	0
		0	0	1	0	0	0	1	0	0	0	1	0	0	0	1	0
		=> OUT														8738	

Connections

Input IN1 and IN2 : 16 bit integer value (packed boolean)
 Input 3 : boolean
 Output OUT : 16 bit integer value (packed boolean)

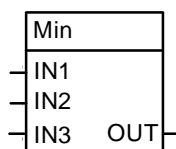
Max**Type** Arithmetic function**Illustration****Operation**

The output is the highest input value.
 $OUT = MAX (IN1, IN2, IN3)$

Note: Open input will be taken as value zero.

Connections

Input IN1, IN2 and IN3 : 16 bit integer values (15 bits + sign)
 Output (OUT) : 16 bit integer (15 bits + sign)

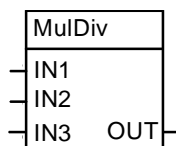
Min**Type** Arithmetic function**Illustration****Operation**

The output is the lowest input value.
 $OUT = MIN (IN1, IN2, IN3)$

Note: Open input will be taken as value zero.

Connections

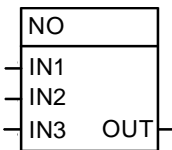
Input IN1, IN2 and IN3 : 16 bit integer values (15 bits + sign)
 Output (OUT) : 16 bit integer (15 bits + sign)

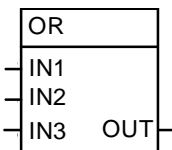
MuDiv**Type** Arithmetic function**Illustration****Operation**

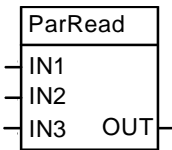
The output is the product of input IN1 and input IN2 divided by input IN3.
 $OUT = (IN1 \cdot IN2) / IN3$

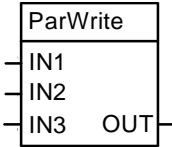
Connections

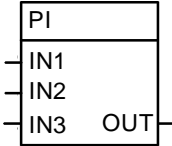
Input IN1, IN2 and IN3 : 16 bit integer values (15 bits + sign)
 Output (OUT) : 16 bit integer (15 bits + sign)

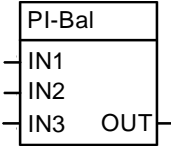
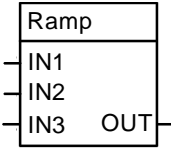
Not Used	Type	-
	Illustration	
	Operation	Block is not enabled and not working (default setting).
	Connections	-

OR	Type	Logical function																																								
	Illustration																																									
	Operation	<p>The output is true if any of the inputs is true. Truth table:</p> <table border="1" data-bbox="563 904 1318 1140"> <thead> <tr> <th>IN1</th> <th>IN2</th> <th>IN3</th> <th>OUT (binary)</th> <th>OUT (value on display)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> <td>False (All bits 0)</td> <td>0</td> </tr> <tr> <td>0</td> <td>0</td> <td>1</td> <td>True (All bits 1)</td> <td>-1</td> </tr> <tr> <td>0</td> <td>1</td> <td>0</td> <td>True (All bits 1)</td> <td>-1</td> </tr> <tr> <td>0</td> <td>1</td> <td>1</td> <td>True (All bits 1)</td> <td>-1</td> </tr> <tr> <td>1</td> <td>0</td> <td>0</td> <td>True (All bits 1)</td> <td>-1</td> </tr> <tr> <td>1</td> <td>1</td> <td>0</td> <td>True (All bits 1)</td> <td>-1</td> </tr> <tr> <td>1</td> <td>1</td> <td>1</td> <td>True (All bits 1)</td> <td>-1</td> </tr> </tbody> </table>	IN1	IN2	IN3	OUT (binary)	OUT (value on display)	0	0	0	False (All bits 0)	0	0	0	1	True (All bits 1)	-1	0	1	0	True (All bits 1)	-1	0	1	1	True (All bits 1)	-1	1	0	0	True (All bits 1)	-1	1	1	0	True (All bits 1)	-1	1	1	1	True (All bits 1)	-1
IN1	IN2	IN3	OUT (binary)	OUT (value on display)																																						
0	0	0	False (All bits 0)	0																																						
0	0	1	True (All bits 1)	-1																																						
0	1	0	True (All bits 1)	-1																																						
0	1	1	True (All bits 1)	-1																																						
1	0	0	True (All bits 1)	-1																																						
1	1	0	True (All bits 1)	-1																																						
1	1	1	True (All bits 1)	-1																																						
	Connections	Input IN1, IN2 and IN3 : boolean values Output (OUT) : 16 bit integer value (packed boolean)																																								

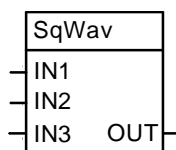
ParRead	Type	Logical function
	Illustration	
	Operation	<p>Output (OUT) gives the value of a parameter, which is defined with input IN1 as parameter group and input IN2 as parameter index.</p> <p>Example for reading parameter 22.01: input IN1 = 22 input IN2 = 01</p>
	Connections	Input IN1 and IN2 : 16 bit integer value (15 bits + sign) Output (OUT) : 16 bit integer value (15 bits + sign)

ParWrite	Type	Logical function
Illustration		
Operation		<p>Value of input IN1 is written into a parameter, which is defined with input IN2 as group X 100 + index. Input IN3 can be set with a Boolean value: TRUE means save and FALSE means no save.</p> <p>The output gives the error code, if parameter access is denied.</p> <p>Example for parameter 22.01 = 150, not saving into FLASH. input IN1 = the value of 150 (connection or constant) input IN2 = 2201 input IN3 = false</p>
Connections		<p>Input IN1 and IN2 : 16 bit integer value (15 bits + sign) Input IN3 : Boolean value Output OUT : byte code</p>

PI	Type	Arithmetic controller
Illustration		
Operation		<p>The output is input IN1 multiplied by IN2/100 plus integrated IN1 multiplied by IN3/100.</p> $O = I1 * I2 / 100 + (I3 / 100) * \int I1$ <p>Note: The internal calculation uses 32 bits accuracy to avoid offset errors.</p>
Connections		<p>Input IN1 : 16 bit integer value (15 bit + sign) Input IN2 : 16 bit integer value (15 bit + sign) Gain factor. 100 corresponds to 1. Input IN3 : Integrator coefficient. 100 corresponds to 1. 10 000 corresponds to 100. Output OUT : 16 bit integer (15 bits + sign). The range is limited to 0 ... 10000.</p>

PI-Bal	Type	Arithmetic function
Illustration		
Operation	<p>The block initialises the PI block first. When input IN1 becomes true, the block writes the value of IN2 to the output of the PI block. When IN1 becomes false, the block releases the output of the PI controller block which continues normal operation from the set output.</p> <p>Note: The block may be used only with the PI block. The block must follow the PI block.</p>	
Connections	Input IN1	: boolean value
	Input IN2	: 16 bit integer value (15 bits + sign)
Ramp	Type	Arithmetic function
Illustration		
Operation	<p>The block uses input IN1 as a reference value. With the ramp times (input IN2 and IN3) the output OUT increases or decreases as long as the reference value is reached.</p> <p>Input IN1 : Input value Input IN2 : Ramp up time, (ms, related to 20000) Input IN3 : Ramp down time, (ms, related to 20000) Output : integer output</p>	
Connections	Input IN1	: 16 bit integer value; 15 bit + sign
	Input IN2	: 16 bit integer value; 15 bit + sign
	Input IN3	: 16 bit integer value; 15 bit + sign
	Output OUT	: 16 bit integer value; 15 bit + sign

SqWav **Type** Arithmetic function

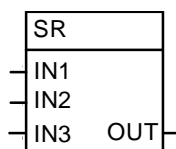
Illustration**Operation**

The output OUT alternates between the value of input IN3 and zero (0), if the block is enabled with value of input IN1 = true.
The period is set with input IN2 with 1 = 1 ms.

Connections

Input IN1 : boolean value
Input IN2 : 16 bit integer value
Input IN3 : 16 bit integer value (15 bits + sign)
Output (OUT) : 16 bit integer value (15 bits + sign)

SR **Type** Logical function

Illustration**Operation**

Set/reset block. Input IN1 sets and IN2 and IN3 reset the output.

- If IN1, IN2 and IN3 are false, the current value remains at the output.
- If IN1 is true and IN2 and IN3 are false, the output is true.
- If IN2 or IN3 is true, the output is false.

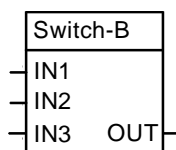
IN1	IN2	IN3	OUT (binary)	OUT (value on display)
0	0	0	Output	Output
0	0	1	False (All bits 0)	0
0	1	0	False (All bits 0)	0
0	1	1	False (All bits 0)	0
1	0	0	True (All bits 1)	-1
1	0	1	False (All bits 0)	0
1	1	0	False (All bits 0)	0
1	1	1	False (All bits 0)	0

Connections

Input IN1, IN2 and IN3 : boolean values
Output (OUT) : 16 bit integer value (15 bits + sign)

Switch-B **Type** Logical function

Illustration



Operation

The output is equal to input IN2 if input IN1 is true and equal to input IN3 if input IN1 is false.

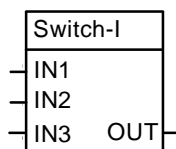
IN1	OUT	OUT (value on display)
0	= IN3	True = -1
1	= IN2	False = 0

Connections

Input IN1, IN2 and IN3 : boolean values
Output (OUT) : 16 bit integer value (packed boolean)

Switch-I **Type** Logical function

Illustration



Operation

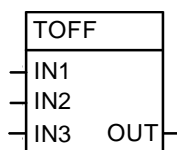
The output is equal to input IN2 if input IN1 is true and equal to input IN3 if input IN1 is false.

IN1	OUT
0	= IN3
1	= IN2

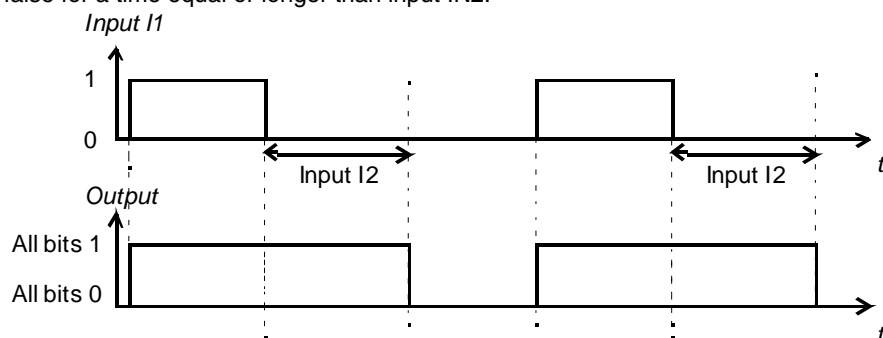
Connections

Input IN1 : boolean value
Input IN2 and IN3 : 16 bit integer values (15 bits + sign)
Output (OUT) : 16 bit integer value (15 bits + sign)

TOFF **Type** Logical function

Illustration**Operation**

The output is true when input IN1 is true. The output is false when input IN1 has been false for a time equal or longer than input IN2.



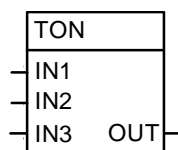
Values on display: True = -1, false = 0.

With input 3 = False the delay time of input 2 is scaled in milliseconds (ms),
 with input 3 = True the delay time of input 2 is scaled in seconds (s).

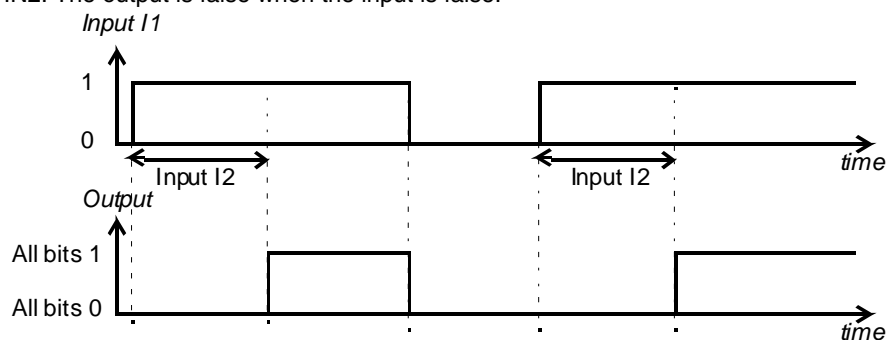
Connections Input IN1 and IN3 : boolean value
 Input IN2 : 16 bit integer value (15 bits + sign).
 Output (OUT) : 16 bit integer value (packed boolean)

TON**Type**

Logical function

Illustration**Operation**

The output is true when input IN1 has been true for a time equal or longer than input IN2. The output is false when the input is false.



Values on display: True = -1, false = 0.

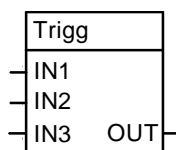
With input 3 = False the delay time of input 2 is scaled in milliseconds (ms),
with input 3 = True the delay time of input 2 is scaled in seconds (s).

Connections

Input IN1 and IN3	: boolean value
Input IN2	: 16 bit integer value (15 bits + sign)
Output (OUT)	: 16 bit integer value (packed boolean)

Trigg Type Logical function

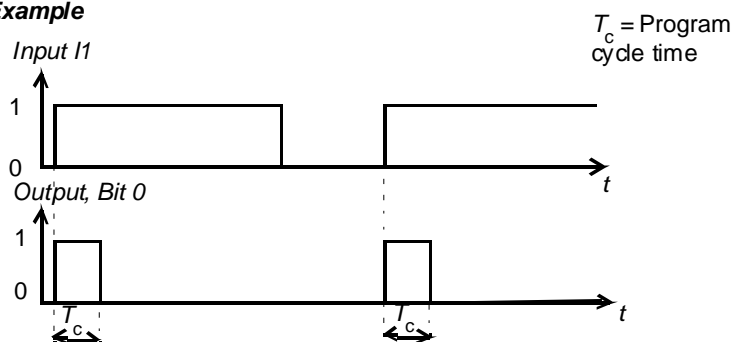
Illustration



Operation

The rising edge of input IN1 sets the output bit 0 for one program cycle.
The rising edge of input IN2 sets the output bit 1 for one program cycle.
The rising edge of input IN3 sets the output bit 2 for one program cycle.

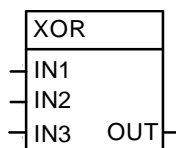
Example



Connections Input IN1, IN2 and IN3 : boolean values
Output (OUT) : 16 bit integer value (15 bits + sign)

XOR Type Logical function

Illustration



Operation

The output is true if one input is true, otherwise the output is false. Truth table:

IN1	IN2	IN3	OUT (binary)	OUT (value on display)
0	0	0	False (All bits 0)	0
0	0	1	True (All bits 1)	-1
0	1	0	True (All bits 1)	-1
0	1	1	False (All bits 0)	0
1	0	0	True (All bits 1)	-1
1	0	1	False (All bits 0)	0
1	1	0	False (All bits 0)	0
1	1	1	True (All bits 1)	-1

Connections Input IN1, IN2 and IN3 : boolean values
Output (OUT) : 16 bit integer value (15 bits + sign)

Signal and parameter list

Signals and parameters

This chapter contains all signals and parameters.

Signals

Signals are measured and calculated actual values of the drive. This includes the control-, status-, limit-, fault- and alarm words. The drive's signals can be found in groups 1 to 9. None of the values inside these groups is stored in the FLASH memory and thus volatile.

The following table gives an overview of all signal groups:

Group	Description	Comment
1	Physical actual values	
2	Speed controller signals	
3	Reference actual values	
4	Information	self identification
5	Analog I/O	
6	Drive logic signals	
7	Control words	command words
8	Status / limit words	detection on operation and limits
9	Fault / alarm words	diagnosis information

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
1.08	MotTorq (motor torque) Motor torque in percent of the active motor nominal torque: – Filtered by means of a 6 th order FIR filter (sliding average filter), filter time is 1 mains voltage period. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
2.17	SpeedRefUsed (used speed reference) Used speed reference selected with: – <i>Ref1Mux (11.02) and Ref1Sel (11.03) or</i> – <i>Ref2Mux (11.12) and Ref2Sel (11.06)</i> Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C

Sample of signals

All signals are read-only. However the overriding control can write to the control words, but it only affects the RAM.

Min., max., def.:

Minimum, maximum and default values are not valid for groups 1 to 9.

Unit:

Shows the physical unit of a signal, if applicable. The unit is displayed in the control panel and PC tools.

E/C:

By means of *USI Sel (16.09)* it is possible to change between compact **(C)** and extended **(E)** signal and parameter list. The compact list contains only signals and parameters used for a typical commissioning.

Group.Index:

Signal and parameter numbers consists of group number and its index.

Integer Scaling:

Communication between the drive and the overriding control uses 16 bit integer values. The overriding control has to use the information given in integer scaling to read the value of the signal properly.

Example1:

If *MotTorq (1.08)* is read from the overriding control an integer value of 100 corresponds to 1 %.

Example2:

If *SpeedRefUsed (2.17)* is read from the overriding control 20.000 equals the speed (in rpm) shown in *SpeedScaleAct (2.29)* .

Type:

The data type is given with a short code:

I = 16-bit integer value (0, ..., 65536)

SI = 16-bit signed integer value (-32768, ..., 32767)

C: = text string

Volatile:

Y = values are NOT stored in the FLASH, they will be lost when the drive is de-energized

N = values are stored in the FLASH, they will remain when the drive is de-energized

Parameters

This chapter explains the function and valid values or selections for all parameters. They are arranged in groups by their function. The following table gives an overview of all parameter groups:

Group	Description
10	Start / stop select
11	Speed reference input
12	Constant speeds
13	Analog inputs
14	Digital outputs
15	Analog outputs
16	System control inputs
19	Data storage
20	Limits
21	Start / stop
22	Speed ramp
23	Speed reference
24	Speed control
25	Torque reference
26	Torque reference handling
30	Fault functions
31	Motor 1 temperature
34	Control panel display
40	PID control
42	Brake control
43	Current control
44	Field excitation
45	Field converter settings
47	12-pulse operation
49	Shared motion
50	Speed measurement
51	Fieldbus
52	Modbus
70	DDCS control
71	Drivebus
83	Adaptive program control
84	Adaptive program
85	User constants
86	Adaptive program outputs
90	Receiving datasets addresses 1
91	Receiving datasets addresses 2
92	Transmit datasets addresses 1
93	Transmit datasets addresses 2
94	DCSLink control
97	Measurement
98	Option modules
99	Start-up data

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
20.07	<p>TorqMaxSPC (maximum torque speed controller) Maximum torque limit - in percent of the active motor nominal torque - at the output of the speed controller: – <i>TorqRef2</i> (2.09)</p> <p>Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	0	325	325	%	E
23.01	<p>SpeedRef (speed reference) Main speed reference input for the speed control of the drive. Can be connected to <i>SpeedRefUsed</i> (2.17) via: – <i>Ref1Mux</i> (11.02) and <i>Ref1Sel</i> (11.03) or – <i>Ref2Mux</i> (11.12) and <i>Ref2Sel</i> (11.06)</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} \text{rpm}$ to $(2.29) * \frac{32767}{20000} \text{rpm}$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: Y</p>	-10000	10000	0	rpm	C

Sample of parameters

Parameter changes by control panel, DriveWindow or DriveWindow Light are stored in the FLASH. Changes made by the overriding control are only stored in the RAM.

Min., max., def.:

Minimum and maximum value or selection of parameter.
Default value or default selection of parameter.

Unit:

Shows the physical unit of a parameter, if applicable. The unit is displayed in the control panel and PC tools.

E/C:

By means of *USI Sel* (16.09) it is possible to change between compact (**C**) and extended (**E**) signal and parameter list. The compact list contains only signals and parameters used for a typical commissioning.

Group.Index:

Signal and parameter numbers consists of group number and its index.

Integer Scaling:

Communication between the drive and the overriding control uses 16 bit integer values. The overriding control has to use the information given in integer scaling to change the value of the parameter properly.

Example1:

If *TorqMaxSPC (20.07)* is written to from the overriding control an integer value of 100 corresponds to 1 %.

Example2:

If *SpeedRef (23.01)* is written to from the overriding control 20.000 equals the speed (in rpm) shown in *SpeedScaleAct (2.29)* .

Type:

The data type is given with a short code:

I = 16-bit integer value (0, ..., 65536)

SI = 16-bit signed integer value (-32768, ..., 32767)

C: = text string

Volatile:

Y = values are NOT stored in the FLASH, they will be lost when the drive is de-energized

N = values are stored in the FLASH, they will remain when the drive is de-energized

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 1	Physical actual values					
1.01	MotSpeedFilt (filtered motor speed) Filtered actual speed feedback: <ul style="list-style-type: none"> – Choose motor speed feedback with <i>M1SpeedFbSel (50.03)</i> – Filtered with 1 s and – <i>SpeedFiltTime (50.06)</i> Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
1.02	SpeedActEMF (speed actual from EMF) Actual speed calculated from EMF. Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
1.03	SpeedActEnc (speed actual from encoder) Actual speed measured with pulse encoder. Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
1.04	MotSpeed (motor speed) Actual motor speed: <ul style="list-style-type: none"> – Choose motor speed feedback with <i>M1SpeedFbSel (50.03)</i>. If <i>M1SpeedFbSel (50.03)</i> is set to External the signal is updated by adaptive program, application program or overriding control. – <i>SpeedFiltTime (50.06)</i> Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
1.05	SpeedActTach (speed actual from tacho) Actual speed measured with analog tacho. Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
1.06	MotCur (motor current) Relative actual motor current in percent of <i>M1NomCur (99.03)</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.07	MotTorqFilt (filtered motor torque) Relative filtered motor torque in percent of the active motor nominal torque: <ul style="list-style-type: none"> – Filtered by means of a 6th order FIR filter (sliding average filter), filter time is 1 mains voltage period and – <i>TorqActFiltTime (97.20)</i> Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.08	MotTorq (motor torque) Motor torque in percent of the active motor nominal torque: <ul style="list-style-type: none"> – Filtered by means of a 6th order FIR filter (sliding average filter), filter time is 1 mains voltage period. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
1.09	CurRipple (current ripple) Relative current ripple monitor output in percent of <i>M1NomCur (99.03)</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
1.10	CurRippleFilt (filtered current ripple) Relative filtered current ripple monitor output in percent of <i>M1NomCur (99.03)</i> : <ul style="list-style-type: none"> – Filtered with 200 ms Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
1.11	MainsVoltActRel (relative actual mains voltage) Relative actual mains voltage in percent of <i>NomMainsVolt</i> (99.10). Int. Scaling: 100 == 1 % Type: I Volatile: Y	'	'	'	%	C
1.12	MainsVoltAct (actual mains voltage) Actual mains voltage: – Filtered with 10 ms Int. Scaling: 1 == 1 V Type: I Volatile: Y	'	'	'	V	C
1.13	ArmVoltActRel (relative actual armature voltage) Relative actual armature voltage in percent of <i>M1NomVolt</i> (99.02). In 12-pulse serial mode, this signal is related to the double nominal supply voltage [100% = 2 * (99.02)]. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.14	ArmVoltAct (actual armature voltage) Actual armature voltage: – Filtered with 10 ms Int. Scaling: 1 == 1 V Type: SI Volatile: Y	'	'	'	V	C
1.15	ConvCurActRel (relative actual converter current [DC]) Relative actual converter current in percent of <i>ConvNomCur</i> (4.05). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.16	ConvCurAct (actual converter current [DC]) Actual converter current: – Filtered with 10 ms Int. Scaling: 1 == 1 A Type: SI Volatile: Y	'	'	'	A	C
1.17	EMF VoltActRel (relative actual EMF) Relative actual EMF in percent of <i>M1NomVolt</i> (99.02): – <i>EMF VoltActRel</i> (1.17). In 12-pulse serial mode, this signal is related to the double nominal supply voltage [100% = 2 • [99.10)]. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.18	Unused					
1.19	Unused					
1.20	Mot1TempCalc (motor 1 calculated temperature) Motor 1 calculated temperature from motor thermal model. Used for motor overtemperature protection. – <i>M1AlarmLimLoad</i> (31.03) – <i>M1FaultLimLoad</i> (31.04) Int. Scaling: 100 == 1 % Type: I Volatile: Y	'	'	'	%	E
1.21	Mot2TempCalc (motor 2 calculated temperature) Motor 2 calculated temperature from motor thermal model. Used for motor overtemperature protection. – <i>M2AlarmLimLoad</i> (49.33) – <i>M2FaultLimLoad</i> (49.34) Int. Scaling: 100 == 1 % Type: I Volatile: Y	'	'	'	%	E
1.22	Mot1TempMeas (motor 1 measured temperature) Motor 1 measured temperature. Used for motor overtemperature protection: – Unit depends on setting of <i>M1TempSel</i> (31.05): NotUsed - 1 to 6 PT100 °C PTC Ω Scaled A/D - Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: I Volatile: Y	'	'	'	°C/Ω/-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
1.23	Mot2TempMeas (motor 2 measured temperature) Motor 2 measured temperature. Used for motor overtemperature protection: – Unit depends on setting of <i>M2TempSel</i> (49.35): NotUsed - 1 to 6 PT100 °C PTC Ω Scaled A/D - Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: I Volatile: Y	'	'	'	°C/Ω/-	E
1.24	BridgeTemp (actual bridge temperature) (Actual bridge temperature in degree centigrade. Int. Scaling: 1 == 1 °C Type: I Volatile: Y	'	'	'	°C	C
1.25	CtrlMode (control mode) Used control mode: 0 = NotUsed - 1 = SpeedCtrl speed control 2 = TorqCtrl torque control 3 = CurCtrl current control – <i>TorqSel</i> (26.01) Int. Scaling: 1 == 1 Type: C Volatile: Y	'	'	'	'	E
1.26	Unused					
1.27	Unused					
1.28	Unused					
1.29	Mot1FldCurRel (motor 1 relative actual field current) Motor 1 relative field current in percent of <i>M1NomFldCur</i> (99.11). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
1.30	Mot1FldCur (motor 1 actual field current) Motor 1 field current: – Filtered with 500 ms Int. Scaling: 100 == 1 A Type: SI Volatile: Y	'	'	'	A	C
1.31	Mot2FldCurRel (motor 2 relative actual field current) Motor 2 relative field current in percent of <i>M2NomFldCur</i> (49.05). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
1.32	Mot2FldCur (motor 2 actual field current) Motor 2 field current: – Filtered with 500 ms Int. Scaling: 100 == 1 A Type: SI Volatile: Y	'	'	'	A	E
1.33	ArmCurActSI (12-pulse slave actual armature current) Actual armature current of 12-pulse slave: – Valid in 12-pulse master only Int. Scaling: 1 == 1 A Type: SI Volatile: Y	'	'	'	A	E
1.34	ArmCurAllRel (12-pulse parallel master and slave relative actual armature current) Sum of relative actual armature current 12-pulse master and 12-pulse slave in percent of <i>M1NomCur</i> (99.03): – 100% correspond to the motor name plate current – Valid in 12-pulse master only – Valid for 12-pulse parallel only Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
1.35	ArmCurAll (12-pulse parallel master and slave actual armature current) Sum of actual armature current 12-pulse master and 12-pulse slave: – Filtered with 10 ms – Valid in 12-pulse master only – Valid for 12-pulse parallel only Int. Scaling: 1 == 1 A Type: SI Volatile: Y	'	'	'	A	E
1.36	Unused					
1.37	DC VoltSerAll (12-pulse serial master and slave actual DC voltage) Sum of actual armature voltage 12-pulse master and 12-pulse slave: – Valid in 12-pulse master only – Valid for 12-pulse serial/sequential only Int. Scaling: 1 == 1 V Type: SI Volatile: Y	'	'	'	V	E
1.38	MainsFreqAct (actual mains frequency) Actual mains frequency. Int. Scaling: 100 == 1 Hz Type: I Volatile: Y	'	'	'	Hz	C
1.39	AhCounter (ampere-hour counter) Ampere hour counter. 100 == 1kAh Type: I Volatile: Y	'	'	'	kAh	E
1.40	Unused					
1.41	ProcSpeed (process speed) Calculated process/line speed: – Scaled with <i>WinderScale</i> (50.17) Int. Scaling: 10 == 1 m/min Type: SI Volatile: Y	'	'	'	m/min	E
Group 2	Speed controller signals					
2.01	SpeedRef2 (speed reference 2) Speed reference after limiter: – <i>M1SpeedMin</i> (20.01) – <i>M1SpeedMax</i> (20.02) Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
2.02	SpeedRef3 (speed reference 3) Speed reference after speed ramp and jog input. Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
2.03	SpeedErrNeg (Δn) Δn = speed actual - speed reference. Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
2.04	TorqPropRef (proportional part of torque reference) P-part of the speed controller's output in percent of the active motor nominal torque. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
2.05	TorqIntegRef (integral part of torque reference) I-part of the speed controller's output in percent of the active motor nominal torque. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
2.06	TorqDerRef (derivation part of torque reference) D-part of the speed controller's output in percent of the active motor nominal torque. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
2.07	TorqAccCompRef (torque reference for acceleration compensation) Acceleration compensation output in percent of the active motor nominal torque. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.08	TorqRef1 (torque reference 1) Relative torque reference value in percent of the active motor nominal torque after limiter for the external torque reference: – TorqMaxTref (20.09) – TorqMinTref (20.10) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.09	TorqRef2 (torque reference 2) Output value of the speed controller in percent of the active motor nominal torque after limiter: – TorqMaxSPC (20.07) – TorqMinSPC (20.08) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.10	TorqRef3 (torque reference 3) Relative torque reference value in percent of the active motor nominal torque after torque selector: – TorqSel (26.01) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.11	TorqRef4 (torque reference 4) = TorqRef3 (2.10) + LoadComp (26.02) in percent of the active motor nominal torque. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.12	Unused					
2.13	TorqRefUsed (used torque reference) Relative final torque reference value in percent of the active motor nominal torque after torque limiter: – TorqMax (20.05) – TorqMin (20.06) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.14	TorqCorr (torque correction) Relative additional torque reference in percent of the active motor nominal torque: – TorqCorrect (26.15) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.16	dv_dt (dv/dt) Acceleration/deceleration (speed reference change) at the output of the speed reference ramp. Int. Scaling: (2.29)/s Type: SI Volatile: Y	'	'	'	rpm/s	C
2.17	SpeedRefUsed (used speed reference) Used speed reference selected with: – Ref1Mux (11.02) and Ref1Sel (11.03) or – Ref2Mux (11.12) and Ref2Sel (11.06) Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
2.18	SpeedRef4 (speed reference 4) = SpeedRef3 (2.02) + SpeedCorr (23.04). Int. Scaling: (2.29) Type: SI Volatile: Y	'	'	'	rpm	C
2.19	TorqMaxAll (torque maximum all) Relative calculated positive torque limit in percent of the active motor nominal torque. Calculated from maximum torque limit, field weakening and armature current limits: – TorqUsedMax (2.22), – FluxRefFldWeak (3.24) and – M1CurLimBrdg1 (20.12) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
2.20	TorqMinAll (torque minimum all) Relative calculated negative torque limit in percent of the active motor nominal torque. Calculated from minimum torque limit, field weakening and armature current limits: <ul style="list-style-type: none"> - <i>TorqUsedMax</i> (2.22), - <i>FluxRefFldWeak</i> (3.24) and - <i>M1CurLimBrdg2</i> (20.13) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.21	Unused					
2.22	TorqUsedMax (used torque maximum) Relative positive torque limit in percent of the active motor nominal torque. Selected with: <ul style="list-style-type: none"> - <i>TorqUsedMaxSel</i> (20.18) Connected to torque limiter after torque selector [<i>TorqSel</i> (21.01)] and load compensation [<i>LoadComp</i> (26.02)]. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.23	TorqUsedMin (used torque minimum) Relative negative torque limit in percent of the active motor nominal torque. Selected with: <ul style="list-style-type: none"> - <i>TorqUsedMinSel</i> (20.19) Connected to torque limiter after torque selector [<i>TorqSel</i> (21.01)] and load compensation [<i>LoadComp</i> (26.02)]. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.24	TorqRefExt (external torque reference) Relative external torque reference value in percent of the active motor nominal torque after torque reference A selector: <ul style="list-style-type: none"> - <i>TorqRefA</i> (25.01) and - <i>TorqRefA Sel</i> (25.10) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
2.25	Unused					
2.26	TorqLimAct (actual used torque limit) Shows parameter number of the actual active torque limit: <ul style="list-style-type: none"> 0 = 0 no limitation active 1 = 2.19 <i>TorqMaxAll</i> (2.19) is active, includes current limits and field weakening 2 = 2.20 <i>TorqMinAll</i> (2.20) is active, includes current limits and field weakening 3 = 2.22 <i>TorqUsedMax</i> (2.22) selected torque limit is active 4 = 2.23 <i>TorqUsedMin</i> (2.23) selected torque limit is active 5 = 20.07 <i>TorqMaxSPC</i> (20.07) speed controller limit is active 6 = 20.08 <i>TorqMinSPC</i> (20.08) speed controller limit is active 7 = 20.09 <i>TorqMaxTref</i> (20.09) external reference limit is active 8 = 20.10 <i>TorqMinTref</i> (20.10) external reference limit is active 9 = 20.22 <i>TorqGenMax</i> (20.22) regenerating limit is active 10 = 2.08 <i>TorqRef1</i> (2.08) limits <i>TorqRef2</i> (2.09), see also <i>TorqSel</i> (26.01) Int. Scaling: 1 == 1 Type: C Volatile: Y	'	'	'	'	C
2.27	Unused					
2.28	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
2.29	SpeedScaleAct (actual used speed scaling) Currently used speed scaling in rpm for <i>MotSel (8.09)</i> = Motor1 : <ul style="list-style-type: none"> - 20.000 speed units == <i>M1SpeedScale (50.01)</i>, in case <i>M1SpeedScale (50.01)</i> ≥ 10 - 20.000 speed units == maximum absolute value of <i>M1SpeedMin (20.01)</i> and <i>M1SpeedMax (20.02)</i>, in case <i>M1SpeedScale (50.01)</i> < 10 or mathematically: <ul style="list-style-type: none"> - If <i>(50.01)</i> ≥ 10 then 20.000 == <i>(50.01)</i> in rpm - If <i>(50.01)</i> < 10 then 20.000 == Max [<i>(20.01)</i> , <i>(20.02)</i>] in rpm Currently used speed scaling in rpm for <i>MotSel (8.09)</i> = Motor2 : <ul style="list-style-type: none"> - 20.000 speed units == <i>M2SpeedScale (49.22)</i>, in case <i>M2SpeedScale (49.22)</i> ≥ 10 - 20.000 speed units == maximum absolute value of <i>M2SpeedMin (49.19)</i> and <i>M2SpeedMax (49.20)</i>, in case <i>M2SpeedScale (49.22)</i> < 10 or mathematically: <ul style="list-style-type: none"> - If <i>(49.22)</i> ≥ 10 then 20.000 == <i>(49.22)</i> in rpm - If <i>(49.22)</i> < 10 then 20.000 == Max [<i>(49.19)</i> , <i>(49.22)</i>] in rpm Int. Scaling: 1 == 1 rpm Type: SI Volatile: Y	.	.	.	rpm	C
2.30	SpeedRefExt1 (external speed reference 1) External speed reference 1 after reference 1 multiplexer: <ul style="list-style-type: none"> - <i>Ref1Mux (11.024)</i> Int. Scaling: (2.29) Type: SI Volatile: Y	.	.	.	rpm	C
2.31	SpeedRefExt2 (external speed reference 2) External speed reference 2 after reference 2 multiplexer: <ul style="list-style-type: none"> - <i>Ref2Mux (11.12)</i> Int. Scaling: (2.29) Type: SI Volatile: Y	.	.	.	rpm	C
2.32	SpeedRampOut (speed ramp output) Speed reference after ramp Int. Scaling: (2.29) Type: SI Volatile: Y				rpm	C
Group 3	Reference actual values					
3.01	DataLogStatus (status data logger) 0 = Stopped/Trig logger not running or triggered 1 = Active logger is active (running) Int. Scaling: 1 == 1 Type: C Volatile: Y	L
3.02	Unused					
3.03	SquareWave (square wave) Output signal of the square wave generator. Int. Scaling: 1==1 Type: SI Volatile: Y	L
3.04	Unused					
3.05	Unused					
3.06	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
3.07	PosCountLow (position counter low value) Position counter low word: – <i>PosCountInitLo</i> (50.08) – Unit depends on setting of <i>PosCountMode</i> (50.07): PulseEdges 1 == 1 pulse edge Scaled 0 == 0° and 65536 == 360° Int. Scaling: 1 == 1 Type: I Volatile: Y	'	'	'	'	E
3.08	PosCountHigh (position counter high value) Position counter high word: – <i>PosCountInitHi</i> (50.09) – Unit depends on setting of <i>PosCountMode</i> (50.07): PulseEdges 1 == 65536 pulse edges Scaled 1 == 1 revolution Int. Scaling: 1 == 1 Type: I Volatile: Y	'	'	'	'	E
3.09	PID Out (output PID controller) PID controller output. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	'	E
3.10	Unused					
3.11	CurRef (current reference) Relative current reference in percent of <i>M1NomCur</i> (99.03) after scaling with field weakening. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
3.12	CurRefUsed (used current reference) Relative current reference in percent of <i>M1NomCur</i> (99.03) after current limitation: – <i>M1CurLimBrdg1</i> (20.12) – <i>M2CurLimBrdg2</i> (20.13) – <i>MaxCurLimSpeed</i> (43.17 to 43.22) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
3.13	ArmAlpha (armature α, firing angle) Firing angle (α). Int. Scaling: 1 == 1 ° Type: I Volatile: Y	'	'	'	°	C
3.14	Unused					
3.15	ReactCur (reactive current) Relative actual reactive motor current in percent of <i>M1NomCur</i> (99.03). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.16	Unused					
3.17	ArmAlphaSI (12-pulse slave armature α, firing angle) Firing angle (α) of 12-pulse slave converter: – Valid in 12-pulse master only Int. Scaling: 1 == 1 ° Type: I Volatile: Y	'	'	'	°	E
3.18	Unused					
3.19	Unused					
3.20	PLLOut (phase locked loop output) Mains voltage cycle (period time). Is used to check if the synchronization is working properly: – 1/50Hz = 0.2s = 20.000 μ s – 1/60Hz = 0.167s = 16.667 μ s Int. Scaling: 1 == 1 μ s Type: I Volatile: Y	'	'	'	μ s	E
3.21	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
3.22	CurCtrlIntegOut (integral part of current controller output) I-part of the current controller's output in percent of <i>M1NomCur</i> (99.03). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.23	Unused					
3.24	FluxRefFldWeak (flux reference for field weakening) Relative flux reference at speeds above the field weakening point (base speed) in percent of the nominal flux. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.25	VoltRef1 (EMF voltage reference 1) Selected relative EMF voltage reference in percent of <i>M1NomVolt</i> (99.02): – <i>EMF RefSel</i> (46.03) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	C
3.26	VoltRef2 (EMF voltage reference 2) Relative EMF voltage reference in percent of <i>M1NomVolt</i> (99.02) after ramp and limitation (input to EMF controller): – <i>VoltRefSlope</i> (46.06) – <i>VoltPosLim</i> (46.07) – <i>VoltNegLim</i> (46.08) Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.27	FluxRefEMF (flux reference after EMF controller) Relative EMF flux reference in percent of the nominal flux after EMF controller. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.28	FluxRefSum (sum of flux reference) = FluxRefEMF (3.27) + FluxRefFldWeak (3.24) in percent of the nominal flux. Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.29	Unused					
3.30	FldCurRefM1 (motor 1 field current reference) Relative motor 1 field current reference in percent of <i>M1NomFldCur</i> (99.11). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
3.31	FldCurRefM2 (motor 2 field current reference) Relative motor 2 field current reference in percent of <i>M2NomFldCur</i> (49.05). Int. Scaling: 100 == 1 % Type: SI Volatile: Y	'	'	'	%	E
Group 4	Information					
4.01	FirmwareVer (firmware version) Name of the loaded firmware version – 80xyyy 80x stands for DCS800 firmware and yyy is its consecutively numbered version. Int. Scaling: - Type: C Volatile: Y	'	'	'	'	C
4.02	Unused					
4.03	ApplicName (name of application program) Name of the loaded application program. – ???? Int. Scaling: - Type: C Volatile: Y	'	'	'	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
4.04	ConvNomVolt (converter nominal voltage measurement circuit) Adjustment of voltage measuring channels (SDCS-PIN-4 or SDCS-PIN-51). Read from <i>TypeCode</i> (97.01) or set with <i>S ConvScaleVolt</i> (97.03): <ul style="list-style-type: none"> – Read from <i>TypeCode</i> (97.01) if <i>S ConvScaleVolt</i> (97.03) = 0 – Read from <i>S ConvScaleVolt</i> (97.03) if <i>S ConvScaleVolt</i> (97.03) ≠ 0 This signal is set during initialization of the drive. Int. Scaling: 1 == 1 V Type: I Volatile: Y	.	.	.	V	C
4.05	ConvNomCur (converter nominal current measurement circuit) Adjustment of current measuring channels (SDCS-PIN-4 or SDCS-PIN-51). Read from <i>TypeCode</i> (97.01) or set with <i>S ConvScaleCur</i> (97.02): <ul style="list-style-type: none"> – Read from <i>TypeCode</i> (97.01) if <i>S ConvScaleCur</i> (97.02) = 0 – Read from <i>S ConvScaleCur</i> (97.02) if <i>S ConvScaleCur</i> (97.02) ≠ 0 This signal is set during initialization of the drive. Int. Scaling: 1 == 1 A Type: I Volatile: Y	.	.	.	A	C
4.06	Mot1FexType (motor 1 type of field exciter) Motor 1 field exciter type. Read from <i>M1UsedFexType</i> (99.12): <ul style="list-style-type: none"> 0 = NotUsed no or foreign field exciter connected 1 = OnBoard integrated 2-Q field exciter (for sizes D1 - D4 only), default 2 = FEX-425-Int internal 2-Q 25 A field exciter (for size D5 only) 3 = DCF803-0035 external 2-Q 35 A field exciter used for field currents from 0.3 A to 35 A (terminals X100.1 and X100.3) 4 = DCF803-0050 external 2-Q 50 A field exciter 5 = DCF804-0050 external 4-Q 50 A field exciter 6 = DCF803-0060 external 2-Q 60 A field exciter 7 = DCF804-0060 external 4-Q 60 A field exciter 8 = DCS800-S01 external 2-Q 3-phase field exciter 9 = DCS800-S02 external 4-Q 3-phase field exciter 10 = reserved to 19 = reserved 20 = FEX-4-Term5A external 2-Q 35 A field exciter used for field currents from 0.3 A to 5 A (terminals X100.2 and X100.3) 21 = reserved This signal is set during initialization of the drive. Int. Scaling: 1 == 1 Type: C Volatile: Y	C
4.07	Mot2FexType (motor 2 type of field exciter) Motor 2 field exciter type coding. Read from <i>M2UsedFexType</i> (49.07): <ul style="list-style-type: none"> 0 = NotUsed no or foreign field exciter connected 1 = OnBoard integrated 2-Q field exciter (for sizes D1 - D4 only), default 2 = FEX-425-Int internal 2-Q 25 A field exciter (for size D5 only) 3 = DCF803-0035 external 2-Q 35 A field exciter used for field currents from 0.3 A to 35 A (terminals X100.1 and X100.3) 4 = DCF803-0050 external 2-Q 50 A field exciter 5 = DCF804-0050 external 4-Q 50 A field exciter 6 = DCF803-0060 external 2-Q 60 A field exciter 7 = DCF804-0060 external 4-Q 60 A field exciter 8 = DCS800-S01 external 2-Q 3-phase field exciter 9 = DCS800-S02 external 4-Q 3-phase field exciter 10 = reserved to 19 = reserved 20 = FEX-4-Term5A external 2-Q 35 A field exciter used for field currents from 0.3 A to 5 A (terminals X100.2 and X100.3) 21 = reserved This signal is set during initialization of the drive. Int. Scaling: 1 == 1 Type: C Volatile: Y	L

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
4.08	Mot1FexSwVer (motor 1 firmware version of field exciter) Motor 1 field exciter firmware version: – ???? This signal is set during initialization of the drive. Int. Scaling: - Type: C Volatile: Y	'	'	'	'	C
4.09	Mot2FexSwVer (motor 2 firmware version of field exciter) Motor 2 field exciter firmware version: – ???? This signal is set during initialization of the drive. Int. Scaling: - Type: C Volatile: Y	'	'	'	'	E
4.10	Unused					
4.11	Com8SwVersion (firmware version of SDCS-COM-8) SDCS-COM-8 firmware version: – ???? This signal is set during initialization of the drive. Int. Scaling: Type: C Volatile: Y					E
4.12	ApplicVer (application version) Version of the loaded application program. – ???? Int. Scaling: - Type: C Volatile: Y	'	'	'	'	C
4.13	DriveLibVer (drive library version) Version of the loaded function block library – ???? Int. Scaling: - Type: C Volatile: Y	'	'	'	'	C
4.14	ConvType (converter type) Recognized converter type. Read from <i>TypeCode (97.01)</i> : 0 = None when <i>TypeCode (97.01)</i> = None 1 = D1 D1 converter 2 = D2 D2 converter 3 = D3 D3 converter 4 = D4 D4 converter 5 = D5 D5 converter 6 = D6 D6 converter 7 = D7 D7 converter 8 = ManualSet set by user, see <i>S ConvScaleCur (97.02)</i> , <i>S ConvScaleVolt (97.03)</i> , <i>S MaxBrdgTemp (97.04)</i> or <i>S BlockBridge2 (97.07)</i> for e.g. rebuild kits This signal is set during initialization of the drive. Int. Scaling: 1 == 1 Type: C Volatile: Y	'	'	'	'	C
4.15	QuadrantType (quadrant type of converter; 1 or 2 bridges) Recognized converter quadrant type. Read from <i>TypeCode (97.01)</i> or set with <i>S BlockBrdg2 (97.07)</i> : – Read from <i>TypeCode (97.01)</i> if <i>S BlockBrdg2 (97.07)</i> = 0 – Read from <i>S BlockBrdg2 (97.07)</i> if <i>S BlockBrdg2 (97.07)</i> ≠ 0 This signal is set during initialization of the drive. 0 = Auto operation mode is taken from <i>TypeCode (97.01)</i> , default 1 = BlockBridge2 bridge 2 blocked (== 2-Q operation) 2 = RelBridge2 bridge 2 released (== 4-Q operation) Int. Scaling: 1 == 1 Type: C Volatile: Y	'	'	'	'	C
4.16	ConcOvrCur (converter overcurrent [DC] level) Converter current tripping level This signal is set during initialization of the drive. Int. Scaling: 1 == 1 A Type: I Volatile: Y	'	'	'	A	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																																																				
4.17	MaxBridgeTemp (maximum bridge temperature) Maximum bridge temperature in degree centigrade. Read from <i>TypeCode (97.01)</i> or set with <i>S MaxBrdgTemp (97.04)</i> : – Read from <i>TypeCode (97.01)</i> if <i>S MaxBrdgTemp (97.04) = 0</i> – Read from <i>S MaxBrdgTemp (97.04)</i> if <i>S MaxBrdgTemp (97.04) ≠ 0</i> This signal is set during initialization of the drive. Int. Scaling: 1 == 1 °C Type: I Volatile: Y	.	.	.	°C	C																																																																																																																																				
4.18	DCSLinkStat1 (DCSLink status 1 of field exciter nodes) Status of DCSLink for field exciter nodes 1 to 16: <table border="1" data-bbox="323 633 1043 1554"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr><td>B0</td><td>Node1</td><td>1</td><td>DCSLink node1 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node1 not active or faulty</td></tr> <tr><td>B1</td><td>Node2</td><td>1</td><td>DCSLink node2 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node2 not active or faulty</td></tr> <tr><td>B2</td><td>Node3</td><td>1</td><td>DCSLink node3 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node3 not active or faulty</td></tr> <tr><td>B3</td><td>Node4</td><td>1</td><td>DCSLink node4 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node4 not active or faulty</td></tr> <tr><td>B4</td><td>Node5</td><td>1</td><td>DCSLink node5 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node5 not active or faulty</td></tr> <tr><td>B5</td><td>Node6</td><td>1</td><td>DCSLink node6 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node6 not active or faulty</td></tr> <tr><td>B6</td><td>Node7</td><td>1</td><td>DCSLink node7 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node7 not active or faulty</td></tr> <tr><td>B7</td><td>Node8</td><td>1</td><td>DCSLink node8 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node8 not active or faulty</td></tr> <tr><td>B8</td><td>Node9</td><td>1</td><td>DCSLink node9 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node9 not active or faulty</td></tr> <tr><td>B9</td><td>Node10</td><td>1</td><td>DCSLink node10 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node10 not active or faulty</td></tr> <tr><td>B10</td><td>Node11</td><td>1</td><td>DCSLink node11 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node11 not active or faulty</td></tr> <tr><td>B11</td><td>Node12</td><td>1</td><td>DCSLink node12 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node12 not active or faulty</td></tr> <tr><td>B12</td><td>Node13</td><td>1</td><td>DCSLink node13 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node13 not active or faulty</td></tr> <tr><td>B13</td><td>Node14</td><td>1</td><td>DCSLink node14 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node14 not active or faulty</td></tr> <tr><td>B14</td><td>Node15</td><td>1</td><td>DCSLink node15 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node15 not active or faulty</td></tr> <tr><td>B15</td><td>Node16</td><td>1</td><td>DCSLink node16 active and OK</td></tr> <tr><td></td><td></td><td>0</td><td>DCSLink node16 not active or faulty</td></tr> </tbody> </table> Int. Scaling: 1 == 1 Type: C Volatile: Y	Bit	Name	Value	Comment	B0	Node1	1	DCSLink node1 active and OK			0	DCSLink node1 not active or faulty	B1	Node2	1	DCSLink node2 active and OK			0	DCSLink node2 not active or faulty	B2	Node3	1	DCSLink node3 active and OK			0	DCSLink node3 not active or faulty	B3	Node4	1	DCSLink node4 active and OK			0	DCSLink node4 not active or faulty	B4	Node5	1	DCSLink node5 active and OK			0	DCSLink node5 not active or faulty	B5	Node6	1	DCSLink node6 active and OK			0	DCSLink node6 not active or faulty	B6	Node7	1	DCSLink node7 active and OK			0	DCSLink node7 not active or faulty	B7	Node8	1	DCSLink node8 active and OK			0	DCSLink node8 not active or faulty	B8	Node9	1	DCSLink node9 active and OK			0	DCSLink node9 not active or faulty	B9	Node10	1	DCSLink node10 active and OK			0	DCSLink node10 not active or faulty	B10	Node11	1	DCSLink node11 active and OK			0	DCSLink node11 not active or faulty	B11	Node12	1	DCSLink node12 active and OK			0	DCSLink node12 not active or faulty	B12	Node13	1	DCSLink node13 active and OK			0	DCSLink node13 not active or faulty	B13	Node14	1	DCSLink node14 active and OK			0	DCSLink node14 not active or faulty	B14	Node15	1	DCSLink node15 active and OK			0	DCSLink node15 not active or faulty	B15	Node16	1	DCSLink node16 active and OK			0	DCSLink node16 not active or faulty	C
Bit	Name	Value	Comment																																																																																																																																							
B0	Node1	1	DCSLink node1 active and OK																																																																																																																																							
		0	DCSLink node1 not active or faulty																																																																																																																																							
B1	Node2	1	DCSLink node2 active and OK																																																																																																																																							
		0	DCSLink node2 not active or faulty																																																																																																																																							
B2	Node3	1	DCSLink node3 active and OK																																																																																																																																							
		0	DCSLink node3 not active or faulty																																																																																																																																							
B3	Node4	1	DCSLink node4 active and OK																																																																																																																																							
		0	DCSLink node4 not active or faulty																																																																																																																																							
B4	Node5	1	DCSLink node5 active and OK																																																																																																																																							
		0	DCSLink node5 not active or faulty																																																																																																																																							
B5	Node6	1	DCSLink node6 active and OK																																																																																																																																							
		0	DCSLink node6 not active or faulty																																																																																																																																							
B6	Node7	1	DCSLink node7 active and OK																																																																																																																																							
		0	DCSLink node7 not active or faulty																																																																																																																																							
B7	Node8	1	DCSLink node8 active and OK																																																																																																																																							
		0	DCSLink node8 not active or faulty																																																																																																																																							
B8	Node9	1	DCSLink node9 active and OK																																																																																																																																							
		0	DCSLink node9 not active or faulty																																																																																																																																							
B9	Node10	1	DCSLink node10 active and OK																																																																																																																																							
		0	DCSLink node10 not active or faulty																																																																																																																																							
B10	Node11	1	DCSLink node11 active and OK																																																																																																																																							
		0	DCSLink node11 not active or faulty																																																																																																																																							
B11	Node12	1	DCSLink node12 active and OK																																																																																																																																							
		0	DCSLink node12 not active or faulty																																																																																																																																							
B12	Node13	1	DCSLink node13 active and OK																																																																																																																																							
		0	DCSLink node13 not active or faulty																																																																																																																																							
B13	Node14	1	DCSLink node14 active and OK																																																																																																																																							
		0	DCSLink node14 not active or faulty																																																																																																																																							
B14	Node15	1	DCSLink node15 active and OK																																																																																																																																							
		0	DCSLink node15 not active or faulty																																																																																																																																							
B15	Node16	1	DCSLink node16 active and OK																																																																																																																																							
		0	DCSLink node16 not active or faulty																																																																																																																																							

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																																																				
4.19	<p>DCSLinkStat2 (DCSLink status 2 of field exciter nodes) Status of DCSLink for field exciter nodes 17 to 32:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>Node17</td> <td>1</td> <td>DCSLink node17 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node17 not active or faulty</td> </tr> <tr> <td>B1</td> <td>Node18</td> <td>1</td> <td>DCSLink node18 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node18 not active or faulty</td> </tr> <tr> <td>B2</td> <td>Node19</td> <td>1</td> <td>DCSLink node19 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node19 not active or faulty</td> </tr> <tr> <td>B3</td> <td>Node20</td> <td>1</td> <td>DCSLink node20 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node20 not active or faulty</td> </tr> <tr> <td>B4</td> <td>Node21</td> <td>1</td> <td>DCSLink node21 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node21 not active or faulty</td> </tr> <tr> <td>B5</td> <td>Node22</td> <td>1</td> <td>DCSLink node22 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node22 not active or faulty</td> </tr> <tr> <td>B6</td> <td>Node23</td> <td>1</td> <td>DCSLink node23 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node23 not active or faulty</td> </tr> <tr> <td>B7</td> <td>Node24</td> <td>1</td> <td>DCSLink node24 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node24 not active or faulty</td> </tr> <tr> <td>B8</td> <td>Node25</td> <td>1</td> <td>DCSLink node25 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node25 not active or faulty</td> </tr> <tr> <td>B9</td> <td>Node26</td> <td>1</td> <td>DCSLink node26 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node26 not active or faulty</td> </tr> <tr> <td>B10</td> <td>Node27</td> <td>1</td> <td>DCSLink node27 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node27 not active or faulty</td> </tr> <tr> <td>B11</td> <td>Node28</td> <td>1</td> <td>DCSLink node28 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node28 not active or faulty</td> </tr> <tr> <td>B12</td> <td>Node29</td> <td>1</td> <td>DCSLink node29 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node29 not active or faulty</td> </tr> <tr> <td>B13</td> <td>Node30</td> <td>1</td> <td>DCSLink node30 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node30 not active or faulty</td> </tr> <tr> <td>B14</td> <td>Node31</td> <td>1</td> <td>DCSLink node31 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node31 not active or faulty</td> </tr> <tr> <td>B15</td> <td>Node32</td> <td>1</td> <td>DCSLink node32 active and OK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>DCSLink node32 not active or faulty</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	Bit	Name	Value	Comment	B0	Node17	1	DCSLink node17 active and OK			0	DCSLink node17 not active or faulty	B1	Node18	1	DCSLink node18 active and OK			0	DCSLink node18 not active or faulty	B2	Node19	1	DCSLink node19 active and OK			0	DCSLink node19 not active or faulty	B3	Node20	1	DCSLink node20 active and OK			0	DCSLink node20 not active or faulty	B4	Node21	1	DCSLink node21 active and OK			0	DCSLink node21 not active or faulty	B5	Node22	1	DCSLink node22 active and OK			0	DCSLink node22 not active or faulty	B6	Node23	1	DCSLink node23 active and OK			0	DCSLink node23 not active or faulty	B7	Node24	1	DCSLink node24 active and OK			0	DCSLink node24 not active or faulty	B8	Node25	1	DCSLink node25 active and OK			0	DCSLink node25 not active or faulty	B9	Node26	1	DCSLink node26 active and OK			0	DCSLink node26 not active or faulty	B10	Node27	1	DCSLink node27 active and OK			0	DCSLink node27 not active or faulty	B11	Node28	1	DCSLink node28 active and OK			0	DCSLink node28 not active or faulty	B12	Node29	1	DCSLink node29 active and OK			0	DCSLink node29 not active or faulty	B13	Node30	1	DCSLink node30 active and OK			0	DCSLink node30 not active or faulty	B14	Node31	1	DCSLink node31 active and OK			0	DCSLink node31 not active or faulty	B15	Node32	1	DCSLink node32 active and OK			0	DCSLink node32 not active or faulty	-	-	-	-	E
Bit	Name	Value	Comment																																																																																																																																							
B0	Node17	1	DCSLink node17 active and OK																																																																																																																																							
		0	DCSLink node17 not active or faulty																																																																																																																																							
B1	Node18	1	DCSLink node18 active and OK																																																																																																																																							
		0	DCSLink node18 not active or faulty																																																																																																																																							
B2	Node19	1	DCSLink node19 active and OK																																																																																																																																							
		0	DCSLink node19 not active or faulty																																																																																																																																							
B3	Node20	1	DCSLink node20 active and OK																																																																																																																																							
		0	DCSLink node20 not active or faulty																																																																																																																																							
B4	Node21	1	DCSLink node21 active and OK																																																																																																																																							
		0	DCSLink node21 not active or faulty																																																																																																																																							
B5	Node22	1	DCSLink node22 active and OK																																																																																																																																							
		0	DCSLink node22 not active or faulty																																																																																																																																							
B6	Node23	1	DCSLink node23 active and OK																																																																																																																																							
		0	DCSLink node23 not active or faulty																																																																																																																																							
B7	Node24	1	DCSLink node24 active and OK																																																																																																																																							
		0	DCSLink node24 not active or faulty																																																																																																																																							
B8	Node25	1	DCSLink node25 active and OK																																																																																																																																							
		0	DCSLink node25 not active or faulty																																																																																																																																							
B9	Node26	1	DCSLink node26 active and OK																																																																																																																																							
		0	DCSLink node26 not active or faulty																																																																																																																																							
B10	Node27	1	DCSLink node27 active and OK																																																																																																																																							
		0	DCSLink node27 not active or faulty																																																																																																																																							
B11	Node28	1	DCSLink node28 active and OK																																																																																																																																							
		0	DCSLink node28 not active or faulty																																																																																																																																							
B12	Node29	1	DCSLink node29 active and OK																																																																																																																																							
		0	DCSLink node29 not active or faulty																																																																																																																																							
B13	Node30	1	DCSLink node30 active and OK																																																																																																																																							
		0	DCSLink node30 not active or faulty																																																																																																																																							
B14	Node31	1	DCSLink node31 active and OK																																																																																																																																							
		0	DCSLink node31 not active or faulty																																																																																																																																							
B15	Node32	1	DCSLink node32 active and OK																																																																																																																																							
		0	DCSLink node32 not active or faulty																																																																																																																																							

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																			
4.20	<p>Ext IO Status (external IO status) Status of external I/O:</p> <table border="0"> <tr> <td>Bit</td> <td>Value</td> <td>Comment</td> </tr> <tr> <td>B0</td> <td>1</td> <td>RAIO1 detected, see <i>AIO ExtModule (98.06)</i></td> </tr> <tr> <td></td> <td>0</td> <td>RAIO1 not existing or faulty</td> </tr> <tr> <td>B1</td> <td>1</td> <td>RAIO2 detected, see <i>AIO MotTempMeas (98.12)</i></td> </tr> <tr> <td></td> <td>0</td> <td>RAIO2 not existing or faulty</td> </tr> <tr> <td>B2</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B3</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B4</td> <td>1</td> <td>RDIO1 detected, see <i>DIO ExtModule1 (98.03)</i></td> </tr> <tr> <td></td> <td>0</td> <td>RDIO1 not existing or faulty</td> </tr> <tr> <td>B5</td> <td>1</td> <td>RDIO2 detected, see <i>DIO ExtModule2 (98.04)</i></td> </tr> <tr> <td></td> <td>0</td> <td>RDIO2 not existing or faulty</td> </tr> <tr> <td>B6</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B7</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B8</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B9</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B10</td> <td>1</td> <td>SDCS-DSL-4 detected, see group 94</td> </tr> <tr> <td></td> <td>0</td> <td>SDCS-DSL-4 not existing or faulty</td> </tr> <tr> <td>B11</td> <td>1</td> <td>SDCS-IOB-2x detected</td> </tr> <tr> <td></td> <td>0</td> <td>SDCS-IOB-2x not existing or faulty</td> </tr> <tr> <td>B12</td> <td>1</td> <td>SDCS-IOB-3 detected</td> </tr> <tr> <td></td> <td>0</td> <td>SDCS-IOB-3 not existing or faulty</td> </tr> <tr> <td>B13</td> <td>1</td> <td>SDCS-COM-8 detected, see group 70</td> </tr> <tr> <td></td> <td>0</td> <td>SDCS-COM-8 not existing or faulty</td> </tr> <tr> <td>B14</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B15</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> </table> <p>1 == 1 Type: C Volatile: Y</p>	Bit	Value	Comment	B0	1	RAIO1 detected, see <i>AIO ExtModule (98.06)</i>		0	RAIO1 not existing or faulty	B1	1	RAIO2 detected, see <i>AIO MotTempMeas (98.12)</i>		0	RAIO2 not existing or faulty	B2	1	-		0	-	B3	1	-		0	-	B4	1	RDIO1 detected, see <i>DIO ExtModule1 (98.03)</i>		0	RDIO1 not existing or faulty	B5	1	RDIO2 detected, see <i>DIO ExtModule2 (98.04)</i>		0	RDIO2 not existing or faulty	B6	1	-		0	-	B7	1	-		0	-	B8	1	-		0	-	B9	1	-		0	-	B10	1	SDCS-DSL-4 detected, see group 94		0	SDCS-DSL-4 not existing or faulty	B11	1	SDCS-IOB-2x detected		0	SDCS-IOB-2x not existing or faulty	B12	1	SDCS-IOB-3 detected		0	SDCS-IOB-3 not existing or faulty	B13	1	SDCS-COM-8 detected, see group 70		0	SDCS-COM-8 not existing or faulty	B14	1	-		0	-	B15	1	-		0	-	'	'	'	'	E
Bit	Value	Comment																																																																																																							
B0	1	RAIO1 detected, see <i>AIO ExtModule (98.06)</i>																																																																																																							
	0	RAIO1 not existing or faulty																																																																																																							
B1	1	RAIO2 detected, see <i>AIO MotTempMeas (98.12)</i>																																																																																																							
	0	RAIO2 not existing or faulty																																																																																																							
B2	1	-																																																																																																							
	0	-																																																																																																							
B3	1	-																																																																																																							
	0	-																																																																																																							
B4	1	RDIO1 detected, see <i>DIO ExtModule1 (98.03)</i>																																																																																																							
	0	RDIO1 not existing or faulty																																																																																																							
B5	1	RDIO2 detected, see <i>DIO ExtModule2 (98.04)</i>																																																																																																							
	0	RDIO2 not existing or faulty																																																																																																							
B6	1	-																																																																																																							
	0	-																																																																																																							
B7	1	-																																																																																																							
	0	-																																																																																																							
B8	1	-																																																																																																							
	0	-																																																																																																							
B9	1	-																																																																																																							
	0	-																																																																																																							
B10	1	SDCS-DSL-4 detected, see group 94																																																																																																							
	0	SDCS-DSL-4 not existing or faulty																																																																																																							
B11	1	SDCS-IOB-2x detected																																																																																																							
	0	SDCS-IOB-2x not existing or faulty																																																																																																							
B12	1	SDCS-IOB-3 detected																																																																																																							
	0	SDCS-IOB-3 not existing or faulty																																																																																																							
B13	1	SDCS-COM-8 detected, see group 70																																																																																																							
	0	SDCS-COM-8 not existing or faulty																																																																																																							
B14	1	-																																																																																																							
	0	-																																																																																																							
B15	1	-																																																																																																							
	0	-																																																																																																							
4.21	<p>CPU Load (load of processor) The calculating power of the processor is divided into two parts: – <i>CPU Load (4.21)</i> shows the load of firmware and – <i>AppLoad (4.22)</i> shows the load of application. Neither should reach 100%. Int. Scaling: 10 == 1 % Type: I Volatile: Y</p>	'	'	'	%	C																																																																																																			
4.22	<p>AppLoad (load of application) The calculating power of the processor is divided into two parts: – <i>CPU Load (4.21)</i> shows the load of firmware and – <i>AppLoad (4.22)</i> shows the load of application. Neither should reach 100%. Int. Scaling: 10 == 1 % Type: I Volatile: Y</p>	'	'	'	%	C																																																																																																			
4.23	<p>MotNomTorque (motor nominal torque) Calculated nominal motor torque. Int. Scaling: 1 == 1Nm Type: I Volatile: Y</p>	'	'	'	Nm	C																																																																																																			
4.24	<p>ProgressSignal (progress signal for auto tunings) Progress signal for auto tunings used for Startup Assistants. Int. Scaling: 1 == 1 % Type: I Volatile: Y</p>	'	'	'	%	E																																																																																																			

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 5	Analog I/O					
	5.01	AI Tacho Val (analog input for tacho) Measured actual voltage at analog tacho input. The integer scaling may differ, depending on the connected hardware and jumper setting. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V
5.02	Unused					
5.03	AI1 Val (analog input 1 value) Measured actual voltage at analog input 1. The integer scaling may differ, depending on the connected hardware and jumper settings. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	C
5.04	AI2 Val (analog input 2 value) Measured actual voltage at analog input 2. The integer scaling may differ, depending on the connected hardware and jumper settings. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	C
5.05	AI3 Val (analog input 3 value) Measured actual voltage at analog input 3. The integer scaling may differ, depending on the connected hardware and jumper settings. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	E
5.06	AI4 Val (analog input 4 value) Measured actual voltage at analog input 4. The integer scaling may differ, depending on the connected hardware and jumper settings. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	E
5.07	AI5 Val (analog input 5 value) Measured actual voltage at analog input 5. The integer scaling may differ, depending on the connected hardware and DIP-switch settings. Available only with RAIO extension module see <i>AIO ExtModule (98.06)</i> . Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	E
5.08	AI6 Val (analog input 6 value) Measured actual voltage at analog input 6. The integer scaling may differ, depending on the connected hardware and DIP-switch settings. Available only with RAIO extension module see <i>AIO ExtModule (98.06)</i> . Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	E
5.09	Unused					
5.10	Unused					
5.11	AO1 Val (analog output 1 value) Measured actual voltage at analog output 1. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	C
5.12	AO2 Val (analog output 2 value) Measured actual voltage at analog output 2. Int. Scaling: 100 == 1 V Type: SI Volatile: Y	'	'	'	V	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																			
Group 6	Drive logic signals																																																																																																								
6.01	SystemTime (converter system time) Shows the time of the converter in minutes. Int. Scaling: 1 == 1 min Type: I Volatile: Y	0	64000	0	min	C																																																																																																			
6.02	Unused																																																																																																								
6.03	CurCtrlStat1 (1st current controller status) 1 st current controller status word: <table border="0" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Bit</th> <th style="text-align: left;">Value</th> <th style="text-align: left;">Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>1</td> <td>command FansOn</td> </tr> <tr> <td></td> <td>0</td> <td>command FansOff</td> </tr> <tr> <td>B1</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B2</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B3</td> <td>1</td> <td>motor heating function active</td> </tr> <tr> <td></td> <td>0</td> <td>motor heating function not active</td> </tr> <tr> <td>B4</td> <td>1</td> <td>field direction reverse</td> </tr> <tr> <td></td> <td>0</td> <td>field direction forward</td> </tr> <tr> <td>B5</td> <td>1</td> <td>command FieldOn</td> </tr> <tr> <td></td> <td>0</td> <td>command FieldOff</td> </tr> <tr> <td>B6</td> <td>1</td> <td>dynamic braking active</td> </tr> <tr> <td></td> <td>0</td> <td>dynamic braking not active</td> </tr> <tr> <td>B7</td> <td>1</td> <td>command MainContactorOn</td> </tr> <tr> <td></td> <td>0</td> <td>command MainContactorOff</td> </tr> <tr> <td>B8</td> <td>1</td> <td>command DynamicBrakingOn (this signal works like the MainContactorOn command as long as no dynamic braking is requested)</td> </tr> <tr> <td></td> <td>0</td> <td>command DynamicBrakingOff (this signal works like the MainContactorOff command as long as no dynamic braking is requested)</td> </tr> <tr> <td>B9</td> <td>1</td> <td>drive is generating</td> </tr> <tr> <td></td> <td>0</td> <td>drive is motoring</td> </tr> <tr> <td>B10</td> <td>1</td> <td>bridge 2 released (⇒ 4-Q)</td> </tr> <tr> <td></td> <td>0</td> <td>bridge 1 released (⇒ 2-Q)</td> </tr> <tr> <td>B11</td> <td>1</td> <td>firing pulses active (on)</td> </tr> <tr> <td></td> <td>0</td> <td>firing pulses blocked</td> </tr> <tr> <td>B12</td> <td>1</td> <td>continuous current</td> </tr> <tr> <td></td> <td>0</td> <td>discontinuous current</td> </tr> <tr> <td>B13</td> <td>1</td> <td>zero current detected</td> </tr> <tr> <td></td> <td>0</td> <td>current nonzero</td> </tr> <tr> <td>B14</td> <td>1</td> <td>command trip DC-breaker (continuous signal)</td> </tr> <tr> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B15</td> <td>1</td> <td>command trip DC-breaker (1 s pulse)</td> </tr> <tr> <td></td> <td>0</td> <td>no action</td> </tr> </tbody> </table> Int. Scaling: 1 == 1 Type: I Volatile: Y	Bit	Value	Comment	B0	1	command FansOn		0	command FansOff	B1	1	-		0	-	B2	1	-		0	-	B3	1	motor heating function active		0	motor heating function not active	B4	1	field direction reverse		0	field direction forward	B5	1	command FieldOn		0	command FieldOff	B6	1	dynamic braking active		0	dynamic braking not active	B7	1	command MainContactorOn		0	command MainContactorOff	B8	1	command DynamicBrakingOn (this signal works like the MainContactorOn command as long as no dynamic braking is requested)		0	command DynamicBrakingOff (this signal works like the MainContactorOff command as long as no dynamic braking is requested)	B9	1	drive is generating		0	drive is motoring	B10	1	bridge 2 released (⇒ 4-Q)		0	bridge 1 released (⇒ 2-Q)	B11	1	firing pulses active (on)		0	firing pulses blocked	B12	1	continuous current		0	discontinuous current	B13	1	zero current detected		0	current nonzero	B14	1	command trip DC-breaker (continuous signal)		0	no action	B15	1	command trip DC-breaker (1 s pulse)		0	no action	C
Bit	Value	Comment																																																																																																							
B0	1	command FansOn																																																																																																							
	0	command FansOff																																																																																																							
B1	1	-																																																																																																							
	0	-																																																																																																							
B2	1	-																																																																																																							
	0	-																																																																																																							
B3	1	motor heating function active																																																																																																							
	0	motor heating function not active																																																																																																							
B4	1	field direction reverse																																																																																																							
	0	field direction forward																																																																																																							
B5	1	command FieldOn																																																																																																							
	0	command FieldOff																																																																																																							
B6	1	dynamic braking active																																																																																																							
	0	dynamic braking not active																																																																																																							
B7	1	command MainContactorOn																																																																																																							
	0	command MainContactorOff																																																																																																							
B8	1	command DynamicBrakingOn (this signal works like the MainContactorOn command as long as no dynamic braking is requested)																																																																																																							
	0	command DynamicBrakingOff (this signal works like the MainContactorOff command as long as no dynamic braking is requested)																																																																																																							
B9	1	drive is generating																																																																																																							
	0	drive is motoring																																																																																																							
B10	1	bridge 2 released (⇒ 4-Q)																																																																																																							
	0	bridge 1 released (⇒ 2-Q)																																																																																																							
B11	1	firing pulses active (on)																																																																																																							
	0	firing pulses blocked																																																																																																							
B12	1	continuous current																																																																																																							
	0	discontinuous current																																																																																																							
B13	1	zero current detected																																																																																																							
	0	current nonzero																																																																																																							
B14	1	command trip DC-breaker (continuous signal)																																																																																																							
	0	no action																																																																																																							
B15	1	command trip DC-breaker (1 s pulse)																																																																																																							
	0	no action																																																																																																							

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																			
6.04 check with R&D	<p>CurCtrlStat2 (2nd current controller status) 2nd current controller status word. The current controller will be blocked, if any for the bits is set (0 == OK):</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Value</th> <th>Meaning</th> </tr> </thead> <tbody> <tr> <td rowspan="2">B0</td> <td>1</td> <td>overcurrent</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B1</td> <td>1</td> <td>mains overvoltage</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B2</td> <td>1</td> <td>mains undervoltage</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B3</td> <td>1</td> <td>waiting for reduction of EMF to match the mains voltage [see <i>RevVoltMargin</i> (44.21)]</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B4</td> <td>1</td> <td>F533 ReversalTime [<i>FaultWord3</i> (9.03) bit 0] or F534 12PCurDiff [<i>FaultWord3</i> (9.03) bit 1]</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B5</td> <td>1</td> <td>OperModeSel (43.01) = 12P xxxx: partner blocked) OperModeSel (43.01) = FieldExciter: Overvoltage protection active (freewheeling)</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B6</td> <td>1</td> <td>motor 1 field exciter selftest faulty, F529 M1FexNotOK [<i>FaultWord2</i> (9.02) bit 12]</td> </tr> <tr> <td>0</td> <td>motor 1 field exciter selftest OK</td> </tr> <tr> <td rowspan="2">B7</td> <td>1</td> <td>motor 1 field exciter not ready, F537 M1FexRdyLost [<i>FaultWord3</i> (9.03) bit 4]</td> </tr> <tr> <td>0</td> <td>motor 1 field exciter ready</td> </tr> <tr> <td rowspan="2">B8</td> <td>1</td> <td>motor 2 field exciter selftest faulty, F530 M2FexNotOK [<i>FaultWord2</i> (9.02) bit 13]</td> </tr> <tr> <td>0</td> <td>motor 2 field exciter selftest OK</td> </tr> <tr> <td rowspan="2">B9</td> <td>1</td> <td>motor 2 field exciter not ready, F538 M2FexRdyLost [<i>FaultWord3</i> (9.03) bit 5]</td> </tr> <tr> <td>0</td> <td>motor 2 field exciter ready</td> </tr> <tr> <td rowspan="2">B10</td> <td>1</td> <td>waiting for zero current (value can only change to 1 after reversal delay is elapsed)</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B11</td> <td>1</td> <td>-</td> </tr> <tr> <td>0</td> <td>-</td> </tr> <tr> <td rowspan="2">B12</td> <td>1</td> <td>-</td> </tr> <tr> <td>0</td> <td>-</td> </tr> <tr> <td rowspan="2">B13</td> <td>1</td> <td>-</td> </tr> <tr> <td>0</td> <td>-</td> </tr> <tr> <td rowspan="2">B14</td> <td>1</td> <td>firing pulse section not in synchronism</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> <tr> <td rowspan="2">B15</td> <td>1</td> <td>current controller not released</td> </tr> <tr> <td>0</td> <td>no action</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Value	Meaning	B0	1	overcurrent	0	no action	B1	1	mains overvoltage	0	no action	B2	1	mains undervoltage	0	no action	B3	1	waiting for reduction of EMF to match the mains voltage [see <i>RevVoltMargin</i> (44.21)]	0	no action	B4	1	F533 ReversalTime [<i>FaultWord3</i> (9.03) bit 0] or F534 12PCurDiff [<i>FaultWord3</i> (9.03) bit 1]	0	no action	B5	1	OperModeSel (43.01) = 12P xxxx : partner blocked) OperModeSel (43.01) = FieldExciter : Overvoltage protection active (freewheeling)	0	no action	B6	1	motor 1 field exciter selftest faulty, F529 M1FexNotOK [<i>FaultWord2</i> (9.02) bit 12]	0	motor 1 field exciter selftest OK	B7	1	motor 1 field exciter not ready, F537 M1FexRdyLost [<i>FaultWord3</i> (9.03) bit 4]	0	motor 1 field exciter ready	B8	1	motor 2 field exciter selftest faulty, F530 M2FexNotOK [<i>FaultWord2</i> (9.02) bit 13]	0	motor 2 field exciter selftest OK	B9	1	motor 2 field exciter not ready, F538 M2FexRdyLost [<i>FaultWord3</i> (9.03) bit 5]	0	motor 2 field exciter ready	B10	1	waiting for zero current (value can only change to 1 after reversal delay is elapsed)	0	no action	B11	1	-	0	-	B12	1	-	0	-	B13	1	-	0	-	B14	1	firing pulse section not in synchronism	0	no action	B15	1	current controller not released	0	no action	'	'	'	'	C
Bit	Value	Meaning																																																																																							
B0	1	overcurrent																																																																																							
	0	no action																																																																																							
B1	1	mains overvoltage																																																																																							
	0	no action																																																																																							
B2	1	mains undervoltage																																																																																							
	0	no action																																																																																							
B3	1	waiting for reduction of EMF to match the mains voltage [see <i>RevVoltMargin</i> (44.21)]																																																																																							
	0	no action																																																																																							
B4	1	F533 ReversalTime [<i>FaultWord3</i> (9.03) bit 0] or F534 12PCurDiff [<i>FaultWord3</i> (9.03) bit 1]																																																																																							
	0	no action																																																																																							
B5	1	OperModeSel (43.01) = 12P xxxx : partner blocked) OperModeSel (43.01) = FieldExciter : Overvoltage protection active (freewheeling)																																																																																							
	0	no action																																																																																							
B6	1	motor 1 field exciter selftest faulty, F529 M1FexNotOK [<i>FaultWord2</i> (9.02) bit 12]																																																																																							
	0	motor 1 field exciter selftest OK																																																																																							
B7	1	motor 1 field exciter not ready, F537 M1FexRdyLost [<i>FaultWord3</i> (9.03) bit 4]																																																																																							
	0	motor 1 field exciter ready																																																																																							
B8	1	motor 2 field exciter selftest faulty, F530 M2FexNotOK [<i>FaultWord2</i> (9.02) bit 13]																																																																																							
	0	motor 2 field exciter selftest OK																																																																																							
B9	1	motor 2 field exciter not ready, F538 M2FexRdyLost [<i>FaultWord3</i> (9.03) bit 5]																																																																																							
	0	motor 2 field exciter ready																																																																																							
B10	1	waiting for zero current (value can only change to 1 after reversal delay is elapsed)																																																																																							
	0	no action																																																																																							
B11	1	-																																																																																							
	0	-																																																																																							
B12	1	-																																																																																							
	0	-																																																																																							
B13	1	-																																																																																							
	0	-																																																																																							
B14	1	firing pulse section not in synchronism																																																																																							
	0	no action																																																																																							
B15	1	current controller not released																																																																																							
	0	no action																																																																																							
6.05	<p>SelBridge (selected bridge) Selected (current-conducting) bridge: 0 = NoBridge no bridge selected 1 = Bridge1 bridge 1 sel. (motoring bridge) 2 = Bridge2 bridge 2 sel. (generating bridge)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	'	'	'	'	LJ																																																																																			

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
6.06	FldCtrlAlarm (3-phase field controller alarm) 3-phase field controller alarm word. This packed binary signal includes alarm signals used in field exciter mode for load monitoring: – OperModeSel (43.01) = FieldExciter Bit Value Comment B0 1 DC voltage is over alarm limit of <i>OvrVoltAlarmLim</i> (46.11) 0 no action B1 1 DC current is under alarm limit of <i>MinCurAlarmLim</i> (46.13) 0 no action Int. Scaling: 1 == 1 Type: I Volatile: Y	E
6.07	Unused					
6.08	Unused					
6.09	CtrlStatMas (12-pulse master control status) 12-pulse master control status: Bit Value Comment B0 1 <i>CurCtrlStat2</i> (6.04) > 0 (current controller is blocked) 0 no action B1 1 <i>CurRefUsed</i> (3.12) negative 0 <i>CurRefUsed</i> (3.12) positive B2 1 bridge change over active 0 no action B3 1 command Reset to 12-pulse slave 0 no action B4 1 command On to 12-pulse slave 0 no action B5 1 command Run to 12-pulse slave 0 no action B6 1 command Off2N to 12-pulse slave (low active) 0 no action B7 1 dynamic braking 0 no action B8 1 zero current detected + <i>RevDly</i> (43.14) is elapsed 0 no action B9 1 command field exciter On 0 command field exciter Off – The control bits B3 to B6 (Reset , On , Run and Off2N) are only valid in the 12-pulse slave, if in the 12-pulse slave <i>CommandSel</i> (10.01) = 12P Link – Valid in 12-pulse master and slave Int. Scaling: 1 == 1 Type: I Volatile: Y	L

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																			
6.10	<p>CtrlStatSla (12-pulse slave control status) 12-pulse slave control status:</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>1</td> <td><i>CurCtrlStat2 (6.04)</i> > 0 (current controller is blocked)</td> </tr> <tr> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B1</td> <td>1</td> <td><i>CurRefUsed (3,12)</i> negative</td> </tr> <tr> <td></td> <td>0</td> <td><i>CurRefUsed (3,12)</i> positive</td> </tr> <tr> <td>B2</td> <td>1</td> <td>bridge change over active</td> </tr> <tr> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B3</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B4</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B5</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B6</td> <td>1</td> <td>-</td> </tr> <tr> <td></td> <td>0</td> <td>-</td> </tr> <tr> <td>B7</td> <td>1</td> <td>slave is Tripped</td> </tr> <tr> <td></td> <td>0</td> <td>no action</td> </tr> </tbody> </table> <p>- Valid in 12-pulse master and slave Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Value	Comment	B0	1	<i>CurCtrlStat2 (6.04)</i> > 0 (current controller is blocked)		0	no action	B1	1	<i>CurRefUsed (3,12)</i> negative		0	<i>CurRefUsed (3,12)</i> positive	B2	1	bridge change over active		0	no action	B3	1	-		0	-	B4	1	-		0	-	B5	1	-		0	-	B6	1	-		0	-	B7	1	slave is Tripped		0	no action	'	'	'	'	E
Bit	Value	Comment																																																							
B0	1	<i>CurCtrlStat2 (6.04)</i> > 0 (current controller is blocked)																																																							
	0	no action																																																							
B1	1	<i>CurRefUsed (3,12)</i> negative																																																							
	0	<i>CurRefUsed (3,12)</i> positive																																																							
B2	1	bridge change over active																																																							
	0	no action																																																							
B3	1	-																																																							
	0	-																																																							
B4	1	-																																																							
	0	-																																																							
B5	1	-																																																							
	0	-																																																							
B6	1	-																																																							
	0	-																																																							
B7	1	slave is Tripped																																																							
	0	no action																																																							
6.11	Unused																																																								
6.12	<p>Mot1FexStatus (motor 1 field exciter status) Motor 1 field exciter status:</p> <table border="0"> <tbody> <tr> <td>0 = NotUsed</td> <td>no field exciter connected</td> </tr> <tr> <td>1 = OK</td> <td>field exciter and communication OK</td> </tr> <tr> <td>2 = ComFault</td> <td>F516 M1FexCom [<i>FaultWord1 (9.01)</i> bit 15], communication faulty</td> </tr> <tr> <td>3 = FexFaulty</td> <td>F529 M1FexNotOK [<i>FaultWord2 (9.02)</i> bit 12], field exciter selftest faulty</td> </tr> <tr> <td>4 = FexNotReady</td> <td>F537 M1FexRdyLost [<i>FaultWord3 (9.03)</i> bit 4], field exciter not ready</td> </tr> <tr> <td>5 = FexUnderCur</td> <td>F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8], field exciter undercurrent</td> </tr> <tr> <td>6 = FexOverCur</td> <td>F515 M1FexOverCur [<i>FaultWord1 (9.01)</i> bit 14], field exciter overcurrent</td> </tr> <tr> <td>7 = WrongSetting</td> <td>check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	0 = NotUsed	no field exciter connected	1 = OK	field exciter and communication OK	2 = ComFault	F516 M1FexCom [<i>FaultWord1 (9.01)</i> bit 15], communication faulty	3 = FexFaulty	F529 M1FexNotOK [<i>FaultWord2 (9.02)</i> bit 12], field exciter selftest faulty	4 = FexNotReady	F537 M1FexRdyLost [<i>FaultWord3 (9.03)</i> bit 4], field exciter not ready	5 = FexUnderCur	F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8], field exciter undercurrent	6 = FexOverCur	F515 M1FexOverCur [<i>FaultWord1 (9.01)</i> bit 14], field exciter overcurrent	7 = WrongSetting	check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i>	'	'	'	'	C																																			
0 = NotUsed	no field exciter connected																																																								
1 = OK	field exciter and communication OK																																																								
2 = ComFault	F516 M1FexCom [<i>FaultWord1 (9.01)</i> bit 15], communication faulty																																																								
3 = FexFaulty	F529 M1FexNotOK [<i>FaultWord2 (9.02)</i> bit 12], field exciter selftest faulty																																																								
4 = FexNotReady	F537 M1FexRdyLost [<i>FaultWord3 (9.03)</i> bit 4], field exciter not ready																																																								
5 = FexUnderCur	F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8], field exciter undercurrent																																																								
6 = FexOverCur	F515 M1FexOverCur [<i>FaultWord1 (9.01)</i> bit 14], field exciter overcurrent																																																								
7 = WrongSetting	check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i>																																																								
6.13	<p>Mot2FexStatus (motor 2 field exciter status) Motor 1 field exciter status:</p> <table border="0"> <tbody> <tr> <td>0 = NotUsed</td> <td>no field exciter connected</td> </tr> <tr> <td>1 = OK</td> <td>field exciter and communication OK</td> </tr> <tr> <td>2 = ComFault</td> <td>F519 M2FexCom [<i>FaultWord2 (9.02)</i> bit 2], communication faulty</td> </tr> <tr> <td>3 = FexFaulty</td> <td>F530 M2FexNotOK [<i>FaultWord2 (9.02)</i> bit 13], field exciter selftest faulty</td> </tr> <tr> <td>4 = FexNotReady</td> <td>F538 M2FexRdyLost [<i>FaultWord3 (9.03)</i> bit 5], field exciter not ready</td> </tr> <tr> <td>5 = FexUnderCur</td> <td>F542 M2FexLowCur [<i>FaultWord3 (9.03)</i> bit 9], field exciter undercurrent</td> </tr> <tr> <td>6 = FexOverCur</td> <td>F518 M2FexOverCur [<i>FaultWord2 (9.02)</i> bit 1], field exciter overcurrent</td> </tr> <tr> <td>7 = WrongSetting</td> <td>check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	0 = NotUsed	no field exciter connected	1 = OK	field exciter and communication OK	2 = ComFault	F519 M2FexCom [<i>FaultWord2 (9.02)</i> bit 2], communication faulty	3 = FexFaulty	F530 M2FexNotOK [<i>FaultWord2 (9.02)</i> bit 13], field exciter selftest faulty	4 = FexNotReady	F538 M2FexRdyLost [<i>FaultWord3 (9.03)</i> bit 5], field exciter not ready	5 = FexUnderCur	F542 M2FexLowCur [<i>FaultWord3 (9.03)</i> bit 9], field exciter undercurrent	6 = FexOverCur	F518 M2FexOverCur [<i>FaultWord2 (9.02)</i> bit 1], field exciter overcurrent	7 = WrongSetting	check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i>	'	'	'	'	U																																			
0 = NotUsed	no field exciter connected																																																								
1 = OK	field exciter and communication OK																																																								
2 = ComFault	F519 M2FexCom [<i>FaultWord2 (9.02)</i> bit 2], communication faulty																																																								
3 = FexFaulty	F530 M2FexNotOK [<i>FaultWord2 (9.02)</i> bit 13], field exciter selftest faulty																																																								
4 = FexNotReady	F538 M2FexRdyLost [<i>FaultWord3 (9.03)</i> bit 5], field exciter not ready																																																								
5 = FexUnderCur	F542 M2FexLowCur [<i>FaultWord3 (9.03)</i> bit 9], field exciter undercurrent																																																								
6 = FexOverCur	F518 M2FexOverCur [<i>FaultWord2 (9.02)</i> bit 1], field exciter overcurrent																																																								
7 = WrongSetting	check setting of <i>M1UsedFexType (99.12)</i> and <i>M2UsedFexType (49.07)</i>																																																								
Group 7	Control words																																																								
7.01	<p>MainCtrlWord (main control word, MCW) Main control word:</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>On (Off1N)</td> <td>1</td> <td>Command to RdyRun state.</td> </tr> </tbody> </table>	Bit	Name	Value	Comment	B0	On (Off1N)	1	Command to RdyRun state.	'	'	'	'	C																																											
Bit	Name	Value	Comment																																																						
B0	On (Off1N)	1	Command to RdyRun state.																																																						

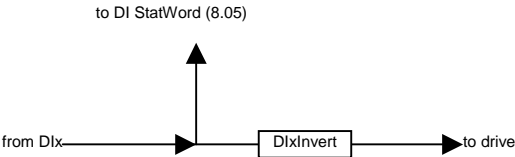
Index	Signal / Parameter name				min.	max.	def.	unit	E/C
7.02	AuxCtrlWord (auxiliary control word 1, ACW1)				C
	Auxiliary control word 1:								
	Bit	Name	Value	Comment					
	B0	RestartDataLog	1	restart data logger					
			0	no action					
	B1	TrigDataLog	1	trigger data logger					
			0	no action					
	B2	RampBypass	1	bypass speed ramp (speed ramp output is forced to value of speed ramp input)					
			0	no action					
	B3	BalRampOut	1	speed ramp output is forced to BalRampRef (22.08)					
			0	no action					
	B4	LimSpeedRef4	1	SpeedRef4 (2.18) is not limited					
			0	SpeedRef4 (2.18) is limited by M1SpeedMax (20.02) / M1SpeedMin (20.01) respectively by M2SpeedMax (49.19) / M2SpeedMin (49.20)					
	B5	reserved	1						
			0						
	B6	HoldSpeedCtrl	1	freeze (hold) the I-part of the speed controller					
			0	no action					
	B7	WindowCtrl	1	release window control					
			0	block window control					
	B8	BalSpeedCtrl	1	speed controller output is forced to BalRef (24.11)					
			0	no action					
	B9	SyncCommand	1	positioning: synchronizing command from SyncCommand (10.04)					
			0	no action					
	B10	SyncDisable	1	positioning: block synchronizing command					
			0	no action					
	B11	ResetSyncRdy	1	positioning: reset SyncRdy [AuxStatWord (8.02) bit 5]					
			0	no action					
	B12	aux. control	d	used by, adaptive program, application program or overriding control to control various functions selected by parameters					
	B13	aux. control	d	used by, adaptive program, application program or overriding control to control various functions selected by parameters					
	B14	aux. control	d	used by, adaptive program, application program or overriding control to control various functions selected by parameters					
	B15	aux. control	d	used by, adaptive program, application program or overriding control to control various functions selected by parameters					
	Int. Scaling: 1 == 1		Type: I	Volatile: Y					

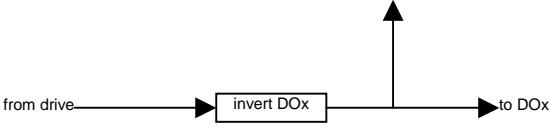
Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																				
7.03	<p>AuxCtrlWord2 (auxiliary control word 2, ACW2) Auxiliary control word 1:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B1</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B2</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B3</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B4</td> <td>DisableBridge1</td> <td>1 0</td> <td>bridge 1 blocked bridge 1 released</td> </tr> <tr> <td>B5</td> <td>DisableBridge2</td> <td>1 0</td> <td>bridge 2 blocked bridge 2 released</td> </tr> <tr> <td>B6</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B7</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B8</td> <td>DriveDirection</td> <td>1 0</td> <td>drive direction reverse (see note 1) drive direction forward (see note 1)</td> </tr> <tr> <td>B9</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B10</td> <td>DirectSpeedRef</td> <td>1 0</td> <td>speed ramp output is overwritten and forced to <i>DirectSpeedRef (23.15)</i> speed ramp is active</td> </tr> <tr> <td>B11</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B12</td> <td>ForceBrake</td> <td>1 0</td> <td>apply the brake brake not applied (see note 2)</td> </tr> <tr> <td>B13</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B14</td> <td>reserved</td> <td>1 0</td> <td></td> </tr> <tr> <td>B15</td> <td>ResetPIDCtrl</td> <td>1 0</td> <td>reset and force PID-controller release PID controller</td> </tr> </tbody> </table> <p>Note1: Changes of DriveDirection become active only in drive state RdyRun. Changing the speed direction of a running drive (RdyRef state) by means of DriveDirection is not possible.</p> <p>Note2: In case ForceBrake = 0, the brake is controlled by the internal brake logic in group 42 (Brake control).</p> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Value	Comment	B0	reserved	1 0		B1	reserved	1 0		B2	reserved	1 0		B3	reserved	1 0		B4	DisableBridge1	1 0	bridge 1 blocked bridge 1 released	B5	DisableBridge2	1 0	bridge 2 blocked bridge 2 released	B6	reserved	1 0		B7	reserved	1 0		B8	DriveDirection	1 0	drive direction reverse (see note 1) drive direction forward (see note 1)	B9	reserved	1 0		B10	DirectSpeedRef	1 0	speed ramp output is overwritten and forced to <i>DirectSpeedRef (23.15)</i> speed ramp is active	B11	reserved	1 0		B12	ForceBrake	1 0	apply the brake brake not applied (see note 2)	B13	reserved	1 0		B14	reserved	1 0		B15	ResetPIDCtrl	1 0	reset and force PID-controller release PID controller	C
Bit	Name	Value	Comment																																																																							
B0	reserved	1 0																																																																								
B1	reserved	1 0																																																																								
B2	reserved	1 0																																																																								
B3	reserved	1 0																																																																								
B4	DisableBridge1	1 0	bridge 1 blocked bridge 1 released																																																																							
B5	DisableBridge2	1 0	bridge 2 blocked bridge 2 released																																																																							
B6	reserved	1 0																																																																								
B7	reserved	1 0																																																																								
B8	DriveDirection	1 0	drive direction reverse (see note 1) drive direction forward (see note 1)																																																																							
B9	reserved	1 0																																																																								
B10	DirectSpeedRef	1 0	speed ramp output is overwritten and forced to <i>DirectSpeedRef (23.15)</i> speed ramp is active																																																																							
B11	reserved	1 0																																																																								
B12	ForceBrake	1 0	apply the brake brake not applied (see note 2)																																																																							
B13	reserved	1 0																																																																								
B14	reserved	1 0																																																																								
B15	ResetPIDCtrl	1 0	reset and force PID-controller release PID controller																																																																							
7.04	<p>UsedMCW (used main control word, UMCW) Internal used (selected) main control word. The selection is depending on the drives local/remote control and <i>CommandSel (10.01)</i>. The bit functionality is the same as the in the MainCtrlWord (7.01). Not all functions are available in local control or local I/O mode.</p> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	C																																																																				

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																
7.05	<p>DO CtrlWord (digital output control word, DOCW) The DO control word is used by adaptive program, application program or overriding control. B0 to B7 for DO1 to DO8 have to be manually selected by parameters in group 14 (Digital outputs). B8 to B11 are directly written to DO9 to DO12.</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>DO1</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B1</td> <td>DO2</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B2</td> <td>DO3</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B3</td> <td>DO4</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B4</td> <td>DO5</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B5</td> <td>DO6</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B6</td> <td>DO7</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B7</td> <td>DO8</td> <td>this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)</td> </tr> <tr> <td>B8</td> <td>DO9</td> <td>this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i></td> </tr> <tr> <td>B9</td> <td>DO10</td> <td>this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i></td> </tr> <tr> <td>B10</td> <td>DO11</td> <td>this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i></td> </tr> <tr> <td>B11</td> <td>DO12</td> <td>this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i></td> </tr> <tr> <td>B12</td> <td>reserved</td> <td></td> </tr> <tr> <td>to</td> <td></td> <td></td> </tr> <tr> <td>B15</td> <td>reserved</td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Comment	B0	DO1	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B1	DO2	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B2	DO3	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B3	DO4	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B4	DO5	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B5	DO6	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B6	DO7	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B7	DO8	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)	B8	DO9	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>	B9	DO10	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>	B10	DO11	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>	B11	DO12	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>	B12	reserved		to			B15	reserved		C
Bit	Name	Comment																																																				
B0	DO1	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B1	DO2	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B2	DO3	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B3	DO4	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B4	DO5	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B5	DO6	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B6	DO7	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B7	DO8	this bit has to be send to the digital output via the parameters of group 14 (Digital outputs)																																																				
B8	DO9	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>																																																				
B9	DO10	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>																																																				
B10	DO11	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>																																																				
B11	DO12	this bit is written directly to DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>																																																				
B12	reserved																																																					
to																																																						
B15	reserved																																																					
7.06	<p>RFE CtrlWord (control word resonance frequency eliminator, RFECW) Resonance Frequency Eliminator control word</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>FilterRelease</td> <td>1</td> <td>release RFE filter</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>block RFE filter</td> </tr> <tr> <td>B1</td> <td>BalFilter</td> <td>1</td> <td>balance RFE filter (on parameter change or release)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B2</td> <td>reserved</td> <td></td> <td></td> </tr> <tr> <td>to</td> <td></td> <td></td> <td></td> </tr> <tr> <td>B15</td> <td>reserved</td> <td></td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Value	Comment	B0	FilterRelease	1	release RFE filter			0	block RFE filter	B1	BalFilter	1	balance RFE filter (on parameter change or release)			0	no action	B2	reserved			to				B15	reserved			L																
Bit	Name	Value	Comment																																																			
B0	FilterRelease	1	release RFE filter																																																			
		0	block RFE filter																																																			
B1	BalFilter	1	balance RFE filter (on parameter change or release)																																																			
		0	no action																																																			
B2	reserved																																																					
to																																																						
B15	reserved																																																					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																								
Group 8	Status / limit words																																																																																																													
8.01	<p>MainStatWord (main status word, MSW) Main status word:</p> <table border="0"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>RdyOn</td> <td>1</td> <td>ready to switch on</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>not ready to switch on</td> </tr> <tr> <td>B1</td> <td>RdyRun</td> <td>1</td> <td>ready to generate torque</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>not ready to generate torque</td> </tr> <tr> <td>B2</td> <td>RdyRef</td> <td>1</td> <td>operation released (Running)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>operation blocked</td> </tr> <tr> <td>B3</td> <td>Tripped</td> <td>1</td> <td>fault indication</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no fault</td> </tr> <tr> <td>B4</td> <td>Off2NStatus</td> <td>1</td> <td>Off2 not active</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>Off2 (OnInhibit state) active</td> </tr> <tr> <td>B5</td> <td>Off3NStatus</td> <td>1</td> <td>Off3 not active</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>Off3 (OnInhibit state) active</td> </tr> <tr> <td>B6</td> <td>OnInhibited</td> <td>1</td> <td>OnInhibited state is active after a: - fault - Emergency Off / Coast Stop (Off3) - E-stop (Off2) - OnInhibited via digital input <i>Off2 (10.08)</i> or <i>E Stop (10.09)</i></td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>OnInhibit state not active</td> </tr> <tr> <td>B7</td> <td>Alarm</td> <td>1</td> <td>alarm indication</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no alarm</td> </tr> <tr> <td>B8</td> <td>AtSetpoint</td> <td>1</td> <td>setpoint / actual value monitoring in the tolerance zone</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>setpoint / actual value monitoring out of the tolerance zone</td> </tr> <tr> <td>B9</td> <td>Remote</td> <td>1</td> <td>remote control</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>local control</td> </tr> <tr> <td>B10</td> <td>AboveLimit</td> <td>1</td> <td>speed greater than defined in <i>SpeedLev (50.10)</i></td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>speed lower or equal than defined <i>SpeedLev (50.10)</i></td> </tr> <tr> <td></td> <td>B11 reserved</td> <td></td> <td></td> </tr> <tr> <td></td> <td>to</td> <td></td> <td></td> </tr> <tr> <td></td> <td>B15 reserved</td> <td></td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Value	Comment	B0	RdyOn	1	ready to switch on			0	not ready to switch on	B1	RdyRun	1	ready to generate torque			0	not ready to generate torque	B2	RdyRef	1	operation released (Running)			0	operation blocked	B3	Tripped	1	fault indication			0	no fault	B4	Off2NStatus	1	Off2 not active			0	Off2 (OnInhibit state) active	B5	Off3NStatus	1	Off3 not active			0	Off3 (OnInhibit state) active	B6	OnInhibited	1	OnInhibited state is active after a: - fault - Emergency Off / Coast Stop (Off3) - E-stop (Off2) - OnInhibited via digital input <i>Off2 (10.08)</i> or <i>E Stop (10.09)</i>			0	OnInhibit state not active	B7	Alarm	1	alarm indication			0	no alarm	B8	AtSetpoint	1	setpoint / actual value monitoring in the tolerance zone			0	setpoint / actual value monitoring out of the tolerance zone	B9	Remote	1	remote control			0	local control	B10	AboveLimit	1	speed greater than defined in <i>SpeedLev (50.10)</i>			0	speed lower or equal than defined <i>SpeedLev (50.10)</i>		B11 reserved				to				B15 reserved			C
Bit	Name	Value	Comment																																																																																																											
B0	RdyOn	1	ready to switch on																																																																																																											
		0	not ready to switch on																																																																																																											
B1	RdyRun	1	ready to generate torque																																																																																																											
		0	not ready to generate torque																																																																																																											
B2	RdyRef	1	operation released (Running)																																																																																																											
		0	operation blocked																																																																																																											
B3	Tripped	1	fault indication																																																																																																											
		0	no fault																																																																																																											
B4	Off2NStatus	1	Off2 not active																																																																																																											
		0	Off2 (OnInhibit state) active																																																																																																											
B5	Off3NStatus	1	Off3 not active																																																																																																											
		0	Off3 (OnInhibit state) active																																																																																																											
B6	OnInhibited	1	OnInhibited state is active after a: - fault - Emergency Off / Coast Stop (Off3) - E-stop (Off2) - OnInhibited via digital input <i>Off2 (10.08)</i> or <i>E Stop (10.09)</i>																																																																																																											
		0	OnInhibit state not active																																																																																																											
B7	Alarm	1	alarm indication																																																																																																											
		0	no alarm																																																																																																											
B8	AtSetpoint	1	setpoint / actual value monitoring in the tolerance zone																																																																																																											
		0	setpoint / actual value monitoring out of the tolerance zone																																																																																																											
B9	Remote	1	remote control																																																																																																											
		0	local control																																																																																																											
B10	AboveLimit	1	speed greater than defined in <i>SpeedLev (50.10)</i>																																																																																																											
		0	speed lower or equal than defined <i>SpeedLev (50.10)</i>																																																																																																											
	B11 reserved																																																																																																													
	to																																																																																																													
	B15 reserved																																																																																																													

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																																																				
8.02	<p>AuxStatWord (auxiliary status word, ASW) Auxiliary status word:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>DataLogReady</td> <td>1</td> <td>contents of data logger is readable</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>contents of data logger is not readable</td> </tr> <tr> <td>B1</td> <td>OutOfWindow</td> <td>1</td> <td>actual speed is out of window defined by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>actual speed is inside the defined window</td> </tr> <tr> <td>B2</td> <td>E-StopCoast</td> <td>1</td> <td>E-stop function has failed, see <i>E StopDecMin</i> (21.05), <i>E StopDecMax</i> (21.06) and <i>DecMonDly</i> (21.07)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B3</td> <td>User1</td> <td>1</td> <td>macro User1 active, see <i>ApplMacro</i> (99.08)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>macro User1 not active</td> </tr> <tr> <td>B4</td> <td>User2</td> <td>1</td> <td>macro User2 active, see <i>ApplMacro</i> (99.08)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>macro User2 not active</td> </tr> <tr> <td>B5</td> <td>SyncRdy</td> <td>1</td> <td>positioning: synchronous ready</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>positioning: not ready</td> </tr> <tr> <td>B6</td> <td>Fex1Ack</td> <td>1</td> <td>motor 1 field exciter acknowledged</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B7</td> <td>Fex2Ack</td> <td>1</td> <td>motor 2 field exciter acknowledged</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B8</td> <td>BrakeCmd</td> <td>1</td> <td>command to open (lift) the brake is given, see group 42 (Brake control)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>command to apply the brake is given</td> </tr> <tr> <td>B9</td> <td>Limiting</td> <td>1</td> <td>drive is in a limit, see <i>LimWord</i> (8.03)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>drive is not in a limit,</td> </tr> <tr> <td>B10</td> <td>TorqCtrl</td> <td>1</td> <td>drive is torque controlled</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B11</td> <td>ZeroSpeed</td> <td>1</td> <td>actual motor speed is in the zero speed limit defined by <i>ZeroSpeedLim</i> (20.03)</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>actual motor speed is out of the zero speed limit</td> </tr> <tr> <td>B12</td> <td>EMFSpeed</td> <td>1</td> <td><i>M1SpeedFbSel</i> (50.03) = EMF</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B13</td> <td>FaultOrAlarm</td> <td>1</td> <td>fault or alarm indication</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no fault or alarm indication</td> </tr> <tr> <td>B14</td> <td>DriveDirectionNeg</td> <td>1</td> <td>negative drive direction active</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>positive drive direction active</td> </tr> <tr> <td>B15</td> <td>AutoReclosing</td> <td>1</td> <td>auto reclosing logic is active</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Value	Comment	B0	DataLogReady	1	contents of data logger is readable			0	contents of data logger is not readable	B1	OutOfWindow	1	actual speed is out of window defined by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09)			0	actual speed is inside the defined window	B2	E-StopCoast	1	E-stop function has failed, see <i>E StopDecMin</i> (21.05), <i>E StopDecMax</i> (21.06) and <i>DecMonDly</i> (21.07)			0	no action	B3	User1	1	macro User1 active, see <i>ApplMacro</i> (99.08)			0	macro User1 not active	B4	User2	1	macro User2 active, see <i>ApplMacro</i> (99.08)			0	macro User2 not active	B5	SyncRdy	1	positioning: synchronous ready			0	positioning: not ready	B6	Fex1Ack	1	motor 1 field exciter acknowledged			0	no action	B7	Fex2Ack	1	motor 2 field exciter acknowledged			0	no action	B8	BrakeCmd	1	command to open (lift) the brake is given, see group 42 (Brake control)			0	command to apply the brake is given	B9	Limiting	1	drive is in a limit, see <i>LimWord</i> (8.03)			0	drive is not in a limit,	B10	TorqCtrl	1	drive is torque controlled			0	no action	B11	ZeroSpeed	1	actual motor speed is in the zero speed limit defined by <i>ZeroSpeedLim</i> (20.03)			0	actual motor speed is out of the zero speed limit	B12	EMFSpeed	1	<i>M1SpeedFbSel</i> (50.03) = EMF			0	no action	B13	FaultOrAlarm	1	fault or alarm indication			0	no fault or alarm indication	B14	DriveDirectionNeg	1	negative drive direction active			0	positive drive direction active	B15	AutoReclosing	1	auto reclosing logic is active			0	no action	C
Bit	Name	Value	Comment																																																																																																																																							
B0	DataLogReady	1	contents of data logger is readable																																																																																																																																							
		0	contents of data logger is not readable																																																																																																																																							
B1	OutOfWindow	1	actual speed is out of window defined by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09)																																																																																																																																							
		0	actual speed is inside the defined window																																																																																																																																							
B2	E-StopCoast	1	E-stop function has failed, see <i>E StopDecMin</i> (21.05), <i>E StopDecMax</i> (21.06) and <i>DecMonDly</i> (21.07)																																																																																																																																							
		0	no action																																																																																																																																							
B3	User1	1	macro User1 active, see <i>ApplMacro</i> (99.08)																																																																																																																																							
		0	macro User1 not active																																																																																																																																							
B4	User2	1	macro User2 active, see <i>ApplMacro</i> (99.08)																																																																																																																																							
		0	macro User2 not active																																																																																																																																							
B5	SyncRdy	1	positioning: synchronous ready																																																																																																																																							
		0	positioning: not ready																																																																																																																																							
B6	Fex1Ack	1	motor 1 field exciter acknowledged																																																																																																																																							
		0	no action																																																																																																																																							
B7	Fex2Ack	1	motor 2 field exciter acknowledged																																																																																																																																							
		0	no action																																																																																																																																							
B8	BrakeCmd	1	command to open (lift) the brake is given, see group 42 (Brake control)																																																																																																																																							
		0	command to apply the brake is given																																																																																																																																							
B9	Limiting	1	drive is in a limit, see <i>LimWord</i> (8.03)																																																																																																																																							
		0	drive is not in a limit,																																																																																																																																							
B10	TorqCtrl	1	drive is torque controlled																																																																																																																																							
		0	no action																																																																																																																																							
B11	ZeroSpeed	1	actual motor speed is in the zero speed limit defined by <i>ZeroSpeedLim</i> (20.03)																																																																																																																																							
		0	actual motor speed is out of the zero speed limit																																																																																																																																							
B12	EMFSpeed	1	<i>M1SpeedFbSel</i> (50.03) = EMF																																																																																																																																							
		0	no action																																																																																																																																							
B13	FaultOrAlarm	1	fault or alarm indication																																																																																																																																							
		0	no fault or alarm indication																																																																																																																																							
B14	DriveDirectionNeg	1	negative drive direction active																																																																																																																																							
		0	positive drive direction active																																																																																																																																							
B15	AutoReclosing	1	auto reclosing logic is active																																																																																																																																							
		0	no action																																																																																																																																							
8.03	<p>LimWord (limit word, LW) Limit word:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>active limit</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td><i>TorqMax</i> (20.05) or <i>TorqMaxAll</i> (2.19)</td> </tr> <tr> <td>B1</td> <td><i>TorqMin</i> (20.06) or <i>TorqMinAll</i> (2.20)</td> </tr> <tr> <td>B2</td> <td><i>TorqMaxSPC</i> (20.07) or <i>TorqMaxAll</i> (2.19)</td> </tr> <tr> <td>B3</td> <td><i>TorqMinSPC</i> (20.08) or <i>TorqMinAll</i> (2.20)</td> </tr> <tr> <td>B4</td> <td><i>TorqMaxTref</i> (20.09)</td> </tr> <tr> <td>B5</td> <td><i>TorqMinTref</i> (20.10)</td> </tr> <tr> <td>B6</td> <td><i>M1SpeedMax</i> (20.02) or <i>M2SpeedMax</i> (49.20)</td> </tr> <tr> <td>B7</td> <td><i>M1SpeedMin</i> (20.01) or <i>M2SpeedMin</i> (49.19)</td> </tr> <tr> <td>B8</td> <td><i>M1CurLimBrdg1</i> (20.12) or <i>M2CurLimBrdg1</i> (49.12)</td> </tr> <tr> <td>B9</td> <td><i>M1CurLimBrdg2</i> (20.13) or <i>M2CurLimBrdg2</i> (49.13)</td> </tr> <tr> <td>B10</td> <td>reserved</td> </tr> <tr> <td>to</td> <td></td> </tr> <tr> <td>B15</td> <td>reserved</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	active limit	B0	<i>TorqMax</i> (20.05) or <i>TorqMaxAll</i> (2.19)	B1	<i>TorqMin</i> (20.06) or <i>TorqMinAll</i> (2.20)	B2	<i>TorqMaxSPC</i> (20.07) or <i>TorqMaxAll</i> (2.19)	B3	<i>TorqMinSPC</i> (20.08) or <i>TorqMinAll</i> (2.20)	B4	<i>TorqMaxTref</i> (20.09)	B5	<i>TorqMinTref</i> (20.10)	B6	<i>M1SpeedMax</i> (20.02) or <i>M2SpeedMax</i> (49.20)	B7	<i>M1SpeedMin</i> (20.01) or <i>M2SpeedMin</i> (49.19)	B8	<i>M1CurLimBrdg1</i> (20.12) or <i>M2CurLimBrdg1</i> (49.12)	B9	<i>M1CurLimBrdg2</i> (20.13) or <i>M2CurLimBrdg2</i> (49.13)	B10	reserved	to		B15	reserved	L																																																																																																								
Bit	active limit																																																																																																																																									
B0	<i>TorqMax</i> (20.05) or <i>TorqMaxAll</i> (2.19)																																																																																																																																									
B1	<i>TorqMin</i> (20.06) or <i>TorqMinAll</i> (2.20)																																																																																																																																									
B2	<i>TorqMaxSPC</i> (20.07) or <i>TorqMaxAll</i> (2.19)																																																																																																																																									
B3	<i>TorqMinSPC</i> (20.08) or <i>TorqMinAll</i> (2.20)																																																																																																																																									
B4	<i>TorqMaxTref</i> (20.09)																																																																																																																																									
B5	<i>TorqMinTref</i> (20.10)																																																																																																																																									
B6	<i>M1SpeedMax</i> (20.02) or <i>M2SpeedMax</i> (49.20)																																																																																																																																									
B7	<i>M1SpeedMin</i> (20.01) or <i>M2SpeedMin</i> (49.19)																																																																																																																																									
B8	<i>M1CurLimBrdg1</i> (20.12) or <i>M2CurLimBrdg1</i> (49.12)																																																																																																																																									
B9	<i>M1CurLimBrdg2</i> (20.13) or <i>M2CurLimBrdg2</i> (49.13)																																																																																																																																									
B10	reserved																																																																																																																																									
to																																																																																																																																										
B15	reserved																																																																																																																																									

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
8.04	Unused					
8.05	<p>DI StatWord (digital inputs status word, DISW) Digital input word, shows the value of the digital inputs before inversion [DI1Invert (10.25), ..., DI11Invert (10.35)]:</p> <p style="text-align: center;">to DI StatWord (8.05)</p>  <p>Bit Name Comment / default setting</p> <p>B0 DI1 <i>ConvFanAck (10.20)</i>, actual setting depends on macro</p> <p>B1 DI2 <i>MotFanAck (10.06)</i>, actual setting depends on macro</p> <p>B2 DI3 <i>MainContAck (10.21)</i>, actual setting depends on macro</p> <p>B3 DI4 <i>OFF2 (10.08)</i>, actual setting depends on macro</p> <p>B4 DI5 <i>E Stop (10.09)</i>, actual setting depends on macro</p> <p>B5 DI6 <i>Reset (10.03)</i>, actual setting depends on macro</p> <p>B6 DI7 <i>OnOff (10.15)</i>, actual setting depends on macro</p> <p>B7 DI8 <i>StartStop (10.16)</i>, actual setting depends on macro</p> <p>B8 DI9 DI1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i></p> <p>B9 DI10 DI2 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i></p> <p>B10 DI11 DI3 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i></p> <p>B11 DI12 DI1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>. Only available for adaptive program, application program or overriding control.</p> <p>B12 DI13 DI2 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>. Only available for adaptive program, application program or overriding control.</p> <p>B13 DI14 DI3 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>. Only available for adaptive program, application program or overriding control.</p> <p>B14 reserved</p> <p>B15 reserved</p> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																													
<p>8.06</p>	<p>DO StatWord (digital outputs status word, DOSW) Digital output word, shows the value of the digital outputs after inversion:</p> <p style="text-align: center;">to DO StatWord (8.06)</p>  <table border="0" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: right;">Bit</td> <td style="width: 15%;">Name</td> <td>Comment / default setting</td> </tr> <tr> <td style="text-align: right;">B0</td> <td>DO1</td> <td><i>DO1Index (14.01) = 603 and DO1BitNo (14.02) = 15, FansOn</i>, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B1</td> <td>DO2</td> <td><i>DO2Index (14.03) = 603 and DO2BitNo (14.04) = 5, FieldOn</i>, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B2</td> <td>DO3</td> <td><i>DO3Index (14.05) = 603 and DO3BitNo (14.06) = 7, MainContactorOn</i>, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B3</td> <td>DO4</td> <td><i>DO4Index (14.07) = 0 and DO4BitNo (14.08) = 0</i>, Not connected, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B4</td> <td>DO5</td> <td><i>DO5Index (14.09) = 0 and DO5BitNo (14.10) = 0</i>, Not connected, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B5</td> <td>DO6</td> <td><i>DO6Index (14.11) = 0 and DO6BitNo (14.12) = 0</i>, Not connected, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B6</td> <td>DO7</td> <td><i>DO7Index (14.13) = 0 and DO7BitNo (14.14) = 0</i>, Not connected, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B7</td> <td>DO8</td> <td><i>DO8Index (14.15) = 603 and DO8BitNo (14.16) = 7, MainContactorOn</i>, actual setting depends on macro</td> </tr> <tr> <td style="text-align: right;">B8</td> <td>DO9</td> <td>DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>, written to by <i>DO CtrlWord (7.05)</i> bit 8</td> </tr> <tr> <td style="text-align: right;">B9</td> <td>DO10</td> <td>DO2 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i>, written to by <i>DO CtrlWord (7.05)</i> bit 9</td> </tr> <tr> <td style="text-align: right;">B10</td> <td>DO11</td> <td>DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>, written to by <i>DO CtrlWord (7.05)</i> bit 10</td> </tr> <tr> <td style="text-align: right;">B11</td> <td>DO12</td> <td>DO2 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i>, written to by <i>DO CtrlWord (7.05)</i> bit 11</td> </tr> <tr> <td style="text-align: right;">B12</td> <td>reserved</td> <td></td> </tr> <tr> <td style="text-align: right;">B15</td> <td>reserved</td> <td></td> </tr> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Comment / default setting	B0	DO1	<i>DO1Index (14.01) = 603 and DO1BitNo (14.02) = 15, FansOn</i> , actual setting depends on macro	B1	DO2	<i>DO2Index (14.03) = 603 and DO2BitNo (14.04) = 5, FieldOn</i> , actual setting depends on macro	B2	DO3	<i>DO3Index (14.05) = 603 and DO3BitNo (14.06) = 7, MainContactorOn</i> , actual setting depends on macro	B3	DO4	<i>DO4Index (14.07) = 0 and DO4BitNo (14.08) = 0</i> , Not connected, actual setting depends on macro	B4	DO5	<i>DO5Index (14.09) = 0 and DO5BitNo (14.10) = 0</i> , Not connected, actual setting depends on macro	B5	DO6	<i>DO6Index (14.11) = 0 and DO6BitNo (14.12) = 0</i> , Not connected, actual setting depends on macro	B6	DO7	<i>DO7Index (14.13) = 0 and DO7BitNo (14.14) = 0</i> , Not connected, actual setting depends on macro	B7	DO8	<i>DO8Index (14.15) = 603 and DO8BitNo (14.16) = 7, MainContactorOn</i> , actual setting depends on macro	B8	DO9	DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 8	B9	DO10	DO2 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 9	B10	DO11	DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 10	B11	DO12	DO2 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 11	B12	reserved		B15	reserved		'	'	'	'	C
Bit	Name	Comment / default setting																																																	
B0	DO1	<i>DO1Index (14.01) = 603 and DO1BitNo (14.02) = 15, FansOn</i> , actual setting depends on macro																																																	
B1	DO2	<i>DO2Index (14.03) = 603 and DO2BitNo (14.04) = 5, FieldOn</i> , actual setting depends on macro																																																	
B2	DO3	<i>DO3Index (14.05) = 603 and DO3BitNo (14.06) = 7, MainContactorOn</i> , actual setting depends on macro																																																	
B3	DO4	<i>DO4Index (14.07) = 0 and DO4BitNo (14.08) = 0</i> , Not connected, actual setting depends on macro																																																	
B4	DO5	<i>DO5Index (14.09) = 0 and DO5BitNo (14.10) = 0</i> , Not connected, actual setting depends on macro																																																	
B5	DO6	<i>DO6Index (14.11) = 0 and DO6BitNo (14.12) = 0</i> , Not connected, actual setting depends on macro																																																	
B6	DO7	<i>DO7Index (14.13) = 0 and DO7BitNo (14.14) = 0</i> , Not connected, actual setting depends on macro																																																	
B7	DO8	<i>DO8Index (14.15) = 603 and DO8BitNo (14.16) = 7, MainContactorOn</i> , actual setting depends on macro																																																	
B8	DO9	DO1 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 8																																																	
B9	DO10	DO2 of the extension IO defined by <i>DIO ExtModule1 (98.03)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 9																																																	
B10	DO11	DO1 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 10																																																	
B11	DO12	DO2 of the extension IO defined by <i>DIO ExtModule2 (98.04)</i> , written to by <i>DO CtrlWord (7.05)</i> bit 11																																																	
B12	reserved																																																		
B15	reserved																																																		
<p>8.07</p>	<p>Unused</p>																																																		
<p>8.08</p>	<p>DriveStat (drive status) Drive status:</p> <table border="0" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: right;">0 =</td> <td>OnInhibited</td> <td>drive is in OnInhibit state</td> </tr> <tr> <td style="text-align: right;">1 =</td> <td>ChangeToOff</td> <td>drive is changing to Off</td> </tr> <tr> <td style="text-align: right;">2 =</td> <td>Off</td> <td>drive is Off</td> </tr> <tr> <td style="text-align: right;">3 =</td> <td>RdyOn</td> <td>drive is ready on</td> </tr> <tr> <td style="text-align: right;">4 =</td> <td>RdyRun</td> <td>drive is ready run</td> </tr> <tr> <td style="text-align: right;">5 =</td> <td>Running</td> <td>drive is Running</td> </tr> <tr> <td style="text-align: right;">6 =</td> <td>Stopping</td> <td>drive is Stopping</td> </tr> <tr> <td style="text-align: right;">7 =</td> <td>Off3</td> <td>drive is in Off3 state (E-stop)</td> </tr> <tr> <td style="text-align: right;">8 =</td> <td>Off2</td> <td>drive is in Off2 state (Emergency Off or Coast Stop)</td> </tr> <tr> <td style="text-align: right;">9 =</td> <td>Tripped</td> <td>drive is Tripped</td> </tr> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	0 =	OnInhibited	drive is in OnInhibit state	1 =	ChangeToOff	drive is changing to Off	2 =	Off	drive is Off	3 =	RdyOn	drive is ready on	4 =	RdyRun	drive is ready run	5 =	Running	drive is Running	6 =	Stopping	drive is Stopping	7 =	Off3	drive is in Off3 state (E-stop)	8 =	Off2	drive is in Off2 state (Emergency Off or Coast Stop)	9 =	Tripped	drive is Tripped	'	'	'	'	C															
0 =	OnInhibited	drive is in OnInhibit state																																																	
1 =	ChangeToOff	drive is changing to Off																																																	
2 =	Off	drive is Off																																																	
3 =	RdyOn	drive is ready on																																																	
4 =	RdyRun	drive is ready run																																																	
5 =	Running	drive is Running																																																	
6 =	Stopping	drive is Stopping																																																	
7 =	Off3	drive is in Off3 state (E-stop)																																																	
8 =	Off2	drive is in Off2 state (Emergency Off or Coast Stop)																																																	
9 =	Tripped	drive is Tripped																																																	

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																
8.09	MotSel (selected motor) Select motor and field exciter: 0 = Motor1 motor 1 and field exciter 1 are selected 1 = Motor2 motor 2 and field exciter 2 are selected - See <i>ParChange (10.10)</i> Int. Scaling: 1 == 1 Type: C Volatile: Y	E																																																
8.10	MacroSel (selected macro) Currently selected macro: 0 = NotUsed default 1 = Factory factory (default) parameter set 2 = User1Load User1 parameter set 3 = User1Save save actual parameter set into User1 4 = User2Load User2 parameter set 5 = User2Save save actual parameter set into User2 3 = Standard standard parameter set 4 = Man/Const manual / constant speed 5 = Hand/Auto hand (manual) / automatic 6 = Hand/MotPot hand (manual) / motor potentiometer 7 = reserved 8 = MotPot motor potentiometer 9 = TorqCtrl torque control - See <i>ApplMacro (99.08)</i> Int. Scaling: 1 == 1 Type: C Volatile: Y	C																																																
8.11	RFE StatWord (status word resonance frequency eliminator) Resonance Frequency Eliminator control word <table border="1" data-bbox="323 1093 1297 1429"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>FiltParCalcAct</td> <td>1</td> <td>internal parameters are being calculated, filter algorithm is skipped</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B1</td> <td>ParUdpReq</td> <td>1</td> <td>parameter update request after parameter change</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B2</td> <td>FiltReleased</td> <td>1</td> <td>RFE filter is released</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>RFE filter is blocked</td> </tr> <tr> <td>B3</td> <td>ParChange</td> <td>1</td> <td>parameter have changed</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B4</td> <td>reserved</td> <td></td> <td></td> </tr> <tr> <td>to</td> <td></td> <td></td> <td></td> </tr> <tr> <td>B15</td> <td>reserved</td> <td></td> <td></td> </tr> </tbody> </table> Int. Scaling: 1 == 1 Type: I Volatile: Y	Bit	Name	Value	Comment	B0	FiltParCalcAct	1	internal parameters are being calculated, filter algorithm is skipped			0	no action	B1	ParUdpReq	1	parameter update request after parameter change			0	no action	B2	FiltReleased	1	RFE filter is released			0	RFE filter is blocked	B3	ParChange	1	parameter have changed			0	no action	B4	reserved			to				B15	reserved			L
Bit	Name	Value	Comment																																																			
B0	FiltParCalcAct	1	internal parameters are being calculated, filter algorithm is skipped																																																			
		0	no action																																																			
B1	ParUdpReq	1	parameter update request after parameter change																																																			
		0	no action																																																			
B2	FiltReleased	1	RFE filter is released																																																			
		0	RFE filter is blocked																																																			
B3	ParChange	1	parameter have changed																																																			
		0	no action																																																			
B4	reserved																																																					
to																																																						
B15	reserved																																																					

Index	Signal / Parameter name				min.	max.	def.	unit	E/C
Group 9	Fault / alarm words								
9.01	FaultWord1 (fault word 1)								C
	Fault word 1:								
	Bit	Fault text	Fault code and trip level	Comment					
	B0	AuxUnderVolt	F501 1	auxiliary undervoltage (threshold see hardware manual)					
	B1	ArmOverCur	F502 3	armature overcurrent, <i>ArmOvrCurLev (30.09)</i>					
	B2	ArmOverVolt	F503 3	armature overvoltage, <i>ArmOvrVoltLev (30.08)</i>					
	B3	ConvOverTemp	F504 2	converter overtemperature, <i>ConvTempDly (97.05)</i> , shutdown temperature see <i>MaxBridgeTemp (4.17)</i>					
	B4	ResCurDetect	F505 1	residual current detection, <i>ResCurDetectSel (30.05)</i> , <i>ResCurDetectLim (30.06)</i> , <i>ResCurDetectDel (30.07)</i>					
	B5	M1OverTemp	F506 2	motor 1 measured overtemperature, <i>M1FaultLimTemp (31.07)</i> or <i>M1KlixonSel (31.08)</i>					
	B6	M1OverLoad	F507 2	motor 1 calculated overload (thermal model), <i>M1FaultLimLoad (31.04)</i>					
	B7	I/OBoardLoss	F508 1	I/O board not found or faulty, <i>DIO ExtModule1 (98.03)</i> , <i>DIO ExtModule2 (98.04)</i> , <i>AIO ExtModule (98.06)</i> , <i>AIO MotTempMeas (98.12)</i> , <i>IO BoardConfig (98.15)</i>					
	B8	M2OverTemp	F509 2	motor 2 measured overtemperature, <i>M2FaultLimTemp (49.37)</i> or <i>M2KlixonSel (49.38)</i>					
	B9	M2OverLoad	F510 2	motor 2 calculated overload (thermal model), <i>M2FaultLimLoad (49.34)</i>					
	B10	ConvFanCur	F511 4	converter fan current, <i>ConvTempDly (97.05)</i>					
	B11	MainsLowVolt	F512 3	mains low (under-) voltage, <i>PwrLossTrip (30.21)</i> , <i>UNetMin1 (30.22)</i> , <i>UNetMin2 (30.23)</i>					
	B12	MainsOvrVolt	F513 1	mains overvoltage, actual mains voltage is > 1.3 * <i>NomMainsVolt (99.10)</i> for more than 10 s.					
	B13	MainsNotSync	F514 3	mains not in synchronism, <i>DevLimPLL (97.13)</i>					
	B14	M1FexOverCur	F515 1	motor 1 field exciter overcurrent, <i>M1FldOvrCurLev (30.13)</i>					
	B15	M1FexCom	F516 1	motor 1 field exciter communication loss, <i>FexTimeOut (94.07)</i> , <i>DCSLinkNodeID (94.01)</i> , <i>M1FexNode (94.08)</i>					
	Int. Scaling:	1 == 1	Type: I	Volatile: Y					

Index	Signal / Parameter name				min.	max.	def.	unit	E/C
9.02	FaultWord2 (fault word 2) Fault word 2: Bit Fault text Fault code Comment and trip level B0 ArmCurRipple F517 3 armature current ripple, <i>CurRippleMode (30.18)</i> , <i>CurRippleLim (30.19)</i> B1 M2FexOverCur F518 1 motor 2 field exciter overcurrent, <i>M2FldOvrCurLev</i> <i>(49.09)</i> B2 M2FexCom F519 1 motor 2 field exciter communication loss <i>FexTimeOut (94.07)</i> , <i>DCSLinkNodeID (94.01)</i> , <i>M2FexNode (94.09)</i> B3 reserved F520 - no action B4 FieldAck F521 1 selected motor: field acknowledge, check fault message of or at field exciter B5 SpeedFb F522 3 selected motor: speed feedback, <i>SpeedFbFltMode</i> <i>(30.36)</i> , <i>M1SpeedFbSel (50.03)</i> B6 ExtFanAck F523 4 external fan acknowledge missing <i>MotFanAck</i> <i>(10.06)</i> B7 MainContAck F524 3 main contactor acknowledge missing, <i>MainContAck (10.21)</i> B8 TypeCode F525 1 type code mismatch, <i>TypeCode (97.01)</i> B9 ExternalDI F526 1 external fault via binary input, <i>ExtFaultSel (30.31)</i> B10 ConvFanAck F527 4 converter fan acknowledge missing, <i>ConvFanAck</i> <i>(10.20)</i> B11 FieldBusCom F528 5 fieldbus communication loss, <i>ComLossCtrl (30.28)</i> , <i>FB TimeOut (30.35)</i> , <i>CommModule (98.02)</i> B12 M1FexNotOK F529 1 motor 1 field exciter not okay B13 M2FexNotOK F530 1 motor 2 field exciter not okay B14 MotorStalled F531 3 selected motor: motor stalled, <i>StallTime (30.01)</i> , <i>StallSpeed (30.02)</i> , <i>StallTorq (30.03)</i> B15 MotOverSpeed F532 3 selected motor: motor overspeed, <i>M1OvrSpeed</i> <i>(30.16)</i> Int. Scaling: 1 == 1 Type: I Volatile: Y				C

Index	Signal / Parameter name				min.	max.	def.	unit	E/C
9.03	FaultWord3 (fault word 3) Fault word 3:				C
	Bit	Fault text	Fault code and trip level	Comment					
	B0	ReversalTime	F533 3	reversal time, <i>ZeroCurTimeOut (97.19)</i>					
	B1	12PCurDiff	F534 3	12-pulse current difference, <i>DiffCurLim (47.02)</i> , <i>DiffCurDly (47.03)</i>					
	B2	12PulseCom	F535 3	12-pulse communication loss, <i>12P TimeOut (94.03)</i> , <i>DCSLinkNodeID (94.01)</i> , <i>12P SlaNode (94.04)</i>					
	B3	12PSlaveFail	F536 4	12-pulse slave failure					
	B4	M1FexRdyLost	F537 1	motor 1 field exciter lost ready-for-operation message while working					
	B5	M2FexRdyLost	F538 1	motor 2 field exciter lost ready-for-operation message while working					
	B6	FastCurRise	F539 1	fast current rise, <i>ArmCurRiseMax (30.10)</i>					
	B7	COM8Faulty	F540 1	SDCS-COM-8 not found or faulty, <i>SysComBoard (98.16)</i>					
	B8	M1FexLowCur	F541 1	motor 1 field exciter low (under-) current, <i>M1FldMinTrip (30.12)</i> , <i>FldMinTripDly (45.18)</i>					
	B9	M2FexLowCur	F542 1	motor 2 field exciter low (under-) current, <i>M2FldMinTrip (49.08)</i> , <i>FldMinTripDly (45.18)</i>					
	B10	COM8Com	F543 5	SDCS-COM-8 communication loss, <i>Ch0ComLossCtrl (70.05)</i> , <i>Ch0TimeOut (70.04)</i> , <i>Ch2ComLossCtrl (70.15)</i> , <i>Ch2TimeOut (70.14)</i>					
	B11	P2PandMFCom	F544 5	Peer to peer and master follower communication loss, <i>ComLossCtrl (30.28)</i> , <i>MailBoxCycle1 (94.13)</i> , <i>MailBoxCycle2 (94.19)</i> , <i>MailBoxCycle3 (94.25)</i> , <i>MailBoxCycle4 (94.31)</i>					
	B12	AppLoadFail	F545 1	application load failure, see <i>Diagnosis (9.11)</i>					
	B13	LocalCmdLoss	F546 5	local command loss, <i>LocalLossCtrl (30.27)</i>					
	B14	HwFailure	F547 1	hardware failure, see <i>Diagnosis (9.11)</i>					
	B15	FwFailure	F548 1	firmware failure, see <i>Diagnosis (9.11)</i>					
	Int. Scaling: 1 == 1		Type: I	Volatile: Y					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																					
9.04	FaultWord4 (fault word 4) Fault word 4: <table border="0"> <thead> <tr> <th>Bit</th> <th>Fault text</th> <th>Fault code</th> <th></th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>ParComp</td> <td>F549</td> <td>1</td> <td>parameter compatibility, the parameter causing the fault can be identified in <i>Diagnosis (9.11)</i></td> </tr> <tr> <td>B1</td> <td>ParMemRead</td> <td>F550</td> <td>1</td> <td>reading the actual parameter set or a user parameter set from either parameter flash or Memory Card failed (checksum fault)</td> </tr> <tr> <td>B2</td> <td>AIRange</td> <td>F551</td> <td>4</td> <td>analog input range, <i>AI Mon4mA (30.29)</i></td> </tr> <tr> <td>B3</td> <td>MechBrake</td> <td>F552</td> <td>3</td> <td>selected motor: mechanical brake, <i>BrakeFaultFunc (42.06)</i>, <i>StrtTorqRefSel (42.07)</i></td> </tr> <tr> <td>B4</td> <td>TachPolarity</td> <td>F553</td> <td>3</td> <td>selected motor: tacho polarity</td> </tr> <tr> <td>B5</td> <td>TachoRange</td> <td>F554</td> <td>3</td> <td>Overflow of AITacho input</td> </tr> <tr> <td>B6</td> <td>reserved</td> <td>F555</td> <td></td> <td>no action</td> </tr> <tr> <td>B7</td> <td>reserved</td> <td>F556</td> <td></td> <td>no action</td> </tr> <tr> <td>B8</td> <td>reserved</td> <td>F557</td> <td></td> <td>no action</td> </tr> <tr> <td>B9</td> <td>reserved</td> <td>F558</td> <td></td> <td>no action</td> </tr> <tr> <td>B10</td> <td>reserved</td> <td>F559</td> <td></td> <td>no action</td> </tr> <tr> <td>B11</td> <td>APFault1</td> <td>F601</td> <td>1</td> <td>adaptive program fault 1</td> </tr> <tr> <td>B12</td> <td>APFault2</td> <td>F602</td> <td>1</td> <td>adaptive program fault 2</td> </tr> <tr> <td>B13</td> <td>APFault3</td> <td>F603</td> <td>1</td> <td>adaptive program fault 3</td> </tr> <tr> <td>B14</td> <td>APFault4</td> <td>F604</td> <td>1</td> <td>adaptive program fault 4</td> </tr> <tr> <td>B15</td> <td>APFault5</td> <td>F605</td> <td>1</td> <td>adaptive program fault 4</td> </tr> </tbody> </table> Int. Scaling: 1 == 1 Type: I Volatile: Y	Bit	Fault text	Fault code		Comment	B0	ParComp	F549	1	parameter compatibility, the parameter causing the fault can be identified in <i>Diagnosis (9.11)</i>	B1	ParMemRead	F550	1	reading the actual parameter set or a user parameter set from either parameter flash or Memory Card failed (checksum fault)	B2	AIRange	F551	4	analog input range, <i>AI Mon4mA (30.29)</i>	B3	MechBrake	F552	3	selected motor: mechanical brake, <i>BrakeFaultFunc (42.06)</i> , <i>StrtTorqRefSel (42.07)</i>	B4	TachPolarity	F553	3	selected motor: tacho polarity	B5	TachoRange	F554	3	Overflow of AITacho input	B6	reserved	F555		no action	B7	reserved	F556		no action	B8	reserved	F557		no action	B9	reserved	F558		no action	B10	reserved	F559		no action	B11	APFault1	F601	1	adaptive program fault 1	B12	APFault2	F602	1	adaptive program fault 2	B13	APFault3	F603	1	adaptive program fault 3	B14	APFault4	F604	1	adaptive program fault 4	B15	APFault5	F605	1	adaptive program fault 4	C
Bit	Fault text	Fault code		Comment																																																																																							
B0	ParComp	F549	1	parameter compatibility, the parameter causing the fault can be identified in <i>Diagnosis (9.11)</i>																																																																																							
B1	ParMemRead	F550	1	reading the actual parameter set or a user parameter set from either parameter flash or Memory Card failed (checksum fault)																																																																																							
B2	AIRange	F551	4	analog input range, <i>AI Mon4mA (30.29)</i>																																																																																							
B3	MechBrake	F552	3	selected motor: mechanical brake, <i>BrakeFaultFunc (42.06)</i> , <i>StrtTorqRefSel (42.07)</i>																																																																																							
B4	TachPolarity	F553	3	selected motor: tacho polarity																																																																																							
B5	TachoRange	F554	3	Overflow of AITacho input																																																																																							
B6	reserved	F555		no action																																																																																							
B7	reserved	F556		no action																																																																																							
B8	reserved	F557		no action																																																																																							
B9	reserved	F558		no action																																																																																							
B10	reserved	F559		no action																																																																																							
B11	APFault1	F601	1	adaptive program fault 1																																																																																							
B12	APFault2	F602	1	adaptive program fault 2																																																																																							
B13	APFault3	F603	1	adaptive program fault 3																																																																																							
B14	APFault4	F604	1	adaptive program fault 4																																																																																							
B15	APFault5	F605	1	adaptive program fault 4																																																																																							
9.05	UserFaultWord (user defined fault word 1) User defined fault word. All names are defined by the user via application program: <table border="0"> <thead> <tr> <th>Bit</th> <th>Fault text</th> <th>Fault code</th> <th></th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>UserFault1</td> <td>F610</td> <td>1</td> <td></td> </tr> <tr> <td>B1</td> <td>UserFault2</td> <td>F611</td> <td>1</td> <td></td> </tr> <tr> <td>B2</td> <td>UserFault3</td> <td>F612</td> <td>1</td> <td></td> </tr> <tr> <td>B3</td> <td>UserFault4</td> <td>F613</td> <td>1</td> <td></td> </tr> <tr> <td>B4</td> <td>UserFault5</td> <td>F614</td> <td>1</td> <td></td> </tr> <tr> <td>B5</td> <td>UserFault6</td> <td>F615</td> <td>1</td> <td></td> </tr> <tr> <td>B6</td> <td>UserFault7</td> <td>F616</td> <td>1</td> <td></td> </tr> <tr> <td>B7</td> <td>UserFault8</td> <td>F617</td> <td>1</td> <td></td> </tr> <tr> <td>B8</td> <td>UserFault9</td> <td>F618</td> <td>1</td> <td></td> </tr> <tr> <td>B9</td> <td>UserFault10</td> <td>F619</td> <td>1</td> <td></td> </tr> <tr> <td>B10</td> <td>UserFault11</td> <td>F620</td> <td>1</td> <td></td> </tr> <tr> <td>B11</td> <td>UserFault12</td> <td>F621</td> <td>1</td> <td></td> </tr> <tr> <td>B12</td> <td>UserFault13</td> <td>F622</td> <td>1</td> <td></td> </tr> <tr> <td>B13</td> <td>UserFault14</td> <td>F623</td> <td>1</td> <td></td> </tr> <tr> <td>B14</td> <td>UserFault15</td> <td>F624</td> <td>1</td> <td></td> </tr> <tr> <td>B15</td> <td>UserFault16</td> <td>F625</td> <td>1</td> <td></td> </tr> </tbody> </table> Int. Scaling: 1 == 1 Type: I Volatile: Y	Bit	Fault text	Fault code		Comment	B0	UserFault1	F610	1		B1	UserFault2	F611	1		B2	UserFault3	F612	1		B3	UserFault4	F613	1		B4	UserFault5	F614	1		B5	UserFault6	F615	1		B6	UserFault7	F616	1		B7	UserFault8	F617	1		B8	UserFault9	F618	1		B9	UserFault10	F619	1		B10	UserFault11	F620	1		B11	UserFault12	F621	1		B12	UserFault13	F622	1		B13	UserFault14	F623	1		B14	UserFault15	F624	1		B15	UserFault16	F625	1						L
Bit	Fault text	Fault code		Comment																																																																																							
B0	UserFault1	F610	1																																																																																								
B1	UserFault2	F611	1																																																																																								
B2	UserFault3	F612	1																																																																																								
B3	UserFault4	F613	1																																																																																								
B4	UserFault5	F614	1																																																																																								
B5	UserFault6	F615	1																																																																																								
B6	UserFault7	F616	1																																																																																								
B7	UserFault8	F617	1																																																																																								
B8	UserFault9	F618	1																																																																																								
B9	UserFault10	F619	1																																																																																								
B10	UserFault11	F620	1																																																																																								
B11	UserFault12	F621	1																																																																																								
B12	UserFault13	F622	1																																																																																								
B13	UserFault14	F623	1																																																																																								
B14	UserFault15	F624	1																																																																																								
B15	UserFault16	F625	1																																																																																								

Index	Signal / Parameter name				min.	max.	def.	unit	E/C
9.06	AlarmWord1 (alarm word 1) Alarm word 1:				C
	Bit	Alarm text	Alarm code and alarm level	Comment					
	B0	Off2ViaDI	A101 1	Off2 (Emergency Off / Coast Stop) pending via digital input, <i>Off2</i> (10.08)					
	B1	Off3ViaDI	A102 1	Off3 (E-stop) pending via digital input, <i>E Stop</i> (10.09)					
	B2	DCBreakAck	A103 3	selected motor: DC-breaker acknowledge missing, <i>DCBreakAck</i> (10.23)					
	B3	ConvOverTemp	A104 2	converter overtemperature, shutdown temperature see <i>MaxBridgeTemp</i> (4.17). The converter overtemperature alarm will already appear at approximately 5°C below the shutdown temperature.					
	B4	DynBrakeAck	A105 1	selected motor: dynamic braking acknowledge is still pending, <i>DynBrakeAck</i> (10.22)					
	B5	M1OverTemp	A106 2	motor 1 measured overtemperature, <i>M1AlarmLimTemp</i> (31.06)					
	B6	M1OverLoad	A107 2	motor 1 calculated overload (thermal model), <i>M1AlarmLimLoad</i> (31.03)					
	B7	reserved	A108 4	no action					
	B8	M2OverTemp	A109 2	motor 2 measured overtemperature, <i>M2AlarmLimTemp</i> (49.36)					
	B9	M2OverLoad	A110 2	motor 2 calculated overload (thermal model), <i>M2AlarmLimLoad</i> (49.33)					
	B10	MainsLowVolt	A111 3	mains low (under-) voltage, <i>PwrLossTrip</i> (30.21), <i>UNetMin1</i> (30.22), <i>UNetMin2</i> (30.23)					
	B11	P2PandMFCom	A112 4	Peer to peer and master follower communication loss, <i>ComLossCtrl</i> (30.28), <i>MailBoxCycle1</i> (94.13), <i>MailBoxCycle2</i> (94.19), <i>MailBoxCycle3</i> (94.25), <i>MailBoxCycle4</i> (94.31)					
	B12	COM8Com	A113 4	SDCS-COM-8 communication loss, <i>Ch0ComLossCtrl</i> (70.05), <i>Ch0TimeOut</i> (70.04), <i>Ch2ComLossCtrl</i> (70.15), <i>Ch2TimeOut</i> (70.14)					
	B13	ArmCurDev	A114 3	armature current deviation					
	B14	TachoRange	A115 4	Overflow of AITacho input					
	B15	reserved	A116 -	no action					
	Int. Scaling: 1 == 1		Type: I	Volatile: Y					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																					
9.08	<p>AlarmWord3 (alarm word 3) Alarm word 3:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Alarm text</th> <th>Alarm code</th> <th>Alarm level</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>reserved</td> <td>A133</td> <td>-</td> <td>no action</td> </tr> <tr> <td>B1</td> <td>ParComp</td> <td>A134</td> <td>4</td> <td>parameter compatibility, the parameter causing the alarm can be identified in <i>Diagnosis (9.11)</i></td> </tr> <tr> <td>B2</td> <td>ParUpDwnLoad</td> <td>A135</td> <td>4</td> <td>The checksum verification failed during up- or download of parameters. Please try again.</td> </tr> <tr> <td>B3</td> <td>reserved</td> <td>A136</td> <td>-</td> <td>no action</td> </tr> <tr> <td>B4</td> <td>SpeedNotZero</td> <td>A137</td> <td>1</td> <td>Re-start of drive is not possible. Speed zero has not been reached (only in case <i>FlyStart (21.10) = StartFrom0</i>). <i>ZeroSpeedLim (20,03)</i></td> </tr> <tr> <td>B5</td> <td>Off2FieldBus</td> <td>A138</td> <td>1</td> <td>Off2 (Emergency Off / Coast Stop) pending via fieldbus, Off2 (10.08)</td> </tr> <tr> <td>B6</td> <td>Off3FieldBus</td> <td>A139</td> <td>1</td> <td>Off3 (E-stop) pending via fieldbus, <i>E Stop (10.09)</i></td> </tr> <tr> <td>B7</td> <td>IllgFieldBus</td> <td>A140</td> <td>4</td> <td>the fieldbus parameters in group 51 (fieldbus) are not set according to the fieldbus adapter or the device has not been selected</td> </tr> <tr> <td>B8</td> <td>COM8FwVer</td> <td>A141</td> <td>4</td> <td>invalid combination of SDCS-CON-4 firmware and SDCS-COM-8 firmware</td> </tr> <tr> <td>B9</td> <td>MemCardMiss</td> <td>A142</td> <td>1</td> <td>Memory Card missing</td> </tr> <tr> <td>B10</td> <td>MemCardFail</td> <td>A143</td> <td>1</td> <td>checksum failure or wrong Memory Card</td> </tr> <tr> <td>B11</td> <td>APAlarm1</td> <td>A301</td> <td>4</td> <td>adaptive program alarm 1</td> </tr> <tr> <td>B12</td> <td>APAlarm2</td> <td>A302</td> <td>4</td> <td>adaptive program alarm 2</td> </tr> <tr> <td>B13</td> <td>APAlarm3</td> <td>A303</td> <td>4</td> <td>adaptive program alarm 3</td> </tr> <tr> <td>B14</td> <td>APAlarm4</td> <td>A304</td> <td>4</td> <td>adaptive program alarm 4</td> </tr> <tr> <td>B15</td> <td>APAlarm5</td> <td>A305</td> <td>4</td> <td>adaptive program alarm 5</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Alarm text	Alarm code	Alarm level	Comment	B0	reserved	A133	-	no action	B1	ParComp	A134	4	parameter compatibility, the parameter causing the alarm can be identified in <i>Diagnosis (9.11)</i>	B2	ParUpDwnLoad	A135	4	The checksum verification failed during up- or download of parameters. Please try again.	B3	reserved	A136	-	no action	B4	SpeedNotZero	A137	1	Re-start of drive is not possible. Speed zero has not been reached (only in case <i>FlyStart (21.10) = StartFrom0</i>). <i>ZeroSpeedLim (20,03)</i>	B5	Off2FieldBus	A138	1	Off2 (Emergency Off / Coast Stop) pending via fieldbus, Off2 (10.08)	B6	Off3FieldBus	A139	1	Off3 (E-stop) pending via fieldbus, <i>E Stop (10.09)</i>	B7	IllgFieldBus	A140	4	the fieldbus parameters in group 51 (fieldbus) are not set according to the fieldbus adapter or the device has not been selected	B8	COM8FwVer	A141	4	invalid combination of SDCS-CON-4 firmware and SDCS-COM-8 firmware	B9	MemCardMiss	A142	1	Memory Card missing	B10	MemCardFail	A143	1	checksum failure or wrong Memory Card	B11	APAlarm1	A301	4	adaptive program alarm 1	B12	APAlarm2	A302	4	adaptive program alarm 2	B13	APAlarm3	A303	4	adaptive program alarm 3	B14	APAlarm4	A304	4	adaptive program alarm 4	B15	APAlarm5	A305	4	adaptive program alarm 5	C
Bit	Alarm text	Alarm code	Alarm level	Comment																																																																																							
B0	reserved	A133	-	no action																																																																																							
B1	ParComp	A134	4	parameter compatibility, the parameter causing the alarm can be identified in <i>Diagnosis (9.11)</i>																																																																																							
B2	ParUpDwnLoad	A135	4	The checksum verification failed during up- or download of parameters. Please try again.																																																																																							
B3	reserved	A136	-	no action																																																																																							
B4	SpeedNotZero	A137	1	Re-start of drive is not possible. Speed zero has not been reached (only in case <i>FlyStart (21.10) = StartFrom0</i>). <i>ZeroSpeedLim (20,03)</i>																																																																																							
B5	Off2FieldBus	A138	1	Off2 (Emergency Off / Coast Stop) pending via fieldbus, Off2 (10.08)																																																																																							
B6	Off3FieldBus	A139	1	Off3 (E-stop) pending via fieldbus, <i>E Stop (10.09)</i>																																																																																							
B7	IllgFieldBus	A140	4	the fieldbus parameters in group 51 (fieldbus) are not set according to the fieldbus adapter or the device has not been selected																																																																																							
B8	COM8FwVer	A141	4	invalid combination of SDCS-CON-4 firmware and SDCS-COM-8 firmware																																																																																							
B9	MemCardMiss	A142	1	Memory Card missing																																																																																							
B10	MemCardFail	A143	1	checksum failure or wrong Memory Card																																																																																							
B11	APAlarm1	A301	4	adaptive program alarm 1																																																																																							
B12	APAlarm2	A302	4	adaptive program alarm 2																																																																																							
B13	APAlarm3	A303	4	adaptive program alarm 3																																																																																							
B14	APAlarm4	A304	4	adaptive program alarm 4																																																																																							
B15	APAlarm5	A305	4	adaptive program alarm 5																																																																																							
9.09	<p>UserAlarmWord (user defined alarm word 1) User defined alarm word. All names are defined by the user via application program:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Alarm text</th> <th>Alarm code</th> <th>Alarm level</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>UserAlarm1</td> <td>A310</td> <td>4</td> <td></td> </tr> <tr> <td>B1</td> <td>UserAlarm2</td> <td>A311</td> <td>4</td> <td></td> </tr> <tr> <td>B2</td> <td>UserAlarm3</td> <td>A312</td> <td>4</td> <td></td> </tr> <tr> <td>B3</td> <td>UserAlarm4</td> <td>A313</td> <td>4</td> <td></td> </tr> <tr> <td>B4</td> <td>UserAlarm5</td> <td>A314</td> <td>4</td> <td></td> </tr> <tr> <td>B5</td> <td>UserAlarm6</td> <td>A315</td> <td>4</td> <td></td> </tr> <tr> <td>B6</td> <td>UserAlarm7</td> <td>A316</td> <td>4</td> <td></td> </tr> <tr> <td>B7</td> <td>UserAlarm8</td> <td>A317</td> <td>4</td> <td></td> </tr> <tr> <td>B8</td> <td>UserAlarm9</td> <td>A318</td> <td>4</td> <td></td> </tr> <tr> <td>B9</td> <td>UserAlarm10</td> <td>A319</td> <td>4</td> <td></td> </tr> <tr> <td>B10</td> <td>UserAlarm11</td> <td>A320</td> <td>4</td> <td></td> </tr> <tr> <td>B11</td> <td>UserAlarm12</td> <td>A321</td> <td>4</td> <td></td> </tr> <tr> <td>B12</td> <td>UserAlarm13</td> <td>A322</td> <td>4</td> <td></td> </tr> <tr> <td>B13</td> <td>UserAlarm14</td> <td>A323</td> <td>4</td> <td></td> </tr> <tr> <td>B14</td> <td>UserAlarm15</td> <td>A324</td> <td>4</td> <td></td> </tr> <tr> <td>B15</td> <td>UserAlarm16</td> <td>A325</td> <td>4</td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Alarm text	Alarm code	Alarm level	Comment	B0	UserAlarm1	A310	4		B1	UserAlarm2	A311	4		B2	UserAlarm3	A312	4		B3	UserAlarm4	A313	4		B4	UserAlarm5	A314	4		B5	UserAlarm6	A315	4		B6	UserAlarm7	A316	4		B7	UserAlarm8	A317	4		B8	UserAlarm9	A318	4		B9	UserAlarm10	A319	4		B10	UserAlarm11	A320	4		B11	UserAlarm12	A321	4		B12	UserAlarm13	A322	4		B13	UserAlarm14	A323	4		B14	UserAlarm15	A324	4		B15	UserAlarm16	A325	4						E
Bit	Alarm text	Alarm code	Alarm level	Comment																																																																																							
B0	UserAlarm1	A310	4																																																																																								
B1	UserAlarm2	A311	4																																																																																								
B2	UserAlarm3	A312	4																																																																																								
B3	UserAlarm4	A313	4																																																																																								
B4	UserAlarm5	A314	4																																																																																								
B5	UserAlarm6	A315	4																																																																																								
B6	UserAlarm7	A316	4																																																																																								
B7	UserAlarm8	A317	4																																																																																								
B8	UserAlarm9	A318	4																																																																																								
B9	UserAlarm10	A319	4																																																																																								
B10	UserAlarm11	A320	4																																																																																								
B11	UserAlarm12	A321	4																																																																																								
B12	UserAlarm13	A322	4																																																																																								
B13	UserAlarm14	A323	4																																																																																								
B14	UserAlarm15	A324	4																																																																																								
B15	UserAlarm16	A325	4																																																																																								

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																			
9.10 check with R&D	<p>SysFaultWord (system fault word) Operating system faults from SDCS-COM-8 board:</p> <table border="0"> <tr> <td>Bit</td> <td>Fault text</td> <td>Fault code F</td> </tr> <tr> <td>B0</td> <td>Factory macro parameter file error</td> <td>-</td> </tr> <tr> <td>B1</td> <td>User macro parameter file error</td> <td>-</td> </tr> <tr> <td>B2</td> <td>Non Volatile operating system error</td> <td>-</td> </tr> <tr> <td>B3</td> <td>File error in FLASH</td> <td>-</td> </tr> <tr> <td>B4</td> <td>Internal time level T2 overflow (100 µs)</td> <td>-</td> </tr> <tr> <td>B5</td> <td>Internal time level T3 overflow (1 ms)</td> <td>-</td> </tr> <tr> <td>B6</td> <td>Internal time level T4 overflow (50 ms)</td> <td>-</td> </tr> <tr> <td>B7</td> <td>Internal time level T5 overflow (1 s)</td> <td>-</td> </tr> <tr> <td>B8</td> <td>State overflow</td> <td>-</td> </tr> <tr> <td>B9</td> <td>Application window ending overflow</td> <td>-</td> </tr> <tr> <td>B10</td> <td>Application program overflow</td> <td>-</td> </tr> <tr> <td>B11</td> <td>Illegal instruction</td> <td>-</td> </tr> <tr> <td>B12</td> <td>Register stack overflow</td> <td>-</td> </tr> <tr> <td>B13</td> <td>System stack overflow</td> <td>-</td> </tr> <tr> <td>B14</td> <td>System stack underflow</td> <td>-</td> </tr> <tr> <td>B15</td> <td>reserved</td> <td>-</td> </tr> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Fault text	Fault code F	B0	Factory macro parameter file error	-	B1	User macro parameter file error	-	B2	Non Volatile operating system error	-	B3	File error in FLASH	-	B4	Internal time level T2 overflow (100 µs)	-	B5	Internal time level T3 overflow (1 ms)	-	B6	Internal time level T4 overflow (50 ms)	-	B7	Internal time level T5 overflow (1 s)	-	B8	State overflow	-	B9	Application window ending overflow	-	B10	Application program overflow	-	B11	Illegal instruction	-	B12	Register stack overflow	-	B13	System stack overflow	-	B14	System stack underflow	-	B15	reserved	-	-	-	-	-	E
Bit	Fault text	Fault code F																																																							
B0	Factory macro parameter file error	-																																																							
B1	User macro parameter file error	-																																																							
B2	Non Volatile operating system error	-																																																							
B3	File error in FLASH	-																																																							
B4	Internal time level T2 overflow (100 µs)	-																																																							
B5	Internal time level T3 overflow (1 ms)	-																																																							
B6	Internal time level T4 overflow (50 ms)	-																																																							
B7	Internal time level T5 overflow (1 s)	-																																																							
B8	State overflow	-																																																							
B9	Application window ending overflow	-																																																							
B10	Application program overflow	-																																																							
B11	Illegal instruction	-																																																							
B12	Register stack overflow	-																																																							
B13	System stack overflow	-																																																							
B14	System stack underflow	-																																																							
B15	reserved	-																																																							
9.11	<p>Diagnosis (diagnosis) Displays diagnostics messages:</p> <p>0 = no message 1 ... 10 = reserved</p> <p>Autotuning:</p> <p>11 = autotuning aborted by fault or removing the Run command [<i>UsedMCW (7.04)</i> bit 3] 12 = autotuning timeout, RUN command [<i>UsedMCW (7.04)</i> bit 3] is not set in time 13 = motor is still turning, no speed zero indication 14 = field current not zero 15 = armature current not zero 16 = reserved 17 = reserved 18 = no detection of field inductance 19 = no detection of field resistance 20 = no writing of control parameters or discontinuous current 21 = reserved 22 = tachometer adjustment faulty 23 ... 49 reserved</p> <p>Hardware:</p> <p>50 = parameter FLASH faulty 51 = parameter FLASH faulty 52 ... 69 reserved</p> <p>A132 ParConflict (alarm parameter setting conflict):</p> <p>70 = reserved 71 = flux linearization parameters not consistent 72 = reserved 73 = parameter overflow 74 ... 79 reserved</p> <p>Autotuning:</p> <p>80 = speed does not reach setpoint 81 = motor is not accelerating or wrong tachometer polarity 82 = not enough load (too low inertia) for the detection of speed controller parameters 83 ... 89 reserved</p> <p>A134 ParComp (alarm parameter compatibility conflict):</p> <p>10000 ... 19999 = the parameter with the compatibility conflict can be identified by means of the last 4 digits</p>	0	65535	0	'	C																																																			

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
	<p>Thyristor diagnosis:</p> <p>30090 = shortcut caused by V1 30091 = shortcut caused by V2 30092 = shortcut caused by V3 30093 = shortcut caused by V4 30094 = shortcut caused by V5 30095 = shortcut caused by V6 30096 = thyristor block test failed 30097 = shortcut caused by V15 or V22 30098 = shortcut caused by V16 or V23 30099 = shortcut caused by V11 or V24 30100 = shortcut caused by V12 or V25 30101 = shortcut caused by V13 or V26 30102 = shortcut caused by V14 or V21 30103 = motor connected to ground 30104 = armature winding is not connected</p> <p>A124 SpeedScale (alarm speed scaling): 40000 ... 49999 = the parameter with the speed scaling conflict can be identified by means of the last 4 digits</p> <p>F549 ParComp (fault parameter compatibility conflict): 50000 ... 59999= the parameter with the compatibility conflict can be identified by means of the last 4 digits</p> <p>ControlBuilder (application programming): 64112 = attempt to run an illegal copy of a protected program 64113 = retain data invalid caused by SDCS-CON-4 hardware problem Int. Scaling: 1 == 1 Type: I Volatile: Y</p>					
9.12	<p>LastFault (last fault) Displays the last fault: F<Fault code> <FaultName> (e.g. F2 ArmOverCur) Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	C
9.13	<p>2ndLastFault (2nd last fault) Displays the 2nd last fault: F<Fault code> <FaultName> (e.g. F2 ArmOverCur) Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	C
9.14	<p>3rdLastFault (3rd last fault) Displays the 3rd last fault: F<Fault code> <FaultName> (e.g. F2 ArmOverCur) Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 10	Start / stop select					
10.01	<p>CommandSel (command selector) <i>UsedMCW (7.04)</i> selector:</p> <p>0 = Local I/O Drive is controlled via local I/O. <i>Reset (10.03)</i> = DI6; <i>UsedMCW (7.04)</i> bit 7, default <i>OnOff1 (10.15)</i> = DI7; <i>UsedMCW (7.04)</i> bit 0, default and <i>StartStop (10.16)</i> = DI8; <i>UsedMCW (7.04)</i> bit 3, default</p> <p>1 = MainCtrlWord drive is controlled via <i>MainCtrlWord (7.01)</i></p> <p>2 = Key Automatic switchover from MainCtrlWord to Local I/O in case of a communication fault. It is still possible to control the drive via local I/O. <i>OnOff1 (10.15)</i> = DI7; <i>UsedMCW (7.04)</i> bit 0, default and <i>StartStop (10.16)</i> = DI8; <i>UsedMCW (7.04)</i> bit 3, default. The used speed reference is set by means of <i>FixedSpeed1 (23.02)</i>.</p> <p>3 = 12PLink Drive is controlled from 12-pulse master (OnOff1, StartStop and Reset). Only available when <i>OperModeSel (43.01)</i> = 12P ParaSla or 12P SerSla.</p> <p>4 = FexLink Drive is controlled from field exciter master (OnOff1, StartStop and Reset). Only available when <i>OperModeSel (43.01)</i> = FieldExciter.</p> <p>Note1: Local control mode has higher priority than the selection made with <i>CommandSel (10.01)</i>.</p> <p>Note2: The commands <i>Off2 (10.08)</i>, <i>E Stop (10.09)</i> and <i>Reset (10.03)</i> are always active (in case they are assigned) regardless of <i>CommandSel (10.01)</i> setting.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Local I/O	FexLink	Local I/O	-	C
10.02	<p>Direction (direction of rotation) Binary signal for Direction, <i>AuxCtrlWord2 (7.03)</i> bit 8. <i>Direction (10.02)</i> allows to change the direction of rotation:</p> <p>0 = NotUsed default</p> <p>1 = DI1 1 = Reverse, 0 = Forward</p> <p>2 = DI2 1 = Reverse, 0 = Forward</p> <p>3 = DI3 1 = Reverse, 0 = Forward</p> <p>4 = DI4 1 = Reverse, 0 = Forward</p> <p>5 = DI5 1 = Reverse, 0 = Forward</p> <p>6 = DI6 1 = Reverse, 0 = Forward</p> <p>7 = DI7 1 = Reverse, 0 = Forward</p> <p>8 = DI8 1 = Reverse, 0 = Forward</p> <p>9 = DI9 1 = Reverse, 0 = Forward, only available with digital extension board</p> <p>10 = DI10 1 = Reverse, 0 = Forward, only available with digital extension board</p> <p>11 = DI11 1 = Reverse, 0 = Forward, only available with digital extension board</p> <p>12 = MCW Bit11 1 = Reverse, 0 = Forward, <i>MainCtrlWord (7.01)</i> bit 11</p> <p>13 = MCW Bit12 1 = Reverse, 0 = Forward, <i>MainCtrlWord (7.01)</i> bit 12</p> <p>14 = MCW Bit13 1 = Reverse, 0 = Forward, <i>MainCtrlWord (7.01)</i> bit 13</p> <p>15 = MCW Bit14 1 = Reverse, 0 = Forward, <i>MainCtrlWord (7.01)</i> bit 14</p> <p>16 = MCW Bit15 1 = Reverse, 0 = Forward, <i>MainCtrlWord (7.01)</i> bit 15</p> <p>17 = ACW Bit12 1 = Reverse, 0 = Forward, <i>AuxCtrlWord (7.02)</i> bit 12</p> <p>18 = ACW Bit13 1 = Reverse, 0 = Forward, <i>AuxCtrlWord (7.02)</i> bit 13</p> <p>19 = ACW Bit14 1 = Reverse, 0 = Forward, <i>AuxCtrlWord (7.02)</i> bit 14</p> <p>20 = ACW Bit15 1 = Reverse, 0 = Forward, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.03	<p>Reset (reset command) Binary signal for Reset, <i>UsedMCW (7.04)</i> bit 7:</p> <p>0 = NotUsed</p> <p>1 = DI1 Reset by rising edge (0 → 1)</p> <p>2 = DI2 Reset by rising edge (0 → 1)</p> <p>3 = DI3 Reset by rising edge (0 → 1)</p> <p>4 = DI4 Reset by rising edge (0 → 1)</p> <p>5 = DI5 Reset by rising edge (0 → 1)</p> <p>6 = DI6 Reset by rising edge (0 → 1), default</p> <p>7 = DI7 Reset by rising edge (0 → 1)</p> <p>8 = DI8 Reset by rising edge (0 → 1)</p> <p>9 = DI9 Reset by rising edge (0 → 1), only available with digital extension board</p> <p>10 = DI10 Reset by rising edge (0 → 1), only available with digital extension board</p> <p>11 = DI11 Reset by rising edge (0 → 1), only available with digital extension board</p> <p>12 = MCW Bit11 Reset by rising edge (0 → 1), <i>MainCtrlWord (7.01)</i> bit 11</p> <p>13 = MCW Bit12 Reset by rising edge (0 → 1), <i>MainCtrlWord (7.01)</i> bit 12</p> <p>14 = MCW Bit13 Reset by rising edge (0 → 1), <i>MainCtrlWord (7.01)</i> bit 13</p> <p>15 = MCW Bit14 Reset by rising edge (0 → 1), <i>MainCtrlWord (7.01)</i> bit 14</p> <p>16 = MCW Bit15 Reset by rising edge (0 → 1), <i>MainCtrlWord (7.01)</i> bit 15</p> <p>17 = ACW Bit12 Reset by rising edge (0 → 1), <i>AuxCtrlWord (7.02)</i> bit 12</p> <p>18 = ACW Bit13 Reset by rising edge (0 → 1), <i>AuxCtrlWord (7.02)</i> bit 13</p> <p>19 = ACW Bit14 Reset by rising edge (0 → 1), <i>AuxCtrlWord (7.02)</i> bit 14</p> <p>20 = ACW Bit15 Reset by rising edge (0 → 1), <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	DI6	-	C
10.04	<p>SyncCommand (synchronization command for position counter) Binary signal for Synchronization. At the synchronization event [<i>AuxCtrlWord (7.02)</i> bit 9 SyncCommand] the position counter is initialized by following values:</p> <ul style="list-style-type: none"> - <i>PosCountInitLo (50.08)</i> is written into <i>PosCountLow (3.07)</i> and - <i>PosCountInitHi (50.09)</i> is written into <i>PosCountHigh (3.08)</i>. <p>At the same time <i>AuxStatWord (8.02)</i> bit 5 SyncRdy is set to 1. The synchronization can be inhibited by setting <i>AuxCtrlWord (7.02)</i> bit 10 SyncDisable to 1. The synchronization event is selected by:</p> <p>0 = NotUsed default</p> <p>1 = DI7+ rising edge (0 → 1) of DI7</p> <p>2 = DI7Hi&Z DI7 = 1 and rising edge (0 → 1) of zero channel pulse encoder</p> <p>3 = DI7Hi&Z Fwd DI7 = 1 and rising edge (0 → 1) of zero channel pulse encoder, motor rotating forward</p> <p>4 = DI7Hi&Z Rev DI7 = 1 and rising edge (0 → 1) of zero channel pulse encoder, motor rotating reverse</p> <p>5 = DI7- falling edge (1 → 0) of DI7,</p> <p>6 = DI7Lo&Z DI7 = 0 and rising edge (0 → 1) of zero channel pulse encoder</p> <p>7 = DI7Lo&Z Fwd DI7 = 0 and rising edge (0 → 1) of zero channel pulse encoder, motor rotating forward</p> <p>8 = DI7Lo&Z Rev DI7 = 0 and rising edge (0 → 1) of zero channel pulse encoder, motor rotating reverse</p> <p>9 = Z rising edge (0 → 1) of zero channel pulse encoder</p> <p>10 = SyncCommand rising edge (0 → 1) of <i>AuxCtrlWord (7.02)</i> bit 9</p> <p>Note1: Forward rotation means that the encoders A pulses are before the B pulses. Reverse rotation means that the encoders B pulses are before the A pulses.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	SyncCommand	NotUsed	-	E
10.05	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>10.06</p>	<p>MotFanAck (motor fan acknowledge) The drive trips with F523 ExtFanAck [<i>FaultWord2 (9.02)</i> bit 6] if a digital input for an external fan is selected and the acknowledge is missing for 10 seconds: 0 = NotUsed no reaction 1 = DI1 1= acknowledge OK, 0 = no acknowledge 2 = DI2 1= acknowledge OK, 0 = no acknowledge, default 3 = DI3 1= acknowledge OK, 0 = no acknowledge 4 = DI4 1= acknowledge OK, 0 = no acknowledge 5 = DI5 1= acknowledge OK, 0 = no acknowledge 6 = DI6 1= acknowledge OK, 0 = no acknowledge 7 = DI7 1= acknowledge OK, 0 = no acknowledge 8 = DI8 1= acknowledge OK, 0 = no acknowledge 9 = DI9 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board 10 = DI10 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board 11 = DI11 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	DI2	-	C
<p>10.07</p>	<p>HandAuto (hand/auto command) Binary signal to switch between Hand (Local I/O) and Auto (MainCtrlWord) control. Thus the selection made by <i>CommandSel (10.01)</i> is overwritten: 0 = NotUsed default 1 = DI1 1 = Auto, 0 = Hand 2 = DI2 1 = Auto, 0 = Hand 3 = DI3 1 = Auto, 0 = Hand 4 = DI4 1 = Auto, 0 = Hand 5 = DI5 1 = Auto, 0 = Hand 6 = DI6 1 = Auto, 0 = Hand 7 = DI7 1 = Auto, 0 = Hand 8 = DI8 1 = Auto, 0 = Hand 9 = DI9 1 = Auto, 0 = Hand, only available with digital extension board 10 = DI10 1 = Auto, 0 = Hand, only available with digital extension board 11 = DI11 1 = Auto, 0 = Hand, only available with digital extension board 12 = MCW Bit11 1 = Auto, 0 = Hand, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1 = Auto, 0 = Hand, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1 = Auto, 0 = Hand, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1 = Auto, 0 = Hand, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1 = Auto, 0 = Hand, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1 = Auto, 0 = Hand, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1 = Auto, 0 = Hand, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1 = Auto, 0 = Hand, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1 = Auto, 0 = Hand, <i>AuxCtrlWord (7.02)</i> bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.08	<p>Off2 (off2 command, electrical disconnect) Binary signal for Off2 (Emergency Off / Coast Stop), <i>UsedMCW (7.04)</i> bit 1. For fastest reaction use fast digital inputs DI7 or DI8: 0 = NotUsed 1 = DI1 1= no Off2, 0 = Off2 active 2 = DI2 1= no Off2, 0 = Off2 active 3 = DI3 1= no Off2, 0 = Off2 active 4 = DI4 1= no Off2, 0 = Off2 active, default 5 = DI5 1= no Off2, 0 = Off2 active 6 = DI6 1= no Off2, 0 = Off2 active 7 = DI7 1= no Off2, 0 = Off2 active 8 = DI8 1= no Off2, 0 = Off2 active 9 = DI9 1= no Off2, 0 = Off2 active, only available with digital extension board 10 = DI10 1= no Off2, 0 = Off2 active, only available with digital extension board 11 = DI11 1= no Off2, 0 = Off2 active, only available with digital extension board 12 = MCW Bit11 1= no Off2, 0 = Off2 active, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1= no Off2, 0 = Off2 active, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1= no Off2, 0 = Off2 active, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1= no Off2, 0 = Off2 active, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1= no Off2, 0 = Off2 active, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1= no Off2, 0 = Off2 active, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1= no Off2, 0 = Off2 active, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1= no Off2, 0 = Off2 active, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1= no Off2, 0 = Off2 active, <i>AuxCtrlWord (7.02)</i> bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	DI4	-	C
10.09	<p>E Stop (emergency stop command) Binary signal for E Stop, <i>UsedMCW (7.04)</i> bit 2: 0 = NotUsed 1 = DI1 1= no E Stop, 0 = E Stop active 2 = DI2 1= no E Stop, 0 = E Stop active 3 = DI3 1= no E Stop, 0 = E Stop active 4 = DI4 1= no E Stop, 0 = E Stop active 5 = DI5 1= no E Stop, 0 = E Stop active, default 6 = DI6 1= no E Stop, 0 = E Stop active 7 = DI7 1= no E Stop, 0 = E Stop active 8 = DI8 1= no E Stop, 0 = E Stop active 9 = DI9 1= no E Stop, 0 = E Stop active, only available with digital extension board 10 = DI10 1= no E Stop, 0 = E Stop active, only available with digital extension board 11 = DI11 1= no E Stop, 0 = E Stop active, only available with digital extension board 12 = MCW Bit11 1= no E Stop, 0 = E Stop active, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1= no E Stop, 0 = E Stop active, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1= no E Stop, 0 = E Stop active, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1= no E Stop, 0 = E Stop active, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1= no E Stop, 0 = E Stop active, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1= no E Stop, 0 = E Stop active, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1= no E Stop, 0 = E Stop active, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1= no E Stop, 0 = E Stop active, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1= no E Stop, 0 = E Stop active, <i>AuxCtrlWord (7.02)</i> bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	DI5	-	C
10.10	<p>ParChange (parameter change) I Binary signal to release either Motor1/User1 or Motor2/User2. The choice to release Motor1/2 (shared motion) or macros User1/2 is defined by means of <i>MacroChangeMode (16.05)</i>: 0 = NotUsed default 1 = DI1 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0) 2 = DI2 switch to Motor2/User2 by rising edge (0 → 1),</p>	NotUsed	ACW Bit15	NotUsed	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
	<p>3 = DI3 switch to Motor1/User1 by falling edge (1 → 0) switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>4 = DI4 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>5 = DI5 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>6 = DI6 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>7 = DI7 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>8 = DI8 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0)</p> <p>9 = DI9 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), only available with digital extension board</p> <p>10 = DI10 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), only available with digital extension board</p> <p>11 = DI11 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), only available with digital extension board</p> <p>12 = MCW Bit11 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>MainCtrlWord (7.01)</i> bit 11</p> <p>13 = MCW Bit12 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>MainCtrlWord (7.01)</i> bit 12</p> <p>14 = MCW Bit13 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>MainCtrlWord (7.01)</i> bit 13</p> <p>15 = MCW Bit14 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>MainCtrlWord (7.01)</i> bit 14</p> <p>16 = MCW Bit15 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>MainCtrlWord (7.01)</i> bit 15</p> <p>17 = ACW Bit12 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>AuxCtrlWord (7.02)</i> bit 12</p> <p>18 = ACW Bit13 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>AuxCtrlWord (7.02)</i> bit 13</p> <p>19 = ACW Bit14 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>AuxCtrlWord (7.02)</i> bit 14</p> <p>20 = ACW Bit15 switch to Motor2/User2 by rising edge (0 → 1), switch to Motor1/User1 by falling edge (1 → 0), <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Note1: The macro (User1/User2) selection made by <i>ParChange (10.10)</i> overrides the selection made with <i>ApplMacro (99.08)</i>.</p> <p>Note2: The motor (Motor1/Motor2) selection can be made in drive state RdyOn and RdyRun.</p> <p>Note3: <i>ParChange (10.10)</i> itself is not overwritten.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>					
10.11	Unused					
10.12	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.13	<p>OvrVoltProt (over voltage protection triggered) Digital input for over voltage protection unit: 0 = NotUsed default 1 = DI1 0 = triggered, 1 = not triggered 2 = DI2 0 = triggered, 1 = not triggered 3 = DI3 0 = triggered, 1 = not triggered 4 = DI4 0 = triggered, 1 = not triggered 5 = DI5 0 = triggered, 1 = not triggered 6 = DI6 0 = triggered, 1 = not triggered 7 = DI7 0 = triggered, 1 = not triggered 8 = DI8 0 = triggered, 1 = not triggered 9 = DI9 0 = triggered, 1 = not triggered, only available with digital extension board 10 = DI10 0 = triggered, 1 = not triggered, only available with digital extension board 11 = DI11 0 = triggered, 1 = not triggered, only available with digital extension board</p> <p>Note1: <i>OvrVoltProt (14.13)</i> is only active when drive is in field exciter mode. – <i>OperModeSel (43.01)</i> = FieldConv Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	NotUsed	-	E
10.14	Unused					
10.15	<p>OnOff1 (on/off1 command) Binary signal for OnOff1, <i>UsedMCW (7.04)</i> bit 0: 0 = NotUsed 1 = DI1 On by rising edge (0 → 1), 0 = Off1 2 = DI2 On by rising edge (0 → 1), 0 = Off1 3 = DI3 On by rising edge (0 → 1), 0 = Off1 4 = DI4 On by rising edge (0 → 1), 0 = Off1 5 = DI5 On by rising edge (0 → 1), 0 = Off1 6 = DI6 On by rising edge (0 → 1), 0 = Off1 7 = DI7 On by rising edge (0 → 1), 0 = Off1, default 8 = DI8 On by rising edge (0 → 1), 0 = Off1 9 = DI9 On by rising edge (0 → 1), 0 = Off1, only available with digital extension board 10 = DI10 On by rising edge (0 → 1), 0 = Off1, only available with digital extension board 11 = DI11 On by rising edge (0 → 1), 0 = Off1, only available with digital extension board 12 = MCW Bit11 On by rising edge (0 → 1), 0 = Off1, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 On by rising edge (0 → 1), 0 = Off1, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 On by rising edge (0 → 1), 0 = Off1, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 On by rising edge (0 → 1), 0 = Off1, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 On by rising edge (0 → 1), 0 = Off1, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 On by rising edge (0 → 1), 0 = Off1, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 On by rising edge (0 → 1), 0 = Off1, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 On by rising edge (0 → 1), 0 = Off1, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 On by rising edge (0 → 1), 0 = Off1, <i>AuxCtrlWord (7.02)</i> bit 15 21 = DI7DI8 On and Start by rising edge (0 → 1) of DI7, Stop and Off1 by falling edge (1 → 0) of DI8. <i>StartStop (10.16)</i> has to be changed to DI7DI8 as well.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI7DI8	DI7	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.16	<p>StartStop (start/stop command) Binary signal for StartStop, <i>UsedMCW (7.04)</i> bit 3:</p> <p>0 = NotUsed</p> <p>1 = DI1 Start by rising edge (0 → 1), 0 = Stop</p> <p>2 = DI2 Start by rising edge (0 → 1), 0 = Stop</p> <p>3 = DI3 Start by rising edge (0 → 1), 0 = Stop</p> <p>4 = DI4 Start by rising edge (0 → 1), 0 = Stop</p> <p>5 = DI5 Start by rising edge (0 → 1), 0 = Stop</p> <p>6 = DI6 Start by rising edge (0 → 1), 0 = Stop</p> <p>7 = DI7 Start by rising edge (0 → 1), 0 = Stop</p> <p>8 = DI8 Start by rising edge (0 → 1), 0 = Stop, default</p> <p>9 = DI9 Start by rising edge (0 → 1), 0 = Stop, only available with digital extension board</p> <p>10 = DI10 Start by rising edge (0 → 1), 0 = Stop, only available with digital extension board</p> <p>11 = DI11 Start by rising edge (0 → 1), 0 = Stop, only available with digital extension board</p> <p>12 = MCW Bit11 Start by rising edge (0 → 1), 0 = Stop, <i>MainCtrlWord (7.01)</i> bit 11</p> <p>13 = MCW Bit12 Start by rising edge (0 → 1), 0 = Stop, <i>MainCtrlWord (7.01)</i> bit 12</p> <p>14 = MCW Bit13 Start by rising edge (0 → 1), 0 = Stop, <i>MainCtrlWord (7.01)</i> bit 13</p> <p>15 = MCW Bit14 Start by rising edge (0 → 1), 0 = Stop, <i>MainCtrlWord (7.01)</i> bit 14</p> <p>16 = MCW Bit15 Start by rising edge (0 → 1), 0 = Stop, <i>MainCtrlWord (7.01)</i> bit 15</p> <p>17 = ACW Bit12 Start by rising edge (0 → 1), 0 = Stop, <i>AuxCtrlWord (7.02)</i> bit 12</p> <p>18 = ACW Bit13 Start by rising edge (0 → 1), 0 = Stop, <i>AuxCtrlWord (7.02)</i> bit 13</p> <p>19 = ACW Bit14 Start by rising edge (0 → 1), 0 = Stop, <i>AuxCtrlWord (7.02)</i> bit 14</p> <p>20 = ACW Bit15 Start by rising edge (0 → 1), 0 = Stop, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>21 = DI7DI8 On and Start by rising edge (0 → 1) of DI7, Stop and Off1 by falling edge (1 → 0) of DI8. <i>OnOff1 (10.15)</i> has to be changed to DI7DI8 as well.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI7DI8	DI8		C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.17	<p>Jog1 (jogging 1 command) Binary signal for Jog1. Selects speed reference set in <i>FixedSpeed1 (23.02)</i>, <i>UsedMCW (7.04)</i> bit 8:</p> <p>0 = NotUsed default 1 = DI1 1= Jog1 active, 0 = no Jog1 2 = DI2 1= Jog1 active, 0 = no Jog1 3 = DI3 1= Jog1 active, 0 = no Jog1 4 = DI4 1= Jog1 active, 0 = no Jog1 5 = DI5 1= Jog1 active, 0 = no Jog1 6 = DI6 1= Jog1 active, 0 = no Jog1 7 = DI7 1= Jog1 active, 0 = no Jog1 8 = DI8 1= Jog1 active, 0 = no Jog1 9 = DI9 1= Jog1 active, 0 = no Jog1, only available with digital extension board 10 = DI10 1= Jog1 active, 0 = no Jog1, only available with digital extension board 11 = DI11 1= Jog1 active, 0 = no Jog1, only available with digital extension board 12 = MCW Bit11 1= Jog1 active, 0 = no Jog1, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1= Jog1 active, 0 = no Jog1, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1= Jog1 active, 0 = no Jog1, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1= Jog1 active, 0 = no Jog1, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1= Jog1 active, 0 = no Jog1, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1= Jog1 active, 0 = no Jog1, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1= Jog1 active, 0 = no Jog1, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1= Jog1 active, 0 = no Jog1, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1= Jog1 active, 0 = no Jog1, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Note1: <i>Jog2 (10.18)</i> overrides <i>Jog1 (10.17)</i></p> <p>Note2: <i>CommandSel (10.01)</i> = Local I/O: – The drive has to be in state RdyRun (RdyRef is still zero). When Jog1 command is given the drives goes automatically into state Running and turns with speed set in <i>FixedSpeed1 (23.02)</i>.</p> <p><i>CommandSel (10.01)</i> = MainCtrlWord: – Jog1 command is invalid. – <i>FixedSpeed1 (23.02)</i> can be released by <i>MainCtrlWord (7.01)</i> Bit 8 plus Run command.</p> <p>Note3: Acceleration and deceleration time for jogging is selected by <i>JogAccTime (22.12)</i> and <i>JogDecTime (22.13)</i>.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	-	C
10.18	<p>Jog2 (jogging 2 command) Binary signal for Jog2. Selects speed reference set in <i>FixedSpeed2 (23.03)</i>, <i>UsedMCW (7.04)</i> bit 9: Selection see <i>Jog1 (10.17)</i>.</p> <p>Note1: <i>Jog2 (10.18)</i> overrides <i>Jog1 (10.17)</i></p> <p>Note2: <i>CommandSel (10.01)</i> = Local I/O: – The drive has to be in state RdyRun (RdyRef is still zero). When Jog2 command is given the drives goes automatically into state Running and turns with speed set in <i>FixedSpeed2 (23.03)</i>.</p> <p><i>CommandSel (10.01)</i> = MainCtrlWord: – Jog2 command is invalid. – <i>FixedSpeed2 (23.03)</i> can be released by <i>MainCtrlWord (7.01)</i> Bit 9 plus Run command.</p> <p>Note3: Acceleration and deceleration time for jogging is selected by <i>JogAccTime (22.12)</i> and <i>JogDecTime (22.13)</i>.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.19	Unused					
10.20	<p>ConvFanAck (converter fan acknowledge) The drive trips with F527 ConvFanAck [<i>FaultWord2</i> (9.02) bit 10] if a digital input for the converter fan is selected and the acknowledge is missing for 10 seconds. As soon as the acknowledge is missing A104 ConvOverTemp [<i>AlarmWord1</i> (9.06) bit 3] is set. The alarm is reset automatically if the converter fan acknowledge is coming back before the 10 seconds are elapsed:</p> <p>0 = NotUsed no reaction 1 = DI1 1= acknowledge OK, 0 = no acknowledge, default 2 = DI2 1= acknowledge OK, 0 = no acknowledge 3 = DI3 1= acknowledge OK, 0 = no acknowledge 4 = DI4 1= acknowledge OK, 0 = no acknowledge 5 = DI5 1= acknowledge OK, 0 = no acknowledge 6 = DI6 1= acknowledge OK, 0 = no acknowledge 7 = DI7 1= acknowledge OK, 0 = no acknowledge 8 = DI8 1= acknowledge OK, 0 = no acknowledge 9 = DI9 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board 10 = DI10 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board 11 = DI11 1= acknowledge OK, 0 = no acknowledge, only available with digital extension board</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	DI1	'	C
10.21	<p>MainContAck (main contactor acknowledge) The drive trips with F524 MainContAck [<i>FaultWord2</i> (9.02) bit 7] if a digital input for the main contactor is selected and the acknowledge is missing: Selection see <i>ConvFanAck</i> (10.20).</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	DI3	'	C
10.22	<p>DynBrakeAck (dynamic braking acknowledge) The drive sets A105 DynBreakAck [<i>AlarmWord1</i> (9.06) bit 4] if a digital input for dynamic breaker is selected and the acknowledge (dynamic breaking active) is still present when Run [<i>UsedMCW</i> (7.04) bit 3] is set: Selection see <i>ConvFanAck</i> (10.20). A105 DynBreakAck [<i>AlarmWord1</i> (9.06) bit 4] should prevent the drive to be switched on while dynamic breaking is active.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	NotUsed	'	C
10.23	<p>DC BreakAck (DC breaker acknowledge) The drive sets A103 DCBreakAck [<i>AlarmWord1</i> (9.06) bit 2] if a digital input for the DC-breaker is selected and the acknowledge is missing: Selection see <i>ConvFanAck</i> (10.20). The motor will coast if A103 DCBreakAck [<i>AlarmWord1</i> (9.06) bit 2] is set.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	NotUsed	'	E
10.24	Unused					
10.25	<p>DI1Invert (invert digital input 1) Inversion selection for digital input 1: 0 = Direct 1 = Inverted</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Direct	Inverted	Direct	'	C
10.26	<p>DI2Invert (invert digital input 2) Inversion selection for digital input 2: 0 = Direct 1 = Inverted</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Direct	Inverted	Direct	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
10.27	DI3Invert (invert digital input 3) Inversion selection for digital input 3: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.28	DI4Invert (invert digital input 4) Inversion selection for digital input 4: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.29	DI5Invert (invert digital input 5) Inversion selection for digital input 5: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.30	DI6Invert (invert digital input 6) Inversion selection for digital input 6: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.31	DI7Invert (invert digital input 7) Inversion selection for digital input 7: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.32	DI8Invert (invert digital input 8) Inversion selection for digital input 8: 0 = Direct 1 = Inverted Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	C
10.33	DI9Invert (invert digital input 9) Inversion selection for digital input 9: 0 = Direct only available with digital extension board 1 = Inverted only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	E
10.34	DI10Invert (invert digital input 10) Inversion selection for digital input 10: 0 = Direct only available with digital extension board 1 = Inverted only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	E
10.35	DI11Invert (invert digital input 11) Inversion selection for digital input 11: 0 = Direct only available with digital extension board 1 = Inverted only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N	Direct	Inverted	Direct	'	E
Group 11	Speed reference input					
11.01	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.02	<p>Ref1Mux (speed reference 1 selector/multiplexer) Speed reference 1 selector:</p> <p>0 = Open switch for speed ref. 1 is fixed open 1 = Close switch for speed ref 1 is fixed closed, default 2 = DI1 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 3 = DI2 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 4 = DI3 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 5 = DI4 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 6 = DI5 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 7 = DI6 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 8 = DI7 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 9 = DI8 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0 10 = DI9 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board 11 = DI10 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board 12 = DI11 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board 13 = MCW Bit11 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 11 14 = MCW Bit12 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 12 15 = MCW Bit13 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 13 16 = MCW Bit14 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 14 17 = MCW Bit15 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 15 18 = ACW Bit12 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 12 19 = ACW Bit13 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 13 20 = ACW Bit14 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 14 21 = ACW Bit15 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Open	ACW Bit15	Close		C
11.03	<p>Ref1Sel (speed reference 1 input signal) Speed reference 1 value:</p> <p>0 = SpeedRef2301 <i>SpeedRef (23.01)</i>, default 1 = AuxSpeedRef <i>AuxSpeedRef (23.13)</i> 2 = AI1 analog input AI1 3 = AI2 analog input AI2 4 = AI3 analog input AI3 5 = AI4 analog input AI4 6 = AI5 analog input AI5 7 = AI6 analog input AI6 8 = FixedSpeed1 <i>FixedSpeed1 (23.02)</i> 9 = FixedSpeed2 <i>FixedSpeed2 (23.03)</i> 10 = MotPot motor poti controlled by <i>MotPotUp (11.13)</i>, <i>MotPotDown (11.14)</i> and <i>MotPotMin (11.15)</i> 11 = AuxRef-AI1 <i>AuxSpeedRef (23.13)</i> minus value of AI1 12 = reserved reserved 13 = MinAI2AI4 minimum of AI2 and AI4 14 = MaxAI2AI4 maximum of AI2 and AI4</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	SpeedRef	MaxAI2AI4	SpeedRef		C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.04	Ref1Min (speed reference 1 minimum) Negative limit (minimum value) speed reference 1. Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $0rpm$ Int. Scaling: (2.29) Type: SI Volatile: N	-10000	0	-1500	rpm	E
11.05	Ref1Max (speed reference 1 maximum) Positive limit (maximum value) speed reference 1. Internally limited from: $0rpm$ to $(2.29) * \frac{32767}{20000} rpm$ Int. Scaling: (2.29) Type: SI Volatile: N	0	10000	1500	rpm	E
11.06	Ref2Sel (speed reference 2 input signal) Speed reference 2 value: 0 = SpeedRef2301 <i>SpeedRef (23.01)</i> , default 1 = AuxSpeedRef <i>AuxSpeedRef (23.13)</i> 2 = AI1 analog input AI1 3 = AI2 analog input AI2 4 = AI3 analog input AI3 5 = AI4 analog input AI4 6 = AI5 analog input AI5 7 = AI6 analog input AI6 8 = FixedSpeed1 <i>FixedSpeed1 (23.02)</i> 9 = FixedSpeed2 <i>FixedSpeed2 (23.03)</i> 10 = MotPot motor poti controlled by <i>MotPotUp (11.13)</i> , <i>MotPotDown (11.14)</i> and <i>MotPotMin (11.15)</i> 11 = AI2-AI3 AI2 minus AI3 12 = AI2+AI3 AI2 plus AI3 13 = AI1*AI2 AI1 multiplied with AI2 14 = AI2*AI3 AI2 multiplied with AI3 15 = MinAI2AI4 minimum of AI2 and AI4 16 = MaxAI2AI4 maximum of AI2 and AI4 Int. Scaling: 1 == 1 Type: C Volatile: N	SpeedRef	MaxAI2AI4	SpeedRef		E
11.07	Ref2Min (speed reference 2 minimum) Negative limit (minimum value) speed reference 2. Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $0rpm$ Int. Scaling: (2.29) Type: SI Volatile: N	-10000	0	-1500	rpm	E
11.08	Ref2Max (speed reference 2 maximum) Positive limit (maximum value) speed reference 2. Internally limited from: $0rpm$ to $(2.29) * \frac{32767}{20000} rpm$ Int. Scaling: (2.29) Type: SI Volatile: N	0	10000	1500	rpm	E
11.09	Unused					
11.10	Unused					
11.11	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.12	<p>Ref2Mux (speed reference 2 selector/multiplexer) Speed reference 2 selector:</p> <p>0 = Invert Invert speed ref. 1 selection; implements a change over switch together with speed ref 1 selection. E.g. if speed ref. 1 selection switch is open the switch for speed ref. 2 is closed and vice versa.</p> <p>1 = Open switch for speed ref. 1 is fixed open, default</p> <p>2 = Close switch for speed ref 1 is fixed closed</p> <p>3 = DI1 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>4 = DI2 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>5 = DI3 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>6 = DI4 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>7 = DI5 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>8 = DI6 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>9 = DI7 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>10 = DI8 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0</p> <p>11 = DI9 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board</p> <p>12 = DI10 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board</p> <p>13 = DI11 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; only available with digital extension board</p> <p>14 = MCW Bit11 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 11</p> <p>15 = MCW Bit12 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 12</p> <p>16 = MCW Bit13 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 13</p> <p>17 = MCW Bit14 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 14</p> <p>18 = MCW Bit15 1= switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>MainCtrlWord (7.01)</i> bit 15</p> <p>19 = ACW Bit12 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 12</p> <p>20 = ACW Bit13 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 13</p> <p>21 = ACW Bit14 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 14</p> <p>22 = ACW Bit15 1 = switch is closed, speed ref 1 is active; 0 = switch is open, speed ref = 0; <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Invert	ACW Bit15	Open		E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.13	<p>MotPotUp (motor poti up) With the motor poti up function the motor speed is increased by means of the selected binary input. The acceleration is limited by <i>AccTime1</i> (22.01) until <i>Ref1Max</i> (11.05) respectively <i>Ref2Max</i> (11.08) is reached. <i>MotPotDown</i> (11.14) overrides <i>MotPotUp</i> (11.13):</p> <p>0 = NotUsed default 1 = DI1 1= increase speed, 0 = hold speed 2 = DI2 1= increase speed, 0 = hold speed 3 = DI3 1= increase speed, 0 = hold speed 4 = DI4 1= increase speed, 0 = hold speed 5 = DI5 1= increase speed, 0 = hold speed 6 = DI6 1= increase speed, 0 = hold speed 7 = DI7 1= increase speed, 0 = hold speed 8 = DI8 1= increase speed, 0 = hold speed 9 = DI9 1= increase speed, 0 = hold speed, only available with digital extension board 10 = DI10 1= increase speed, 0 = hold speed, only available with digital extension board 11 = DI11 1= increase speed, 0 = hold speed, only available with digital extension board 12 = MCW Bit11 1= increase speed, 0 = hold speed, <i>MainCtrlWord</i> (7.01) bit 11 13 = MCW Bit12 1= increase speed, 0 = hold speed, <i>MainCtrlWord</i> (7.01) bit 12 14 = MCW Bit13 1= increase speed, 0 = hold speed, <i>MainCtrlWord</i> (7.01) bit 13 15 = MCW Bit14 1= increase speed, 0 = hold speed, <i>MainCtrlWord</i> (7.01) bit 14 16 = MCW Bit15 1= increase speed, 0 = hold speed, <i>MainCtrlWord</i> (7.01) bit 15 17 = ACW Bit12 1= increase speed, 0 = hold speed, <i>AuxCtrlWord</i> (7.02) bit 12 18 = ACW Bit13 1= increase speed, 0 = hold speed, <i>AuxCtrlWord</i> (7.02) bit 13 19 = ACW Bit14 1= increase speed, 0 = hold speed, <i>AuxCtrlWord</i> (7.02) bit 14 20 = ACW Bit15 1= increase speed, 0 = hold speed, <i>AuxCtrlWord</i> (7.02) bit 15</p> <p>Note1: The speed reference is selected by means of <i>Ref1Sel</i> (11.03) = MotPot respectively <i>Ref2Sel</i> (11.06) = MotPot. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed		C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.14	<p>MotPotDown (motor poti down) With the motor poti down function the motor speed is decreased by means of the selected binary input. The deceleration is limited by <i>DecTime1 (22.02)</i> until zero speed respectively <i>MotPotMin (11.15)</i> is reached. <i>MotPotDown (11.14)</i> overrides <i>MotPotUp (11.13)</i>:</p> <p>0 = NotUsed default 1 = DI1 1= decrease speed, 0 = hold speed 2 = DI2 1= decrease speed, 0 = hold speed 3 = DI3 1= decrease speed, 0 = hold speed 4 = DI4 1= decrease speed, 0 = hold speed 5 = DI5 1= decrease speed, 0 = hold speed 6 = DI6 1= decrease speed, 0 = hold speed 7 = DI7 1= decrease speed, 0 = hold speed 8 = DI8 1= decrease speed, 0 = hold speed 9 = DI9 1= decrease speed, 0 = hold speed, only available with digital extension board 10 = DI10 1= decrease speed, 0 = hold speed, only available with digital extension board 11 = DI11 1= decrease speed, 0 = hold speed, only available with digital extension board 12 = MCW Bit11 1= decrease speed, 0 = hold speed, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1= decrease speed, 0 = hold speed, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1= decrease speed, 0 = hold speed, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1= decrease speed, 0 = hold speed, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1= decrease speed, 0 = hold speed, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1= decrease speed, 0 = hold speed, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1= decrease speed, 0 = hold speed, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1= decrease speed, 0 = hold speed, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1= decrease speed, 0 = hold speed, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Note1: The speed reference is selected by means of <i>Ref1Sel (11.03)</i> = MotPot respectively <i>Ref2Sel (11.06)</i> = MotPot. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed		C

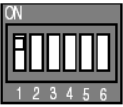
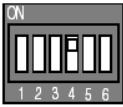
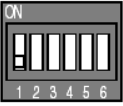
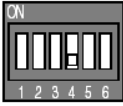
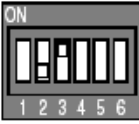
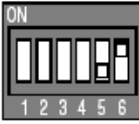
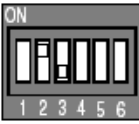
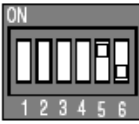
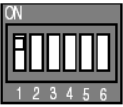
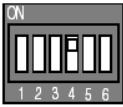
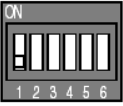
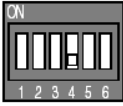
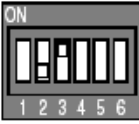
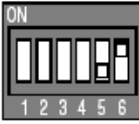
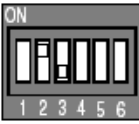
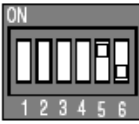
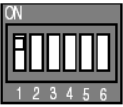
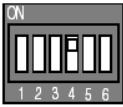
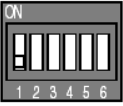
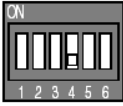
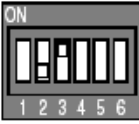
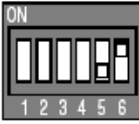
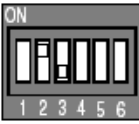
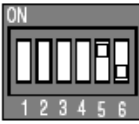
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
11.15	<p>MotPotMin (motor poti minimum) The motor poti minimum function releases the minimum speed level. The minimum speed level is defined by <i>FixedSpeed1</i> (23.02). When the drive is started the motor accelerates to <i>FixedSpeed1</i> (23.02). It is not possible to set the speed below <i>FixedSpeed1</i> (23.02) by means of the motor poti function:</p> <p>0 = NotUsed default 1 = DI1 1= released, 0 = blocked 2 = DI2 1= released, 0 = blocked 3 = DI3 1= released, 0 = blocked 4 = DI4 1= released, 0 = blocked 5 = DI5 1= released, 0 = blocked 6 = DI6 1= released, 0 = blocked 7 = DI7 1= released, 0 = blocked 8 = DI8 1= released, 0 = blocked 9 = DI9 1= released, 0 = blocked, only available with digital extension board 10 = DI10 1= released, 0 = blocked, only available with digital extension board 11 = DI11 1= released, 0 = blocked, only available with digital extension board 12 = MCW Bit11 1= released, 0 = blocked, <i>MainCtrlWord</i> (7.01) bit 11 13 = MCW Bit12 1= released, 0 = blocked, <i>MainCtrlWord</i> (7.01) bit 12 14 = MCW Bit13 1= released, 0 = blocked, <i>MainCtrlWord</i> (7.01) bit 13 15 = MCW Bit14 1= released, 0 = blocked, <i>MainCtrlWord</i> (7.01) bit 14 16 = MCW Bit15 1= released, 0 = blocked, <i>MainCtrlWord</i> (7.01) bit 15 17 = ACW Bit12 1= released, 0 = blocked, <i>AuxCtrlWord</i> (7.02) bit 12 18 = ACW Bit13 1= released, 0 = blocked, <i>AuxCtrlWord</i> (7.02) bit 13 19 = ACW Bit14 1= released, 0 = blocked, <i>AuxCtrlWord</i> (7.02) bit 14 20 = ACW Bit15 1= released, 0 = blocked, <i>AuxCtrlWord</i> (7.02) bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed		C
Group 12	Constant speeds					
	12.01	unused				
12.02	<p>ConstSpeed1 (constant speed 1) Defines constant speed 1 in rpm. The constant speed can be connected by adaptive program or application program.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} \text{rpm}$ to $(2.29) * \frac{32767}{20000} \text{rpm}$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	0	rpm	E
12.03	<p>ConstSpeed2 (constant speed 2) Defines constant speed 2 in rpm. The constant speed can be connected by adaptive program or application program.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} \text{rpm}$ to $(2.29) * \frac{32767}{20000} \text{rpm}$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	0	rpm	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
12.04	<p>ConstSpeed3 (constant speed 3) Defines constant speed 3 in rpm. The constant speed can be connected by adaptive program or application program.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	0	rpm	E
12.05	<p>ConstSpeed4 (constant speed 4) Defines constant speed 4 in rpm. The constant speed can be connected by adaptive program or application program.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	0	rpm	E
Group 13	Analog inputs					
13.01	<p>AI1HighVal (analog input 1 high value) +100% of the input signal connected to analog input 1 is scaled to the voltage in <i>AI1HighVal</i> (13.01). Example: – In case the min. / max. voltage (± 10 V) of analog input 1 should equal $\pm 250\%$ of <i>TorqRefExt</i> (2.24), set: <i>TorqRefA Sel</i> (25.10) = AI1 <i>ConvModeAI1</i> (13.03) = ± 10 V Bi, <i>AI1HighVal</i> (13.01) = 4000 mV and <i>AI1LowVal</i> (13.02) = -4000 mV</p> <p>Note1: To use current please set the jumper (SDCS-CON-4 or SDCS-IOB-3) accordingly and calculate 20 mA to 10 V.</p> <p>Int. Scaling: 1 == 1 mV Type: I Volatile: N</p>	-10000	10000	10000	mV	C
13.02	<p>AI1LowVal (analog input 1 low value) -100% of the input signal connected to analog input 1 is scaled to the voltage in <i>AI1LowVal</i> (13.02). Note1: <i>AI1LowVal</i> (13.02) is only valid if <i>ConvModeAI1</i> (13.03) = ± 10 V Bi. Note2: To use current please set the jumper (SDCS-CON-4 or SDCS-IOB-3) accordingly and calculate 20 mA to 10 V.</p> <p>Int. Scaling: 1 == 1 mV Type: SI Volatile: N</p>	-10000	10000	-10000	mV	C
13.03	<p>ConvModeAI1 (conversion mode analog input 1) Analog input 1 signal offset. The distinction between voltage and current is done via jumpers on the SDCS-CON-4 or SDCS-IOB-3 board:</p> <p>0 = ± 10 V Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	+10V Bi	6V Offset	+10V Bi	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
13.04	FilterAI1 (filter time analog input 1) Analog input 1 filter time. The hardware filter time is ≤ 2 ms. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	C
13.05	AI2HighVal (analog input 2 high value) +100% of the input signal connected to analog input 2 is scaled to the voltage in <i>AI2HighVal</i> (13.05). Note1: To use current please set the jumper (SDCS-CON-4 or SDCS-IOB-3) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: I Volatile: N	-10000	10000	10000	mV	C
13.06	AI2LowVal (analog input 2 low value) -100% of the input signal connected to analog input 2 is scaled to the voltage in <i>AI2LowVal</i> (13.06). Note1: <i>AI2LowVal</i> (13.06) is only valid if <i>ConvModeAI2</i> (13.07) = ± 10 V Bi. Note2: To use current please set the jumper (SDCS-CON-4 or SDCS-IOB-3) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: SI Volatile: N	-10000	10000	-10000	mV	C
13.07	ConvModeAI2 (conversion mode analog input 2) Analog input 2 signal offset. The distinction between voltage and current is done via jumpers on the SDCS-CON-4 or SDCS-IOB-3 board: 0 = ± 10 V Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	+10V Bi	6V Offset	+10V Bi	-	C
13.08	FilterAI2 (filter time analog input 2) Analog input 2 filter time. The hardware filter time is ≤ 2 ms. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	C
13.09	AI3HighVal (analog input 3 high value) +100% of the input signal connected to analog input 3 is scaled to the voltage in <i>AI3HighVal</i> (13.09). Note1: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: I Volatile: N	-10000	10000	10000	mV	E
13.10	AI3LowVal (analog input 3 low value) -100% of the input signal connected to analog input 3 is scaled to the voltage in <i>AI3LowVal</i> (13.10). Note1: <i>AI3LowVal</i> (13.10) is only valid if <i>ConvModeAI3</i> (13.11) = ± 10 V Bi. Note2: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: SI Volatile: N	-10000	10000	-10000	mV	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
13.11	<p>ConvModeAI3 (conversion mode analog input 3) Analog input 3 signal offset. Analog input 3 on the SDCS-CON-4 is only working with voltage. The distinction between voltage and current is done via jumpers on the SDCS-IOB-3 board:</p> <p>0 = ±10V Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	+10V Bi	6V Offset	+10V Bi	-	E
13.12	<p>FilterAI3 (filter time analog input 3) Analog input 3 filter time. The hardware filter time is ≤ 2 ms.</p> <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	10000	0	ms	E
13.13	<p>AI4HighVal (analog input 4 high value) +100% of the input signal connected to analog input 4 is scaled to the voltage in <i>AI4HighVal</i> (13.13).</p> <p>Note1: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V.</p> <p>Int. Scaling: 1 == 1 mV Type: I Volatile: N</p>	-10000	10000	10000	mV	E
13.14	<p>AI4LowVal (analog input 4 low value) -100% of the input signal connected to analog input 4 is scaled to the voltage in <i>AI4LowVal</i> (13.14).</p> <p>Note1: <i>AI3LowVal</i> (13.14) is only valid if <i>ConvModeAI4</i> (13.15) = ±10V Bi.</p> <p>Note2: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V.</p> <p>Int. Scaling: 1 == 1 mV Type: SI Volatile: N</p>	-10000	10000	-10000	mV	E
13.15	<p>ConvModeAI4 (conversion mode analog input 4) Analog input 4 signal offset. Analog input 4 on the SDCS-CON-4 is only working with voltage. The distinction between voltage and current is done via jumpers on the SDCS-IOB-3 board:</p> <p>0 = ±10V Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	+10V Bi	6V Offset	+10V Bi	-	E
13.16	<p>FilterAI4 (filter time analog input 4) Analog input 4 filter time. The hardware filter time is ≤ 2 ms.</p> <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	10000	0	ms	E
13.17	<p>TachoHighVal (analog input tacho high value) +100% of the input signal connected to analog input tacho is scaled to the voltage in <i>TachoHighVal</i> (13.17).</p> <p>Note1: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V.</p> <p>Int. Scaling: 1 == 1 mV Type: I Volatile: N</p>	-10000	10000	10000	mV	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
13.18	TachoLowVal (analog input tacho low value) -100% of the input signal connected to analog input tacho is scaled to the voltage in <i>TachoLowVal</i> (13.18). Note1: <i>TachoLowVal</i> (13.18) is only valid if <i>ConvModeTacho</i> (13.19) = $\pm 10V$ Bi. Note2: To use current please set the jumper (SDCS-IOB-3) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: SI Volatile: N	-10000	10000	-10000	mV	E
13.19	ConvModeTacho (conversion mode analog input tacho) Analog input tacho signal offset. Analog input tacho on the SDCS-CON-2 is only working with voltage. The distinction between voltage and current is done via jumpers on the SDCS-IOB-3 board: 0 = $\pm 10V$ Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	+10V Bi	6V Offset	+10V Bi	-	E
13.20	Unused					
13.21	AI5HighVal (analog input 5 high value) +100% of the input signal connected to analog input 5 is scaled to the voltage in <i>AI5HighVal</i> (13.21). Note1: To use current please set the DIP-switches (RAIO-01) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: I Volatile: N	-10000	10000	10000	mV	E
13.22	AI5LowVal (analog input 5 low value) -100% of the input signal connected to analog input 5 is scaled to the voltage in <i>AIO5LowVal</i> (13.22). Note1: <i>AI5LowVal</i> (13.22) is only valid if <i>ConvModeAI5</i> (13.23) = $\pm 10V$ Bi. Note2: To use current please set the DIP-switches (RAIO-01) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: SI Volatile: N	-10000	10000	-10000	mV	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																						
<p>13.23</p>	<p>ConvModeAI5 (conversion mode analog input 5) Analog input 5 signal offset. The distinction between bipolar and unipolar respectively voltage and current is done via DIP-switches on the RAIO-01 board: 0 = ±10V Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.)</p> <p>Bipolar and unipolar:</p> <table border="1" data-bbox="288 685 1034 1064"> <thead> <tr> <th colspan="2">DIP switch setting</th> <th rowspan="2">Input signal type</th> </tr> <tr> <th>Analogue Input AI1</th> <th>Analogue Input AI2</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>±0(4)...20 mA ±0(2)...10 V ±0...2 V</td> </tr> <tr> <td></td> <td></td> <td>0(4)...20 mA 0(2)...10 V 0...2 V (Default)</td> </tr> </tbody> </table> <p>Voltage and current:</p> <table border="1" data-bbox="288 1144 1034 1592"> <thead> <tr> <th rowspan="2">Input signal type</th> <th colspan="2">DIP switch settings</th> </tr> <tr> <th>Analogue input 1</th> <th>Analogue input 2</th> </tr> </thead> <tbody> <tr> <td>Current signal ±0(4)...20 mA (Default)</td> <td></td> <td></td> </tr> <tr> <td>Voltage signal ±0(2)...10 V</td> <td></td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	DIP switch setting		Input signal type	Analogue Input AI1	Analogue Input AI2			±0(4)...20 mA ±0(2)...10 V ±0...2 V			0(4)...20 mA 0(2)...10 V 0...2 V (Default)	Input signal type	DIP switch settings		Analogue input 1	Analogue input 2	Current signal ±0(4)...20 mA (Default)			Voltage signal ±0(2)...10 V			+10V Bi	6V Offset	+10V Bi	-	E
DIP switch setting		Input signal type																										
Analogue Input AI1	Analogue Input AI2																											
		±0(4)...20 mA ±0(2)...10 V ±0...2 V																										
		0(4)...20 mA 0(2)...10 V 0...2 V (Default)																										
Input signal type	DIP switch settings																											
	Analogue input 1	Analogue input 2																										
Current signal ±0(4)...20 mA (Default)																												
Voltage signal ±0(2)...10 V																												
<p>13.24</p>	<p>Unused</p>																											
<p>13.25</p>	<p>AI6HighVal (analog input 6 high value) +100% of the input signal connected to analog input 6 is scaled to the voltage in <i>AI6HighVal</i> (13.25). Note1: To use current please set the DIP-switches (RAIO-01) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: I Volatile: N</p>	-10000	10000	10000	mV	E																						

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
13.26	<p>AI6LowVal (analog input 6 low value) -100% of the input signal connected to analog input 6 is scaled to the voltage in <i>AIO6LowVal</i> (13.26). Note1: <i>AI6LowVal</i> (13.26) is only valid if <i>ConvModeAI6</i> (13.27) = $\pm 10V$ Bi. Note2: To use current please set the DIP-switches (RAIO-01) accordingly and calculate 20 mA to 10 V. Int. Scaling: 1 == 1 mV Type: SI Volatile: N</p>	-10000	10000	-10000	mV	E
13.27	<p>ConvModeAI6 (conversion mode analog input 6) Analog input 6 signal offset. The distinction between bipolar and unipolar respectively voltage and current is done via DIP-switches on the RAIO-01 board: 0 = $\pm 10V$ Bi -10 V to 10 V / -20 mA to 20 mA bipolar input, default 1 = 0V-10V Uni 0 V to 10 V / 0 mA to 20 mA unipolar input 2 = 2V-10V Uni 2 V to 10 V / 4 mA to 20 mA unipolar input 3 = 5V Offset 5 V / 10 mA offset in the range 0 V to 10 V / 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V / 12 mA offset in the range 2 V to 10 V / 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N</p>	+10V Bi	6V Offset	+10V Bi	'	E
Group 14	Digital outputs					
14.01	<p>DO1Index (digital output 1 index) Digital output 1 is controlled by a selectable bit - see <i>DO1BitNo</i> (14.02) - of the source (signal/parameter) selected with this parameter. The format is -xxyy, with: - = invert digital output, xx = group and yy = index. Examples: - If <i>DO1Index</i> (14.01) = 801 (main status word) and <i>DO1BitNo</i> (14.02) = 1 (RdyRun) digital output 1 is high when the drive is RdyRun. - If <i>DO1Index</i> (14.01) = -801 (main status word) and <i>DO1BitNo</i> (14.02) = 3 (Tripped) digital output 1 is high when the drive is not faulty. Digital output 1 default setting is: command FansOn CurCtrlStat1 (6.03) bit 0. Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-9999	9999	603	'	C
14.02	<p>DO1BitNo (digital output 1 bit number) Bit number of the signal/parameter selected with <i>DO1Index</i> (14.02). Int. Scaling: 1 == 1 Type: I Volatile: N</p>	0	15	0	'	C
14.03	<p>DO2Index (digital output 2 index) Digital output 2 is controlled by a selectable bit - see <i>DO2BitNo</i> (14.04) - of the source (signal/parameter) selected with this parameter. The format is -xxyy, with: - = invert digital output, xx = group and yy = index. Digital output 2 default setting is: command FieldOn CurCtrlStat1 (6.03) bit 5. Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-9999	9999	603	'	C
14.04	<p>DO2BitNo (digital output 2 bit number) Bit number of the signal/parameter selected with <i>DO2Index</i> (14.03). Int. Scaling: 1 == 1 Type: I Volatile: N</p>	0	15	5	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
14.05	DO3Index (digital output 3 index) Digital output 3 is controlled by a selectable bit - see <i>DO3BitNo (14.06)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Digital output 3 default setting is: command MainContactorOn CurCtrlStat1 (6.03) bit 7. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	603	'	C
14.06	DO3BitNo (digital output 3 bit number) Bit number of the signal/parameter selected with <i>DO3Index (14.05)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	7	'	C
14.07	DO4Index (digital output 4 index) Digital output 4 is controlled by a selectable bit - see <i>DO4BitNo (14.08)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
14.08	DO4BitNo (digital output 4 bit number) Bit number of the signal/parameter selected with <i>DO4Index (14.07)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	0	'	C
14.09	DO5Index (digital output 5 index) Digital output 5 is controlled by a selectable bit - see <i>DO5BitNo (14.10)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
14.10	DO5BitNo (digital output 5 bit number) Bit number of the signal/parameter selected with <i>DO5Index (14.09)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	0	'	C
14.11	DO6Index (digital output 6 index) Digital output 6 is controlled by a selectable bit - see <i>DO6BitNo (14.12)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
14.12	DO6BitNo (digital output 6 bit number) Bit number of the signal/parameter selected with <i>DO6Index (14.11)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	0	'	C
14.13	DO7Index (digital output 7 index) Digital output 7 is controlled by a selectable bit - see <i>DO7BitNo (14.14)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
14.14	DO7BitNo (digital output 7 bit number) Bit number of the signal/parameter selected with <i>DO7Index (14.13)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	0	'	C
14.15	DO8Index (digital output 8 index) Digital output 8 is controlled by a selectable bit - see <i>DO8BitNo (14.16)</i> - of the source (signal/parameter) selected with this parameter. The format is -xyy , with: - = invert digital output, xx = group and yy = index. Digital output 8 default setting is: command MainContactorOn CurCtrlStat1 (6.03) bit 7 Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	603	'	C
14.16	DO8BitNo (digital output 8 bit number) Bit number of the signal/parameter selected with <i>DO8Index (14.15)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	0	15	7	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 15	Analog outputs					
15.01	IndexAO1 (analog output 1 index) Analog output 1 is controlled by a source (signal/parameter) selected with <i>IndexAO1 (15.01)</i> . The format is -xyy , with: - = negate analog output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
15.02	CtrlWordAO1 (control word analog output 1) Data container analog output 1 (see group description group 19 Data Storage). Int. Scaling: 1 == 1 Type: SI Volatile: Y	-32768	32767	0	'	C
15.03	ConvModeAO1 (convert mode analog output 1) Analog output 1 signal offset: 0 = ±10V Bi -10 V to 10 V bipolar output, default 1 = 0V-10V Uni 0 V to 10 V unipolar output 2 = 2V-10V Uni 2 V to 10 V unipolar output 3 = 5V Offset 5 V offset in the range 0 V to 10 V for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V offset in the range 2 V to 10 V for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	+10V Bi	6V Offset	+10V Bi	'	C
15.04	FilterAO1 (filter analog output 1) Analog output 1 filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	C
15.05	ScaleAO1 (scaling analog output 1) 100% of the signal/parameter selected with <i>IndexAO1 (15.01)</i> is scaled to the voltage in <i>ScaleAO1 (16.05)</i> . Example: – In case the min. / max. voltage (± 10 V) of analog output 1 should equal $\pm 250\%$ of <i>TorqRefUsed (2.13)</i> , set: <i>IndexAO1 (15.01)</i> = 213, <i>ConvModeAO1 (15.03)</i> = ±10V Bi and <i>ScaleAO1 (15.05)</i> = 4000 mV Int. Scaling: 1 == 1 mV Type: I Volatile: N	0	10000	10000	mV	C
15.06	IndexAO2 (analog output 2 index) Analog output 2 is controlled by a source (signal/parameter) selected with <i>IndexAO2 (15.06)</i> . The format is -xyy , with: - = negate analog output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999	0	'	C
15.07	CtrlWordAO2 (control word analog output 2) Data container analog output 2 (see group description group 19 Data Storage). Int. Scaling: 1 == 1 Type: SI Volatile: Y	-32768	32767	0	'	C

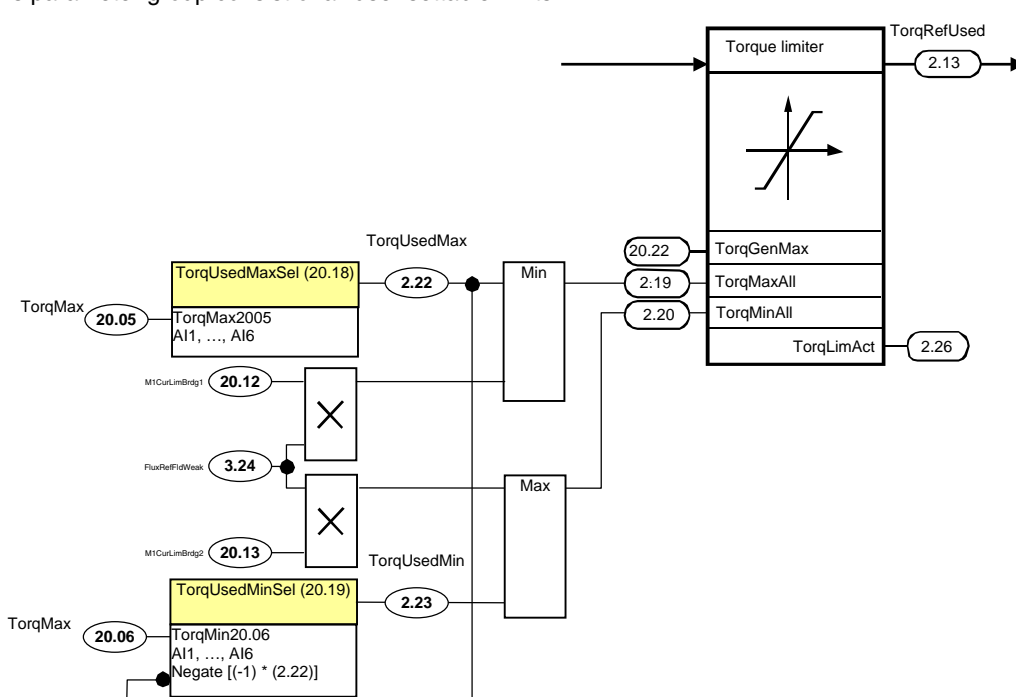
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
15.08	ConvModeAO2 (convert mode analog output 2) Analog output 2 signal offset: 0 = ±10V Bi -10 V to 10 V bipolar output, default 1 = 0V-10V Uni 0 V to 10 V unipolar output 2 = 2V-10V Uni 2 V to 10 V unipolar output 3 = 5V Offset 5 V offset in the range 0 V to 10 V for testing or indication of bipolar signals (e.g. torque, speed, etc.) 4 = 6V Offset 6 V offset in the range 2 V to 10 V for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	+10V Bi	6V Offset	+10V Bi	-	C
15.09	FilterAO2 (filter analog output 2) Analog output 2 filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	C
15.10	ScaleAO2 (scaling analog output 2) 100% of the signal/parameter selected with <i>IndexAO2 (15.06)</i> is scaled to the voltage in <i>ScaleAO2 (16.10)</i> . Int. Scaling: 1 == 1 mV Type: I Volatile: N	0	10000	10000	mV	C
15.11	IndexAO3 (analog output 3 index) Analog output 3 is controlled by a source (signal/parameter) selected with <i>IndexAO3 (15.11)</i> . The format is -xyyy , with: - = negate analog output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999			E
15.12	CtrlWordAO3 (control word analog output 3) Data container analog output 3 (see group description group 19 Data Storage). Int. Scaling: 1 == 1 Type: SI Volatile: Y	-32768	32767	0	'	E
15.13	ConvModeAO3 (convert mode analog output 3) Analog output 3 signal offset: 0 = 0mA-20mA Uni 0 mA to 20 mA unipolar output 1 = 4mA-20mA Uni 4 mA to 20 mA unipolar output, default 2 = 10mA Offset 10 mA offset in the range 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 3 = 12mA Offset 12 mA offset in the range 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	4mA-20mA Uni	12mA Offset	4mA-20mA Uni	'	E
15.14	FilterAO3 (filter analog output 3) Analog output 3 filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	E
15.15	ScaleAO3 (scaling analog output 3) 100% of the signal/parameter selected with <i>IndexAO3 (15.11)</i> is scaled to the current in <i>ScaleAO3 (16.15)</i> . Int. Scaling: 1000 == 1 mA Type: I Volatile: N	0	20	20	mA	E
15.16	IndexAO4 (analog output 4 index) Analog output 4 is controlled by a source (signal/parameter) selected with <i>IndexAO4 (15.16)</i> . The format is -xyyy , with: - = negate analog output, xx = group and yy = index. Int. Scaling: 1 == 1 Type: SI Volatile: N	-9999	9999			E
15.17	CtrlWordAO4 (control word analog output 4) Data container analog output 4 (see group description group 19 Data Storage). Int. Scaling: 1 == 1 Type: SI Volatile: Y	-32768	32767	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
15.18	ConvModeAO4 (convert mode analog output 4) Analog output 4 signal offset: 0 = 0mA-20mA Uni 0 mA to 20 mA unipolar output 1 = 4mA-20mA Uni 4 mA to 20 mA unipolar output, default 2 = 10mA Offset 10 mA offset in the range 0 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) 3 = 12mA Offset 12 mA offset in the range 4 mA to 20 mA for testing or indication of bipolar signals (e.g. torque, speed, etc.) Int. Scaling: 1 == 1 Type: C Volatile: N	4mA-20mA Uni	12mA Offset	4mA-20mA Uni	-	E
15.19	FilterAO4 (filter analog output 4) Analog output 4 filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	E
15.20	ScaleAO4 (scaling analog output 4) 100% of the signal/parameter selected with <i>IndexAO4 (15.16)</i> is scaled to the current in <i>ScaleAO4 (16.20)</i> . Int. Scaling: 1000 == 1 mA Type: I Volatile: N	0	20	20	mA	E
Group 16	System control inputs					
16.01	Unused					
16.02	ParLock (parameter lock) The user can lock all parameters by means of <i>ParLock (16.02)</i> and <i>SysPassCode (16.03)</i> : <ul style="list-style-type: none"> - To lock parameters set <i>SysPassCode (16.03)</i> to the desired value and change <i>ParLock (16.02)</i> from Open to Locked. - Unlocking of parameters is only possible if the proper pass code (the value which was present during locking) is used. To open parameters set <i>SysPassCode (16.03)</i> to the proper value and change <i>ParLock (16.02)</i> from Locked to Open. After the parameters are locked or opened the value in <i>SysPassCode (16.03)</i> is automatically changed to 0: 0 = Open parameter change possible, default 1 = Locked parameter change not possible Int. Scaling: 1 == 1 Type: C Volatile: N	Open	Locked	Open	'	E
16.03	SysPassCode (system pass code) <i>SysPassCode (16.03)</i> enters the pass code for the <i>ParLock (16.02)</i> . For more information see <i>ParLock (16.02)</i> . Int. Scaling: 1 == 1 Type: I Volatile: Y	0	30000	0	'	E
16.04	LocLock (local lock) Local control can be disabled by setting <i>LocLock (16.04)</i> to True . If <i>LocLock (16.04)</i> is released in local control, it becomes valid after the next changeover to remote control. No pass code is required to change <i>LocLock (16.04)</i> : 0 = False local control released, default 1 = True local control blocked Int. Scaling: 1 == 1 Type: C Volatile: N	False	True	False	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
16.05	<p>MacroChangeMode (macro change mode) The choice to release Motor1/2 (shared motion) or macros User1/2 is defined by means of <i>MacroChangeMode (16.05)</i>:</p> <p>0 = User1/2 change between parameter sets User1 and User2, default 1 = Motor1/2 change between Motor1 and Motor2, shared motion (parameters for motor 2 see group 49)</p> <p><i>ParChange (10.10)</i> selects the binary signal to release either Motor1/User1 or Motor2/User2. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	User1/2	Motor1/2	User1/2	'	E
16.06	<p>ParApplSave (save/load parameters and enable/disable application programs) If parameters are written to cyclic, e.g. from an overriding control, they are only stored in the RAM and not in the FLASH. By means of <i>ParSave (16.06)</i>, all parameter values are saved from the RAM into the FLASH. <i>ParSave (16.06)</i> is also used to save/load a parameter set on/from the memory card and to enable/disable application programs:</p> <p>0 = Done parameters are saved or all other actions are finished, default 1 = Save save parameters into the FLASH 3 = SaveToMemC save parameter set from control board to memory card 4 = LoadFromMemC load parameter set from memory card to control board 4 = EableAppl enable application program 5 = DisableAppl disable application program</p> <p>After an action (e.g. save, load, ...) is finished <i>ParSave (16.06)</i> is changed back to Done. This will take max. 1 second. Note1: Do not use the parameter save function unnecessarily Note2: Parameters changed by control panel or commissioning tools are immediately saved into the FLASH. Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	Done	DisableAppl	Done	'	E
16.07	Unused					
16.08	Unused					
16.09	<p>USI Sel (selector for user interface) The user interface for the control panel (Compact/Extended parameter list) can be selected by <i>USI Sel (16.09)</i>:</p> <p>0 = Compact short parameter list (C), default 1 = Extended long parameter list (E)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Compact	Extended	Compact		C
16.10	Unused					
16.11	<p>SetSystemTime (set the drive's system time) Int. Scaling: ??? Type: I Volatile: Y</p>					E
16.12	Unused					
16.13	Unused					
16.14	<p>ToolLinkConfig (tool link configuration) The communication speed of the serial communication for the commissioning tool and the application program tool can be selected with <i>ToolLinkConfig (16.14)</i>:</p> <p>0 = 9600 9600 Baud 1 = 19200 19200 Baud 2 = 38400 38400 Baud, default 3 = reserved</p> <p>If <i>ToolLinkConfig (16.14)</i> is changed its new value is taken over after the next power up. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	9600	reserved	38400		E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																
Group 19	<h2>Data storage</h2>																					
	<p>This parameter group consist of unconnected parameters for linking, testing and commissioning purposes. Example1: A value can be send from the overriding control to the drive via groups 90 or 91 to individual parameters in group 19. The parameters of group 19 can be read with the control panel, the commissioning tools, the adaptive program and application program.</p> <p style="text-align: center;">SDCS-CON-4</p> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;">Dataset table</p> <table border="1" style="margin: 0 auto;"> <thead> <tr> <th>Dataset</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>.</td> <td>.</td> </tr> <tr> <td>14</td> <td>1 2 3</td> </tr> <tr> <td>.</td> <td>.</td> </tr> </tbody> </table> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px;">overriding control</div> <div style="font-size: 20px;">→</div> <div style="border: 1px solid black; padding: 2px;">Address assignment of dataset</div> <div style="font-size: 20px;">→</div> <div style="border: 1px solid black; padding: 2px;">19.01</div> <div style="font-size: 20px;">→</div> <div style="border: 1px solid black; padding: 2px;">e.g. DriveWindow</div> </div> </div> <p>Example2: A value can be send from the drive to the overriding control from individual parameters in group 19 via groups 92 or 93 The parameters of group 19 can be written to with the control panel, the commissioning tools, the adaptive program and application program.</p> <p style="text-align: center;">SDCS-CON-4</p> <div style="border: 1px solid black; padding: 5px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;">Dataset table</p> <table border="1" style="margin: 0 auto;"> <thead> <tr> <th></th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>.</td> <td>.</td> </tr> <tr> <td>15</td> <td>1 2 3</td> </tr> <tr> <td>.</td> <td>.</td> </tr> </tbody> </table> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 2px;">overriding control</div> <div style="font-size: 20px;">←</div> <div style="border: 1px solid black; padding: 2px;">Address assignment of dataset</div> <div style="font-size: 20px;">←</div> <div style="border: 1px solid black; padding: 2px;">19.02</div> <div style="font-size: 20px;">←</div> <div style="border: 1px solid black; padding: 2px;">e.g. Control panel</div> </div> </div> <p>Note1: This parameter group can be used as well for reading/writing analog inputs/outputs.</p>	Dataset	Value	.	.	14	1 2 3	.	.		Value	.	.	15	1 2 3	.	.					
Dataset	Value																					
.	.																					
14	1 2 3																					
.	.																					
	Value																					
.	.																					
15	1 2 3																					
.	.																					
19.01	<p>Data1 (data container 1) Data container 1 (see group description above). This data container is of is of the type retain. Its value will only be saved when the drive is de-energized. Thus it will not loose its value. Int. Scaling: 1 == 1 Type: SI Volatile: Y</p>	-32768	32767	0	'	E																
19.02	<p>Data2 (data container 2) Data container 2 (see group description above). This data container is of is of the type retain. Its value will only be saved when the drive is de-energized. Thus it will not loose its value. Int. Scaling: 1 == 1 Type: SI Volatile: Y</p>	-32768	32767	0	'	E																
19.03	<p>Data3 (data container 3) Data container 3 (see group description above). This data container is of is of the type retain. Its value will only be saved when the drive is de-energized. Thus it will not loose its value. Int. Scaling: 1 == 1 Type: SI Volatile: Y</p>	-32768	32767	0	'	E																

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
19.04	Data4 (data container 4) Data container 4 (see group description above). This data container is of is of the type retain. Its value will only be saved when the drive is de-energized. Thus it will not loose its value. Int. Scaling: 1 == 1 Type: SI Volatile: Y	-32768	32767	0	'	E
19.05	Data5 (data container 5) Data container 5 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.06	Data6 (data container 6) Data container 6 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.07	Data7 (data container 7) Data container 7 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.08	Data8 (data container 8) Data container 8 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.09	Data9 (data container 9) Data container 9 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.10	Data10 (data container 10) Data container 10 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.11	Data11 (data container 11) Data container 11 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
19.12	Data12 (data container 12) Data container 12 (see group description above) Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 20	Limits					
	<p>This parameter group consist of all user settable limits.</p> 					
20.01	<p>M1SpeedMin (motor 1 minimum speed) Motor 1 negative speed reference limit in rpm for: – <i>SpeedRef2</i> (2.01) – <i>SpeedRefUsed</i> (2.17)</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: <i>M1SpeedMin</i> (20.01) is also applied to <i>SpeedRef4</i> (2.18) to avoid exceeding the speed limits by means of <i>SpeedCorr</i> (23.04). To be able to overspeed the drive (e.g. for winder) it is possible to switch off the speed limit for <i>SpeedRef4</i> (2.18) by means of <i>AuxCtrlWord</i> (7.02) bit 4.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	-1500	rpm	C

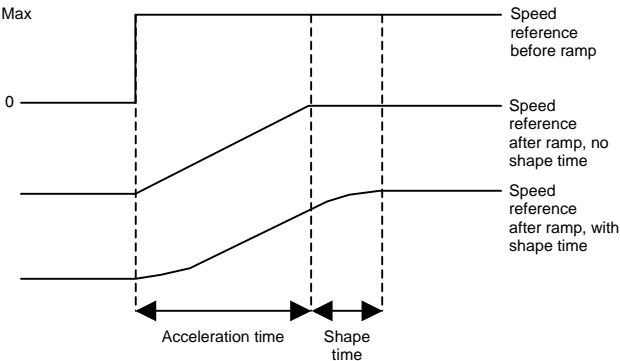
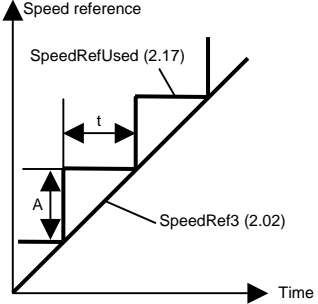
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
20.02	<p>M1SpeedMax (motor 1 maximum speed) Motor 1 positive speed reference limit in rpm for:</p> <ul style="list-style-type: none"> - <i>SpeedRef2</i> (2.01) - <i>SpeedRefUsed</i> (2.17) <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: <i>M1SpeedMax</i> (20.02) is also applied to <i>SpeedRef4</i> (2.18) to avoid exceeding the speed limits by means of <i>SpeedCorr</i> (23.04). To be able to overspeed the drive (e.g. for winder) it is possible to switch off the speed limit for <i>SpeedRef4</i> (2.18) by means of <i>AuxCtrlWord</i> (7.02) bit 4.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	1500	rpm	C
20.03	<p>ZeroSpeedLim (zero speed limit) On stop command [set <i>UsedMCW</i> (7.04) bit 3 to zero], the drive will coast if the actual speed is in the speed limit set by <i>ZeroSpeedLim</i> (20.03). While the actual speed is in the speed limit ZeroSpeed [<i>AuxStatWord</i> (8.02) bit 11] is high.</p> <p>Note1: In case <i>FlyStart</i> (21.10) = StartFrom0 and if the restart command comes before zero speed is reached A137 SpeedNotZero [<i>AlarmWord3</i> (9.08) bit 4] is generated.</p> <p>Internally limited from: $0rpm$ to $(2.29)rpm$</p> <p>Int. Scaling: (2.29) Type: I Volatile: N</p>	0	1000	75	rpm	C
20.04	Unused					
20.05	<p>TorqMax (maximum torque) Maximum torque limit - in percent of the active motor nominal torque - for selector <i>TorqUsedMaxSel</i> (20.18).</p> <p>Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid.</p> <p>Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	0	325	100	%	C
20.06	<p>TorqMin (minimum torque) Minimum torque limit - in percent of the active motor nominal torque - for selector <i>TorqUsedMinSel</i> (20.19).</p> <p>Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid.</p> <p>Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	0	-100	%	C
20.07	<p>TorqMaxSPC (maximum torque speed controller) Maximum torque limit - in percent of the active motor nominal torque - at the output of the speed controller:</p> <ul style="list-style-type: none"> - <i>TorqRef2</i> (2.09) <p>Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid.</p> <p>Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	0	325	325	%	E
20.08	<p>TorqMinSPC (minimum torque speed controller) Minimum torque limit - in percent of the active motor nominal torque - at the output of the speed controller.</p> <ul style="list-style-type: none"> - <i>TorqRef2</i> (2.09) <p>Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid.</p> <p>Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	0	-325%	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
20.09	TorqMaxTref (maximum torque of torque reference A/B) Maximum torque limit - in percent of the active motor nominal torque - for external references: – <i>TorqRefA</i> (25.01) – <i>TorqRefB</i> (25.04) Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N	0.	325	325	%	E
20.10	TorqMinTref (minimum torque of torque reference A/B) Minimum torque limit - in percent of the active motor nominal torque - for external references: – <i>TorqRefA</i> (25.01) – <i>TorqRefB</i> (25.04) Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N	-325	0	-325	%	E
20.11	Unused					
20.12	M1CurLimBrdg1 (motor 1 current limit of bridge 1) Current limit bridge 1 in percent of <i>M1NomCur</i> (99.03). Setting <i>M1CurLimBrdg1</i> (20.12) to 0% disables bridge 1. Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N	0	325	100	%	C
20.13	M1CurLimBrdg2 (motor 1 current limit of bridge 2) Current limit bridge 2 in percent of <i>M1NomCur</i> (99.03). Setting <i>M1CurLimBrdg2</i> (20.13) to 0% disables bridge 2. Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Note2: <i>M1CurLimBrdg2</i> (20.13) is internally set to 0% if <i>QuadrantType</i> (4.15) = 2-Q (2-Q drive). Int. Scaling: 100 == 1 % Type: SI Volatile: N	-325	0	-100	%	C
20.14	ArmAlphaMax (maximum firing angle) Maximum firing angle (α) in degrees. Int. Scaling: 1 == 1 deg Type: SI Volatile: N	0	165	150	deg	E
20.15	ArmAlphaMin (minimum firing angle) Minimum firing angle (α) in degrees. Int. Scaling: 1 == 1 deg Type: SI Volatile: N	0	165	15	deg	E
20.16	Unused					
20.17	Unused					
20.18	TorqUsedMaxSel (maximum used torque selector) <i>TorqUsedMax</i> (2.22) selector: 0 = TorqMax2005 <i>TorqMax</i> (20.05), default 1 = AI1 analog input 1 2 = AI2 analog input 2 3 = AI3 analog input 3 4 = AI4 analog input 4 5 = AI5 analog input 5 6 = AI6 analog input 6 Int. Scaling: 1 == 1 Type: C Volatile: N	TorqMax	AI6	TorqMax	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
20.19	TorqUsedMinSel (minimum used torque selector) <i>TorqUsedMin (2.23)</i> selector: 0 = TorqMin2006 <i>TorqMin (20.06)</i> , default 1 = AI1 analog input 1 2 = AI2 analog input 2 3 = AI3 analog input 3 4 = AI4 analog input 4 5 = AI5 analog input 5 6 = AI6 analog input 6 7 = Negate negated output of <i>TorqUsedMaxSel (20.18)</i> is used Int. Scaling: 1 == 1 Type: C Volatile: N	TorqMin	Negate	TorqMin	'	C
20.20	Unused					
20.21	Unused					
20.22	TorqGenMax (maximum and minimum torque limit during regenerating) Maximum and minimum torque limit - in percent of the active motor nominal torque - only during regenerating. Note1: The used torque limit depends also on the converter's actual limitation situation (e.g. other torque limits, current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N	0	325	325	%	E
Group 21	Start / stop					
21.01	Unused					
21.02	Off1Mode (off 1 mode) Conditions for motor deceleration when <i>UsedMCW (7.04)</i> bit 0 On (respectively Off1N) is set to low: 0 = RampStop stop according to <i>DecTime1 (22.02)</i> or <i>DecTime2 (22.10)</i> , default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking Int. Scaling: 1 == 1 Type: C Volatile: N	RampStop	DynBraking	RampStop	'	C
21.03	StopMode (stop mode) Conditions for motor deceleration when <i>UsedMCW (7.04)</i> bit 3 Run is set to low: 0 = RampStop stop according to <i>DecTime1 (22.02)</i> or <i>DecTime2 (22.10)</i> , default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking Int. Scaling: 1 == 1 Type: C Volatile: N	RampStop	DynBraking	RampStop	'	C
21.04	E StopMode (emergency stop mode) Conditions for motor deceleration when <i>UsedMCW (7.04)</i> bit 2 Off3N (respectively E-stop) is set to low: 0 = RampStop stop according to <i>E StopRamp (22.11)</i> , default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking Int. Scaling: 1 == 1 Type: C Volatile: N	RampStop	DynBraking	RampStop	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
21.05	<p>E StopDecMin (emergency stop minimum deceleration rate)</p> <p>During an emergency stop the deceleration of the drive is supervised. This supervision starts after the drive has received an emergency stop and the time delay defined in <i>DecMonDly (21.07)</i> is elapsed. In case the drive isn't able to decelerate within the window, defined by <i>E StopDecMin (21.05)</i> and <i>E StopDecMax (21.06)</i>, it is stopped by coasting and <i>AuxStatWord (8.02)</i> bit 2 E-StopCoast is set high.</p> <p>Note1: The supervision is disabled in case <i>E StopDecMax (21.06)</i> or <i>E StopDecMin (21.05)</i> is set to default.</p> <p>Int. Scaling: 1 == 1 rpm/s Type: I Volatile: N</p>	0	18000	18000	rpm/s	E
21.06	<p>E StopDecMax (emergency stop maximum deceleration rate)</p> <p>During an emergency stop the deceleration of the drive is supervised. This supervision starts after the drive has received an emergency stop and the time delay defined in <i>DecMonDly (21.07)</i> is elapsed. In case the drive isn't able to decelerate within the window, defined by <i>E StopDecMin (21.05)</i> and <i>E StopDecMax (21.06)</i>, it is stopped by coasting and <i>AuxStatWord (8.02)</i> bit 2 E-StopCoast is set high.</p> <p>Note1: The supervision is disabled in case <i>E StopDecMax (21.06)</i> or <i>E StopDecMin (21.05)</i> is set to default.</p> <p>Int. Scaling: 1 == 1 rpm/s Type: I Volatile: N</p>	0	18000	18000	rpm/s	E
21.07	<p>DecMonDly (delay deceleration monitoring)</p> <p>Time delay before the deceleration monitoring of the emergency stop starts. See also <i>E StopDecMin (21.05)</i> and <i>E StopDecMax (21.06)</i>.</p> <p>Int. Scaling: 10 == 1 s Type: I Volatile: N</p>	0	100	20	s	E
21.08	Unused					
21.09	Unused					
21.10	<p>FlyStart (flying start)</p> <p>Selection of the desired operating response to a Run command [<i>UsedMCW (7.04)</i>] bit 3] during braking or coasting:</p> <p>0 = StartFrom0 wait until the motor has reached zero speed [see <i>ZeroSpeedLim (20.03)</i>], then restart. In case the restart command comes before zero speed is reached A137 SpeedNotZero [<i>AlarmWord3 (9.08)</i>] bit 4] is generated.</p> <p>1 = FlyingStart start motor with its actual speed, default</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	StartFrom0	FlyStart	FlyStart		E
21.11	Unused					
21.12	Unused					
21.13	Unused					
21.14	<p>FanDly (fan delay)</p> <p>After the drive has been switched off [<i>UsedMCW (7.04)</i>] bit 0 On = 0], both fans (motor and converter) mustn't switched off before <i>FanDly (21.14)</i> has elapsed. If motor or converter overtemperature is pending, the delay starts after the temperature has dropped below the overtemperature limit.</p> <p>Int. Scaling: 1 == 1 s Type: I Volatile: N</p>	0	300	30	s	E
21.15	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
21.16	<p>MainContCtrlMode (main contactor control mode) <i>MainContCtrlMode (21.16)</i> determines the reaction to On and Run commands [<i>UsedMCW (7.04)</i> bits 0 and 3]:</p> <p>0 = On main contactor closes with On = 1, default 1 = On&Run main contactor closes with On = Run = 1 2 = OnHVCB for high voltage AC circuit breaker configuration (for more information see chapter XXXX)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	On	OnHVCB	On	'	E
21.17	Unused					
21.18	<p>FldHeatSel (field heat selector) <i>FldHeatSel (21.18)</i> releases the field heating for motor 1 and motor 2:</p> <p>0 = NotUsed field heating is off, default 1 = On field heating is on, as long as: On = 0 [<i>UsedMCW (7.04)</i> bit 0] and Off2N = 1 [<i>UsedMCW (7.04)</i> bit 1, Emergency Off / Coast Stop] 2 = OnRun field heating is on as long as: On = 1, Run = 0 [<i>UsedMCW (7.04)</i> bit 3] and Off2N = 1 3 = ACW Bit12 field heating is on as long as: ACW Bit12 = 1 [<i>AuxCtrlWord (7.02)</i> bit 12] and Run = 0 4 = ACW Bit13 field heating is on as long as: ACW Bit13 = 1 [<i>AuxCtrlWord (7.02)</i> bit 13] and Run = 0 5 = ACW Bit14 field heating is on as long as: ACW Bit14 = 1 [<i>AuxCtrlWord (7.02)</i> bit 14] and Run = 0 6 = ACW Bit15 field heating is on as long as: ACW Bit15 = 1 [<i>AuxCtrlWord (7.02)</i> bit 15] and Run = 0</p> <p>Note1: The field heating references are set with <i>M1FldHeatRef (44.04)</i> and <i>M2FldHeatRef (49.06)</i>. Field heating for the individual motor can be disabled when the belonging reference is set to zero. Field nominal currents are set with <i>M1NomFldCur (99.11)</i> and <i>M2NomFldCur (49.05)</i>.</p> <p>Note2: In case the field exciter is not connected via a separate field contactor following settings apply for field heating:</p> <ul style="list-style-type: none"> - <i>MainContCtrlMode (21.16)</i> = On - <i>FldHeatSel (21.18)</i> = OnRun <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	'	C
Group 22	Speed ramp					
22.01	<p>AccTime1 (acceleration time 1) The time within the drive will accelerate from zero speed to <i>SpeedScaleAct (2.29)</i>:</p> <ul style="list-style-type: none"> - To expand the ramp time use <i>RampTimeScale (22.03)</i> - <i>AccTime1 (22.01)</i> can be released with <i>Ramp2Sel (22.11)</i> <p>Int. Scaling: 100 == 1 s Type: I Volatile: N</p>	0	300	20	s	C
22.02	<p>DecTime1 (deceleration time 1) The time within the drive will decelerate from <i>SpeedScaleAct (2.29)</i> to zero speed:</p> <ul style="list-style-type: none"> - To expand the ramp time use <i>RampTimeScale (22.03)</i> - <i>DecTime1 (22.02)</i> can be released with <i>Ramp2Sel (22.11)</i> <p>Int. Scaling: 100 == 1 s Type: I Volatile: N</p>	0	300	20	s	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
22.03	RampTimeScale (ramp time scaling) Multiplier for <i>AccTime1</i> (22.01) / <i>AccTime2</i> (22.09) and <i>DecTime1</i> (22.02) / <i>DecTime2</i> (22.10) to expand the ramp time. Int. Scaling: 100 == 1 Type: I Volatile: N	0.1	100	1	-	E
22.04	E StopRamp (emergency stop ramp) The time within the drive will decelerate from <i>SpeedScaleAct</i> (2.29) to zero speed. In case emergency stop is released and <i>E StopMode</i> (21.04) = RampStop . Int. Scaling: 10 == 1 s Type: I Volatile: N	0	3000	20	s	C
22.05	ShapeTime (shape time) Speed reference softening time. This function is bypassed during an emergency stop:  Int. Scaling: 100 == 1 s Type: I Volatile: N	0	30	0	s	E
22.06	Unused					
22.07	VarSlopeRate (variable slope rate) Variable slope is used to control the slope of the speed ramp during a speed reference change. It is active only with <i>VarSlopeRate</i> (22.07) ≠ 0. <i>VarSlopeRate</i> (22.07) defines the speed ramp time <i>t</i> for the speed reference change <i>A</i> :  $t = \text{cycle time of the overriding control system (e.g. speed reference generation)}$ $A = \text{speed reference change during cycle time } t$ Note1: In case the overriding control system cycle time for the speed reference and <i>VarSlopeRate</i> (22.07) are equal the shape of <i>SpeedRef3</i> (2.02) is a straight line. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	30000	0	ms	E
22.08	BalRampRef (balance ramp reference) The output of the speed ramp can be forced to the value defined by <i>BalRampRef</i> (22.08). The function is released by setting <i>AuxCtrlWord</i> (7.02) bit 3 = 1. Internally limited from: $-(2.29) * \frac{32767}{20000} \text{ rpm}$ to $(2.29) * \frac{32767}{20000} \text{ rpm}$ Int. Scaling: (2.29) Type: SI Volatile: N	-10000	10000	0	rpm	E

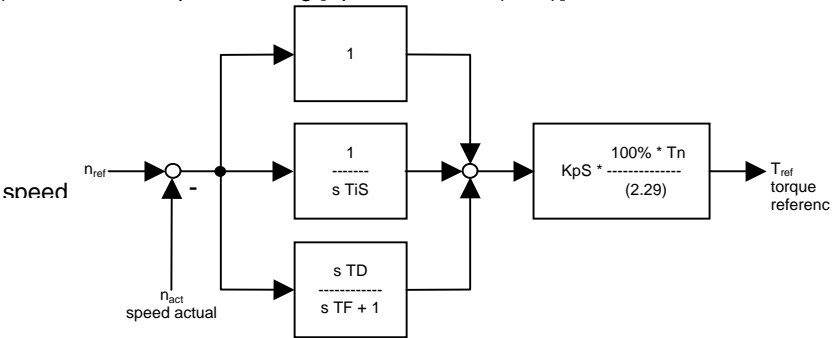
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
22.09	AccTime2 (acceleration time 2) The time within the drive will accelerate from zero speed to <i>SpeedScaleAct (2.29)</i> : – To expand the ramp time use <i>RampTimeScale (22.03)</i> – <i>AccTime2 (22.09)</i> can be released with <i>Ramp2Sel (22.11)</i> Int. Scaling: 100 == 1 s Type: I Volatile: N	0	300	20	s	E
22.10	DecTime2 (deceleration time 2) The time within the drive will decelerate from <i>SpeedScaleAct (2.29)</i> to zero speed: – To expand the ramp time use <i>RampTimeScale (22.03)</i> – <i>DecTime2 (22.10)</i> can be released with <i>Ramp2Sel (22.11)</i> Int. Scaling: 100 == 1 s Type: I Volatile: N	0	300	20	s	E
22.11	Ramp2Select (ramp 2 selector) Select active ramp parameters: 0 = Acc/Dec1 parameter set 1 [<i>AccTime1 (22.01)</i> and <i>DecTime1 (22.02)</i>] is active, default 1 = Acc/Dec2 parameter set 2 [<i>AccTime2 (22.09)</i> and <i>DecTime2 (22.10)</i>] is active 2 = SpeedLevel If $ SpeedRef3 (2.02) \leq SpeedLev (50.10) $, then parameter set1 is active. If $ SpeedRef3 (2.02) > SpeedLev (50.10) $, then parameter set 2 is active. 3 = DI1 0 = parameter set 1 is active, 1 = parameter set 2 is active 4 = DI2 0 = parameter set 1 is active, 1 = parameter set 2 is active 5 = DI3 0 = parameter set 1 is active, 1 = parameter set 2 is active 6 = DI4 0 = parameter set 1 is active, 1 = parameter set 2 is active 7 = DI5 0 = parameter set 1 is active, 1 = parameter set 2 is active 8 = DI6 0 = parameter set 1 is active, 1 = parameter set 2 is active 9 = DI7 0 = parameter set 1 is active, 1 = parameter set 2 is active 10 = DI8 0 = parameter set 1 is active, 1 = parameter set 2 is active 11 = DI9 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 12 = DI10 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 13 = DI11 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 14 = MCW Bit11 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord</i> (7.01) bit 11 15 = MCW Bit12 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord</i> (7.01) bit 12 16 = MCW Bit13 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord</i> (7.01) bit 13 17 = MCW Bit14 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord</i> (7.01) bit 14 18 = MCW Bit15 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord</i> (7.01) bit 15 19 = ACW Bit12 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord</i> (7.02) bit 12 20 = ACW Bit13 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord</i> (7.02) bit 13 21 = ACW Bit14 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord</i> (7.02) bit 14 22 = ACW Bit15 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord</i> (7.02) bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N	Acc/Dec1	ACW Bit15	Acc/Dec1	'	E

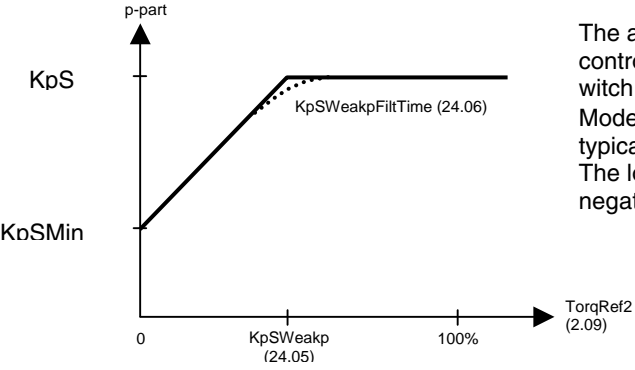
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
22.12	JogAccTime (acceleration time jogging) The time within the drive will accelerate from zero speed to <i>SpeedScaleAct</i> (2.29) in case of jogging: <ul style="list-style-type: none"> – When using jog command <i>Jog1</i> (10.17) or <i>MainCtrlWord</i> (7.01) bit 8 speed is set by <i>FixedSpeed1</i> (23.02) – When using jog command <i>Jog2</i> (10.18)) or <i>MainCtrlWord</i> (7.01) bit 9 speed is set by <i>FixedSpeed2</i> (23.03) – To expand the ramp time use <i>RampTimeScale</i> (22.03) Int. Scaling: 100 == 1 s Type: I Volatile: N	0	300	20	s	E
22.13	JogDecTime (deceleration time jogging) The time within the drive will decelerate from <i>SpeedScaleAct</i> (2.29) to zero speed in case of jogging: <ul style="list-style-type: none"> – When using jog command <i>Jog1</i> (10.17) or <i>MainCtrlWord</i> (7.01) bit 8 speed is set by <i>FixedSpeed1</i> (23.02) – When using jog command <i>Jog2</i> (10.18)) or <i>MainCtrlWord</i> (7.01) bit 9 speed is set by <i>FixedSpeed2</i> (23.03) – To expand the ramp time use <i>RampTimeScale</i> (22.03) Int. Scaling: 100 == 1 s Type: I Volatile: N	0	300	20	s	E
Group 23	Speed reference					
23.01	SpeedRef (speed reference) Main speed reference input for the speed control of the drive. Can be connected to <i>SpeedRefUsed</i> (2.17) via: <ul style="list-style-type: none"> – <i>Ref1Mux</i> (11.02) and <i>Ref1Sel</i> (11.03) or – <i>Ref2Mux</i> (11.12) and <i>Ref2Sel</i> (11.06) Internally limited from: $-(2.29) * \frac{32767}{20000} \text{ rpm}$ to $(2.29) * \frac{32767}{20000} \text{ rpm}$ Int. Scaling: (2.29) Type: SI Volatile: Y	-10000	10000	0	rpm	E
23.02	FixedSpeed1 (fixed speed 1) <i>FixedSpeed1</i> (23.02) is specifying a constant speed reference and overrides <i>SpeedRef2</i> (2.01) at the speed ramp's input. It can be released by <i>Jog1</i> (10.17) or <i>MainCtrlWord</i> (7.01) bit 8. The ramp times are set with <i>JogAccTime</i> (22.12) and <i>JogDecTime</i> (22.13). Internally limited from: $-(2.29) * \frac{32767}{20000} \text{ rpm}$ to $(2.29) * \frac{32767}{20000} \text{ rpm}$ Int. Scaling: (2.29) Type: SI Volatile: N	-10000	10000	0	rpm	E
23.03	FixedSpeed2 (fixed speed 2) <i>FixedSpeed2</i> (23.03) is specifying a constant speed reference and overrides <i>SpeedRef2</i> (2.01) at the speed ramp's input. It can be released by <i>Jog2</i> (10.18) or <i>MainCtrlWord</i> (7.01) bit 9. The ramp times are set with <i>JogAccTime</i> (22.12) and <i>JogDecTime</i> (22.13). Internally limited from: $-(2.29) * \frac{32767}{20000} \text{ rpm}$ to $(2.29) * \frac{32767}{20000} \text{ rpm}$ Int. Scaling: (2.29) Type: SI Volatile: N	-10000	10000	0	rpm	E

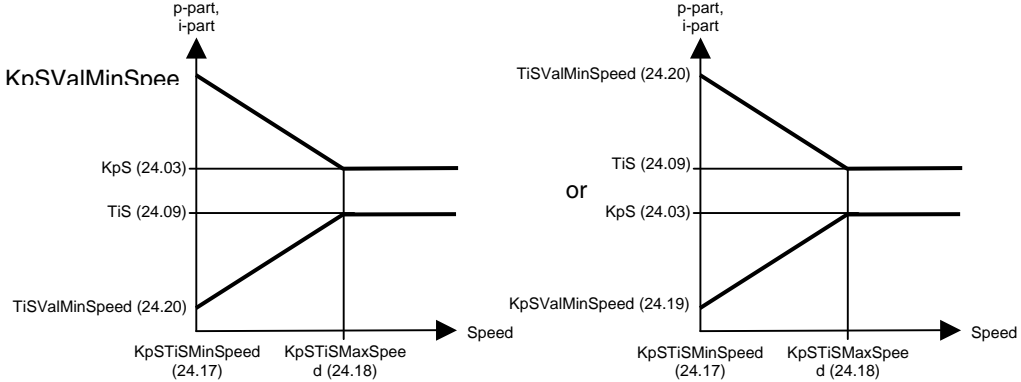
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
23.04 SpeedCorr (speed correction) The <i>SpeedCorr</i> (23.04) is added to the ramped reference <i>SpeedRef3</i> (2.02). Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$ Note1: Since this speed offset is added after the speed ramp, it must be set to zero prior to stopping the drive. Int. Scaling: (2.29) Type: SI Volatile: Y		-10000	10000	0	rpm	E
23.05 SpeedShare (speed sharing) Scaling factor <i>SpeedRefUsed</i> (2.17). Before speed ramp. Int. Scaling: 10 == 1 % Type: SI Volatile: N		-400	400	100	%	E
23.06 SpeedErrFilt (filter for Δn) Speed error (Δn) filter time 1. Int. Scaling: 1 == 1 ms Type: I Volatile: N		0	10000	0	ms	E
	<p>Idea of Window Control:</p> <p>The idea of the Window Control is to block the speed controller as long as the speed error (Δn) respectively speed actual remains within the window set by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09). This allows the external torque reference [<i>TorqRef1</i> (2.08)] to affect the process directly. If the speed error (Δn) respectively actual speed exceeds the programmed window, the speed controller becomes active. This function could be called over/underspeed protection in torque control mode:</p>					
23.07 WinIntegOn (window integrator on) Enables the integrator of the speed controller when window control is released: 0 = Off Integrator of the speed controller is blocked when window control is released 1 = On Integrator of the speed controller is enabled when window control is released To release window control set <i>TorqSel</i> (26.01) = Add and <i>AuxCtrlWord</i> (7.02) bit 7 = 1. Int. Scaling: 1 == 1 Type: C Volatile: N		Off	On	Off	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
23.08	<p>WinWidthPos (positive window width) Positive speed limit for the window control, when the speed error ($\Delta n = n_{ref} - n_{act}$) is positive.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: I Volatile: N</p>	-10000	10000	0	rpm	E
23.09	<p>WinWidthNeg (negative window width) Negative speed limit for the window control, when the speed error ($\Delta n = n_{ref} - n_{act}$) is negative.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: I Volatile: N</p>	-10000	10000	0	rpm	E
23.10	<p>SpeedStep (speed step) <i>SpeedStep</i> (23.10) is added to the speed error (Δn) at the speed controller's input. The given min./max. values are limited by <i>M1SpeedMin</i> (20.02) and <i>M1SpeedMax</i> (20.02).</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: Since this speed offset is added after the speed ramp, it must be set to zero prior to stopping the drive.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: Y</p>	-10000	10000	0	rpm	E
23.11	<p>SpeedErrFilt2 (2nd filter for Δn) Speed error (Δn) filter time 2.</p> <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	10000	0	ms	E
23.12	<p>WinCtrlMode (window control mode) Window control mode: 0 = SpeedErrWin standard window control, Speed error (Δn) has to be in a window defined by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09), default speed actual has to be in a window defined by <i>WinWidthPos</i> (23.08) and <i>WinWidthNeg</i> (23.09) 1 = SpeedActWin</p> <p>Example1: To get a window of 10rpm width around the speed error (Δn) set: – <i>WinCtrlMode</i> (23.12) = SpeedErrWin – <i>WinWidthPos</i> (23.08) = 5rpm and – <i>WinWidthNeg</i> (23.09) = -5rpm</p> <p>Example2: To get a window (e.g. 500rpm to 1000rpm) around speed actual set: – <i>WinCtrlMode</i> (23.12) = SpeedActWin – <i>WinWidthPos</i> (23.08) = 1000rpm and – <i>WinWidthNeg</i> (23.09) = 500rpm</p> <p>To get a window (e.g. -50rpm to 100rpm) around speed actual set: – <i>WinCtrlMode</i> (23.12) = SpeedActWin – <i>WinWidthPos</i> (23.08) = 100rpm and – <i>WinWidthNeg</i> (23.09) = -50rpm</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	SpeedErrWin	SpeedActWin	SpeedErrWin	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
23.13	<p>AuxSpeedRef (auxiliary speed reference) Auxiliary speed reference input for the speed control of the drive. Can be connected to <i>SpeedRefUsed</i> (2.17) via:</p> <ul style="list-style-type: none"> – <i>Ref1Mux</i> (11.02) and <i>Ref1Sel</i> (11.03) or – <i>Ref2Mux</i> (11.12) and <i>Ref2Sel</i> (11.06) <p>Internally limited from: $-(2.29) * \frac{32767}{20000} \text{rpm}$ to $(2.29) * \frac{32767}{20000} \text{rpm}$</p> <p>Int. Scaling: (2.29) Type: SI Volatile: Y</p>	-10000	10000	0	rpm	E
23.14	Unused					
23.15	<p>DirectSpeedRef (direct speed reference) Direct speed input is connected to <i>SpeedRef3</i> (2.02) by means of <i>AuxCtrlWord2</i> (7.03) bit 10 = 1 and replaces the speed ramp output.</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} \text{rpm}$ to $(2.29) * \frac{32767}{20000} \text{rpm}$</p> <p>Note1: Since this speed offset is added after the speed ramp, it must be set to zero prior to stopping the drive.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: Y</p>	-10000	10000	0	rpm	E
23.16	<p>SpeedRefScale (speed reference scaling) Speed reference scaling. After Speed ramp.</p> <p>Int. Scaling: 100 == 1 Type: I Volatile: N</p>	-100	100	1	.	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 24	Speed control					
	<p>The Speed controller is based on the PID algorithm and is presented as follows:</p> $T_{ref(s)} = KpS * \left[(n_{ref(s)} - n_{act(s)}) * \left(1 + \frac{1}{sTiS} + \frac{sTD}{sTF + 1} \right) \right] * \frac{100% * T_n}{(2.29)}$ <p>with: T_{ref} = torque reference KpS = proportional gain [KpS (24.03)] N_{ref} = speed reference N_{act} = speed actual TiS = Integration time [TiS (24.09)] TD = Derivation time [$DerivTime$ (24.12)] TF = Derivation filter time [$DerivFiltTime$ (24.13)] T_n = nominal motor torque (2.29) = actual used speed scaling [$SpeedScaleAct$ (2.29)]</p> 					
24.01	Unused					
24.02	<p>DroopRate (droop rate) The amount of speed decrease caused by the load is determined by <i>DroopRate</i> (24.02). The result is a load dependent speed decrease in percent of <i>SpeedScaleAct</i> (2.29). Example: With <i>DroopRate</i> (24.02) = 3% and <i>TorqIntegRef</i> (2.05) = 100% (nominal motor torque) the actual speed decreases 3% of <i>SpeedScaleAct</i> (2.29). Int. Scaling: 10 == 1 % Type: I Volatile: N</p>	0	100	0	%	E
24.03	<p>KpS (p-part speed controller) Proportional gain of the speed controller can be released by means of <i>Par2Select</i> (24.29). Example: The controller generates 15% of motor nominal torque with <i>KpS</i> (24.03) = 3, if the speed error (Δn) is 5% of <i>SpeedScaleAct</i> (2.29). Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	325	5	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
	<p>Load adaptive proportional gain:</p>  <p>The adaptive proportional gain of the speed controller is used to smooth out disturbances which are caused by low loads and backlash. Moderate filtering of the speed error (Δn) is typically not enough to tune the drive. The load adaptation is valid for positive and negative torque.</p>					
24.04	<p>KpSMin (minimum p-part speed controller) <i>KpSMin (24.04)</i> determines the proportional gain when the speed controller output [<i>TorqRef2 (2.09)</i>] is zero. <i>KpSMin (24.04)</i> cannot be greater than <i>KpS (24.03)</i>. Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	(24.03)	0	'	E
24.05	<p>KpSWeakp (weakening point of p-part speed controller) The speed controller output [<i>TorqRef2 (2.09)</i>], in percent of the active motor nominal torque, where the gain equals <i>KpS (24.03)</i>. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	0	%	E
24.06	<p>KpSWeakpFiltTime (filter time for weakening point of p-part speed controller) Filter time to soften the proportional gains rate of change. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	100	100	ms	E
24.07	Unused					
24.08	Unused					
24.09	<p>TiS (i-part speed controller) Integral time of the speed controller can be released by means of <i>Par2Select (24.29)</i>. <i>TiS (24.09)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal torque with <i>KpS (24.03)</i> = 3, if the speed error (Δn) is 5% of <i>SpeedScaleAct (2.29)</i>. On that condition and with <i>TiS (24.09)</i> = 300 ms follows: – the controller generates 30% of motor nominal torque, if the speed error (Δn) is constant, after 300 ms are elapsed (15% from proportional part and 15% from integral part). Setting <i>TiS (24.09)</i> to 0 ms disables the integral part of the speed controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	6400	2500	ms	C
24.10	<p>TiSInitValue (initial value for i-part speed controller) Initial value of the speed controller integrator, in percent of the active motor nominal torque. The integrator is set as soon as <i>RdyRef [MainStatWord (8.01)]</i> becomes valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	325	0	%	E
24.11	<p>BalRef ((balance reference) External value in percent of the active motor nominal torque. The speed controller output is forced to <i>BalRef (24.11)</i> when <i>AuxCtrlWord (7.02)</i> bit 8 = 1. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	325	0	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
24.12	DerivTime (d-part speed controller) Speed controller derivation time. <i>DerivTime (24.12)</i> defines the time within the speed controller derives the error value. The speed controller works as PI controller, if <i>DerivTime (24.12)</i> is set to zero. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	0	ms	E
24.13	DerivFiltTime (filter time for d-part speed controller) Derivation filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	8	ms	E
24.14	AccCompDerTime (acceleration compensation derivation time) <i>AccCompDerTime (24.14)</i> compensates the inertia by adding the derived and weighted <i>SpeedRef4 (2.18)</i> to the speed controller output. The acceleration compensation is inactive, if <i>AccCompDerTime (24.14)</i> is set to zero. Example: <i>AccCompDerTime (24.14)</i> equals the time required to accelerate the drive to <i>SpeedScaleAct (2.29)</i> with motor nominal torque. Int. Scaling: 10 == 1 s Type: I Volatile: N	0	1000	0	s	E
24.15	AccCompFiltTime (filter time acceleration compensation) Acceleration compensation filter time. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	8	ms	E
24.16	Unused					
	<p>Speed adaptive proportional gain and integral time:</p>  <p>In certain applications it is useful to increase / decrease the proportional gain [<i>KpS (24.03)</i>] and decrease / increase the integral time [<i>TiS (24.09)</i>] at low speeds to improve the performance of the speed control. The linear increase and decrease of these parameters starts at <i>KpSTiSMaxSpeed (24.18)</i> and ends at <i>KpSTiSMinSpeed (24.17)</i> by means of <i>KpSValMinSpeed (24.19)</i> and <i>TiSValMinSpeed (24.20)</i>. The speed adaptation is valid for positive and negative speeds.</p>					
24.17	KpSTiSMinSpeed (minimum speed for p- / i-part speed controller) The speed limit below which the proportional gain and the integral time are defined by <i>KpSValMinSpeed (24.19)</i> and <i>TiSValMinSpeed (24.20)</i> . Internally limited from: 0rpm to (2.29) * $\frac{32767}{20000}$ rpm Int. Scaling: (2.29) Type: I Volatile: N	0	(24.18)	0	rpm	E

Index	Signal / Parameter name			unit	E/C	
		min.	max.			
24.18	<p>KpSTISMaxSpeed (maximum speed for p- / i-part speed controller) The speed limit above which the proportional gain and the integral time become constant and are defined by <i>KpS</i> (24.03) and <i>TiS</i> (24.09).</p> <p>Internally limited from: $0rpm \text{ to } (2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: I Volatile: N</p>	(24.17)	10000	0	rpm	E
24.19	<p>KpSValMinSpeed (p-part speed controller value at minimum speed) <i>KpSValMinSpeed</i> (24.19) determines the proportional gain percentage at the speed defined by parameter <i>KpSTISMinSpeed</i> (24.17).</p> <p>Int. Scaling: 1 == 1% Type: I Volatile: N</p>	0	500	100	%	E
24.20	<p>TiSValMinSpeed (i-part speed controller value at minimum speed) <i>TiSValMinSpeed</i> (24.20) determines the integral time percentage at the speed defined by parameter <i>KpSTISMinSpeed</i> (24.17).</p> <p>Int. Scaling: 1 == 1% Type: I Volatile: N</p>	0	500	100	%	E
24.21	<p>ZeroFreqRFE (zero frequency resonance frequency eliminator) Frequency of zero. The filter is located at the input of the speed controller.</p> <p>Int. Scaling: 10 == 1 Hz Type: I Volatile: N</p>	0	150	45	Hz	E
24.22	<p>ZeroDampRFE (zero damping resonance frequency eliminator) Damping of zero.</p> <p>Int. Scaling: 1000 == 1 Type: I Volatile: N</p>	-1	1	0		E
24.23	<p>PoleFreqRFE (pole frequency resonance frequency eliminator) Frequency of pole. The filter is located at the input of the speed controller.</p> <p>Int. Scaling: 10 == 1 Hz Type: I Volatile: N</p>	0	150	40	Hz	E
24.24	<p>PoleDampRFE (pole damping resonance frequency eliminator) Damping of pole.</p> <p>Int. Scaling: 1000 == 1 Type: I Volatile: N</p>	0	1	0.25		E
24.25	<p>SpeedErrorScale (Δn scaling) Scaling factor speed error (Δn).</p> <p>Int. Scaling: 10 == 1% Type: I Volatile: N</p>	10	400	100	%	E
24.26	Unused					
24.27	<p>KpS2 (2nd p-part speed controller) 2nd proportional gain of the speed controller can be released by means of <i>Par2Select</i> (24.29).</p> <p>Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	325	5		E
24.28	<p>TiS2 (2nd i-part speed controller) 2nd integral time of the speed controller can be released by means of <i>Par2Select</i> (24.29).</p> <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	2500	ms	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
24.29	<p>Par2Select (selector for 2nd set of speed controller parameters) Select active speed controller parameters:</p> <p>0 = ParSet1 parameter set 1 [<i>KpS (24.03)</i> and <i>TiS (24.09)</i>] is active, default 1 = ParSet2 parameter set 2 [<i>KpS2 (24.27)</i> and <i>TiS2 (24.28)</i>] is active 2 = SpeedLevel If $MotSpeed (1.04) \leq SpeedLev (50.10)$, then parameter set1 is active. If $MotSpeed (1.04) > SpeedLev (50.10)$, then parameter set 2 is active. 3 = SpeedError If $SpeedErrNeg (2.03) \leq SpeedLev (50.10)$, then parameter set1 is active. If $SpeedErrNeg (2.03) > SpeedLev (50.10)$, then parameter set 2 is active.</p> <p>4 = DI1 0 = parameter set 1 is active, 1 = parameter set 2 is active 5 = DI2 0 = parameter set 1 is active, 1 = parameter set 2 is active 6 = DI3 0 = parameter set 1 is active, 1 = parameter set 2 is active 7 = DI4 0 = parameter set 1 is active, 1 = parameter set 2 is active 8 = DI5 0 = parameter set 1 is active, 1 = parameter set 2 is active 9 = DI6 0 = parameter set 1 is active, 1 = parameter set 2 is active 10 = DI7 0 = parameter set 1 is active, 1 = parameter set 2 is active 11 = DI8 0 = parameter set 1 is active, 1 = parameter set 2 is active 12 = DI9 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 13 = DI10 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 14 = DI11 0 = parameter set 1 is active, 1 = parameter set 2 is active, only available with digital extension board 15 = MCW Bit11 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord (7.01)</i> bit 11 16 = MCW Bit12 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord (7.01)</i> bit 12 17 = MCW Bit13 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord (7.01)</i> bit 13 18 = MCW Bit14 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord (7.01)</i> bit 14 19 = MCW Bit15 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>MainCtrlWord (7.01)</i> bit 15 20 = ACW Bit12 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord (7.02)</i> bit 12 21 = ACW Bit13 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord (7.02)</i> bit 13 22 = ACW Bit14 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord (7.02)</i> bit 14 23 = ACW Bit15 0 = parameter set 1 is active, 1 = parameter set 2 is active, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Note1: Load and speed dependent adaptation parameters are valid regardless of the selected parameter set.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	ParSet1	ACW Bit15	ParSet1		E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 25	Torque reference					
25.01	TorqRefA (torque reference A) External torque reference in percent of the active motor nominal torque. <i>TorqRefA (25.01)</i> can be scaled by <i>LoadShare (25.03)</i> . Note1: <i>TorqRefA (25.01)</i> is only valid, if <i>TorqRefA Sel (25.10) = TorqRefA</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: Y	-325	325	0	%	E
25.02	TorqRefA FTC (torque reference A filter time) <i>TorqRefA (25.01)</i> filter time. Int. Scaling: 1 == 1 ms Type: SI Volatile: N	0	10000	0	ms	E
25.03	LoadShare (load share) Scaling factor <i>TorqRefA (25.01)</i> . Int. Scaling: 10 == 1 % Type: SI Volatile: N	-400	400	100	%	E
25.04	TorqRefB (torque reference B) External torque reference in percent of the active motor nominal torque. <i>TorqRefB (25.04)</i> is ramped by <i>TorqRampUp (25.05)</i> and <i>TorqRampDown (25.06)</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: Y	-325	325	0	%	E
25.05	TorqRampUp (torque ramp up) Ramp time from 0% to 100%, of active motor nominal torque, for. <i>TorqRefB (25.04)</i> . Int. Scaling: 100 = 1 s Type: I Volatile: N	0	120	0	s	E
25.06	TorqRampDown (torque ramp down) Ramp time from 100% to 0%, of active motor nominal torque, for. <i>TorqRefB (25.04)</i> . Int. Scaling: 100 = 1 s Type: I Volatile: N	0	120	0	s	E
25.07	Unused					
25.08	Unused					
25.09	Unused					
25.10	TorqRefA Sel (torque reference A selector) Selector for <i>TorqRefExt (2.24)</i> : 0 = TorqRefA2501 <i>TorqRefA (25.01)</i> , default 1 = AI1 analog input AI1 2 = AI2 analog input AI2 3 = AI3 analog input AI3 4 = AI4 analog input AI4 5 = AI5 analog input AI5 6 = AI6 analog input AI6 Int. Scaling: 1 == 1 Type: C Volatile: N	TorqRefA2501	AI6	TorqRefA2501	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 26	Torque reference handling					
26.01	<p>TorqSel (torque selector) Torque reference selector: 0 = Zero zero control, torque reference = 0 1 = Speed speed control, default 2 = Torque torque control 3 = Minimum minimum control: $\min [TorqRef1 (2.08), TorqRef2 (2.09)]$ 4 = Maximum maximum control: $\max [TorqRef1 (2.08), TorqRef2 (2.09)]$ 5 = Add add control: $TorqRef1 (2.08) + TorqRef2 (2.09)$, used for window control 6 = Limitation limitation control: $TorqRef1 (2.08)$ limits $TorqRef2 (2.09)$. If $TorqRef1 (2.08) = 50\%$, then $TorqRef2 (2.09)$ is limited to $\pm 50\%$.</p> <p>The output of the torque reference selector is <i>TorqRef3 (2.10)</i>.</p> <p>Note1: <i>TorqSel (26.01)</i> is only valid, if <i>TorqMuxMode (26.04) = TorqSel</i>.</p> <p>Note2: In case of <i>UsedMCW (7.04)</i> bit 2 Off3N (respectively E-stop) is set low and <i>E StopMode (21.04) = RampStop</i> or <i>TorqueLimit</i>, the torque selector is automatically set to Speed.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Zero	Limitation	Speed	-	E
26.02	<p>LoadComp (load compensation) Load compensation - in percent of the active motor nominal torque -added to <i>TorqRef3 (2.10)</i>. The sum of <i>TorqRef3 (2.10)</i> and the <i>LoadComp (26.02)</i> results in <i>TorqRef4 (2.11)</i>.</p> <p>Note1: Since this torque offset is added, it must be set to zero prior to stopping the drive.</p> <p>Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	325	0	%	E
26.03	Unused					
	<p>Torque multiplexer function:</p>					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
26.04	<p>TorqMuxMode (torque multiplexer mode) <i>TorqMuxMode (26.04)</i> selects a pair of operation modes. The change between operation modes is done by means of <i>TorqMux (26.05)</i>. Torque reference multiplexer:</p> <p>0 = TorqSel2601 operation mode depends on <i>TorqSel (26.01)</i>, default 1 = Speed/Torq operation mode depends on <i>TorqMux (26.05)</i>: - binary input = 0 ⇒ speed control (1) - binary input = 1 ⇒ torque control (2)</p> <p>2 = Speed/Min operation mode depends on <i>TorqMux (26.05)</i>: - binary input = 0 ⇒ speed control (1) - binary input = 1 ⇒ minimum control (3)</p> <p>3 = Speed/Max operation mode depends on <i>TorqMux (26.05)</i>: - binary input = 0 ⇒ speed control (1) - binary input = 1 ⇒ maximum control (4)</p> <p>4 = Speed/Limit operation mode depends on <i>TorqMux (26.05)</i>: - binary input = 0 ⇒ speed control (1) - binary input = 1 ⇒ limitation control (6)</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	TorqSel2601	Speed/Limit	TorqSel2601	-	E
26.05	<p>TorqMux (torque multiplexer) <i>TorqMux (26.05)</i> selects a binary input to change between operation modes. The choice of the operation modes is provided by means of <i>TorqMuxMode (26.04)</i>. Torque reference multiplexer binary input:</p> <p>0 = NotUsed operation mode depends on <i>TorqSel (26.01)</i>, default 1 = DI1 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 2 = DI2 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 3 = DI3 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 4 = DI4 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 5 = DI5 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 6 = DI6 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 7 = DI7 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 8 = DI8 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i> 9 = DI9 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, only available with digital extension board 10 = DI10 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, only available with digital extension board 11 = DI11 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, only available with digital extension board 12 = MCW Bit11 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 0 = speed control, 1 = depends on <i>TorqMuxMode (26.04)</i>, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	-	E
26.06	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
26.07	Unused					
26.08	GearStartTorq (gearbox starting torque) Gear backlash compensation: – <i>GearStartTorq (26.08)</i> is the reduced torque limit - in percent of the active motor nominal torque - used after a torque direction change. The torque limit is reduced for the time defined by <i>GearTorqTime (26.09)</i> . Int. Scaling: 100 = 1 % Type: I Volatile: N	0	325	325	%	E
26.09	GearTorqTime (gearbox torque time) Gear backlash compensation function: – When the torque is changing it's direction, the torque limit is reduced for the time defined by <i>GearTorqTime (26.09)</i> . Int. Scaling: 1 = 1 ms Type: I Volatile: N	0	10000	100	ms	E
26.10	GearTorqRamp (gearbox torque ramp) Gear backlash compensation function: – When the torque is changing it's direction, the torque limit is reduced for the time defined by <i>GearTorqTime (26.09)</i> . After the time has elapsed, the torque limit is increased to it's normal value according to the ramp time defined by <i>GearTorqRamp (26.10)</i> . <i>GearTorqRamp (26.10)</i> defines the time within the torque increases from zero- to active motor nominal torque. Int. Scaling: 1 = 1 ms Type: I Volatile: N	0	64000	100	ms	E
26.11	Unused					
26.12	Unused					
26.13	Unused					
26.14	Unused					
26.15	TorqCorrect (torque correction) Torque correction value: 0 = NotUsed no torque correction used, default 1 = AI1 torque correction via AI1 (fast AI) 2 = AI2 torque correction via AI2 (fast AI) 3 = AI3 torque correction via AI3 4 = AI4 torque correction via AI4 5 = AI5 torque correction via AI5 6 = AI6 torque correction via AI6 Note1: If <i>TorqCorrect (26.15)</i> = AI3 then AI3 is connected to <i>TorqCorr (2.14)</i> and thus added to <i>TorqRefUsed (2.13)</i> . Note2: Since this torque offset is added, it must be set to zero prior to stopping the drive. Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	AI6	NotUsed	'	E
Group 30	Fault functions					
30.01	StallTime (stall time) The time allowed for the drive to undershoot <i>StallSpeed (30.02)</i> and exceed <i>StallTorq (30.03)</i> . A triggered stall protection leads to fault F531 MotorStalled [<i>FaultWord2 (9.02)</i> bit 14]. The stall protection is inactive, if <i>StallTime (30.01)</i> is set to zero. Int. Scaling: 1 == 1 s Type: I Volatile: N	0	200	0	s	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.02	StallSpeed (stall speed) Actual speed limit used for stall protection. Internally limited from: <i>0rpm to (2.29)rpm</i> Int. Scaling: (2.29) Type: I Volatile: N	0	1000	5	rpm	C
30.03	StallTorq (stall torque) Actual torque limit used for stall protection. Int. Scaling: 100 = 1 % Type: I Volatile: N	0	325	75	%	C
30.04	Unused					
30.05	ResCurDetectSel (residual current detection selector) I The drive trips with F505 ResCurDetect [<i>FaultWord1 (9.01)</i> bit 4] if the earth current exceeds <i>ResCurDetectLim (30.06)</i> for <i>ResCurDetectDel (30.07)</i> : 0 = NotUsed residual current detection is blocked, default 1 = AI4 The earth current is measured by means of a current difference sensor in combination with AI4 (X3;11 and X3;12) on the SDCS-IOB-3 board. 2 = DI1 The earth current is measured by means of an external device (e.g. Bender relays). 3 = DI2 The earth current is measured by means of an external device (e.g. Bender relays). 4 = DI3 The earth current is measured by means of an external device (e.g. Bender relays). 5 = DI4 The earth current is measured by means of an external device (e.g. Bender relays). 6 = DI5 The earth current is measured by means of an external device (e.g. Bender relays). 7 = DI6 The earth current is measured by means of an external device (e.g. Bender relays). 8 = DI7 The earth current is measured by means of an external device (e.g. Bender relays). 9 = DI8 The earth current is measured by means of an external device (e.g. Bender relays). 10 = DI9 The earth current is measured by means of an external device (e.g. Bender relays). Only available with digital extension board 11 = DI10 The earth current is measured by means of an external device (e.g. Bender relays). Only available with digital extension board 12 = DI11 The earth current is measured by means of an external device (e.g. Bender relays). Only available with digital extension board Note1: If <i>ResCurDetectSel (30.05)</i> is connected to a digital input only <i>ResCurDetectDel (30.06)</i> remains valid. The trip limit <i>ResCurDetectLim (30.05)</i> is adjusted at the external device. Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	DI11	NotUsed	-	E
30.06	ResCurDetectLim (residual current detection limit) Residual current detection tripping level. If <i>ResCurDetectSel (30.05)</i> is connected to a digital input <i>ResCurDetectLim (30.06)</i> is deactivated, because the limit is adjusted at the external device. Int. Scaling: 10 == 1 A Type: I Volatile: N	0	20	4	A	E
30.07	ResCurDetectDel (residual current detection delay) Time delay for F505 ResCurDetect [<i>FaultWord1 (9.01)</i>]. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	64000	10	ms	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.08	ArmOvrVoltLev (armature overvoltage level) The drive trips with F503 ArmOverVolt [<i>FaultWord1</i> (9.01) bit 2] if <i>ArmOvrVoltLev</i> (30.08) - in percent of <i>M1NomVolt</i> (99.02) - is exceeded. Example: With <i>M1NomVolt</i> (99.02) = 525V and <i>ArmOvrVoltLev</i> (30.08) = 120% the drive trips with armature voltages > 630 V. Int. Scaling: 10 == 1 % Type: I Volatile: N	20	500	120	%	C
30.09	ArmOvrCurLev (armature overcurrent level) The drive trips with F502 ArmOverCur [<i>FaultWord1</i> (9.01) bit 1] if <i>ArmOvrCurLev</i> (30.09) - in percent of <i>M1NomCur</i> (99.03) - is exceeded. Example: With <i>M1NomCur</i> (99.03) = 850 A and <i>ArmOvrCurLev</i> (30.09) = 250% the drive trips with armature currents > 2125 A. Int. Scaling: 10 == 1 % Type: I Volatile: N	20	400	250	%	C
30.10	ArmCurRiseMax (maximum rise armature current) The drive trips with F539 FastCurRise [<i>FaultWord3</i> (9.03) bit 6] if <i>ArmCurRiseMax</i> (30.10) - in percent of <i>M1NomCur</i> (99.03) per 1 ms is exceeded. Note1: This trip opens the main contactor and the DC-breaker, if present. Int. Scaling: 100 == 1 %/ms Type: I Volatile: N	0	325	325	%/ms	E
30.11	Unused					
30.12	M1FldMinTrip (motor 1 minimum field trip) The drive trips with F541 M1FexLowCur [<i>FaultWord3</i> (9.03) bit 8] if <i>M1FldMinTrip</i> (30.12) - in percent of <i>M1NomFldCur</i> (99.11) - is still undershot when <i>FldMinTripDly</i> (45.18) is elapsed. Int. Scaling: 100 == 1 % Type: I Volatile: N	0	100	50	%	E
30.13	M1FldOvrCurLev (motor 1 field overcurrent level) The drive trips with F515 M1FexOverCur [<i>FaultWord1</i> (9.01) bit 14] if <i>M1FldOvrCurLev</i> (30.13) - in percent of <i>M1NomFldCur</i> (99.11) - is exceeded. The field overcurrent fault is inactive, if <i>M1FldOvrCurLev</i> (30.13) is set to 135%. Int. Scaling: 100 == 1 % Type: I Volatile: N	0	135	125	%	E
30.14	SpeedFbMonLev (speed feedback monitor level) The drive reacts according to <i>SpeedFbFitSel</i> (30.17) if the measured speed feedback [<i>SpeedActEnc</i> (1.03) or <i>SpeedActTach</i> (1.05)] does not exceed <i>SpeedFbMonLev</i> (30.14) while the measured EMF exceeds <i>EMF FbMonLev</i> (30.15). Internally limited from: $0rpm \text{ to } (2.29) * \frac{32767}{20000} rpm$ Example: With <i>SpeedFbMonLev</i> (30.14) = 15 rpm and <i>EMF FbMonLev</i> (30.15) = 50 V the drive trips when the EMF is > 50 V while the speed feedback is ≤ 15 rpm. Int. Scaling: (2.29) Type: I Volatile: N	0	10000	15	rpm	E
30.15	EMF FbMonLev (EMF feedback monitor level) The speed measurement monitoring function is activated, when the measured EMF exceeds <i>EMF FbMonLev</i> (30.15). See also <i>SpeedFbMonLev</i> (30.14). Int. Scaling: 1 == 1 V Type: I Volatile: N	0	2000	50	V	E
30.16	M1OvrSpeed (motor 1 overspeed) The drive trips with F532 MotOverSpeed [<i>FaultWord2</i> (9.02) bit 15] if <i>M1OvrSpeed</i> (30.16) is exceeded. Internally limited from: $0rpm \text{ to } (2.29) * \frac{32767}{20000} rpm$ Int. Scaling: (2.29) Type: I Volatile: N	0	10000	1800	rpm	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.17	<p>SpeedFbFltSel (speed feedback fault selector) <i>SpeedFbFltSel (30.17)</i> determines the reaction to a speed feedback problem:</p> <p>0 = NotUsed no reaction 1 = Fault the drive trips according to <i>SpeedFbFltMode (30.36)</i> and sets F522 SpeedFb [<i>FaultWord2 (9.02)</i> bit 5], default 2 = EMF/Fault the speed feedback is switched to EMF, the drive stops according to <i>E StopRamp (22.11)</i> and sets F522 SpeedFb [<i>FaultWord2 (9.02)</i> bit 5] 3 = EMF/Alarm the speed feedback is switched to EMF and A125 SpeedFb [<i>AlarmWord2 (9.07)</i> bit 8] is set</p> <p>Note1: In case the actual speed of the drive is in the field weakening area <i>SpeedFbFltSel (30.17)</i> reacts as if it is set to Fault, this is not valid for selection NotUsed.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	EMF/Alarm	Fault	'	E
30.18	<p>CurRippleSel (current ripple selector) <i>CurRippleSel (30.18)</i> determines the reaction when <i>CurRippleLim (30.19)</i> is reached:</p> <p>0 = NotUsed no reaction 1 = Fault the drive trips with F517 ArmCurRipple [<i>FaultWord2 (9.02)</i> bit 0], default 2 = Alarm A117 ArmCurRipple [<i>AlarmWord2 (9.07)</i> bit 0] is set</p> <p>Note1: The current ripple function detects:</p> <ul style="list-style-type: none"> – a broken fuse, thyristor or current transformer (T51, T52) – too high gain of the current controller <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	Alarm	Fault	'	E
30.19	<p>CurRippleLim (current ripple limit) Threshold for <i>CurRippleSel (30.18)</i>, in percent of <i>M1NomCur (99.03)</i>. Typical values when a thyristor is missing:</p> <ul style="list-style-type: none"> – armature about 300% – high inductive loads (e.g. excitation) about 90% <p>Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	650	150	%	E
30.20	Unused					
30.21	<p>PwrLossTrip (power loss trip) The action taken, when the mains voltage undershoots <i>UNetMin2 (30.23)</i>:</p> <p>0 = Immediately the drive trips immediately with F512 MainsLowVolt [<i>FaultWord1 (9.01)</i> bit 11], default 1 = Delayed A111 MainsLowVolt [<i>AlarmWord1 (9.06)</i> bit 10] is set as long as the mains voltage recovers before <i>PowrDownTime (30.25)</i> is elapsed, otherwise F512 MainsLowVolt [<i>FaultWord1 (9.01)</i> bit 11] is generated</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Immediately	Delayed	Immediately	'	E
30.22	<p>UNetMin1 (mains voltage minimum 1) First (upper) limit for mains undervoltage monitoring in percent of <i>NomMainsVolt (99.10)</i>. If the mains voltage undershoots <i>UNetMin1 (30.22)</i> following actions take place:</p> <ul style="list-style-type: none"> – the firing angle is set to <i>ArmAlphaMax (20.14)</i>, – single firing pulses are applied in order to extinguish the current as fast as possible, – the controllers are blocked and – A111 MainsLowVolt [<i>AlarmWord1 (9.06)</i> bit 10] is set as long as the mains voltage recovers before <i>PowrDownTime (30.25)</i> is elapsed, otherwise F512 MainsLowVolt [<i>FaultWord1 (9.01)</i> bit 11] is generated. <p>Note1: <i>UNetMin2 (30.23)</i> isn't monitored, unless the mains voltage drops below <i>UNetMin1 (30.22)</i> first. Thus for a proper function of the mains undervoltage monitoring <i>UNetMin1 (30.22)</i> has to be larger than <i>UNetMin2 (30.23)</i>.</p> <p>Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	150	80	%	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.23	<p>UNetMin2 (mains voltage minimum 2) Second (lower) limit for mains undervoltage monitoring in percent of <i>NomMainsVolt</i> (99.10). If the mains voltage undershoots <i>UNetMin2</i> (30.23) following actions take place:</p> <ul style="list-style-type: none"> – if <i>PwrLossTrip</i> (30.21) = Immediately: <ul style="list-style-type: none"> ○ the drive trips immediately with F512 MainsLowVolt [<i>FaultWord1</i> (9.01) bit 11] – if <i>PwrLossTrip</i> (30.21) = Delayed: <ul style="list-style-type: none"> ○ the firing angle is set to <i>ArmAlphaMax</i> (20.14), ○ single firing pulses are applied in order to extinguish the current as fast as possible, ○ the controllers are blocked and ○ A111 MainsLowVolt [<i>AlarmWord1</i> (9.06) bit 10] is set as long as the mains voltage recovers before <i>PowrDownTime</i> (30.25) is elapsed, otherwise F512 MainsLowVolt [<i>FaultWord1</i> (9.01) bit 11] is generated. <p>Note1: <i>UNetMin2</i> (30.23) isn't monitored, unless the mains voltage drops below <i>UNetMin1</i> (30.22) first. Thus for a proper function of the mains undervoltage monitoring <i>UNetMin1</i> (30.22) has to be larger than <i>UNetMin2</i> (30.23). Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	150	60	%	C
30.24	<p>PowrDownTime (power down time) The mains voltage must return within <i>PowrDownTime</i> (30.24). Otherwise F512 MainsLowVolt [<i>FaultWord1</i> (9.01) bit 11] will be generated. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	500	ms	C

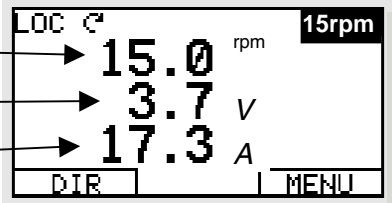
Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																																												
30.25	<p>FaultMask (mask faults) Attention: Activation of the fault mask may cause harm to personnel and / or equipment! Thus only certified experts should use the fault mask for e.g. commissioning and fault tracing.</p> <p>The faults or alarms are suppressed, if the according bit of the fault mask is set. The fault mask is not stored, thus there is no fault suppressing after power-on. If a fault is suppressed, A123 FaultSuppres [<i>AlarmWord2 (9.07)</i> bit 6] is generated. Fault mask word:</p> <table border="1"> <thead> <tr> <th>Bit</th> <th>Name</th> <th>Value</th> <th>Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>M1Fex</td> <td>1</td> <td>suppressed faults: F515 M1FexOverCur, F516 M1FexCom, F521 FieldAck, F529 M1FexNotOK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B2</td> <td>M2Fex</td> <td>1</td> <td>suppressed faults: F518 M2FexOverCur, F519 M2FexCom, F521 FieldAck, F530 M2FexNotOK</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B3</td> <td>Speed</td> <td>1</td> <td>suppressed faults: F522 SpeedFb, F553 TachPolarity, F532 MotOverSpeed</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B4</td> <td>Brake</td> <td>1</td> <td>suppressed faults: F552 MechBrake</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B5</td> <td>reserved</td> <td>1</td> <td></td> </tr> <tr> <td></td> <td></td> <td>0</td> <td></td> </tr> <tr> <td>B6</td> <td>I/OBoard</td> <td>1</td> <td>suppressed faults: F508 I/OBoardLoss</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B7</td> <td>Off2/Off3</td> <td>1</td> <td>suppressed alarms: A101 Off2ViaDI, A102 Off3ViaDI</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B8</td> <td>ConvTemp</td> <td>1</td> <td>suppressed faults: F504 ConvOverTemp</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B9</td> <td>Mains</td> <td>1</td> <td>suppressed faults: F512 MainsLowVolt, F513 MainsOvrVolt</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B10</td> <td>reserved</td> <td>1</td> <td></td> </tr> <tr> <td></td> <td></td> <td>0</td> <td></td> </tr> <tr> <td>B11</td> <td>MainsSyncn</td> <td>1</td> <td>suppressed faults: F514 MainsNotSync</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B12</td> <td>OverCur</td> <td>1</td> <td>suppressed faults: F502 ArmOverCur</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B13</td> <td>12-Pulse</td> <td>1</td> <td>suppressed faults: F533 ReversalTime, F534 12PcurDiff, F535 12PulseCom, F536 12SlaveFail</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B14</td> <td>Force</td> <td>1</td> <td>force drive to state RdyRun and RdyRef [<i>MainStatWord (8.01)</i> bit 0 and 1]</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B15</td> <td>Bits0To13</td> <td>1</td> <td>suppressed faults: all as to be found in bits 0 to 13</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	Bit	Name	Value	Comment	B0	M1Fex	1	suppressed faults: F515 M1FexOverCur, F516 M1FexCom, F521 FieldAck, F529 M1FexNotOK			0	no action	B2	M2Fex	1	suppressed faults: F518 M2FexOverCur, F519 M2FexCom, F521 FieldAck, F530 M2FexNotOK			0	no action	B3	Speed	1	suppressed faults: F522 SpeedFb, F553 TachPolarity, F532 MotOverSpeed			0	no action	B4	Brake	1	suppressed faults: F552 MechBrake			0	no action	B5	reserved	1				0		B6	I/OBoard	1	suppressed faults: F508 I/OBoardLoss			0	no action	B7	Off2/Off3	1	suppressed alarms: A101 Off2ViaDI, A102 Off3ViaDI			0	no action	B8	ConvTemp	1	suppressed faults: F504 ConvOverTemp			0	no action	B9	Mains	1	suppressed faults: F512 MainsLowVolt, F513 MainsOvrVolt			0	no action	B10	reserved	1				0		B11	MainsSyncn	1	suppressed faults: F514 MainsNotSync			0	no action	B12	OverCur	1	suppressed faults: F502 ArmOverCur			0	no action	B13	12-Pulse	1	suppressed faults: F533 ReversalTime, F534 12PcurDiff, F535 12PulseCom, F536 12SlaveFail			0	no action	B14	Force	1	force drive to state RdyRun and RdyRef [<i>MainStatWord (8.01)</i> bit 0 and 1]			0	no action	B15	Bits0To13	1	suppressed faults: all as to be found in bits 0 to 13			0	no action	-	-	-	-	E
Bit	Name	Value	Comment																																																																																																																															
B0	M1Fex	1	suppressed faults: F515 M1FexOverCur, F516 M1FexCom, F521 FieldAck, F529 M1FexNotOK																																																																																																																															
		0	no action																																																																																																																															
B2	M2Fex	1	suppressed faults: F518 M2FexOverCur, F519 M2FexCom, F521 FieldAck, F530 M2FexNotOK																																																																																																																															
		0	no action																																																																																																																															
B3	Speed	1	suppressed faults: F522 SpeedFb, F553 TachPolarity, F532 MotOverSpeed																																																																																																																															
		0	no action																																																																																																																															
B4	Brake	1	suppressed faults: F552 MechBrake																																																																																																																															
		0	no action																																																																																																																															
B5	reserved	1																																																																																																																																
		0																																																																																																																																
B6	I/OBoard	1	suppressed faults: F508 I/OBoardLoss																																																																																																																															
		0	no action																																																																																																																															
B7	Off2/Off3	1	suppressed alarms: A101 Off2ViaDI, A102 Off3ViaDI																																																																																																																															
		0	no action																																																																																																																															
B8	ConvTemp	1	suppressed faults: F504 ConvOverTemp																																																																																																																															
		0	no action																																																																																																																															
B9	Mains	1	suppressed faults: F512 MainsLowVolt, F513 MainsOvrVolt																																																																																																																															
		0	no action																																																																																																																															
B10	reserved	1																																																																																																																																
		0																																																																																																																																
B11	MainsSyncn	1	suppressed faults: F514 MainsNotSync																																																																																																																															
		0	no action																																																																																																																															
B12	OverCur	1	suppressed faults: F502 ArmOverCur																																																																																																																															
		0	no action																																																																																																																															
B13	12-Pulse	1	suppressed faults: F533 ReversalTime, F534 12PcurDiff, F535 12PulseCom, F536 12SlaveFail																																																																																																																															
		0	no action																																																																																																																															
B14	Force	1	force drive to state RdyRun and RdyRef [<i>MainStatWord (8.01)</i> bit 0 and 1]																																																																																																																															
		0	no action																																																																																																																															
B15	Bits0To13	1	suppressed faults: all as to be found in bits 0 to 13																																																																																																																															
		0	no action																																																																																																																															
30.26	Unused																																																																																																																																	

Index	Signal / Parameter name				min.	max.	def.	unit	E/C																																					
	<table border="1"> <thead> <tr> <th colspan="5">Overview local and communication loss:</th> </tr> <tr> <th>Device</th> <th>Loss control</th> <th>Time out</th> <th>Related fault</th> <th>Related alarm</th> </tr> </thead> <tbody> <tr> <td>Control panel</td> <td rowspan="3"><i>LocalLossCtrl (30.27)</i></td> <td rowspan="3">fixed to 5s</td> <td rowspan="3">F546 LocalCmdLoss</td> <td rowspan="3">A130 LocalCmdLoss</td> </tr> <tr> <td>DW</td> </tr> <tr> <td>DWL</td> </tr> <tr> <td>Rxxx (Fieldbus)</td> <td rowspan="4"><i>ComLossCtrl (30.28)</i></td> <td><i>FB TimeOut (30.35)</i></td> <td>F528 FieldBusCom</td> <td>A128 FieldBusCom</td> </tr> <tr> <td rowspan="3">DCSLink</td> <td><i>MailBoxCycle1 (94.13), MailBoxCycle2 (94.19), MailBoxCycle3 (94.25), MailBoxCycle4 (94.31)</i></td> <td>F544 P2PandMFCom</td> <td>A112 P2PandMFCom</td> </tr> <tr> <td>-</td> <td>F535 12PulseCom</td> <td>-</td> </tr> <tr> <td>-</td> <td>F516 M1FexCom F519 M2FexCom</td> <td>-</td> </tr> <tr> <td>SDCS-COM-8</td> <td><i>Ch0ComLossCtrl (70.05)</i> <i>Ch2ComLossCtrl (70.15)</i></td> <td><i>Ch0TimeOut (70.04)</i> <i>Ch2TimeOut (70.14)</i></td> <td>F543 COM8Com</td> <td>A113 COM8Com</td> </tr> </tbody> </table>				Overview local and communication loss:					Device	Loss control	Time out	Related fault	Related alarm	Control panel	<i>LocalLossCtrl (30.27)</i>	fixed to 5s	F546 LocalCmdLoss	A130 LocalCmdLoss	DW	DWL	Rxxx (Fieldbus)	<i>ComLossCtrl (30.28)</i>	<i>FB TimeOut (30.35)</i>	F528 FieldBusCom	A128 FieldBusCom	DCSLink	<i>MailBoxCycle1 (94.13), MailBoxCycle2 (94.19), MailBoxCycle3 (94.25), MailBoxCycle4 (94.31)</i>	F544 P2PandMFCom	A112 P2PandMFCom	-	F535 12PulseCom	-	-	F516 M1FexCom F519 M2FexCom	-	SDCS-COM-8	<i>Ch0ComLossCtrl (70.05)</i> <i>Ch2ComLossCtrl (70.15)</i>	<i>Ch0TimeOut (70.04)</i> <i>Ch2TimeOut (70.14)</i>	F543 COM8Com	A113 COM8Com					
Overview local and communication loss:																																														
Device	Loss control	Time out	Related fault	Related alarm																																										
Control panel	<i>LocalLossCtrl (30.27)</i>	fixed to 5s	F546 LocalCmdLoss	A130 LocalCmdLoss																																										
DW																																														
DWL																																														
Rxxx (Fieldbus)	<i>ComLossCtrl (30.28)</i>	<i>FB TimeOut (30.35)</i>	F528 FieldBusCom	A128 FieldBusCom																																										
DCSLink		<i>MailBoxCycle1 (94.13), MailBoxCycle2 (94.19), MailBoxCycle3 (94.25), MailBoxCycle4 (94.31)</i>	F544 P2PandMFCom	A112 P2PandMFCom																																										
		-	F535 12PulseCom	-																																										
		-	F516 M1FexCom F519 M2FexCom	-																																										
SDCS-COM-8	<i>Ch0ComLossCtrl (70.05)</i> <i>Ch2ComLossCtrl (70.15)</i>	<i>Ch0TimeOut (70.04)</i> <i>Ch2TimeOut (70.14)</i>	F543 COM8Com	A113 COM8Com																																										
<p>30.27</p>	<p>LocalLossCtrl (local or control panel loss control) <i>LocalLossCtrl (30.27)</i> determines the reaction to a local loss (control panel, DriveWindow, DriveWindowLight). F546 LocalCmdLoss [<i>FaultWord3 (9.03)</i> bit 13] is set with: 0 = RampStop stop according to <i>E StopRamp (22.11)</i>, default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking A130 LocalCmdLoss [<i>AlarmWord2 (9.07)</i> bit 13] is set with: 4 = LastSpeed the drive continues to run at the last speed before the warning 5 = FixedSpeed1 the drive continuous to run with <i>FixedSpeed1 (23.02)</i> Note1: The time out for <i>LocalLossCtrl (30.27)</i> is fixed to 5s. Int. Scaling: 1 == 1 Type: C Volatile: N</p>				RampStop	FixedSpeed1	RampStop	-	E																																					
<p>30.28</p>	<p>ComLossCtrl (communication loss control) <i>ComLossCtrl (30.28)</i> determines the reaction to a communication loss (fieldbuses - Rxxx, DCSLink - peer to peer respectively master-follower). Depending on the type of communication loss either F528 FieldBusCom [<i>FaultWord2 (9.02)</i> bit 11] or F544 P2PandMFcom [<i>FaultWord3 (9.03)</i> bit 11] is set with: 0 = RampStop stop according to <i>E StopRamp (22.11)</i>, default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking Depending on the type of communication loss either A128 FieldBusCom [<i>AlarmWord2 (9.02)</i> bit 11] or A112 P2PandMFcom [<i>AlarmWord1 (9.01)</i> bit 11] is set with: 4 = LastSpeed the drive continues to run at the last speed before the warning 5 = FixedSpeed1 the drive continuous to run with <i>FixedSpeed1 (23.02)</i> Note1: The time out for <i>ComLossCtrl (30.28)</i> is set by: – <i>FB TimeOut (30.35)</i> for all fieldbuses (Rxxx) and – <i>MailBoxCycle1 (94.13)</i> to <i>MailBoxCycle4 (94.31)</i> for the DCSLink (peer to peer respectively master-follower communication). Int. Scaling: 1 == 1 Type: C Volatile: N</p>				RampStop	FixedSpeed1	RampStop	-	E																																					

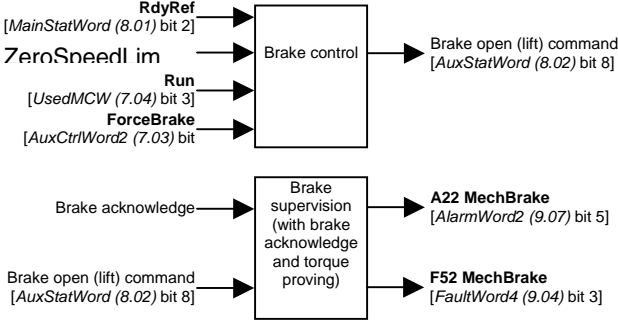
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.29	<p>AI Mon4mA (analog input 4mA fault selector) <i>AI Mon4mA (30.29)</i> determines the reaction to an undershoot of one of the analog inputs under 4mA / 2V - if it is configured to this mode:</p> <p>0 = NotUsed no reaction 1 = Fault the drive stops according to <i>FaultStopMode (30.30)</i> and trips with F551 AIRange [<i>FaultWord4 (9.04)</i> bit 2], default 2 = LastSpeed the drive continues to run at the last speed and sets A127 AIRange [<i>AlarmWord2 (9.07)</i> bit 10] 3 = FixedSpeed1 the drive continues to run with <i>FixedSpeed1 (23.02)</i> and sets A127 AIRange [<i>AlarmWord2 (9.07)</i> bit 10]</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	FixedSpeed1	Fault	'	E
30.30	<p>FaultStopMode (fault stop mode) <i>FaultStopMode (30.30)</i> determines the reaction to a fault of trip level 4:</p> <p>0 = RampStop stop according to <i>E StopRamp (22.11)</i>, default 1 = TorqueLimit stop by active torque limit 2 = CoastStop torque is zero 3 = DynBraking dynamic braking</p> <p>Note1: <i>FaultStopMode (30.30)</i> doesn't apply to communication faults.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	RampStop	DynBraking	RampStop	'	C
30.31	<p>ExtFaultSel (external fault selector) The drive trips with F526 ExternalDI [<i>FaultWord2 (9.02)</i> bit 9] if a binary input for an external fault is selected and 1:</p> <p>0 = NotUsed no reaction, default 1 = DI1 1 = no fault, 0 = fault 2 = DI2 1 = no fault, 0 = fault 3 = DI3 1 = no fault, 0 = fault 4 = DI4 1 = no fault, 0 = fault 5 = DI5 1 = no fault, 0 = fault 6 = DI6 1 = no fault, 0 = fault 7 = DI7 1 = no fault, 0 = fault 8 = DI8 1 = no fault, 0 = fault 9 = DI9 1 = no fault, 0 = fault, Only available with digital extension board 10 = DI10 1 = no fault, 0 = fault, Only available with digital extension board 11 = DI11 1 = no fault, 0 = fault, Only available with digital extension board 12 = MCW Bit11 1 = no fault, 0 = fault, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1 = no fault, 0 = fault, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1 = no fault, 0 = fault, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1 = no fault, 0 = fault, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1 = no fault, 0 = fault, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1 = no fault, 0 = fault, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1 = no fault, 0 = fault; external fault is connected to <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1 = no fault, 0 = fault, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1 = no fault, 0 = fault, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
30.32	<p>ExtAlarmSel (external alarm selector) The drive sets A126 ExternalDI [<i>AlarmWord2 (9.07)</i> bit 9] if a binary input for an external alarm is selected and 1:</p> <p>0 = NotUsed no reaction, default 1 = DI1 1 = no alarm, 0 = alarm 2 = DI2 1 = no alarm, 0 = alarm 3 = DI3 1 = no alarm, 0 = alarm 4 = DI4 1 = no alarm, 0 = alarm 5 = DI5 1 = no alarm, 0 = alarm 6 = DI6 1 = no alarm, 0 = alarm 7 = DI7 1 = no alarm, 0 = alarm 8 = DI8 1 = no alarm, 0 = alarm 9 = DI9 1 = no alarm, 0 = alarm. Only available with digital extension board 10 = DI10 1 = no alarm, 0 = alarm. Only available with digital extension board 11 = DI11 1 = no alarm, 0 = alarm. Only available with digital extension board 12 = MCW Bit11 1 = no alarm, 0 = alarm, <i>MainCtrlWord (7.01)</i> bit 11 13 = MCW Bit12 1 = no alarm, 0 = alarm, <i>MainCtrlWord (7.01)</i> bit 12 14 = MCW Bit13 1 = no alarm, 0 = alarm, <i>MainCtrlWord (7.01)</i> bit 13 15 = MCW Bit14 1 = no alarm, 0 = alarm, <i>MainCtrlWord (7.01)</i> bit 14 16 = MCW Bit15 1 = no alarm, 0 = alarm, <i>MainCtrlWord (7.01)</i> bit 15 17 = ACW Bit12 1 = no alarm, 0 = alarm, <i>AuxCtrlWord (7.02)</i> bit 12 18 = ACW Bit13 1 = no alarm, 0 = alarm, <i>AuxCtrlWord (7.02)</i> bit 13 19 = ACW Bit14 1 = no alarm, 0 = alarm, <i>AuxCtrlWord (7.02)</i> bit 14 20 = ACW Bit15 1 = no alarm, 0 = alarm, <i>AuxCtrlWord (7.02)</i> bit 15</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ACW Bit15	NotUsed	-	C
30.33	<p>ExtFaultOnSel (external fault on selector) <i>ExtFaultOnSel (30.33)</i> determines the reaction to an external fault:</p> <p>0 = Fault external fault is always valid independent from drive state, default 1 = Fault&RdyRun external fault is only valid when drive state is RdyRun [<i>MainStatWord (8.01)</i> bit 1] for at least 6s</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Fault	Fault&RdyOn	Fault	-	E
30.34	<p>ExtAlarmOnSel (external alarm on selector) <i>ExtAlarmOnSel (30.34)</i> determines the reaction to an external alarm:</p> <p>0 = Alarm external alarm is always valid independent from drive state, default 1 = Alarm&RdyRun external alarm is only valid when drive state is RdyRun [<i>MainStatWord (8.01)</i> bit 1] for at least 6s</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Alarm	Alarm&RdyOn	Alarm	-	E
30.35	<p>FB TimeOut (fieldbus time out) Time delay before a communication break with a fieldbus is declared. Depending on the setting of <i>ComLossCtrl (30.28)</i> either F528 FieldBusCom [<i>FaultWord2 (9.02)</i> bit 11] or A128 FieldBusCom [<i>AlarmWord2 (9.02)</i> bit 11] is set. The communication fault and alarm are inactive, if <i>FB TimeOut (30.35)</i> is set to 0 ms.</p> <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	100	ms	C
30.36	<p>SpeedFbFltMode (speed feedback fault mode) <i>SpeedFbFltMode (30.36)</i> determines the reaction to a fault of trip level 3:</p> <p>0 = CoastStop torque is zero, default 1 = DynBraking dynamic braking</p> <p>Note1: <i>FaultStopMode (30.36)</i> doesn't apply to communication faults.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	CoastStop	DynBraking	CoastStop	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 31	Motor 1 temperature					
31.01	M1ModelTime (motor 1 model time constant) Thermal time constant for motor 1. The time within the temperature rises to 63% of its nominal value. The motor thermal model is blocked, if <i>M1ModelTime</i> (31.01) is set to zero. Int. Scaling: 10 == 1 s Type: I Volatile: N	0	6400	240	s	E
31.02	Unused					
31.03	M1AlarmLimLoad (motor 1 alarm limit load) The drive sets A107 M1OverLoad [<i>AlarmWord1</i> (9.06) bit 6] if <i>M1AlarmLimLoad</i> (31.03) - in percent of <i>M1NomCur</i> (99.03) - is exceeded. Output value for motor 1 thermal model is <i>Mot1TempCalc</i> (1.20). Int. Scaling: 10 == 1 % Type: I Volatile: N	10	325	102	%	E
31.04	M1FaultLimLoad (motor 1 fault limit load) The drive trips with F507 M1OverLoad [<i>FaultWord1</i> (9.01) bit 6] if <i>M1FaultLimLoad</i> (31.04) - in percent of <i>M1NomCur</i> (99.03) - is exceeded. Output value for motor 1 thermal model is <i>Mot1TempCalc</i> (1.20). Int. Scaling: 10 == 1 % Type: I Volatile: N	10	325	106	%	E
31.05	M1TempSel (motor 1 temperature selector) <i>M1TempSel</i> (31.05) selects motor 1 measured temperature input. Connection possibilities for PT100: <ul style="list-style-type: none"> - max. 3 PT100 for motor 1 and max. 3 PT100 for motor 2 or - up to 6 PT100 for motor 1 only. Connection possibilities PTC: <ul style="list-style-type: none"> - max. 1 PTC for motor 1 and max. 1 PTC for motor 2 or - up to 2 PTC for motor 1 only: 0 = NotUsed motor 1 temperature measurement is blocked, default 1 = 1PT100 AI2 one PT100 connected to AI2 on SDCS-IOB-3 2 = 2PT100 AI2 two PT100 connected to AI2 on SDCS-IOB-3 3 = 3PT100 AI2 three PT100 connected to AI2 on SDCS-IOB-3 4 = 4PT100 AI2/3 four PT100, 3 connected to AI2 and 1 connected to AI3 on SDCS-IOB-3 5 = 5PT100 AI2/3 five PT100, 3 connected to AI2 and 2 connected to AI3 on SDCS-IOB-3 6 = 6PT100 AI2/3 six PT100, 3 connected to AI2 and 3 connected to AI3 on SDCS-IOB-3 7 = 1PT100 AI7 one PT100 connected to AI7 on RAI02 8 = 2PT100 AI7 two PT100 connected to AI7 on RAI02 9 = 3PT100 AI7 three PT100 connected to AI7 on RAI02 10 = 4PT100 AI7/8 four PT100, 3 connected to AI7 and 1 connected to AI8 on RAI02 11 = 5PT100 AI7/8 five PT100, 3 connected to AI7 and 2 connected to AI8 on RAI02 12 = 6PT100 AI7/8 six PT100, 3 connected to AI7 and 3 connected to AI8 on RAI02 13 = 1PTC AI2 one PTC connected to AI2 on SDCS-IOB-3 14 = 2PTC AI2/3 two PTC, 1 connected to AI2 and 1 connected to AI3 on SDCS-IOB-3 15 = 1PTC AI2/Con one PTC connected to AI2 on SDCS-CON-4 Note1: AI7 and AI8 have to be activated by means of <i>AIO ExtModule</i> (98.06). Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	1PTC AI2/Con	NotUsed	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
31.06	M1AlarmLimTemp (motor 1 alarm limit temperature) The drive sets A106 M1OverTemp [<i>AlarmWord1</i> (9.06) bit 5] if <i>M1AlarmLimTemp</i> (31.06) is exceeded. Output value for motor 1 measured temperature is <i>Mot1TempMeas</i> (1.22). Note1: The units depends on <i>M1TempSel</i> (31.05). Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: SI Volatile: N	-10	4000	0	°C / Ω / -	C
31.07	M1FaultLimTemp (motor 1 fault limit temperature) The drive trips with F506 M1OverTemp [<i>FaultWord1</i> (9.01) bit 5] if <i>M1FaultLimTemp</i> (31.07) is exceeded. Output value for motor 1 measured temperature is <i>Mot1TempMeas</i> (1.22). Note1: The units depends on <i>M1TempSel</i> (31.05). Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: SI Volatile: N	-10	4000	0	°C / Ω / -	C
31.08	M1KlixonSel (motor 1 klixon selector) The drive trips with F506 M1OverTemp [<i>FaultWord1</i> (9.01) bit 5] if a digital input selected and the klixon is open: 0 = NotUsed no reaction, default 1 = DI1 0 = fault, 1 = no fault 2 = DI2 0 = fault, 1 = no fault 3 = DI3 0 = fault, 1 = no fault 4 = DI4 0 = fault, 1 = no fault 5 = DI5 0 = fault, 1 = no fault 6 = DI6 0 = fault, 1 = no fault 7 = DI7 0 = fault, 1 = no fault 8 = DI8 0 = fault, 1 = no fault 9 = DI9 0 = fault, 1 = no fault. Only available with digital extension board 10 = DI10 0 = fault, 1 = no fault. Only available with digital extension board 11 = DI11 0 = fault, 1 = no fault. Only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	DI11	NotUsed	-	C
Group 34	Control panel display					
	Signal and parameter visualization on the control panel : <div style="text-align: center;">  </div> <p>Setting a display parameter to 0 results in no signal or parameter displayed. Setting a display parameter from 101 to 9999 displays the belonging signal or parameter. If a signal or parameter does not exist, the display shows "n.a.".</p>					
34.01	DispParam1Sel (select signal / parameter to be displayed in control panel row 1) Index pointer to the destination of the control panel first display row [e.g. 101 equals <i>MotSpeedFilt</i> (1.01)]. Int. Scaling: 1 == 1 Type: I Volatile: N	0	9999	101	-	C
34.02	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
34.03	Unused					
34.04	Unused					
34.05	Unused					
34.06	Unused					
34.07	Unused					
34.08	DispParam2Sel (select signal / parameter to be displayed in control panel row 2) Index pointer to the destination of the control panel second display row [e.g. 114 equals <i>ArmVoltAct (1.14)</i>]. Int. Scaling: 1 == 1 Type: I Volatile: N	0	9999	114	'	C
34.09	Unused					
34.10	Unused					
34.11	Unused					
34.12	Unused					
34.13	Unused					
34.14	Unused					
34.15	DispParam3Sel (select signal / parameter to be displayed in control panel row 3) Index pointer to the destination of the control panel third display row [e.g. 116 equals <i>ConvCurAct (1.16)</i>]. Int. Scaling: 1 == 1 Type: I Volatile: N	0	9999	116	'	C
34.16	Unused					
34.17	Unused					
34.18	Unused					
34.19	Unused					
34.20	Unused					
34.21	Unused					

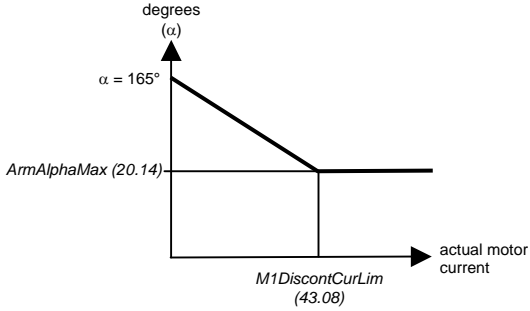
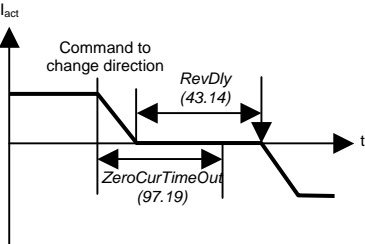
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 42	<h2>Brake control</h2>					
	<p>Brake control:</p>  <p>With brake control On [M1BrakeCtrl (42.01)] and RdyRef [MainStatWord (8.01) bit 2] equals 1 the torque reference is set to <i>StrtTorqRef</i> (42.08). The brake open (lift) command is given, when torque actual has reached <i>StrtTorqRef</i> (42.08). This function is called torque proving.</p> <p>The brake open (lift) command [AuxStatWord (8.02) bit 8] is send directly, without time delay, to the brake. At the same time a brake open delay [M1BrakeOpenDly (42.03)] is started. During the delay, the brake acknowledge is ignored and the torque reference equals <i>StrtTorqRef</i> (42.08). After the time delay is elapsed normal operation starts. This function compensates for the mechanical open (lift) delay of the brake.</p> <p>With Run [UsedMCW (7.04) bit 3] set 0 and motor speed below <i>ZeroSpeedLim</i> (20.03), the brake open (lift) command is removed and a brake close (apply) delay [M1BrakeCloseDly (41.04)] is started. During the delay the brake acknowledge is ignored and the motor control remains active with speed reference zero. This function compensates for the time the drive needs to decelerated from <i>ZeroSpeedLim</i> (20.03) to actual speed = 0. This is important for drives with an inaccurate speed feedback (e.g. EMF control) and thus a relatively high setting of <i>ZeroSpeedLim</i> (20.03).</p>					
42.01	<p>M1BrakeCtrl (motor 1 brake control) Releases the control of the brake: 0 = NotUsed brake control blocked, default 1 = On brake control is released</p> <p>The brake open (lift) command is readable in <i>AuxStatWord</i> (8.02) bit 8 and can be connected to the digital output controlling the brake.</p> <p>The brake control can be overwritten by <i>AuxCtrlWord2</i> (7.03) bit 12. The brake is always applied in case ForceBrake = 1. Otherwise the brake is controlled by the internal brake logic.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	On	NotUsed	-	E

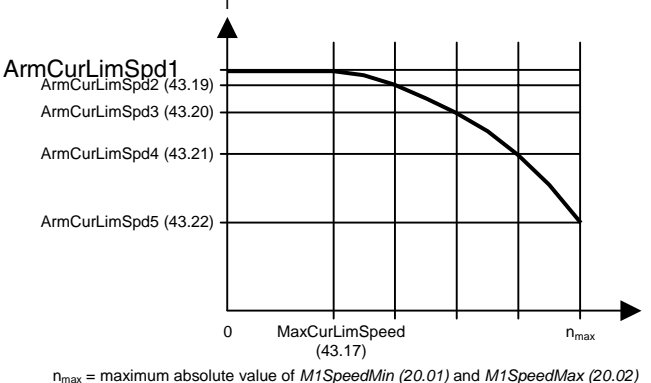
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
42.02	<p>M1BrakeAckSel (motor 1 brake acknowledge selector) The drive sets either A122 MechBrake [<i>AlarmWord2 (9.07)</i> bit 5] or trips with F552 MechBrake [<i>FaultWord4 (9.04)</i> bit 3] depending on <i>BrakeFaultFunc (42.06)</i> if a digital input is selected and the brake acknowledge fails:</p> <p>0 = NotUsed brake acknowledge is blocked, default 1 = DI1 0 = brake is applied, 1 = brake is open (lifted) 2 = DI2 0 = brake is applied, 1 = brake is open (lifted) 3 = DI3 0 = brake is applied, 1 = brake is open (lifted) 4 = DI4 0 = brake is applied, 1 = brake is open (lifted) 5 = DI5 0 = brake is applied, 1 = brake is open (lifted) 6 = DI6 0 = brake is applied, 1 = brake is open (lifted) 7 = DI7 0 = brake is applied, 1 = brake is open (lifted) 8 = DI8 0 = brake is applied, 1 = brake is open (lifted) 9 = DI9 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board 10 = DI10 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board 11 = DI11 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	NotUsed	'	E
42.03	<p>M1BrakeOpenDly (motor 1 brake open delay) Brake open (lift) delay. This function compensates for the mechanical open (lift) delay of the brake. Int. Scaling: 10 == 1 s Type: I Volatile: N</p>	0	5	0	s	L
42.04	<p>M1BrakeCloseDly (motor 1 brake close delay) Brake close (apply) delay. This function compensates for the time the drive needs to decelerated from <i>ZeroSpeedLim (20.03)</i> to actual speed = 0. Int. Scaling: 10 == 1 s Type: I Volatile: N</p>	0	5	0	s	L
42.05	Unused					
42.06	<p>BrakeFaultFunc (brake fault function) <i>BrakeFaultFunc (42.06)</i> determines the reaction to an invalid brake acknowledge: 0 = Alarm the drive sets A122 MechBrake [<i>AlarmWord2 (9.07)</i> bit 5] 1 = Fault the drive trips with F552 MechBrake [<i>FaultWord4 (9.04)</i> bit 3], default Note1: With <i>Run [UsedMCW (7.04)</i> bit 3] set 0, motor speed below <i>ZeroSpeedLim (20.03)</i>, <i>M1BrakeCloseDly (42.04)</i> elapsed and acknowledge brake applied (closed) is missing F552 MechBrake [<i>FaultWord4 (9.04)</i> bit 3] is overwritten and A122 MechBrake [<i>AlarmWord2 (9.07)</i> bit 5] is set. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Alarm	Fault	Fault	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
42.07	<p>StrtTorqRefSel (starting torque reference selector) Start torque selector:</p> <p>0 = NotUsed start torque reference is fixed zero (torque proving disabled), default 1 = Memory torque memory released 2 = StrtTorqRef <i>StrtTorqRef (42.08)</i> 3 = AI1 analog input AI1 4 = AI2 analog input AI2 5 = AI3 analog input AI3 6 = AI4 analog input AI4 7 = AI5 analog input AI5 8 = AI6 analog input AI6</p> <p>Note1: Torque proving is to give the brake open (lift) command only, when torque actual has reached <i>StrtTorqRef (42.08)</i>. In case torque actual does not reach <i>StrtTorqRef (42.08)</i> either A122 MechBrake [<i>AlarmWord2 (9.07)</i> bit 5] is set or the drive trips with F552 MechBrake [<i>FaultWord4 (9.04)</i> bit 3] depending on <i>BrakeFaultFunc (42.06)</i>.</p> <p>Note2: Torque memory is the presetting of the torque when starting with e.g. suspended load. The preset torque equals the actual torque stored when the brake open (lift) command is removed. If the preset torque is zero, <i>StrtTorqRef (42.08)</i> is used. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	AI6	NotUsed	-	E
42.08	<p>StrtTorqRef (starting torque reference) Start torque - in percent of the active motor nominal torque - for torque proving. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	100	%	E
42.09	<p>BrakeEStopMode (emergency stop mode brake) <i>BrakeEStopMode (42.09)</i> determines the reaction when <i>UsedMCW (7.04)</i> bit 2 Off3N (respectively E-stop) is set low:</p> <p>0 = Disable the brake is closed according to standard brake control, default 1 = Enable the brake is closed immediately with the E-stop Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Disable	Enable	Disable	-	E
Group 43	Current control					
43.01	<p>OperModeSel (operation mod selector) Converter mode selection:</p> <p>0 = ArmConv 6 pulse single armature converter, default 1 = FieldConv field exciter mode; Attention: The digital input for the external overvoltage protection is assigned by means of <i>OvrVoltProt (10.13)</i>.</p> <p>2 = 12PParMaster 12-pulse parallel master 3 = 12PParSlave 12-pulse parallel slave 4 = 12PSerMaster 12-pulse serial master 5 = 12PSerSlave 12-pulse serial slave 6 = reserved to 11 = reserved</p> <p>This parameter is write protected while Run [<i>UsedMCW (7.04)</i> bit 3] = 1. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	ArmConv	12PSerSlave	ArmConv	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
43.02	<p>CurSel (current reference selector) <i>CurSel (43.02)</i> selector:</p> <p>0 = CurRef311 <i>CurRef (3.11)</i> calculated from torque reference, default 1 = CurRefExt <i>CurRefExt (43.03)</i> external current reference 2 = AI1 analog input AI1 3 = AI2 analog input AI2 4 = AI3 analog input AI3 5 = AI4 analog input AI4 6 = AI5 analog input AI5 7 = AI6 analog input AI6 8 = FexCurRef field current reference from armature converter via DCSLink, only if <i>OperModeSel (43.01)</i> = FieldConv 9 = FluxRefEMF <i>FluxRefEMF (3.27)</i> EMF controller reference, only if <i>OperModeSel (43.01)</i> = FieldConv</p> <p>Note1: In case <i>OperModeSel (43.01)</i> is 12PParSlave <i>CurSel (43.02)</i> is overwritten by the current reference from the 12-pulse parallel master. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	CurRef311	FluxRefEMF	CurRef311	-	C
43.03	<p>CurRefExt (external current reference) External current reference in percent of <i>M1NomCur (99.03)</i>.</p> <p>Note1: <i>CurRefExt (43.03)</i> is only valid, if <i>CurSel (43.02)</i> = CurRefExt. Int. Scaling: 100 == 1 % Type: SI Volatile: Y</p>	-325	325	0		E
43.04	<p>CurRefSlope (current reference slope) <i>CurRefSlope (43.04)</i> in percent of <i>M1NomCur (99.03)</i> per 1 ms. The di/dt limitation is located at the input of the current controller.</p> <p>Int. Scaling: 100 == 1 %/ms Type: I Volatile: N</p>	0.2	40	10	%/ms	E
43.05	<p>ControlModeSel (control mode selector) Current controller mode selection:</p> <p>0 = Standard PI-controller with RL compensation of EMF based on current actual plus feed forward, default 1 = FeedFwdRef PI-controller with RL compensation of EMF based on current reference plus feed forward 2 = NoFeedFwd PI-controller without RL compensation of EMF. Feed forward takes place 3 = PowerSupply1 XXXX 4 = PowerSupply2 <i>PwrSupplyRefExt (43.24)</i> is fed into the current control chain (directly after the current controller). The current controller is blocked.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Standard	PowerSupply2	Standard	'	E
43.06	<p>M1KpArmCur (motor 1 p-part armature current controller) Proportional gain of the current controller. Example: The controller generates 15 % of motor nominal current [<i>M1NomCur (99.03)</i>] with <i>M1KpArmCur (43.06)</i> = 3, if the current error is 5 % of <i>M1NomCur (99.03)</i>. Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	100	0.1	'	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
43.07	<p>M1TiArmCur (motor 1 i-part armature current controller) Integral time of the current controller. <i>M1TiArmCur (43.07)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal current [<i>M1NomCur (99.03)</i>] with <i>M1KpArmCur (43.06)</i> = 3, if the current error is 5% of <i>M1NomCur (99.03)</i>. On that condition and with <i>M1TiArmCur (43.07)</i> = 50 ms follows: – the controller generates 30% of motor nominal current, if the current error is constant, after 50 ms are elapsed (15% from proportional part and 15% from integral part). Setting <i>M1TiArmCur (43.07)</i> to 0 ms disables the integral part of the current controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	10000	50	ms	C
43.08	<p>M1DiscontCurLim (motor 1 discontinuous current limit) Threshold continuous / discontinuous current in percent of <i>M1NomCur (99.03)</i>. The actual continuous / discontinuous current state can be read from <i>CurCtrlStat1 (6.03)</i> bit 12. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	100	%	C
43.09	<p>M1ArmL (motor 1 armature inductance) Inductance of the armature circuit in mH. Used for the EMF compensation: $EMF = U_A - R_A * I_A - L_A * \frac{dI_A}{dt}$ Int. Scaling: 100 == 1 mH Type: I Volatile: N</p>	0	640	0	mH	C
43.10	<p>M1ArmR (motor 1 armature resistance) Resistance of the armature circuit in mΩ. Used for the EMF compensation: $EMF = U_A - R_A * I_A - L_A * \frac{dI_A}{dt}$ Int. Scaling: 1 == 1 mΩ Type: I Volatile: N</p>	0	65500	0	mΩ	C
43.11	Unused					
43.12	<p>Uk (relative short circuit impedance) reserved Int. Scaling: 10 == 1 % Type: I Volatile: N</p>	0	15	0	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>43.13</p>	<p>FiringLimMode (firing limit mode) <i>FiringLimMode (43.13)</i> selects the strategy for <i>ArmAlphaMax (20.14)</i>:</p> <ul style="list-style-type: none"> 0 = Fix the firing angle limit is defined by <i>ArmAlphaMax (20.14)</i> 1 = FixSingle The firing angle limit is defined by <i>ArmAlphaMax (20.14)</i>. When <i>ArmAlphaMax (20.14)</i> is reached single firing pulses are fired, default 2 = Calculated the firing limit is reduced from 165° to <i>ArmAlphaMax (20.14)</i> depending on the actual motor current and <i>M1DiscontCurLim (43.08)</i> 3 = CalcSingle function same as in Calculated, but single pulses are fired when the limit is reached  <p>Note1: Single firing pulses force discontinuous current automatically to zero. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Fix	CalcSingle	FixSingle	-	E
<p>43.14</p>	<p>RevDly (reversal delay) <i>RevDly (43.14)</i> defines the delay time in ms for the bridge reversal after zero current has been detected.</p>  <p>The reversal time starts when zero current has been detected, after a command to change current direction has been given.</p> <p>After a command to change current direction zero current has to be detected during <i>ZeroCurTimeOut (97.19)</i> or the drive trips with F533 ReversalTime [<i>FaultWord3 (9.03)</i> bit 0].</p> <p><i>RevDly (43.14)</i> must have the same setting for 12-pulse master and 12-pulse slave with one exception only:</p> <ul style="list-style-type: none"> - If there is no current measurement in the 12-pulse serial slave [<i>OperModeSel (43.01)</i> = 12PserSlave], set <i>RevDly (43.14)</i> in the 12-pulse serial slave to maximum (600 ms). This setting causes the 12-pulse serial slave to base its bridge changeover on the zero current information received via DCSLink [<i>CtrlStatMas (6.09)</i> bit 8]. No additional reversal delay is added, since the master delays bit 8 according to its own <i>RevDly (43.14)</i>. <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	600	5	ms	E
<p>43.15</p>	<p>Unused</p>					
<p>43.16</p>	<p>RevMode (reversal mode) <i>RevMode (43.16)</i> defines the behavior of the speed controller and speed reference during bridge and field reversal (torque reversal):</p> <ul style="list-style-type: none"> 0 = Soft the speed controller is frozen during reversal ⇒ bumpless reversal, default 1 = Hard the speed controller is released during reversal ⇒ the contouring error is balanced <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Soft	Hard	Soft	-	E

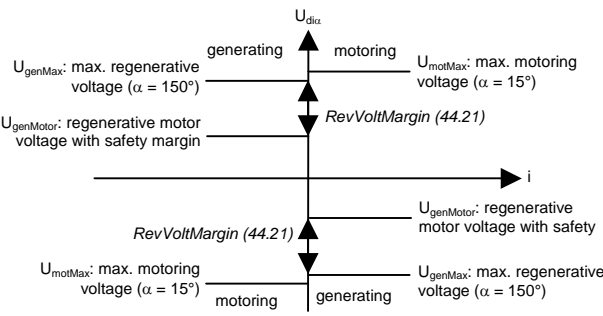
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
	<p>Speed depending current limit:</p>  <p>n_{max} = maximum absolute value of <i>M1SpeedMin</i> (20.01) and <i>M1SpeedMax</i> (20.02)</p>					
43.17	<p>MaxCurLimSpeed (speed limit for maximum armature current) Minimum speed level for armature current reduction. Internally limited from: $0rpm$ to $(2.29) * \frac{32767}{20000} rpm$ Int. Scaling: (2.29) Type: I Volatile: N</p>	0	10000	1500	rpm	E
43.18	<p>ArmCurLimSpeed1 (armature current at speed limit 1) Armature current limit - in percent of <i>M1NomCur</i> (99.03) - at <i>MaxCurLimSpeed</i> (43.17). Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	325	%	E
43.19	<p>ArmCurLimSpeed2 (armature current at speed limit 2) Armature current limit - in percent of <i>M1NomCur</i> (99.03) - at speed: $(43.17) + \frac{1}{4} * [n_{max} - (43.17)]$ with: $n_{max} = \text{Max} [(20.01) , (20.02)]$ Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	325	%	E
43.20	<p>ArmCurLimSpeed3 (armature current at speed limit 3) Armature current limit - in percent of <i>M1NomCur</i> (99.03) - at speed: $(43.17) + \frac{1}{2} * [n_{max} - (43.17)]$ with: $n_{max} = \text{Max} [(20.01) , (20.02)]$ Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	325	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
43.21	<p>ArmCurLimSpeed4 (armature current at speed limit 4) Armature current limit - in percent of <i>M1NomCur</i> (99.03) - at speed: $(43.17) + \frac{3}{4} * [n_{max} - (43.17)]$ with: $n_{max} = \text{Max} [(20.01) , (20.02)]$ Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	325	%	E
43.22	<p>ArmCurLimSpeed5 (armature current at speed limit 5) Armature current limit - in percent of <i>M1NomCur</i> (99.03) - at $n_{max} = \text{Max} [(20.01) , (20.02)]$. Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	325	%	E
43.23	Unused					
43.24	<p>PwrSupplyRefExt (external reference power supply) External power supply current reference in percent of <i>M1NomVolt</i> (99.02). Note1: <i>PwrSupplyRefExt</i> (43.24) is only valid, if <i>ControlModeSel</i> (43.05) = PowerSupply2. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-150	150	0	%	E
Group 44	Field excitation					
44.01	<p>FldCtrlMode (field control mode) Motor 1 field control mode selection: 0 = Fix constant field (no field weakening), no EMF control, no field reversal, default 1 = EMF field weakening active, EMF control active, no field reversal 2 = Fix/Rev constant field (no field weakening), no EMF control, field reversal active 3 = EMF/Rev field weakening active, EMF control active, field reversal active 4 = Fix/Opti constant field (no field weakening), no EMF control, no field reversal, optitorque active 5 = EMF/Opti field weakening active, EMF control active, no field reversal, optitorque active 6 = Fix/Rev/Opti constant field (no field weakening), no EMF control, field reversal active, optitorque active 7 = EMF/Rev/Opti field weakening active, EMF control active, field reversal active, optitorque active Note1: The field control mode for motor 2 depends on the setting of <i>M2RefFieldMode</i> (45.13). Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Fix	EMF/Rev/Opti	Fix	'	C
44.02	<p>M1KpFex (motor 1 p-part field current controller) Proportional gain of the field current controller. Example: The controller generates 15% of motor nominal field current [<i>M1NomFldCur</i> (99.11)] with <i>M1KpFex</i> (44.02) = 3, if the field current error is 5% of <i>M1NomFldCur</i> (99.11). Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	325	0.1	'	C

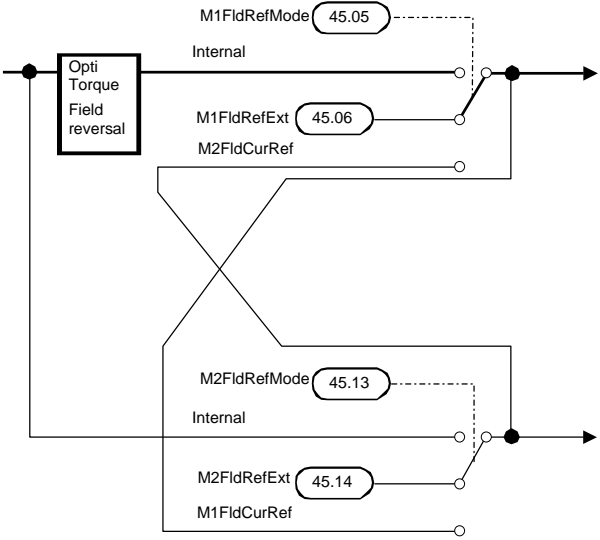
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
44.03	<p>M1TiFex (motor 1 i-part field current controller) Integral time of the field current controller. <i>M1TiFex (44.03)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal field current [<i>M1NomFldCur (99.11)</i>] with <i>M1KpFex (44.02)</i> = 3, if the field current error is 5% of <i>M1NomFldCur (99.11)</i>. On that condition and with <i>M1TiFex (44.03)</i> = 200 ms follows:</p> <ul style="list-style-type: none"> – the controller generates 30% of motor nominal field current, if the current error is constant, after 200 ms are elapsed (15% from proportional part and 15% from integral part). <p>Setting <i>M1TiFex (44.03)</i> to 0 ms disables the integral part of the field current controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	200	ms	C
44.04	<p>M1FldHeatRef (motor 1 field heating reference) Field current reference - in percent of <i>M1NomFieldCur (99.11)</i> - for field heating [<i>FldHeatSel (21.18)</i>] or field reducing. The field reducing is released for motor 1 by means of <i>M1FldHeatRef (44.04)</i> < 100% and activated, if:</p> <ul style="list-style-type: none"> – Run = 1 [<i>UsedMCW (7.04)</i> bit 3] for longer than 10 s and – the other motor is selected via <i>ParChange (10.10)</i> and can be seen in <i>MotSel (8.09)</i> <p>Int. Scaling: 1 == 1 % Type: I Volatile: N</p>	0	100	100	%	E
44.05	Unused					
44.06	Unused					
44.07	<p>EMF CtrlPosLim (positive limit EMF controller) Positive limit for EMF controller in percent of nominal flux. Int. Scaling: 1 == 1 % Type: I Volatile: N</p>	0	100	10	%	E
44.08	<p>EMF CtrlNegLim (negative limit EMF controller) Negative limit for EMF controller in percent of nominal flux. Int. Scaling: 1 == 1 % Type: I Volatile: N</p>	-100	0	-100	%	E
44.09	<p>KpEMF (p-part EMF controller) Proportional gain of the EMF controller. Example: The controller generates 15% of motor nominal EMF with <i>KpEMF (44.09)</i> = 3, if the EMF error is 5% of <i>M1NomVolt (99.02)</i>.</p> <p>Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	325	0.5	-	E
44.10	<p>TiEMF (i-part EMF controller) Integral time of the EMF controller. <i>TiEMF (44.10)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal EMF with <i>KpEMF (44.09)</i> = 3, if the EMF error is 5% of <i>M1NomVolt (99.02)</i>. On that condition and with <i>TiEMF (44.10)</i> = 20 ms follows:</p> <ul style="list-style-type: none"> – the controller generates 30% of motor nominal EMF, if the EMF error is constant, after 20 ms are elapsed (15% from proportional part and 15% from integral part). <p>Setting <i>TiEMF (44.10)</i> to 0 ms disables the integral part of the EMF controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	20	ms	E
44.11	Unused					
44.12	<p>FldCurFlux40 (field current at 40% flux) Field current at 40% flux in percent of <i>M1NomFldCur (99.11)</i>. Int. Scaling: 1 == 1 % Type: I Volatile: N</p>	0	100	40	%	E

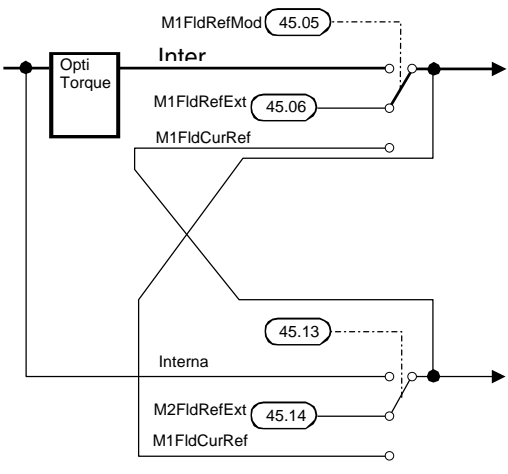
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
44.13	FldCurFlux70 (field current at 70% flux) Field current at 70% flux in percent of <i>M1NomFldCur</i> (99.11). Int. Scaling: 1 == 1 % Type: I Volatile: N	0	100	70	%	E
44.14	FldCurFlux90 (field current at 90% flux) Field current at 90% flux in percent of <i>M1NomFldCur</i> (99.11). Int. Scaling: 1 == 1 % Type: I Volatile: N	0	100	90	%	E
44.15	FldWeakDyn (dynamic field weakening) If the motor speed passes the field weakening point (== base speed) quickly, voltage overshoot may occur. To solve this problem the field weakening point can be lowered by means of <i>FldWeakDyn</i> (44.15). <i>FldWeakDyn</i> (44.15) is set in percent of <i>M1BaseSpeed</i> (99.04). Note1: The lowered field weakening point is compensated by the EMF controller in case of constant speed or slow speed change. <i>EMF CtrlPosLim</i> (44.07) has to be set high enough to allow the EMF controller to compensate. Int. Scaling: 1 == 1 % Type: I Volatile: N	80	100	100	%	E
44.16	Unused					
44.17	FldBoostSel (field boost selector) Selector for <i>FldBoostSel</i> (44.17): 0 = NotUsed field boost is blocked, default 1 = Run field boost starts with Run = 1 [<i>MainCtrlWord</i> (7.01) bit 3] 2 = DI1 1 = field boost, 0 = no field boost 3 = DI2 1 = field boost, 0 = no field boost 4 = DI3 1 = field boost, 0 = no field boost 5 = DI4 1 = field boost, 0 = no field boost 6 = DI5 1 = field boost, 0 = no field boost 7 = DI6 1 = field boost, 0 = no field boost 8 = DI7 1 = field boost, 0 = no field boost 9 = DI8 1 = field boost, 0 = no field boost 10 = DI9 1 = field boost, 0 = no field boost. Only available with digital extension board 11 = DI10 1 = field boost, 0 = no field boost. Only available with digital extension board 12 = DI11 1 = field boost, 0 = no field boost. Only available with digital extension board 13 = MCW Bit11 1 = field boost, 0 = no field boost, <i>MainCtrlWord</i> (7.01) bit 11 14 = MCW Bit12 1 = field boost, 0 = no field boost, <i>MainCtrlWord</i> (7.01) bit 12 15 = MCW Bit13 1 = field boost, 0 = no field boost, <i>MainCtrlWord</i> (7.01) bit 13 16 = MCW Bit14 1 = field boost, 0 = no field boost, <i>MainCtrlWord</i> (7.01) bit 14 17 = MCW Bit15 1 = field boost, 0 = no field boost, <i>MainCtrlWord</i> (7.01) bit 15 18 = ACW Bit12 1 = field boost, 0 = no field boost, <i>AuxCtrlWord</i> (7.02) bit 12 19 = ACW Bit13 1 = field boost, 0 = no field boost, <i>AuxCtrlWord</i> (7.02) bit 13 20 = ACW Bit14 1 = field boost, 0 = no field boost, <i>AuxCtrlWord</i> (7.02) bit 14 21 = ACW Bit15 1 = field boost, 0 = no field boost, <i>AuxCtrlWord</i> (7.02) bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	ACW_Bit15	NotUsed	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
44.18	<p>FldBoostFact (field boost factor) Field boost factor in percent of <i>M1NomFldCur</i> (99.11). The resulting field boost current must be lower than the nominal current of the used field exciter. If the field boost current is out of range A132 ParConflict [<i>AlarmWord2</i> (9.07) bit 15] is generated. Note1: If <i>FldBoostFact</i> (44.18) > 100% and <i>M1UsedFexType</i> (99.12) = OnBoard to DCF804-0060 or FEX-4-Term5A S M1FldSacle (45.20) has to be set accordingly. Example: <i>M1NomFldCur</i> (99.11) = 20 A and <i>FldBoostFact</i> (44.18) = 150% then <i>S M1FldSacle</i> (45.20) = 30 A Note2: If <i>FldBoostFact</i> (44.18) > 100% and <i>M2UsedFexType</i> (49.07) = OnBoard to DCF804-0060 or FEX-4-Term5A S M2FldSacle (45.21) has to be set accordingly. Int. Scaling: 1 == 1 % Type: I Volatile: N</p>	100	160	100	%	E
44.19	<p>FldBoostTime (field boost time) Time the field boost should last. Int. Scaling: 1 == 1 s Type: I Volatile: N</p>	0	600	0	s	E
44.20	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>44.21</p>	<p>RevVoltMargin (reversal voltage margin) <i>RevVoltMargin (44.21)</i> - in percent of <i>NomMainsVolt (99.10)</i> - is a safety margin for the motor voltage for regenerative mode. Setting <i>RevVoltMargin (44.21)</i> to 0 disables the function.</p>  <p>For regenerative mode is valid:</p> $U_{genMotor} = U_{genMax} -U_{Safety}$ <p>with $U_{genMax} = 1.35 * \cos \alpha_{max} * U_{Mains}$ $U_{genMax} = 1.35 * \cos (20.14) * U_{Mains}$</p> <p>and $U_{Safety} = (44.21) \text{ follows :}$</p> $U_{genMotor} = 1.35 * \cos (20.14) * U_{Mains} - (44.21) * U_{Mains}$ <p>Example: With $ArmAlphaMax (20.14) = 150^\circ$, $RevVoltMargin (44.21) = 10\%$ and $U_{Mains} = NomMainsVolt (99.10)$ follows:</p> $U_{genMotor} = 1.35 * \cos 150^\circ * U_{Mains} - 0.1 * U_{Mains}$ $U_{genMotor} = -1.16 * U_{Mains} - 0.1 * U_{Mains}$ $U_{genMotor} = 1.06 * U_{Mains}$ <p>Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	20	6	%	E
<p>44.22</p>	<p>VoltRefExt (external voltage reference) External voltage reference in percent of <i>M1NomVolt (99.02)</i>. Note1: <i>VoltRefExt (44.22)</i> is only valid, if <i>EMF RefSel (44.23) = VoltRefExt</i>. Int. Scaling: 100 == 1 % Type: SI Volatile: Y</p>	-100	100	0		E

Index	Signal / Parameter name			min.	max.	def.	unit	E/C	
44.23	EMF RefSel (EMF reference selector) <i>EMF RefSel (44.23) selector:</i> 0 = EMF Internal internally calculated EMF, default 1 = VoltRefExt <i>VoltRefExt (44.22)</i> external voltage reference 2 = AI1 analog input AI1 3 = AI2 analog input AI2 4 = AI3 analog input AI3 5 = AI4 analog input AI4 6 = AI5 analog input AI5 7 = AI6 analog input AI6 Int. Scaling: 1 == 1 Type: C Volatile: N			EMF Internal	VoltRefExt	AI6	-	E	
44.24	Unused								
44.25	VoltCorr (voltage correction) Voltage correction in percent of <i>M1NomVolt (99.02)</i> . Added to <i>VoltRef1 (3.25)</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: Y			-100	100	0		E	
44.26	VoltRefSlope (voltage reference slope) Voltage reference slope in percent <i>M1NomVolt (99.02)</i> per 1 ms. The dv/dt limitation is located at the input of the EMF controller. Int. Scaling: 100 == 1 %/ms Type: I Volatile: N			0.2	325	100	%/ms	E	
44.27	FluxCorr (flux correction) <i>FluxCorr (44.27)</i> is added to the sum of the flux reference <i>FluxRefSum (3.28)</i> . Int. Scaling: 100 == 1 % Type: SI Volatile: N			-100	100	0	%	E	
Group 45	Field converter settings								
	45.01	M1FreewhlLev (motor 1 freewheeling level) Motor 1 field exciter free wheeling level [only when <i>M1UsedFexType (99.12)</i> = DCF804-0050 or DCF804-0060] in percent / ms of the actual field exciter supply voltage. If 2 successive AC-voltage measurements differ more than <i>M1FreewhlLev (45.01)</i> , the free-wheeling function is activated. Int. Scaling: 1 == 1 %/ms Type: I Volatile: N			0	1000	20	%/ms	E
	45.02	M1PosLimCtrl (motor 1 positive output limit field current controller) Positive output limit for motor 1 field exciter current controller in percent of the maximum field exciter output voltage. Note: 4-Q field exciters which can reverse the field current will use <i>M1PosLimCtrl (45.02)</i> also as negative limit. Int. Scaling: 100 = 1 % Type: I Volatile: N			0	100	100	%	E
	45.03	FldRefMin (minimum field current reference) In OptiTorque F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8] has to be blocked when <i>FldCurRefM1 (3.30)</i> is below <i>FldRefMin (45.03)</i> . F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8] is released as soon as <i>FldCurRefM1 (3.30)</i> exceeds <i>FldRefMin (45.03)</i> and <i>FldMinDly (45.04)</i> is elapsed. Int. Scaling: 100 = 1 % Type: I Volatile: N			0	100	15	%	E
	45.04	FldMinDly (minimum field current delay) In OptiTorque F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8] has to be blocked when the field current is changing direction. F541 M1FexLowCur [<i>FaultWord3 (9.03)</i> bit 8] is released as soon as <i>FldCurRefM1 (3.30)</i> exceeds <i>FldRefMin (45.03)</i> and <i>FldMinDly (45.04)</i> is elapsed. Int. Scaling: 1 == 1 ms Type: I Volatile: N			0	20000	0	ms	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>45.05</p>	<p>M1FldRefMode (motor 1 field current reference mode) <i>M1FldRefMode (45.05)</i> selector: 0 = Internal motor 1 field current reference according to shared motion <i>MotSel (8.09)</i> or field heating <i>FldHeatSel (21.18)</i>, default 1 = M2FldCurRef field current reference is taken from motor 2 2 = M1FldRefExt <i>M1FldRefExt (45.06)</i> external field current reference</p>  <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Internal	M1FldRefExt	Internal	-	E
<p>45.06</p>	<p>M1FldRefExt (motor 1 external field current reference) Motor 1 external field current reference input in percent of <i>M1NomFldCur (99.11)</i>. Note1: <i>M1FldRefExt (45.06)</i> is only valid, if <i>M1FldRefMode (45.05)</i> = M1FldRefExt. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-100	100	0	%	E
<p>45.07</p>	<p>ForceFldDir (force field current direction) Motor 1 field direction force command: 0 = NotUsed the field direction is controlled by <i>FldCtrlMode (44.01)</i> and <i>TorqRefUsed (2.13)</i>, default 1 = Forward field direction is forced to forward direction 2 = Reverse field direction is forced to reverse direction 3 = ExtReverse In case an external contactor in the field current loop is used to change the field direction, <i>ForceFldDir (45.07)</i> has to be switched between Forward and ExtReverse. ExtReverse adapts the armature voltage and speed supervision. The external contactor interlocking and the control of <i>ForceFldDir (45.07)</i> has to be done by means of adaptive program, application program or overriding control. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	ExtReverse	NotUsed	-	E
<p>45.08</p>	<p>FluxRevMonDly (flux reversal monitoring delay) Maximum allowed time within <i>Mot1FldCurRel (1.29)</i> and the internal motor flux doesn't correspond to each other during field reversal. During this time F522 SpeedFb [<i>FaultWord2 (9.02)</i> bit 5] is disabled. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	2000	0	ms	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
45.09	FldRevHyst (field current reversal hysteresis) The sign of <i>Mot1FldCurRel</i> (1.29) is used to generate the field reversal acknowledge. To avoid signal noise problems a small hysteresis - in percent of <i>M1NomFldCur</i> (99.11) - is used while detecting the sign. Int. Scaling: 100 = 1 % Type: I Volatile: N	0	100	2	%	E
45.10	FldRefHyst (field current reference hysteresis) <i>TorqRefUsed</i> (2.13) hysteresis - in percent of the active motor nominal torque - for field reversal [<i>FldCtrlMode</i> (44.01) = Fix/Rev or EMF/Rev]. The field reversal is controlled by the sign of <i>TorqRefUsed</i> (2.13). Note1: FldRefHyst (45.10) is not effective for <i>FldCtrlMode</i> (44.01) = Fix/Opti to EMF/Rev/Opti . Int. Scaling: 100 = 1 % Type: I Volatile: N	0	100	2	%	E
45.11	FldRefGain (field current reference gain) OptiTorque calculates the field current reference depending on <i>TorqRefUsed</i> (2.13). Thus, the field current is reduced to a smaller value, if <i>TorqRefUsed</i> (2.13) is accordingly low. This speeds up the field reversal, assuming <i>TorqRefUsed</i> (2.13) is low during field reversal. OptiTorque is activated by means of <i>FldCtrlMode</i> (44.01) and like field reversal only available for motor 1 field exciter. The relation between <i>TorqRefUsed</i> (2.13) and <i>FldCurRefM1</i> (3.30) is linear and without offset. It is defined by means of the <i>FldRefGain</i> (45.11). The gain is related to <i>M1NomFldCur</i> (99.11) as well as to the active motor nominal torque. Example: With a setting of 20%, 100% field current is generated at <i>TorqRefUsed</i> (2.13) = 20%. Int. Scaling: 100 = 1 % Type: I Volatile: N	0	100	50	%	E
45.12	Unused					
45.13	M2FldRefMode (motor 2 field current reference mode) <i>M2FldRefMode</i> (45.13) selector: 0 = Internal motor 2 field current reference according to shared motion <i>MotSel</i> (8.09) or field heating <i>FldHeatSel</i> (21.18), default 1 = M1FldCurRef field current reference is taken from motor 1 2 = M2FldRefExt <i>M2FldRefExt</i> (45.14) external field current reference  Int. Scaling: 1 == 1 Type: C Volatile: N	Internal	M2FldRefExt	Internal	-	E
45.14	M2FldRefExt (motor 2 external field current reference) Motor 2 external field current reference input in percent of <i>M2NomFldCur</i> (49.05). Note1: <i>M2FldRefExt</i> (45.14) is only valid, if <i>M2FldRefMode</i> (45.13) = M2FldRefExt . Int. Scaling: 100 == 1 % Type: SI Volatile: N	-100	100	0	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
45.15	M2FreewhlLev (motor 2 freewheeling level) Motor 2 field exciter free wheeling level [only when <i>M2UsedFexType</i> (49.07) = DCF804-0050 or DCF804-0060] in percent / ms of the actual field exciter supply voltage. If 2 successive AC-voltage measurements differ more than <i>M2FreewhlLev</i> (45.15), the free-wheeling function is activated. Int. Scaling: 1 == 1 %/ms Type: I Volatile: N	0	1000	20	%/ms	E
45.16	M2PosLimCtrl (motor 2 positive output limit field current controller) Positive output limit for motor 2 field exciter current controller in percent of the maximum field exciter output voltage. Note: 4-Q field exciters which can reverse the field current will use <i>M2PosLimCtrl</i> (45.16) also as negative limit. Int. Scaling: 100 == 1 % Type: I Volatile: N	0	100	100	%	E
45.17	FldCurTrim (field current trimming) The field current of motor 1 and motor 2 can be corrected by means of <i>FldCurTrim</i> (45.17) in percent of <i>M1NomFldCur</i> (99.11) respectively <i>M2NomFldCur</i> (49.05): – 0% to 20%: The value is subtracted from motor 1 field current reference. The result is visible in <i>FldCurRefM1</i> (3.30). – -20% to 0%: The absolute value is subtracted from motor 2 field current reference. The result is visible in <i>FldCurRefM2</i> (3.31). Int. Scaling: 100 == 1 % Type: SI Volatile: N	-20	20	0	%	E
45.18	FldMinTripDly (delay field current minimum trip) <i>FldMinTripDly</i> (45.18) delays F541 M1FexLowCur [<i>FaultWord3</i> (9.03) bit 8] respectively F542 M2FexLowCur [<i>FaultWord3</i> (9.03) bit 9]. If the field current recovers before the delay is elapsed F541 / F542 will be disregarded: – <i>M1FldMinTrip</i> (30.12) – <i>M2FldMinTrip</i> (49.08) Note1: <i>FldMinTripDly</i> (45.18) is blocked when <i>OperModeSel</i> (43.01) = FieldConv. Int. Scaling: 1 == 1 ms Type: I Volatile: N	50	10000	2000	ms	E
45.19	Unused					
45.20	S M1FldScale (set: motor 1 field current scaling factor) Motor 1 field exciter scaling factor. <i>S M1FldScale</i> (45.20) is write protected, unless <i>ServiceMode</i> (99.06) = SetTypeCode . To use <i>S M1FldScale</i> (45.20) following inequation has to be valid: $M1NomFldCur (99.11) \leq S M1FldScale (45.20) \leq \text{maximum field current of the used field exciter}$ – For <i>S M1FldScale</i> (45.20) > maximum field current of the used field exciter A132 ParConflict [<i>AlarmWord2</i> (9.07) bit 15] is generated. – For <i>M1NomFldCur</i> (99.11) > <i>S M1FldScale</i> (45.20) the scaling is automatically set by <i>M1NomFldCur</i> (99.11). – The scaling factor is released when <i>M1NomFldCur</i> (99.11) < <i>S M1FldScale</i> (45.20) and <i>M1UsedFexType</i> (99.12) = OnBoard to DCF804-0060 or FEX-4-Term5A . If the scaling is changed its new value is taken over after the next power up. Int. Scaling: 100 == 1 A Type: I Volatile: N	0	60	0	A	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
45.21	<p>S M2FldScale (set: motor 2 field current scaling factor) Motor 2 field exciter scaling factor. <i>S M2FldScale (45.21)</i> is write protected, unless <i>ServiceMode (99.06) = SetTypeCode</i>. To use <i>S M2FldScale (45.21)</i> following inequation has to be valid: $M2NomFldCur (49.05) \leq S M2FldScale (45.21) \leq$ maximum field current of the used field exciter</p> <ul style="list-style-type: none"> – For <i>S M2FldScale (45.21) ></i> maximum field current of the used field exciter A132 ParConflict [<i>AlarmWord2 (9.07)</i> bit 15] is generated. – For <i>M2NomFldCur (49.05) > S M2FldScale (45.21)</i> the scaling is automatically set by <i>M2NomFldCur (49.05)</i>. – The scaling factor is released when <i>M2NomFldCur (49.05) < S M2FldScale (45.21)</i> and <i>M2UsedFexType (49.07) = OnBoard</i> to DCF804-0060 or FEX-4-Term5A. <p>If the scaling is changed its new value is taken over after the next power up. Int. Scaling: 100 == 1 A Type: I Volatile: N</p>	0	60	0	A	E
45.22	<p>M1OperModeFex4 (motor 1 fex4 operation mode selector) The DCF803-0035 can be connected to either a 3-phase supply or a single phase supply: 0 = 1-phase single phase supply 1 = 3-phase 3-phase supply, default Int. Scaling: 1 == 1 Type: C Volatile: N</p>	1-phase	3-phase	3-phase	'	E
45.23	<p>M2OperModeFex4 (motor 2 fex4 operation mode selector) The DCF803-0035 can be connected to either a 3-phase supply or a single phase supply: 0 = 1-phase single phase supply 1 = 3-phase 3-phase supply, default Int. Scaling: 1 == 1 Type: C Volatile: N</p>	1-phase	3-phase	3-phase	'	E
Group 49	Shared motion					
49.01	<p>M2NomVolt (motor 2 nominal voltage) Motor 2 nominal armature voltage (DC) from the motor rating plate. Note1: The hardware of the measuring circuit has to be adapted for motor voltages lower than 50 V. Int. Scaling: 1 == 1 V Type: I Volatile: N</p>	5	2000	350	V	E
49.02	<p>M2NomCur (motor 2 nominal current) Motor 2 nominal armature current (DC) from the motor rating plate. If several motors are connected to the drive, enter the total current of all motors. Note1: In 12-pulse parallel mode, this parameter has to be set to 50% of the rated motor current (share of the rated motor current provided by one converter). Note2: In case the converter is used as a 3-phase field exciter use <i>M2NomCur (49.02)</i> to set the nominal field current. Int. Scaling: 1 == 1 A Type: I Volatile: N</p>	0	30000	0	A	E
49.03	<p>M2BaseSpeed (motor 2 base speed) Motor 2 base speed from the rating plate, usually the field weak point. <i>M2BaseSpeed (49.03)</i> is must be set in the range of: 0.2 to 1.6 times of <i>SpeedScaleAct (2.29)</i>. If the scaling is out of range A124 SpeedScale [<i>AlarmWord2 (9.07)</i> bit 7] is generated. Int. Scaling: 10 == 1 rpm Type: I Volatile: N</p>	10	6500	1500	rpm	E
49.04	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.05	M2NomFldCur (motor 2 nominal field current) Motor 2 nominal field current from the motor rating plate. Note1: In case the converter is used as a 3-phase field exciter use <i>M2NomCur</i> (49.05) to set the nominal field current. Int. Scaling: 100 == 1 A Type: I Volatile: N	0.3	655	0.3	A	E
49.06	M2FldHeatRef (motor 2 field heating reference) Field current reference - in percent of <i>M2NomFieldCur</i> (49.05) - for field heating [<i>FldHeatSel</i> (21.18)] or field reducing. The field reducing is released for motor 2 by means of <i>M2FldHeatRef</i> (49.06) < 100% and activated, if: – Run = 1 [<i>UsedMCW</i> (7.04) bit 3] for longer than 10 s and – the other motor is selected via <i>ParChange</i> (10.10 and can be seen in <i>MotSel</i> (8.09)) Int. Scaling: 1 == 1 % Type: I Volatile: N	0	100	100	%	E
49.07	M2UsedFexType (motor 2 used field exciter type) Select motor 2 used field exciter type: 0 = NotUsed no or foreign field exciter connected 1 = OnBoard integrated 2-Q field exciter (for sizes D1 - D4 only), default 2 = FEX-425-Int internal 2-Q 25 A field exciter (for size D5 only) 3 = DCF803-0035 external 2-Q 35 A field exciter used for field currents from 0.3 A to 35 A (terminals X100.1 and X100.3) 4 = DCF803-0050 external 2-Q 50 A field exciter 5 = DCF804-0050 external 4-Q 50 A field exciter 6 = DCF803-0060 external 2-Q 60 A field exciter 7 = DCF804-0060 external 4-Q 60 A field exciter 8 = DCS800-S01 external 2-Q 3-phase field exciter 9 = DCS800-S02 external 4-Q 3-phase field exciter 10 = reserved to 19 = reserved 20 = FEX-4-Term5A external 2-Q 35 A field exciter used for field currents from 0.3 A to 5 A (terminals X100.2 and X100.3) 21 = reserved Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	reserved	NotUsed	-	E
49.08	M2FldMinTrip (motor 2 minimum field trip) The drive trips with F542 M2FexLowCur [<i>FaultWord3</i> (9.03) bit 9] if <i>M2FldMinTrip</i> (49.08) - in percent of <i>M2NomFldCur</i> (49.05) - is still undershot when <i>FldMinTripDly</i> (45.18) is elapsed. Int. Scaling: 100 == 1 % Type: I Volatile: N	0	100	50	%	E
49.09	M2FldOvrCurLev (motor 2 field overcurrent level) The drive trips with F518 M2FexOverCur [<i>FaultWord2</i> (9.02) bit 1] if <i>M2FldOvrCurLev</i> (49.09) - in percent of <i>M2NomFldCur</i> (49.05) - is exceeded. The field overcurrent fault is inactive, if <i>M2FldOvrCurLev</i> (49.09) is set to 135%. Int. Scaling: 100 == 1 % Type: I Volatile: N	0	135	125	%	E
49.10	M2KpFex (motor 2 p-part field current controller) Proportional gain of the field current controller. Example: The controller generates 15% of motor nominal field current [<i>M2NomFldCur</i> (49.05)] with <i>M2KpFex</i> (49.10) = 3, if the field current error is 5% of <i>M2NomFldCur</i> (49.05). Int. Scaling: 100 == 1 Type: I Volatile: N	0	325	0.1	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.11	<p>M2TiFex (motor 2 i-part field current controller) Integral time of the field current controller. <i>M2TiFex (49.11)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal field current [<i>M2NomFldCur (49.05)</i>] with <i>M2KpFex (49.10)</i> = 3, if the field current error is 5% of <i>M2NomFldCur (49.05)</i>. On that condition and with <i>M2TiFex (49.11)</i> = 200 ms follows:</p> <ul style="list-style-type: none"> the controller generates 30% of motor nominal field current, if the current error is constant, after 200 ms are elapsed (15% from proportional part and 15% from integral part). <p>Setting <i>M2TiFex (49.11)</i> to 0 ms disables the integral part of the field current controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	64000	200	ms	E
49.12	<p>M2CurLimBrdg1 (motor 2 current limit of bridge 1) Current limit bridge 1 in percent of <i>M2NomCur (49.02)</i>. Setting <i>M2CurLimBrdg1 (49.12)</i> to 0% disables bridge 1. Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	0	325	100	%	E
49.13	<p>M2CurLimBrdg2 (motor 2 current limit of bridge 2) Current limit bridge 2 in percent of <i>M2NomCur (49.02)</i>. Setting <i>M2CurLimBrdg2 (49.13)</i> to 0% disables bridge 2. Note1: The used current limit depends also on the converter's actual limitation situation (e.g. torque limits, other current limits, field weakening). The limit with the smallest value is valid. Note2: <i>M2CurLimBrdg2 (49.13)</i> is internally set to 0% if <i>QuadrantType (4.15)</i> = 2-Q (2-Q drive). Int. Scaling: 100 == 1 % Type: SI Volatile: N</p>	-325	0	-100	%	E
49.14	<p>M2KpArmCur (motor 2 p-part armature current controller) Proportional gain of the current controller. Example: The controller generates 15% of motor nominal current [<i>M2NomCur (49.02)</i>] with <i>M2KpArmCur (49.14)</i> = 3, if the current error is 5% of <i>M2NomCur (49.02)</i>. Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0	100	0.1	-	E
49.15	<p>M2TiArmCur (motor 2 i-part armature current controller) Integral time of the current controller. <i>M2TiArmCur (49.15)</i> defines the time within the integral part of the controller achieves the same value as the proportional part. Example: The controller generates 15% of motor nominal current [<i>M2NomCur (49.02)</i>] with <i>M2KpArmCur (49.14)</i> = 3, if the current error is 5% of <i>M2NomCur (49.02)</i>. On that condition and with <i>M2TiArmCur (49.15)</i> = 50 ms follows:</p> <ul style="list-style-type: none"> the controller generates 30% of motor nominal current, if the current error is constant, after 50 ms are elapsed (15% from proportional part and 15% from integral part). <p>Setting <i>M2TiArmCur (49.15)</i> to 0 ms disables the integral part of the current controller and resets its integrator. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	10000	50	ms	E
49.16	<p>M2DiscontCurLim (motor 2 discontinuous current limit) Threshold continuous / discontinuous current in percent of <i>M2NomCur (49.02)</i>. The actual continuous / discontinuous current state can be read from <i>CurCtrlStat1 (6.03)</i> bit 12. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	0	325	100	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.17	<p>M2ArmL (motor 2 armature inductance) Inductance of the armature circuit in mH. Used for the EMF compensation:</p> $EMF = U_A - R_A * I_A - L_A * \frac{dI_A}{dt}$ <p>Int. Scaling: 100 == 1 mH Type: I Volatile: N</p>	0	640	0	mH	E
49.18	<p>M2ArmR (motor 2 armature resistance) Resistance of the armature circuit in mΩ. Used for the EMF compensation:</p> $EMF = U_A - R_A * I_A - L_A * \frac{dI_A}{dt}$ <p>Int. Scaling: 1 == 1 mΩ Type: I Volatile: N</p>	0	65500	0	mΩ	E
49.19	<p>M2SpeedMin (motor 2 minimum speed) Motor 2 negative speed reference limit in rpm for: – SpeedRef2 (2.01) – SpeedRefUsed (2.17)</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: M2SpeedMin (49.19) is also applied to SpeedRef4 (2.18) to avoid exceeding the speed limits by means of SpeedCorr (23.04). To be able to overspeed the drive (e.g. for winder) it is possible to switch off the speed limit for SpeedRef4 (2.18) by means of AuxCtrlWord (7.02) bit 4.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	-1500	rpm	E
49.20	<p>M2SpeedMax (motor 2 maximum speed) Motor 2 positive speed reference limit in rpm for: – SpeedRef2 (2.01) – SpeedRefUsed (2.17)</p> <p>Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: M2SpeedMax (49.20) is also applied to SpeedRef4 (2.18) to avoid exceeding the speed limits by means of SpeedCorr (23.04). To be able to overspeed the drive (e.g. for winder) it is possible to switch off the speed limit for SpeedRef4 (2.18) by means of AuxCtrlWord (7.02) bit 4.</p> <p>Int. Scaling: (2.29) Type: SI Volatile: N</p>	-10000	10000	1500	rpm	E
49.21	<p>M2OvrSpeed (motor 2 overspeed) The drive trips with F532 MotOverSpeed [FaultWord2 (9.02) bit 15] if M2OvrSpeed (49.21) is exceeded.</p> <p>Internally limited from: 0rpm to $(2.29) * \frac{32767}{20000} rpm$</p> <p>Int. Scaling: (2.29) Type: I Volatile: N</p>	0	10000	1800	rpm	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.22	<p>M2SpeedScale (motor 2 speed scaling) Motor 2 speed scaling in rpm. <i>M2SpeedScale (49.22)</i> defines the speed - in rpm - that corresponds to 20.000 speed units. The speed scaling is released when <i>M2SpeedScale (49.22)</i> \geq 10:</p> <ul style="list-style-type: none"> - 20.000 speed units == <i>M2SpeedScale (49.22)</i>, in case <i>M2SpeedScale (49.22)</i> \geq 10 - 20.000 speed units == maximum absolute value of <i>M2SpeedMin (49.19)</i> and <i>M2SpeedMax (49.20)</i>, in case <i>M2SpeedScale (49.22)</i> $<$ 10 or mathematically - If <i>(49.22)</i> \geq 10 then 20.000 == <i>(49.22)</i> in rpm - If <i>(49.22)</i> $<$ 10 then 20.000 == Max [<i>(49.19)</i> , <i>(49.20)</i>] in rpm <p>The actual used speed scaling is visible in <i>SpeedScale Act (2.29)</i>.</p> <p>Note1: <i>M2SpeedScale (49.22)</i> has to be set in case the speed is read or written by means of an overriding control system (e.g. serial communication).</p> <p>Note2: <i>M2SpeedScale (49.22)</i> is must be set in the range of: 0.625 to 5 times of <i>M2BaseSpeed (49.03)</i>.</p> <p>If the scaling is out of range A124 SpeedScale [<i>AlarmWord2 (9.07)</i> bit 7] is generated.</p> <p>Commissioning hint:</p> <ul style="list-style-type: none"> - set <i>M2SpeedScale (49.22)</i> to maximum speed - set <i>M2BaseSpeed (49.03)</i> to base speed - set <i>M2SpeedMax (49.20)</i> / <i>M2SpeedMin (49.19)</i> to \pmmaximum speed <p>Int. Scaling: 10 == 1 rpm Type: I Volatile: N</p>	0	6500	0	rpm	E
49.23	<p>M2EncMeasMode (motor 2 encoder measuring mode) <i>M2EncMeasMode (49.23)</i> selects the measurement mode for the pulse encoder:</p> <ul style="list-style-type: none"> 0 = A+/B Dir channel A: rising edges for speed; channel B: direction 1 = A+- channel A: rising and falling edges for speed; channel B: not used 2 = A+/-B Dir channel A: rising and falling edges for speed; channel B: direction 3 = A+/-B+- channel A & B: rising and falling edges for speed and direction, default <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	A+/B Dir	A+/-B+-	A+/-B+-	'	E
49.24	<p>M2SpeedFbSel (motor 2 speed feedback selector) Motor 1 speed feedback selection:</p> <ul style="list-style-type: none"> 0 = EMF speed is calculated by means of the EMF, default 1 = Encoder speed is measured by means of a pulse encoder 2 = Tacho speed is measured by means of an analog tacho 3 = External <i>MotSpeed (1.04)</i> is updated by adaptive program, application program or overriding control. <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	EMF	External	EMF	'	E
49.25	<p>M2EncPulseNo (motor 2 encoder pulse number) Number of pulse encoder pulses per revolution.</p> <p>Int. Scaling: 1 == 1 ppr Type: I Volatile: N</p>	20	10000	1024	ppr	E
49.26	<p>M2TachoAdjust (motor 2 tacho adjust) Fine tuning of analog tacho. The value equals the actual speed measured by means of a hand held tacho:</p> <ul style="list-style-type: none"> - <i>M2TachoAdjust (49.26)</i> = speed actual_{HandHeldTacho} <p>Internally limited to: $\pm (2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: During tuning set <i>M2SpeedFbSel (49.24)</i> = EMF.</p> <p>Int. Scaling: (2.29) Type: I Volatile: Y</p>	-10000	10000	0	rpm	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.27	M2TachoVolt1000 (motor 2 tacho voltage at 1000rpm) <i>M2TachoVolt1000 (49.27)</i> is used to adjust the analog tacho voltage feedback at a speed of 1000rpm. Note1: During tuning set <i>M2SpeedFbSel (49.24)</i> = EMF . Int. Scaling: 10 == 1 V Type: I Volatile: N	0	270	60	V	E
49.28	M2BrakeCtrl (motor 2 brake control) Releases the control of the brake: 0 = NotUsed brake control blocked, default 1 = On brake control is released The brake open (lift) command is readable in <i>AuxStatWord (8.02)</i> bit 8 and can be connected to the digital output controlling the brake. The brake control can be overwritten by <i>AuxCtrlWord2 (7.03)</i> bit 12. The brake is always applied in case ForceBrake = 1. Otherwise the brake is controlled by the internal brake logic. Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	On	NotUsed	'	E
49.29	M2BrakeAckSel (motor 2 brake acknowledge selector) The drive sets either A122 MechBrake [<i>AlarmWord2 (9.07)</i> bit 5] or trips with F552 MechBrake [<i>FaultWord4 (9.04)</i> bit 3] depending on <i>BrakeFaultFunc (42.06)</i> if a digital input is selected and the brake acknowledge fails: 0 = NotUsed brake acknowledge is blocked, default 1 = DI1 0 = brake is applied, 1 = brake is open (lifted) 2 = DI2 0 = brake is applied, 1 = brake is open (lifted) 3 = DI3 0 = brake is applied, 1 = brake is open (lifted) 4 = DI4 0 = brake is applied, 1 = brake is open (lifted) 5 = DI5 0 = brake is applied, 1 = brake is open (lifted) 6 = DI6 0 = brake is applied, 1 = brake is open (lifted) 7 = DI7 0 = brake is applied, 1 = brake is open (lifted) 8 = DI8 0 = brake is applied, 1 = brake is open (lifted) 9 = DI9 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board 10 = DI10 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board 11 = DI11 0 = brake is applied, 1 = brake is open (lifted). Only available with digital extension board Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	DI11	NotUsed	'	E
49.30	M2BrakeOpenDly (motor 2 brake open delay) Brake open (lift) delay. This function compensates for the mechanical open (lift) delay of the brake. Int. Scaling: 10 == 1 s Type: I Volatile: N	0	5	0	s	E
49.31	M2BrakeCloseDly (motor 2 brake close delay) Brake close (apply) delay. This function compensates for the time the drive needs to decelerated from <i>ZeroSpeedLim (20.03)</i> to actual speed = 0. Int. Scaling: 10 == 1 s Type: I Volatile: N	0	5	0	s	E
49.32	M2ModelTime (motor 2 model time constant) Thermal time constant for motor 1. The time within the temperature rises to 63% of its nominal value. The motor thermal model is blocked, if <i>M2ModelTime (49.32)</i> is set to zero. Int. Scaling: 10 == 1 s Type: I Volatile: N	0	6400	240	s	E
49.33	M2AlarmLimLoad (motor 2 alarm limit load) The drive sets A110 M2OverLoad [<i>AlarmWord1 (9.06)</i> bit 9] if <i>M2AlarmLimLoad (49.33)</i> - in percent of <i>M2NomCur (49.02)</i> - is exceeded. Output value for motor 1 thermal model is <i>Mot2TempCalc (1.21)</i> . Int. Scaling: 10 == 1 % Type: I Volatile: N	10	325	102	%	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.34	<p>M2FaultLimLoad (motor 2 fault limit load) The drive trips with F510 M2OverLoad [<i>FaultWord1 (9.01)</i> bit 9] if <i>M2FaultLimLoad (49.34)</i> - in percent of <i>M2NomCur (49.02)</i> - is exceeded. Output value for motor 1 thermal model is <i>Mot2TempCalc (1.21)</i>. Int. Scaling: 10 == 1 % Type: I Volatile: N</p>	10	325	106	%	E
49.35	<p>M2TempSel (motor 2 temperature selector) <i>M2TempSel (49.33)</i> selects motor 2 measured temperature input. Connection possibilities for PT100: – max. 3 PT100 for motor 2 and max. 3 PT100 for motor 1 or – up to 6 PT100 for motor 2 only. Connection possibilities PTC: – max. 1 PTC for motor 2 and max. 1 PTC for motor 1 or – up to 2 PTC for motor 2 only: 0 = NotUsed motor 2 temperature measurement is blocked, default 1 = 1PT100 AI3 one PT100 connected to AI3 on SDCS-IOB-3 2 = 2PT100 AI3 two PT100 connected to AI3 on SDCS-IOB-3 3 = 3PT100 AI3 three PT100 connected to AI3 on SDCS-IOB-3 4 = 4PT100 AI3/2 four PT100, 3 connected to AI3 and 1 connected to AI2 on SDCS-IOB-3 5 = 5PT100 AI3/2 five PT100, 3 connected to AI3 and 2 connected to AI2 on SDCS-IOB-3 6 = 6PT100 AI3/2 six PT100, 3 connected to AI3 and 3 connected to AI2 on SDCS-IOB-3 7 = 1PT100 AI8 one PT100 connected to AI8 on RAIO2 8 = 2PT100 AI8 two PT100 connected to AI8 on RAIO2 9 = 3PT100 AI8 three PT100 connected to AI8 on RAIO2 10 = 4PT100 AI8/7 four PT100, 3 connected to AI8 and 1 connected to AI7 on RAIO2 11 = 5PT100 AI8/7 five PT100, 3 connected to AI8 and 2 connected to AI7 on RAIO2 12 = 6PT100 AI8/7 six PT100, 3 connected to AI8 and 3 connected to AI7 on RAIO2 13 = 1PTC AI3 one PTC connected to AI3 on SDCS-IOB-3 14 = 2PTC AI3/2 two PTC, 1 connected to AI3 and 1 connected to AI2 on SDCS-IOB-3 15 = 1PTC AI2/Con one PTC connected to AI2 on SDCS-CON-4 Note1: AI7 and AI8 have to be activated by means of <i>AIO ExtModule (98.06)</i>. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	1PTC AI2/Con	NotUsed	'	E
49.36	<p>M2AlarmLimTemp (motor 2 alarm limit temperature) The drive sets A108 M2OverTemp [<i>AlarmWord1 (9.06)</i> bit 8] if <i>M2AlarmLimTemp (49.36)</i> is exceeded. Output value for motor 1 measured temperature is <i>Mot2TempMeas (1.23)</i>. Note1: The units depends on <i>M2TempSel (49.35)</i>. Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: SI Volatile: N</p>	-10	4000	0	°C	E
49.37	<p>M2FaultLimTemp (motor 2 fault limit temperature) The drive trips with F509 M2OverTemp [<i>FaultWord1 (9.01)</i> bit 8] if <i>M2FaultLimTemp (49.37)</i> is exceeded. Output value for motor 1 measured temperature is <i>Mot2TempMeas (1.23)</i>. Note1: The units depends on <i>M2TempSel (49.35)</i>. Int. Scaling: 1 == 1 °C / 1 Ω / 1 Type: SI Volatile: N</p>	-10	4000	0	°C	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
49.38	<p>M2KlixonSel (motor 2 klixon selector) The drive trips with F509 M2OverTemp [<i>FaultWord1 (9.01)</i> bit 8] if a digital input selected and the klixon is open:</p> <p>0 = NotUsed no reaction, default 1 = DI1 0 = fault, 1 = no fault 2 = DI2 0 = fault, 1 = no fault 3 = DI3 0 = fault, 1 = no fault 4 = DI4 0 = fault, 1 = no fault 5 = DI5 0 = fault, 1 = no fault 6 = DI6 0 = fault, 1 = no fault 7 = DI7 0 = fault, 1 = no fault 8 = DI8 0 = fault, 1 = no fault 9 = DI9 0 = fault, 1 = no fault. Only available with digital extension board 10 = DI10 0 = fault, 1 = no fault. Only available with digital extension board 11 = DI11 0 = fault, 1 = no fault. Only available with digital extension board</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	DI11	NotUsed	-	E
Group 50	Speed measurement					
50.01	<p>M1SpeedScale (motor 1 speed scaling) Motor 1 speed scaling in rpm. <i>M1SpeedScale (50.01)</i> defines the speed - in rpm - that corresponds to 20.000 speed units. The speed scaling is released when <i>M1SpeedScale (50.01)</i> ≥ 10:</p> <ul style="list-style-type: none"> - 20.000 speed units == <i>M1SpeedScale (50.01)</i>, in case <i>M1SpeedScale (50.01)</i> ≥ 10 - 20.000 speed units == maximum absolute value of <i>M1SpeedMin (20.01)</i> and <i>M1SpeedMax (20.02)</i>, in case <i>M1SpeedScale (50.01)</i> < 10 or mathematically - If <i>(50.01)</i> ≥ 10 then 20.000 == <i>(50.01)</i> in rpm - If <i>(50.01)</i> < 10 then 20.000 == Max [<i>(20.01)</i> , <i>(20.02)</i>] in rpm <p>The actual used speed scaling is visible in <i>SpeedScale Act (2.29)</i>.</p> <p>Note1: <i>M1SpeedScale (50.01)</i> has to be set in case the speed is read or written by means of an overriding control system (e.g. serial communication).</p> <p>Note2: <i>M1SpeedScale (50.01)</i> is must be set in the range of: 0.625 to 5 times of <i>M1BaseSpeed (99.04)</i>.</p> <p>If the scaling is out of range A124 SpeedScale [<i>AlarmWord2 (9.07)</i> bit 7] is generated.</p> <p>Commissioning hint:</p> <ul style="list-style-type: none"> - set <i>M1SpeedScale (50.01)</i> to maximum speed - set <i>M1BaseSpeed (99.04)</i> to base speed - set <i>M1SpeedMax (20.02)</i> / <i>M1SpeedMin (20.01)</i> to ±maximum speed <p>Int. Scaling: 10 == 1 rpm Type: I Volatile: N</p>	0	6500	0	rpm	C
50.02	<p>M1EncMeasMode (motor 1 encoder measuring mode) <i>M1EncMeasMode (50.02)</i> selects the measurement mode for the pulse encoder:</p> <p>0 = A+/B Dir channel A: rising edges for speed; channel B: direction 1 = A+- channel A: rising and falling edges for speed; channel B: not used 2 = A+/-B Dir channel A: rising and falling edges for speed; channel B: direction 3 = A+/-B+- channel A & B: rising and falling edges for speed and direction, default</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	A+/B Dir	A+/-B+-	A+/-B+-	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
50.03	M1SpeedFbSel (motor 1 speed feedback selector) Motor 1 speed feedback selection: 0 = EMF speed is calculated by means of the EMF, default 1 = Encoder speed is measured by means of a pulse encoder 2 = Tacho speed is measured by means of an analog tacho 3 = External <i>MotSpeed (1.04)</i> is updated by adaptive program, application program or overriding control. Int. Scaling: 1 == 1 Type: C Volatile: N	EMF	External	EMF	-	C
50.04	M1EncPulseNo (motor 1 encoder pulse number) Number of pulse encoder pulses per revolution. Int. Scaling: 1 == 1 ppr Type: I Volatile: N	20	10000	1024	ppr	C
50.05	Unused					
50.06	SpeedFiltTime (actual speed filter time) Speed actual filter time for <i>MotSpeed (1.04)</i> . Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	5	ms	E
50.07	PosCountMode (position counter mode) The position counter is based on the pulse count of the pulse encoder, with all pulse edges are counted. The 32-bit position value is divided in 2 16-bit words: 0 = PulseEdges the low word is shown in <i>PosCountInitLo (50.08)</i> (1 == 1 pulse edge) and the high word is shown in <i>PosCountInitHi (50.09)</i> (1 == 65536 pulse edges) 1 = Scaled the low word is shown in <i>PosCountInitLo (50.08)</i> (0 == 0° and 65536 == 360°) and the high word is shown in <i>PosCountInitHi (50.09)</i> (1 == 1 revolution), default The position counter is controlled by <i>SyncCommand (10.04)</i> and <i>AuxCtrlWord (7.02)</i> bits 9 to 11. The status can be seen from <i>AuxStatWord (8.02)</i> bit 5 SyncRdy . The position counter function has to be implemented by adaptive program, application program or overriding control. Int. Scaling: 1 == 1 Type: C Volatile: N	PulseEdges	Scaled	Scaled	-	E
50.08	PosCountInitLo (Position counter low initial value) Position counter initial low word. Unit depends on setting of <i>PosCountMode (50.07)</i> : - PulseEdges 1 == 1 pulse edge - Scaled 0 == 0° and 65536 == 360° See also <i>SyncCommand (10.04)</i> . Int. Scaling: 1 == 1 Type: I Volatile: N	-32768	32767	0	'	E
50.09	PosCountInitHi (Position counter high initial value) Position counter initial high word. Unit depends on setting of <i>PosCountMode (50.07)</i> : - PulseEdges 1 == 65536 pulse edges - Scaled 1 == 1 revolution See sync input select (50.12) Int. Scaling: 1 == 1 Type: I Volatile: N	-32768	32767	0	'	E
50.10	SpeedLev (speed level) When <i>MotSpeed (1.04)</i> reaches <i>SpeedLev (50.10)</i> the bit AboveLimit [<i>MainStatWord (8.01)</i> bit 10] is set. Internally limited from: $-(2.29) * \frac{32767}{20000} rpm$ to $(2.29) * \frac{32767}{20000} rpm$ Int. Scaling: (2.29) Type: I Volatile: N	0	10000	1500	rpm	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
50.11	<p>DynBrakeDyl (delay dynamic braking) In case of dynamic braking with EMF feedback [<i>M1SpeedFbSel (50.03) = EMF</i>] or a speed feedback fault there is no valid information about the motor speed and thus no zero speed information. To prevent an interlocking of the drive after dynamic braking the speed is assumed zero after <i>DynBrakeDyl (50.11)</i> is elapsed:</p> <p>-1 s = the motor voltage is measured directly at the motor terminals and is thus valid during dynamic braking 0 s = no zero speed signal for dynamic braking is generated 1 s to 3000 s = zero speed signal for dynamic braking is generated after the programmed time is elapsed</p> <p>Int. Scaling: 1 == 1 s Type: I Volatile: N</p>	-1	3000	0	s	E
50.12	<p>M1TachoAdjust (motor 1 tacho adjust) Fine tuning of analog tacho. The value equals the actual speed measured by means of a hand held tacho:</p> <p>– $M1TachoAdjust (50.12) = speed_{\text{actual, HandHeldTacho}}$</p> <p>Internally limited to: $\pm (2.29) * \frac{32767}{20000} rpm$</p> <p>Note1: During tuning set <i>M1SpeedFbSel (50.03) = EMF</i>.</p> <p>Int. Scaling: (2.29) Type: I Volatile: Y</p>	-10000	10000	0	rpm	C
50.13	<p>M1TachoVolt1000 (motor 1 tacho voltage at 1000rpm) <i>M1TachoVolt1000 (50.13)</i> is used to adjust the analog tacho voltage feedback at a speed of 1000rpm.</p> <p>Note1: During tuning set <i>M1SpeedFbSel (50.03) = EMF</i>.</p> <p>Int. Scaling: 10 == 1 V Type: I Volatile: N</p>	0	270	60	V	C
50.14	Unused					
50.15	<p>PosSyncMode (position counter synchronization mode) Position counter synchronization mode:</p> <p>0 = Single the next synchronization must be prepared by resetting SyncRdy [<i>AuxStatWord (8.02)</i> bit 5] with ResetSyncRdy [<i>AuxCtrlWord (7.02)</i> bit 11], default 1 = Cyclic the synchronization happens on every occurrence of the synchronization event</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Single	Cyclic	Single	'	E
50.16	Unused					
50.17	<p>WinderScale (winder scaling) Speed actual scaling. Before speed error (Δn) generation.</p> <p>Int. Scaling: 100 == 1 Type: I Volatile: N</p>	-100	100	1	'	E
Group 51	Fieldbus					
	<p>This parameter group defines the communication parameters for fieldbus adapters (Fxxx, Rxxx and Nxxx). The parameter names and the amount of the used parameters depend on the selected fieldbus adapter.</p> <p>Note1: If a fieldbus parameter is changed its new value is taken over after the next power up.</p>					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
51.01	Fieldbus1 (fieldbus parameter 1) Fieldbus parameter 1 Int. Scaling: 1 == 1 Type: I Volatile: Y	0	32767	0	'	C
...	...					C
51.15	Fieldbus15 (fieldbus parameter 15) Fieldbus parameter 15 Int. Scaling: 1 == 1 Type: I Volatile: N	0	32767	0	'	C
51.16	Fieldbus16 (fieldbus parameter 16) Fieldbus parameter 16 Int. Scaling: 1 == 1 Type: I Volatile: N	0	32767	0	'	E
...	...					E
51.31	Fieldbus31 (fieldbus parameter 31) Fieldbus parameter 31 Int. Scaling: 1 == 1 Type: I Volatile: N	0	32767	0	'	E
Group 83	Adaptive program control					
83.01	AdapProgCmd (adaptive program command) Selects the operation mode for the adaptive Program: 0 = Stop stop, the adaptive program is not running and cannot be edited, default 1 = Start running, the adaptive program is running and cannot be edited 2 = Edit edit, the adaptive program is not running and can be edited 3 = SingleCycle The adaptive program runs only once. If a breakpoint is set with <i>BreakPoint (83.06)</i> the adaptive program will stop before the breakpoint. After the SingleCycle AdapProgCmd (83.01) is automatically set back to Stop . 4 = SingleStep Runs only one function block. <i>LocationCounter (84.03)</i> shows the function block number, which will be executed during the next SingleStep . After a SingleStep AdapProgCmd (83.01) is automatically set back to Stop . <i>LocationCounter (84.03)</i> shows the next function block to be executed. To reset <i>LocationCounter (84.03)</i> to the first function block set <i>AdapProgCmd (83.01)</i> to Stop again (even if it is already set to Stop). Note1: <i>AdapProgCmd (83.01) = Start, SingleCycle or SingleStep</i> is only valid, if <i>AdapPrgStat (84.01) ≠ Running</i> . Int. Scaling: 1 == 1 Type: C Volatile: N	Stop	SingleStep	Stop	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
83.02	<p>EditCmd (edit command) Edit application program. <i>EditCmd (83.02)</i> is automatically set back to Done after the chosen action is finished:</p> <p>0 = Done no action or edit application program completed, default 1 = Push Shifts the function block in the spot defined by <i>EditBlock (83.03)</i> and all subsequent function blocks one spot forward. A new function block can be placed in the now empty spot by programming its parameter set as usual. Example: A new function block needs to be placed in between the function block number four (84.22) to (84.27) and five (84.28) to (84.33). In order to do this:</p> <ol style="list-style-type: none"> 1. set <i>AdapProgCmd (83.01)</i> = Edit 2. set <i>EditBlock (83.03)</i> = 5 (selects function block 5 as the desired spot for the new function block) 3. set <i>EditCmd (83.02)</i> = Push (shifts function block 5 and all subsequent function blocks one spot forward) 4. Program empty spot 5 by means of (84.28) to (84.33) <p>2 = Delete Deletes the function block in the spot defined by <i>EditBlock (83.03)</i> and shifts all subsequent function blocks one spot backward. To delete all function blocks set <i>EditBlock (83.03)</i> = 17.</p> <p>3 = Protect Turns all parameters of the adaptive program into protected mode (parameters cannot be written to). Before using the Protect command set the pass code by means of <i>PassCode (83.05)</i>. Attention: Do not forget the pass code!</p> <p>4 = Unprotect Reset of protected mode. Before the Unprotect command can be used, <i>PassCode (83.05)</i> has to be set. Attention: The proper pass code has to be used!</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	Done	Unprotect	Done	'	E
83.03	<p>EditBlock (edit block) Defines the function block witch is selected by <i>EditCmd (83.02)</i> = Push or Delete. After a Push or Delete <i>EditBlock (83.03)</i> is automatically set back to 1. Note1: To delete all function blocks set <i>EditBlock (83.03)</i> = 17. Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	1	17	1	'	E
83.04	<p>TimeLevSel (time level select) Selects the cycle time for the adaptive program. This setting is valid for all function blocks.</p> <p>0 = Off no task selected 1 = 5ms adaptive program runs with 5 ms 2 = 20ms adaptive program runs with 20 ms 3 = 100ms adaptive program runs with 100 ms 4 = 500ms adaptive program runs with 500 ms Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Off	500ms	Off	'	E
83.05	<p>PassCode (pass code) The pass code is a number between 1 and 65535 to write protect adaptive programs by means of <i>EditCmd (83.02)</i>. After using Protect or Unprotect <i>PassCode (83.05)</i> is automatically set back to zero. Attention: Do not forget the pass code! Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	0	65535	0	'	E
83.06	<p>BreakPoint (break point) Breakpoint for <i>AdapProgCmd (83.01)</i> = SingleCycle. The break point is not used, if <i>BreakPoint (83.06)</i> is set to zero. Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	0	16	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																				
Group 84	Adaptive program																																									
84.01	AdapPrgStat (adaptive program status word) Adaptive program status word: <table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Bit</th> <th style="text-align: left;">Name</th> <th style="text-align: left;">Value</th> <th style="text-align: left;">Comment</th> </tr> </thead> <tbody> <tr> <td>B0</td> <td>Bit 0</td> <td>1</td> <td>adaptive program is running</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>adaptive program is stopped</td> </tr> <tr> <td>B1</td> <td>Bit 1</td> <td>1</td> <td>adaptive program can be edited</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>adaptive program cannot be edited</td> </tr> <tr> <td>B2</td> <td>Bit 2</td> <td>1</td> <td>adaptive program is being checked</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>no action</td> </tr> <tr> <td>B3</td> <td>Bit 3</td> <td>1</td> <td>adaptive program is faulty</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>adaptive program is OK</td> </tr> </tbody> </table> Faults in the adaptive program can be: <ul style="list-style-type: none"> – used function block with not at least input 1 connection – used pointer is not valid – invalid bit number for function block Bset – location of function block PI-Bal after PI function block Int. Scaling: 1 == 1 Type: I Volatile: Y	Bit	Name	Value	Comment	B0	Bit 0	1	adaptive program is running			0	adaptive program is stopped	B1	Bit 1	1	adaptive program can be edited			0	adaptive program cannot be edited	B2	Bit 2	1	adaptive program is being checked			0	no action	B3	Bit 3	1	adaptive program is faulty			0	adaptive program is OK	'	'	'	'	L
Bit	Name	Value	Comment																																							
B0	Bit 0	1	adaptive program is running																																							
		0	adaptive program is stopped																																							
B1	Bit 1	1	adaptive program can be edited																																							
		0	adaptive program cannot be edited																																							
B2	Bit 2	1	adaptive program is being checked																																							
		0	no action																																							
B3	Bit 3	1	adaptive program is faulty																																							
		0	adaptive program is OK																																							
84.02	FaultedPar (faulted parameters) The adaptive program will be checked before running. If there is a fault, <i>AdapPrgStat (84.01)</i> is set to “faulty” and <i>FaultedPar (84.02)</i> shows the faulty input. Note1: In case of a problem check the value and the attribute of the faulty input. Int. Scaling: 1 == 1 Type: I Volatile: Y	'	'	'	'	L																																				
84.03	LocationCounter (location counter) Location counter for <i>AdapProgCmd (83.01)</i> = SingleStep shows the function block number, which will be executed next. Int. Scaling: 1 == 1 Type: I Volatile: Y	'	'	'	'	L																																				

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
84.04	<p>Block1Type (function block 1 type) Selects the type for function block 1 [Block Parameter Set 1 (BPS1)]. Detailed description of the type can be found in chapter 'Function blocks':</p> <ul style="list-style-type: none"> 0 = NotUsed function block is not used 1 = ABS absolute value 2 = ADD sum 3 = AND AND 4 = Bitwise bit compare 5 = Bset bit set 6 = Compare compare 7 = Count counter 8 = D-Pot ramp 9 = Event event 10 = Filter filter 11 = Limit limit 12 = MaskSet mask set 13 = Max maximum 14 = Min minimum 15 = MulDiv multiplication and division 16 = OR OR 17 = ParRead parameter read 18 = ParWrite parameter write 19 = PI PI-controller 20 = PI-Bal initialization for PI-controller 21 = Ramp ramp 22 = SqWav square wave 23 = SR SR flip-flop 24 = Switch-B switch Boolean 25 = Switch-I switch integer 26 = TOFF timer off 27 = TON timer on 28 = Trigg trigger 29 = XOR exclusive OR <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	XOR	NotUsed	-	E
84.05	<p>Block1In1 (function block 1 input 1) Selects the source for input 1 of function block 1 (BPS1). There are 2 types of inputs, signals/parameters and constants:</p> <ul style="list-style-type: none"> - Signals/parameters are all signals and parameters available in the drive. The format is - xyyy, with: - = negate signal/parameter, xx = group and yy = index. Example: To connect negated <i>SpeedRef (23.01)</i> set <i>Block1In1 (84.05)</i> = -2301 and <i>Block1Attrib (84.08)</i> = 0h. To get only a certain bit e.g. RdyRef bit 3 of <i>MainStatWord (8.01)</i> set <i>Block1In1 (84.05)</i> = 801 and <i>Block1Attrib (84.08)</i> = 3h. - Constants are feed directly into the function block input and have to be declared by means of <i>Block1Attrib (84.08)</i>. Example: To connect the constant value of 12345 set <i>Block1In1 (84.05)</i> = 12345 and <i>Block1Attrib (84.08)</i> = 1000h. <p>Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-32768	32767	0	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																	
84.06	<p>Block1In2 (function block 1 input 2) Selects the source for input 2 of function block 1 (BPS1). Description see <i>Block1In1 (84.05)</i>, except: Example: To get only a certain bit e.g. RdyRef bit 3 of <i>MainStatWord (8.01)</i> set <i>Block1In2 (84.06)</i> = 801 and <i>Block1Attrib (84.08)</i> = 30h. Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-32768	32767	0	-	E																																																	
84.07	<p>Block1In3 (function block 1 input 3) Selects the source for input 2 of function block 1 (BPS1). Description see <i>Block1In1 (84.05)</i>, except: Example: To get only a certain bit e.g. RdyRef bit 3 of <i>MainStatWord (8.01)</i> set <i>Block1In3 (84.07)</i> = 801 and <i>Block1Attrib (84.08)</i> = 300h. Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-32768	32767	0	-	E																																																	
84.08	<p>Block1Attrib (function block 1 attribute) Defines the attributes of function block 1 for all three inputs [<i>Block1In1 (84.05)</i>, <i>Block1In2 (84.06)</i> and <i>Block1In3 (84.07)</i>] (BPS1). <i>Block1Attrib (84.08)</i> is divided into 4 parts:</p> <ul style="list-style-type: none"> - Bit number 0 - 3 for input 1 to get a certain bit out of a packed Boolean word. - Bit number 4 - 7 for input 2 to get a certain bit out of a packed Boolean word. - Bit number 8 - 11 for input 3 to get a certain bit out of a packed Boolean word. - Bit number 12 - 14 for input 1 - 3 to feed a constant directly into the input <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; text-align: center;">15</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">12</td> <td style="width: 15%; text-align: center;">11</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">8</td> <td style="width: 15%; text-align: center;">7</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">4</td> <td style="width: 15%; text-align: center;">3</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">0</td> <td style="width: 15%;"></td> </tr> <tr> <td colspan="12" style="text-align: right;">Bit number</td> </tr> <tr> <td colspan="12" style="text-align: right;">packed Boolean</td> </tr> <tr> <td colspan="12" style="text-align: center;"> </td> </tr> </table> <p style="font-size: small; margin-top: 5px;"> To use an input as a constant value, the bit belonging to the input must be set high. This function offers the opportunity to isolate a certain bit out of a packed Boolean word. It is used to connect the Boolean inputs of a function block to a certain bit of a packed Boolean word. With: Bit 0 == 0000 == 0h Bit 1 == 0001 == 1h ... Bit 15 == 1111 == Fh </p> </div> <p style="margin-top: 10px;">Int. Scaling: 1 == 1 Type: h Volatile: N</p>	15		12	11		8	7		4	3		0		Bit number												packed Boolean																								0h	FFFFh	0h	-	E
15		12	11		8	7		4	3		0																																												
Bit number																																																							
packed Boolean																																																							
84.09	<p>Block1Output (function block 1 output) Function block 1 output, can be used as an input for further function blocks. Int. Scaling: 1 == 1 Type: SI Volatile: Y</p>	-	-	-	-	L																																																	

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																																																																																								
84.10 to 84.99	The description of the parameters for function blocks 2 to 16 is basically the same as for function block 1. For Your convenience the following table shows the parameter numbers of all function blocks1:					E																																																																																																																																								
	<table border="1"> <thead> <tr> <th>Function block</th> <th>BlockxType</th> <th>BlockxIn1 input 1</th> <th>BlockxIn2 input 2</th> <th>BlockxIn3 input 1</th> <th>BlockxAttrib</th> <th>BlockxOutput signal</th> <th>BlockxOut pointer</th> </tr> </thead> <tbody> <tr><td>1</td><td>84.04</td><td>84.05</td><td>84.06</td><td>84.07</td><td>84.08</td><td>84.09</td><td>86.01</td></tr> <tr><td>2</td><td>84.10</td><td>84.11</td><td>84.12</td><td>84.13</td><td>84.14</td><td>84.15</td><td>86.02</td></tr> <tr><td>3</td><td>84.16</td><td>84.17</td><td>84.18</td><td>84.19</td><td>84.20</td><td>84.21</td><td>86.03</td></tr> <tr><td>4</td><td>84.22</td><td>84.23</td><td>84.24</td><td>84.25</td><td>84.26</td><td>84.27</td><td>86.04</td></tr> <tr><td>5</td><td>84.28</td><td>84.29</td><td>84.30</td><td>84.31</td><td>84.32</td><td>84.33</td><td>86.05</td></tr> <tr><td>6</td><td>84.34</td><td>84.35</td><td>84.36</td><td>84.37</td><td>84.38</td><td>84.39</td><td>86.06</td></tr> <tr><td>7</td><td>84.40</td><td>84.41</td><td>84.42</td><td>84.43</td><td>84.44</td><td>84.45</td><td>86.07</td></tr> <tr><td>8</td><td>84.46</td><td>84.47</td><td>84.48</td><td>84.49</td><td>84.50</td><td>84.51</td><td>86.08</td></tr> <tr><td>9</td><td>84.52</td><td>84.53</td><td>84.54</td><td>84.55</td><td>84.56</td><td>84.57</td><td>86.09</td></tr> <tr><td>10</td><td>84.58</td><td>84.59</td><td>84.60</td><td>84.61</td><td>84.62</td><td>84.63</td><td>86.10</td></tr> <tr><td>11</td><td>84.64</td><td>84.65</td><td>84.66</td><td>84.67</td><td>84.68</td><td>84.69</td><td>86.11</td></tr> <tr><td>12</td><td>84.70</td><td>84.71</td><td>84.72</td><td>84.73</td><td>84.74</td><td>84.75</td><td>86.12</td></tr> <tr><td>13</td><td>84.76</td><td>84.77</td><td>84.78</td><td>84.79</td><td>84.80</td><td>84.81</td><td>86.13</td></tr> <tr><td>14</td><td>84.82</td><td>84.83</td><td>84.84</td><td>84.85</td><td>84.86</td><td>84.87</td><td>86.14</td></tr> <tr><td>15</td><td>84.88</td><td>84.89</td><td>84.90</td><td>84.91</td><td>84.92</td><td>84.93</td><td>86.15</td></tr> <tr><td>16</td><td>84.94</td><td>84.95</td><td>84.96</td><td>84.97</td><td>84.98</td><td>84.99</td><td>86.16</td></tr> </tbody> </table>	Function block	BlockxType	BlockxIn1 input 1	BlockxIn2 input 2	BlockxIn3 input 1	BlockxAttrib	BlockxOutput signal	BlockxOut pointer	1	84.04	84.05	84.06	84.07	84.08	84.09	86.01	2	84.10	84.11	84.12	84.13	84.14	84.15	86.02	3	84.16	84.17	84.18	84.19	84.20	84.21	86.03	4	84.22	84.23	84.24	84.25	84.26	84.27	86.04	5	84.28	84.29	84.30	84.31	84.32	84.33	86.05	6	84.34	84.35	84.36	84.37	84.38	84.39	86.06	7	84.40	84.41	84.42	84.43	84.44	84.45	86.07	8	84.46	84.47	84.48	84.49	84.50	84.51	86.08	9	84.52	84.53	84.54	84.55	84.56	84.57	86.09	10	84.58	84.59	84.60	84.61	84.62	84.63	86.10	11	84.64	84.65	84.66	84.67	84.68	84.69	86.11	12	84.70	84.71	84.72	84.73	84.74	84.75	86.12	13	84.76	84.77	84.78	84.79	84.80	84.81	86.13	14	84.82	84.83	84.84	84.85	84.86	84.87	86.14	15	84.88	84.89	84.90	84.91	84.92	84.93	86.15	16	84.94	84.95	84.96	84.97	84.98	84.99	86.16					
Function block	BlockxType	BlockxIn1 input 1	BlockxIn2 input 2	BlockxIn3 input 1	BlockxAttrib	BlockxOutput signal	BlockxOut pointer																																																																																																																																							
1	84.04	84.05	84.06	84.07	84.08	84.09	86.01																																																																																																																																							
2	84.10	84.11	84.12	84.13	84.14	84.15	86.02																																																																																																																																							
3	84.16	84.17	84.18	84.19	84.20	84.21	86.03																																																																																																																																							
4	84.22	84.23	84.24	84.25	84.26	84.27	86.04																																																																																																																																							
5	84.28	84.29	84.30	84.31	84.32	84.33	86.05																																																																																																																																							
6	84.34	84.35	84.36	84.37	84.38	84.39	86.06																																																																																																																																							
7	84.40	84.41	84.42	84.43	84.44	84.45	86.07																																																																																																																																							
8	84.46	84.47	84.48	84.49	84.50	84.51	86.08																																																																																																																																							
9	84.52	84.53	84.54	84.55	84.56	84.57	86.09																																																																																																																																							
10	84.58	84.59	84.60	84.61	84.62	84.63	86.10																																																																																																																																							
11	84.64	84.65	84.66	84.67	84.68	84.69	86.11																																																																																																																																							
12	84.70	84.71	84.72	84.73	84.74	84.75	86.12																																																																																																																																							
13	84.76	84.77	84.78	84.79	84.80	84.81	86.13																																																																																																																																							
14	84.82	84.83	84.84	84.85	84.86	84.87	86.14																																																																																																																																							
15	84.88	84.89	84.90	84.91	84.92	84.93	86.15																																																																																																																																							
16	84.94	84.95	84.96	84.97	84.98	84.99	86.16																																																																																																																																							
Group 85	User constants																																																																																																																																													
	85.01	Constant1 (constant 1) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.02	Constant2 (constant 2) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.03	Constant3 (constant 3) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.04	Constant4 (constant 4) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.05	Constant5 (constant 5) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.06	Constant6 (constant 6) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							
	85.07	Constant7 (constant 7) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E																																																																																																																																							

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
85.08	Constant8 (constant 8) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
85.09	Constant9 (constant 9) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
85.10	Constant10 (constant 10) Sets an integer constant for the adaptive program. Int. Scaling: 1 == 1 Type: SI Volatile: N	-32768	32767	0	'	E
85.11	String1 (string 1) Sets a string for the adaptive program. With DriveWindow it is possible to fill in a string (e.g. name of an event) with a maximum of 12 characters. This string is shown in the control panel and in DriveWindow. Int. Scaling: 1 == 1 Type: SI/C Volatile: N	'string'	'string'	''	'	E
85.12	String2 (string 2) Sets a string for the adaptive program. With DriveWindow it is possible to fill in a string (e.g. name of an event) with a maximum of 12 characters. This string is shown in the control panel and in DriveWindow. Int. Scaling: 1 == 1 Type: SI/C Volatile: N	'string'	'string'	''	'	E
85.13	String3 (string 3) Sets a string for the adaptive program. With DriveWindow it is possible to fill in a string (e.g. name of an event) with a maximum of 12 characters. This string is shown in the control panel and in DriveWindow. Int. Scaling: 1 == 1 Type: SI/C Volatile: N	'string'	'string'	''	'	E
85.14	String4 (string 4) Sets a string for the adaptive program. With DriveWindow it is possible to fill in a string (e.g. name of an event) with a maximum of 12 characters. This string is shown in the control panel and in DriveWindow. Int. Scaling: 1 == 1 Type: SI/C Volatile: N	'string'	'string'	''	'	E
85.15	String5 (string 5) Sets a string for the adaptive program. With DriveWindow it is possible to fill in a string (e.g. name of an event) with a maximum of 12 characters. This string is shown in the control panel and in DriveWindow. Int. Scaling: 1 == 1 Type: SI/C Volatile: N	'string'	'string'	''	'	E
Group 86	Adaptive program outputs					
	86.01	Block1Out (block 1 output) The value of function block 1 output [<i>Block1Output (84.09)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is - xyyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'

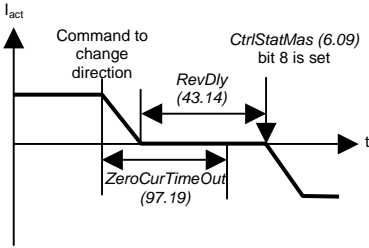
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
86.02	Block2Out (block 2 output) The value of function block 2 output [<i>Block2Output (84.15)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.03	Block3Out (block 3 output) The value of function block 3 output [<i>Block3Output (84.21)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.04	Block4Out (block 4 output) The value of function block 4 output [<i>Block1Output (84.27)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.05	Block5Out (block 5 output) The value of function block 5 output [<i>Block1Output (84.33)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.06	Block6Out (block 6 output) The value of function block 6 output [<i>Block1Output (84.39)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.07	Block7Out (block 7 output) The value of function block 7 output [<i>Block1Output (84.45)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.08	Block8Out (block 8 output) The value of function block 8 output [<i>Block1Output (84.51)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.09	Block9Out (block 9 output) The value of function block 9 output [<i>Block1Output (84.57)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.10	Block10Out (block 10 output) The value of function block 10 output [<i>Block1Output (84.63)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.11	Block11Out (block 11 output) The value of function block 11 output [<i>Block1Output (84.69)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
86.12	Block12Out (block 12 output) The value of function block 12 output [<i>Block1Output (84.75)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.13	Block13Out (block 13 output) The value of function block 13 output [<i>Block1Output (84.81)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.14	Block14Out (block 14 output) The value of function block 14 output [<i>Block1Output (84.87)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.15	Block15Out (block 15 output) The value of function block 15 output [<i>Block1Output (84.93)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E
86.16	Block16Out (block 16 output) The value of function block 16 output [<i>Block16Output (84.99)</i>] is written to a sink (signal/parameter) by means of this index pointer [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. The format is -xxyy , with: - = negate signal/parameter, xx = group and yy = index. Int. Scaling: 1 == 1 Type: I Volatile: N	-9999	9999	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																																																																		
Group 97	Measurement																																																																							
	<p>97.01 TypeCode (type code) <i>TypeCode (97.01)</i> is preset in the factory and is write protected, unless <i>ServiceMode (99.06)</i> = SetTypeCode: 0 = None the type code is set by user, see <i>S ConvScaleCur (97.02)</i>, <i>S ConvScaleVolt (97.03)</i>, <i>S MaxBrdgTemp (97.04)</i> and <i>S BlockBridge2 (97.07)</i> for e.g. rebuild kits 1 = S01-0020-04 type code, see table to 142 = S01-5203-05 type code, see table</p> <p>The drive's basic Type Code: DCS800-AAX-YYYY-ZZ</p> <table border="1" data-bbox="280 891 1500 1393"> <tr> <td>Product family:</td> <td>DCS800</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>Type:</td> <td>AA</td> <td>= S0</td> <td>= Modules</td> <td></td> <td></td> <td></td> </tr> <tr> <td rowspan="2">Bridge type:</td> <td rowspan="2">X</td> <td>= 1</td> <td>single bridge (2-Q)</td> <td></td> <td></td> <td></td> </tr> <tr> <td>= 2</td> <td>2 anti parallel bridges (4-Q)</td> <td></td> <td></td> <td></td> </tr> <tr> <td>Module type:</td> <td>YYYY</td> <td>=</td> <td>converter type current</td> <td></td> <td></td> <td></td> </tr> <tr> <td rowspan="5">Rated AC Voltage:</td> <td rowspan="5">ZZ</td> <td>= 04</td> <td>230 VAC - 400 VAC</td> <td></td> <td></td> <td></td> </tr> <tr> <td>= 05</td> <td>230 VAC – 525 VAC</td> <td></td> <td></td> <td></td> </tr> <tr> <td>= 06</td> <td>270 VAC – 600 VAC</td> <td></td> <td></td> <td></td> </tr> <tr> <td>= 07</td> <td>315 VAC – 700 VAC</td> <td></td> <td></td> <td></td> </tr> <tr> <td>= 08</td> <td>360 VAC – 800 VAC</td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td>= 10</td> <td>450 VAC – 1000 VAC</td> <td></td> <td></td> <td></td> </tr> </table> <p>If the type code is changed its new value is taken over after the next power up. Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	Product family:	DCS800						Type:	AA	= S0	= Modules				Bridge type:	X	= 1	single bridge (2-Q)				= 2	2 anti parallel bridges (4-Q)				Module type:	YYYY	=	converter type current				Rated AC Voltage:	ZZ	= 04	230 VAC - 400 VAC				= 05	230 VAC – 525 VAC				= 06	270 VAC – 600 VAC				= 07	315 VAC – 700 VAC				= 08	360 VAC – 800 VAC						= 10	450 VAC – 1000 VAC				None	S01-5203-05	factory preset value	-
Product family:	DCS800																																																																							
Type:	AA	= S0	= Modules																																																																					
Bridge type:	X	= 1	single bridge (2-Q)																																																																					
		= 2	2 anti parallel bridges (4-Q)																																																																					
Module type:	YYYY	=	converter type current																																																																					
Rated AC Voltage:	ZZ	= 04	230 VAC - 400 VAC																																																																					
		= 05	230 VAC – 525 VAC																																																																					
		= 06	270 VAC – 600 VAC																																																																					
		= 07	315 VAC – 700 VAC																																																																					
		= 08	360 VAC – 800 VAC																																																																					
		= 10	450 VAC – 1000 VAC																																																																					
<p>97.02 S ConvScaleCur (set: converter current scaling) Adjustment of current measuring channels (SDCS-PIN-4 or SDCS-PIN-51). <i>S ConvScaleCur (97.02)</i> is write protected, unless <i>ServiceMode (99.06)</i> = SetTypeCode: 0 A = take value from <i>TypeCode (97.01)</i> 1 A to 30000 A = take value from <i>S ConvScaleCur (97.02)</i> This value overrides the type code. The new value is taken over and visible in <i>ConvNomCur (4.05)</i> after the next power up. Int. Scaling: 1 == 1 A Type: I Volatile: N</p>	0	30000	0	A	E																																																																			

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
97.03	<p>S ConvScaleVolt (set: converter voltage scaling) Adjustment of voltage measuring channels (SDCS-PIN-4 or SDCS-PIN-51). <i>S ConvScaleVolt</i> (97.03) is write protected, unless <i>ServiceMode</i> (99.06) = SetTypeCode: 0 V = take value from <i>TypeCode</i> (97.01) 1 V to 2000 V = take value from <i>S ConvScaleVolt</i> (97.03) This value overrides the type code. The new value is taken over and visible in <i>ConvNomVolt</i> (4.04) after the next power up. Int. Scaling: 1 == 1 V Type: I Volatile: N</p>	0	2000	0	V	E
97.04	<p>S MaxBrdgTemp (set: maximum bridge temperature) Adjustment of the converters heat sink temperature tripping level in degree centigrade: 0 °C = take value from <i>TypeCode</i> (97.01) 1 °C to 150 °C = take value from <i>S MaxBrdgTemp</i> (97.04) This value overrides the type code and is immediately visible in <i>MaxBridgeTemp</i> (4.17). Note1: Maximum bridge temperature for converters size D6 and D7 is 45 °C. Int. Scaling: 1 == 1 °C Type: I Volatile: N</p>	0	150	0	°C	E
97.05	<p>ConvTempDly (converter temperature delay) Instead of measuring the converter temperature it is possible to measure the converter fan current by means of the PW-1002/3 board. <i>ConvTempDly</i> (97.05) avoids false fault messages during the fan acceleration: 0s = Converter temperature measurement is released. The drive trips with F504 ConvOverTemp [<i>FaultWord1</i> (9.01) bit 4] in case of excessive converter temperature. 1 s to 300 s = Converter fan current measurement is released when the drive is in On state [<i>UsedMCW</i> (7.04) bit 0 On = 1]. The drive trips with F511 ConvFanCur [<i>FaultWord1</i> (9.01) bit 10] in case of missing or excessive converter fan current, after <i>ConvTempDly</i> (97.05) is elapsed. Int. Scaling: 1 == 1 s Type: I Volatile: N</p>	0	300	0	s	E
97.06	Unused					
97.07	<p>S BlockBridge2 (set: block bridge 2) Bridge 2 can be blocked: 0 = Auto operation mode is taken from <i>TypeCode</i> (97.01), default 1 = BlockBridge2 block bridge 2 (== 2-Q operation) 2 = RelBridge2 release bridge 2 (== 4-Q operation) This value overrides the type code and is immediately visible in <i>QuadrantType</i> (4.15). Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Auto	RelBridge2	Auto	'	E
97.08	Unused					
97.09	<p>MainsCompTime (mains compensation time) Mains voltage compensation filter time constant. Is used for the mains voltage compensation at the current controller output. Setting <i>MainsCompTime</i> (97.09) to 1000 ms disables the mains voltage compensation. Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	1000	10	ms	E
97.10	Unused					
97.11	Unused					


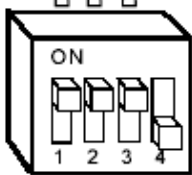

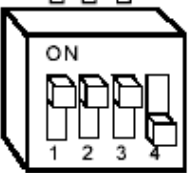
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
97.12	<p>CompUkPLL (phase locked loop to compensate for uk) The measured phase angle of the firing unit's PLL can be corrected in order to compensate the error caused by the commutation related voltage drops. The compensation depends on the uk (short circuit voltage) of the mains. <i>CompUkPLL (97.12)</i> defines the mains short circuit voltage - in percent of <i>NomMainsVolt (99.10)</i> - which is caused by the converter's nominal current for the PLL correction:</p> $\text{CompUkPLL} = \text{uk} * \frac{S_c}{S_t} * 100\%$ <p>with: uk = related mains short circuit voltage, S_c = apparent power of converter and S_t = apparent power of transformer</p> <p>Commissioning hint: <i>CompUkPLL (97.12)</i> is used to compensate for measurement faults of the mains due to commutation notches, in case the mains are measured on the secondary side of the dedicated transformer. The whole situation leads to unstable armature current during high motor loads. Increase <i>CompUkPLL (97.12)</i> slowly (1 by 1) until the armature current becomes stable. Int. Scaling: 10 == 1 % Type: I Volatile: N</p>	0	15	0	%	E
97.13	<p>DevLimPLL (phase locked loop deviation limit) Maximum allowed deviation of the mains cycle time between two measurements. The drive trips with F514 MainsNotSync [<i>FaultWord1 (9.01)</i> bit 13], if limit is overshoot:</p> <ul style="list-style-type: none"> - for 50Hz mains is valid: $360^\circ == 20ms = \frac{1}{50Hz}$ - for 60Hz mains is valid: $360^\circ == 16.67ms = \frac{1}{60Hz}$ <p>Int. Scaling: 100 == 1 ° Type: I Volatile: N</p>	5	20	10	°	E
97.14	<p>KpPLL (phase locked loop p-part) Gain of firing unit's phase lock loop.</p> <p>Int. Scaling: 100 == 1 Type: I Volatile: N</p>	0.25	8	3.75	-	E
97.15	Unused					
97.16	<p>AdjIDC (adjust DC current) <i>AdjIDC (97.16)</i> is used to cover drives with different current measuring circuits for bridge 1 and bridge 2. It rescales the measured armature current if bridge2 is active. Int. Scaling: 10 == 1 % Type: I Volatile: N</p>	12.5	800	100	%	E
97.17	<p>OffsetIDC (offset DC current measurement) Offset value - in percent of <i>M1NomCur (99.03)</i> - added to the armature current measurement. <i>OffsetIDC (97.17)</i> adjusts <i>ConvCurAct (1.16)</i> and the real armature current. Setting <i>OffsetIDC (97.17)</i> to 0 disables the manual offset. Int. Scaling: 100 == 1 % Type: I Volatile: N</p>	-5	5	0	%	E


Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>97.18</p>	<p>ZeroCurDetect (zero current detection) Selects the zero current detection method. Use a binary signal, if the zero current detection is done by another converter:</p> <ul style="list-style-type: none"> 0 = Current based on the converter's own zero current detection resistors, default 1 = Voltage based on the converter's own thyristor voltages 2 = CurAndVolt based on both, zero current detection resistors and thyristor voltages 3 = DI1 1 = zero current detected, 0 = current not zero 4 = DI2 1 = zero current detected, 0 = current not zero 5 = DI3 1 = zero current detected, 0 = current not zero 6 = DI4 1 = zero current detected, 0 = current not zero 7 = DI5 1 = zero current detected, 0 = current not zero 8 = DI6 1 = zero current detected, 0 = current not zero 9 = DI7 1 = zero current detected, 0 = current not zero 10 = DI8 1 = zero current detected, 0 = current not zero 11 = DI9 1 = zero current detected, 0 = current not zero, only available with digital extension board 12 = DI10 1 = zero current detected, 0 = current not zero, only available with digital extension board 13 = DI11 1 = zero current detected, 0 = current not zero, only available with digital extension board 14 = MCW Bit11 1 = zero current detected, 0 = current not zero, <i>MainCtrlWord (7.01)</i> bit 11 15 = MCW Bit12 1 = zero current detected, 0 = current not zero, <i>MainCtrlWord (7.01)</i> bit 12 16 = MCW Bit13 1 = zero current detected, 0 = current not zero, <i>MainCtrlWord (7.01)</i> bit 13 17 = MCW Bit14 1 = zero current detected, 0 = current not zero, <i>MainCtrlWord (7.01)</i> bit 14 18 = MCW Bit15 1 = zero current detected, 0 = current not zero, <i>MainCtrlWord (7.01)</i> bit 15 19 = ACW Bit12 1 = zero current detected, 0 = current not zero, <i>AuxCtrlWord (7.02)</i> bit 12 20 = ACW Bit13 1 = zero current detected, 0 = current not zero, <i>AuxCtrlWord (7.02)</i> bit 13 21 = ACW Bit14 1 = zero current detected, 0 = current not zero, <i>AuxCtrlWord (7.02)</i> bit 14 22 = ACW Bit15 1 = zero current detected, 0 = current not zero, <i>AuxCtrlWord (7.02)</i> bit 15 <p>Note1: If zero current is detected by means of the thyristor voltages either 10% of <i>MainsVoltAct (1.11)</i> or 10 V is undershot. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	Current	ACW Bit15	Current	-	E
<p>97.19</p>	<p>ZeroCurTimeOut (zero current timeout) <i>ZeroCurTimeOut (97.19)</i> defines the time while zero current has to be detected, after a command to change current direction. The drive trips with F533 ReversalTime [<i>FaultWord3 (9.03)</i> bit 0] if <i>ZeroCurTimeOut (97.19)</i> is elapsed without a zero current detection.</p>  <p>The reversal time starts when zero current has been detected, after a command to change current direction has been given.</p> <p><i>ZeroCurTimeOut (97.19)</i> must have the same setting for 12-pulse master and 12-pulse slave with one exception only:</p> <ul style="list-style-type: none"> - If there is no current measurement in the 12-pulse serial slave [<i>OperModeSel (43.01)</i> = 12PserSlave], set <i>ZeroCurTimeOut (97.19)</i> in the 12-pulse serial slave to maximum (600 ms). <p>Int. Scaling: 1 == 1 ms Type: I Volatile: N</p>	0	600	20	ms	E

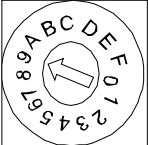
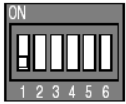
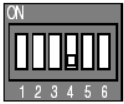
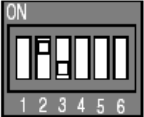
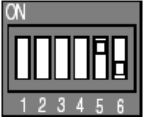
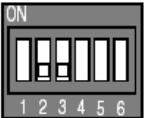
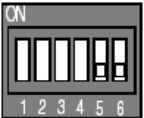
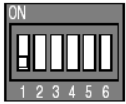
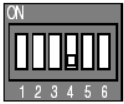
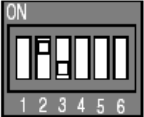
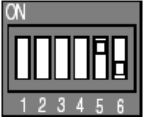
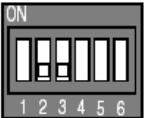
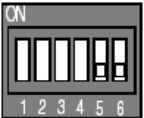
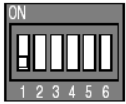
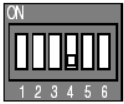
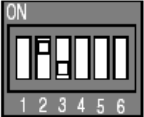
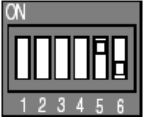
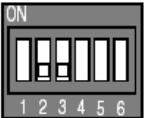
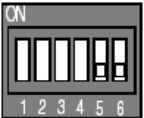
Index	Signal / Parameter name	min.	max.	def.	unit	E/C
97.20	TorqActFiltTime (actual torque filter time) Torque actual filter time constant for <i>MotTorqFilt</i> (1.07). Is used for the EMF controller and the EMF feed forward. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	1000	ms	E
97.21	ResetAhCounter (reset ampere hour counter) Binary signal to reset <i>AhCounter</i> (1.39): 0 = NotUsed default 1 = DI1 Reset by rising edge (0 → 1) 2 = DI2 Reset by rising edge (0 → 1) 3 = DI3 Reset by rising edge (0 → 1) 4 = DI4 Reset by rising edge (0 → 1) 5 = DI5 Reset by rising edge (0 → 1) 6 = DI6 Reset by rising edge (0 → 1) 7 = DI7 Reset by rising edge (0 → 1) 8 = DI8 Reset by rising edge (0 → 1) 9 = DI9 Reset by rising edge (0 → 1), only available with digital extension board 10 = DI10 Reset by rising edge (0 → 1), only available with digital extension board 11 = DI11 Reset by rising edge (0 → 1), only available with digital extension board 12 = MCW Bit11 Reset by rising edge (0 → 1), <i>MainCtrlWord</i> (7.01) bit 11 13 = MCW Bit12 Reset by rising edge (0 → 1), <i>MainCtrlWord</i> (7.01) bit 12 14 = MCW Bit13 Reset by rising edge (0 → 1), <i>MainCtrlWord</i> (7.01) bit 13 15 = MCW Bit14 Reset by rising edge (0 → 1), <i>MainCtrlWord</i> (7.01) bit 14 16 = MCW Bit15 Reset by rising edge (0 → 1), <i>MainCtrlWord</i> (7.01) bit 15 17 = ACW Bit12 Reset by rising edge (0 → 1), <i>AuxCtrlWord</i> (7.02) bit 12 18 = ACW Bit13 Reset by rising edge (0 → 1), <i>AuxCtrlWord</i> (7.02) bit 13 19 = ACW Bit14 Reset by rising edge (0 → 1), <i>AuxCtrlWord</i> (7.02) bit 14 20 = ACW Bit15 Reset by rising edge (0 → 1), <i>AuxCtrlWord</i> (7.02) bit 15 Int. Scaling: 1 == 1 Type: C Volatile: N	NotUsed	ACW Bit15	NotUsed	-	E
97.22	Unused					
97.23	AdjUDC (adjust DC voltage) <i>AdjUDC</i> (97.23) is used to cover drives with different voltage measuring circuits for armature and mains voltage. It rescales the armature voltage measurement. Int. Scaling: 10 == 1 % Type: I Volatile: N	12.5	800	100	%	E
97.24	OffsetUDC (offset DC voltage measurement) Offset value - in percent of <i>M1NomVolt</i> (99.02) - added to the armature voltage measurement. <i>OffsetUDC</i> (97.24) adjusts <i>ArmVoltAct</i> (1.14) and the real armature voltage. Setting <i>OffsetUDC</i> (97.24) to 5.1 % disables the manual offset. Int. Scaling: 100 == 1 % Type: I Volatile: N	-5.0	5.1	5.1	%	E
97.25	EMF ActFiltTime (actual EMF filter time) EMF actual filter time constant for <i>EMF VoltActRel</i> (1.17). Is used for the EMF controller and the EMF feed forward. Int. Scaling: 1 == 1 ms Type: I Volatile: N	0	10000	10	ms	E
97.26	HW FiltUDC (hardware filter DC voltage) Hardware filter for the UDC measuring circuit: 0 = FilterOff the filter time is set to 200 μs 1 = FilterOn the filter time is set to 10 ms, default Int. Scaling: 1 == 1 Type: C Volatile: N	FilterOff	FilterOn	FilterOn	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
Group 98	Option modules					
98.01	Unused					

Index	Signal / Parameter name				min.	max.	def.	unit	E/C																																																		
98.02	<p>CommModule (communication modules) For the communication modules following selections are available:</p> <table border="1" data-bbox="280 448 922 757"> <thead> <tr> <th></th> <th>Fieldbus (Rxxx)</th> <th>DDCS (e.g. AC 800M)</th> <th>DDCS (Nxxx)</th> <th>Modbus (RMBA-xx)</th> </tr> </thead> <tbody> <tr><td>0</td><td>-</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>1</td><td>X</td><td>-</td><td>-</td><td>-</td></tr> <tr><td>2</td><td>-</td><td>X</td><td>-</td><td>-</td></tr> <tr><td>3</td><td>-</td><td>-</td><td>X</td><td>-</td></tr> <tr><td>4</td><td>-</td><td>-</td><td>-</td><td>X</td></tr> <tr><td>5</td><td>X (read only)</td><td>X</td><td>-</td><td>-</td></tr> <tr><td>6</td><td>-</td><td>X</td><td>-</td><td>X (read only)</td></tr> <tr><td>7</td><td>-</td><td>-</td><td>X</td><td>X (read only)</td></tr> <tr><td>8</td><td>X</td><td>-</td><td>-</td><td>X /read only)</td></tr> </tbody> </table> <p>0 = NotUsed no communication used, default 1 = Fieldbus The drive communicates with the overriding control system via a fieldbus module (Rxxx) connected in option slot 1. The dataset start address is 1. This choice is not valid for the Modbus. 2 = COM-8/AC800x The drive communicates with the ABB overriding control system via SDCS-COM-8 connected in option slot 3. The dataset start address is selected by means of <i>Ch0 DsetBaseAddr (70.24)</i>. 3 = COM-8/Nxxx The drive communicates with the overriding control system via SDCS-COM-8 connected in option slot 3 and a fieldbus module (Nxxx). The dataset start address is selected by means of <i>Ch0 DsetBaseAddr (70.24)</i>. 4 = Modbus The drive communicates with the overriding control system via the Modbus (RMBA-xx) connected in option slot 1, 2 or 3 [see <i>ModBusModule2 (98.08)</i>]. The dataset start address is 1 5 = AC800xFldbus The drive communicates with the ABB overriding control system via SDCS-COM-8 connected in option slot 3. The dataset start address is selected by means of <i>Ch0 DsetBaseAddr (70.24)</i>. An additional fieldbus module (Rxxx) connected in option slot 1 is used for monitoring purposes only. 6 = AC800xModbus The drive communicates with the ABB overriding control system via SDCS-COM-8 connected in option slot 3. The dataset start address is selected by means of <i>Ch0 DsetBaseAddr (70.24)</i>. An additional Modbus (RMBA-xx) connected in option slot 1 or 2 [see <i>ModBusModule2 (98.08)</i>] is used for monitoring purposes only. 7 = NxxxModbus The drive communicates with the overriding control system via SDCS-COM-8 connected in option slot 3 and a fieldbus module (Nxxx). The dataset start address is selected by means of <i>Ch0 DsetBaseAddr (70.24)</i>. An additional Modbus (RMBA-xx) connected in option slot 1 or 2 [see <i>ModBusModule2 (98.08)</i>] is used for monitoring purposes only. 8 = FldBusModbus The drive communicates with the overriding control system via a fieldbus module (Rxxx) connected in option slot 1. The dataset start address is 1. An additional Modbus (RMBA-xx) connected in option slot 2 or 3 [see <i>ModBusModule2 (98.08)</i>] is used for monitoring purposes only.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>					Fieldbus (Rxxx)	DDCS (e.g. AC 800M)	DDCS (Nxxx)	Modbus (RMBA-xx)	0	-	-	-	-	1	X	-	-	-	2	-	X	-	-	3	-	-	X	-	4	-	-	-	X	5	X (read only)	X	-	-	6	-	X	-	X (read only)	7	-	-	X	X (read only)	8	X	-	-	X /read only)	NotUsed	FldBusModbus	NotUsed	-	E
	Fieldbus (Rxxx)	DDCS (e.g. AC 800M)	DDCS (Nxxx)	Modbus (RMBA-xx)																																																							
0	-	-	-	-																																																							
1	X	-	-	-																																																							
2	-	X	-	-																																																							
3	-	-	X	-																																																							
4	-	-	-	X																																																							
5	X (read only)	X	-	-																																																							
6	-	X	-	X (read only)																																																							
7	-	-	X	X (read only)																																																							
8	X	-	-	X /read only)																																																							

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
<p>98.03</p>	<p>DIO ExtModule1 (digital extension module 1) RDIO 1 extension module selection releases DI9, DI10, DI11, DO9 and DO10. The module can be connected in option slot 1, 2, 3 or alternatively onto the external I/O module adapter (AIMA) connected via SDCS-COM-8. The node ID 2 (see switch S1) is only required for connection via AIMA: 0 = NotUsed no RDIO 1 used, default 1 = Slot1 RDIO 1 connected in option slot 1 2 = Slot2 RDIO 1 connected in option slot 2 3 = Slot3 RDIO 1 connected in option slot 3 4 = AMIA RDIO 1 connected onto the external I/O module adapter (AIMA), node ID = 2 The drive trips with F508 I/OBoardLoss [<i>FaultWord1</i> (9.01) bit 7], if the DIO extension module is chosen, but not connected or faulty. Note1: For faster input signal detection disable the hardware filters of RDIO 1 by means of the dip switch S2. Note2: The digital outputs are available via <i>DO CtrlWord</i> (7.05). RDIO 1: Switch S1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>ADDRESS</p>  <p>S1</p> </div> <div style="text-align: center;"> <p>Switch S2</p> <p>HW Filtering:</p> <p>ENABLED</p> <p>DISABLED</p>  </div> </div> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	AIMA	NotUsed	-	E
<p>98.04</p>	<p>DIO ExtModule2 (digital extension module 2) RDIO 2 extension module selection releases DI12, DI13, DI14, DO11 and DO12. The module can be connected in option slot 1, 2, 3 or alternatively onto the external I/O module adapter (AIMA) connected via SDCS-COM-8. The node ID 3 (see switch S1) is only required for connection via AIMA: 0 = NotUsed no RDIO 2 used, default 1 = Slot1 RDIO 2 connected in option slot 1 2 = Slot2 RDIO 2 connected in option slot 2 3 = Slot3 RDIO 2 connected in option slot 3 4 = AMIA RDIO 2 connected onto the external I/O module adapter (AIMA), node ID = 3 The drive trips with F508 I/OBoardLoss [<i>FaultWord1</i> (9.01) bit 7], if the DIO extension module is chosen, but not connected or faulty. Note1: For faster input signal detection disable the hardware filters of RDIO 1 by means of the dip switch S2. Always have the hardware filter enabled when an AC signal is connected. Note2: The digital inputs are available via <i>DI StatWord</i> (8.05) The digital outputs are available via <i>DO CtrlWord</i> (7.05). RDIO 1: Switch S1</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>ADDRESS</p>  <p>S1</p> </div> <div style="text-align: center;"> <p>Switch S2</p> <p>HW Filtering:</p> <p>ENABLED</p> <p>DISABLED</p>  </div> </div> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	AIMA	NotUsed	-	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
98.05	Unused					
98.06	<p>AIO ExtModule (analog extension module) RAIO 1 extension module selection releases AI5, AI6, AO3 and AO4. The module can be connected in option slot 1, 2, 3 or alternatively onto the external I/O module adapter (AIMA) connected via SDCS-COM-8. The node ID 5 (see switch S1) is only required for connection via AIMA:</p> <ul style="list-style-type: none"> 0 = NotUsed no RAIO 1 used, default 1 = Slot1 RAIO 1 connected in option slot 1 2 = Slot2 RAIO 1 connected in option slot 2 3 = Slot3 RAIO 1 connected in option slot 3 4 = AMIA RAIO 1 connected onto the external I/O module adapter (AIMA), node ID = 5 <p>The drive trips with F508 I/OBoardLoss [<i>FaultWord1 (9.01)</i> bit 7], if the AIO extension module is chosen, but not connected or faulty. RAIO 1: Switch S1</p> <div style="text-align: center;"> <p>ADDRESS</p>  <p>S1</p> </div> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	AIMA	NotUsed	'	E
98.07	Unused					
98.08	<p>ModBusModule2 (Modbus module 2) The Modbus module (RMBA-xx) can be connected in option slot 1, 2 or 3 [see also <i>CommModule (98.02)</i>]:</p> <ul style="list-style-type: none"> 0 = NotUsed no RMBA-xx used, default 1 = Slot1 RMBA-xx connected in option slot 1 2 = Slot2 RMBA-xx connected in option slot 2 3 = Slot3 RMBA-xx connected in option slot 3 <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	Slot3	NotUsed	'	E
98.09	Unused					
98.10	Unused					
98.11	Unused					

Index	Signal / Parameter name	min.	max.	def.	unit	E/C																			
<p>98.12</p>	<p>AIO MotTempMeas (analog extension module for motor temperature measurement) RAIO 2 extension module selection releases AI7, AI8, AO5 and AO6. The analog in- and outputs are only used for motor temperature measurement [see <i>M1TempSel (31.05)</i> and <i>M2TempSel (49.33)</i>]. The module can be connected in option slot 1, 2, 3 or alternatively onto the external I/O module adapter (AIMA) connected via SDCS-COM-8. The node ID 9 (see switch S1) is only required for connection via AIMA: 0 = NotUsed no RAIO 2 used, default 1 = Slot1 RAIO 2 connected in option slot 1 2 = Slot2 RAIO 2 connected in option slot 2 3 = Slot3 RAIO 2 connected in option slot 3 4 = AMIA RAIO 2 connected onto the external I/O module adapter (AIMA), node ID = 9 The drive trips with F508 IBoardLoss [<i>FaultWord1 (9.01)</i> bit 7], if the AIO extension module is chosen, but not connected or faulty. RAIO 2: Switch S1 ADDRESS</p>  <p>S1</p> <p>Switch S2 Set the operating mode to unipolar:</p> <table border="1" data-bbox="296 1088 1032 1326"> <thead> <tr> <th colspan="2">DIP switch setting (unipolar)</th> <th rowspan="2">Input signal type</th> </tr> <tr> <th>Analogue input AI1</th> <th>Analogue input AI2</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>0(4)...20 mA 0(2)...10 V 0...2 V (Default)</td> </tr> </tbody> </table> <p>Set the number of connected PT100 per channel:</p> <table border="1" data-bbox="292 1391 1027 1834"> <thead> <tr> <th rowspan="2">Input signal type</th> <th colspan="2">DIP switch settings</th> </tr> <tr> <th>Analogue input 1</th> <th>Analogue input 2</th> </tr> </thead> <tbody> <tr> <td>2 or 3 PT100 set the voltage signal to 0 ... 10V</td> <td></td> <td></td> </tr> <tr> <td>1 PT100 set the voltage signal to 0 ... 2V</td> <td></td> <td></td> </tr> </tbody> </table> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	DIP switch setting (unipolar)		Input signal type	Analogue input AI1	Analogue input AI2			0(4)...20 mA 0(2)...10 V 0...2 V (Default)	Input signal type	DIP switch settings		Analogue input 1	Analogue input 2	2 or 3 PT100 set the voltage signal to 0 ... 10V			1 PT100 set the voltage signal to 0 ... 2V			NotUsed	AIMA	NotUsed	-	E
DIP switch setting (unipolar)		Input signal type																							
Analogue input AI1	Analogue input AI2																								
		0(4)...20 mA 0(2)...10 V 0...2 V (Default)																							
Input signal type	DIP switch settings																								
	Analogue input 1	Analogue input 2																							
2 or 3 PT100 set the voltage signal to 0 ... 10V																									
1 PT100 set the voltage signal to 0 ... 2V																									
<p>98.13</p>	<p>Unused</p>																								

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
98.14	Unused					
98.15	<p>IO BoardConfig (I/O board configuration) <i>IO BoardConfig (98.15)</i> selects the optional interface boards (SDCS-IOB-2 and / or SDCS-IOB-3) for the standard I/O of the SDCS-CON-4:</p> <p>0 = NotUsed no optional interface boards connected, default 1 = SDCS-IOB-2 only SDCS-IOB-2 connected 2 = SDCS-IOB-3 only SDCS-IOB-3 connected 3 = IOB-2+IOB-3 SDCS-IOB-2 and SDCS-IOB-3 connected</p> <p>The drive trips with F508 I/OBoardLoss [<i>FaultWord1 (9.01)</i> bit 7], if the IO board configuration is not met. Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	IOB-2+IOB-3	NotUsed	-	E
98.16	<p>SysComBoard (system communication board) The SDCS-COM-8 (optical communication board) can only be connected in option slot 3. <i>SysComBoard (98.16)</i> releases the SDCS-COM-8 board:</p> <p>0 = NotUsed SDCS-COM-8 not used or blocked, default 1 = SDCS-COM-8 SDCS-COM-8 in option slot 3 is released</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	SDCS-COM-8	NotUsed	-	E
Group 99	Start-up data					
99.01	<p>Language (language) Select language:</p> <p>0 = English default 1 = English AM 2 = Deutsch 3 = Italiano 4 = Español 5 = Português 6 = Nederlands 7 = Français 8 = Dansk 9 = Suomi 10 = Svenska 11 = Cesky 12 = Polski 13 = Po-Russki 14 = Chinese</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: N</p>	English	Chinese	English	-	C
99.02	<p>M1NomVolt (motor 1 nominal voltage) Motor 1 nominal armature voltage (DC) from the motor rating plate. Note1: The hardware of the measuring circuit has to be adapted for motor voltages lower than 50 V. Int. Scaling: 1 == 1 V Type: I Volatile: N</p>	5	2000	350	V	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
99.03	<p>M1NomCur (motor 1 nominal current) Motor 1 nominal armature current (DC) from the motor rating plate. If several motors are connected to the drive, enter the total current of all motors. Note1: In 12-pulse parallel mode, this parameter has to be set to 50% of the rated motor current (share of the rated motor current provided by one converter). Note2: In case the converter is used as a 3-phase field exciter use <i>M1NomCur</i> (99.03) to set the nominal field current. Int. Scaling: 1 == 1 A Type: I Volatile: N</p>	0	30000	0	A	C
99.04	<p>M1BaseSpeed (motor 1 base speed) Motor 1 base speed from the rating plate, usually the field weak point. <i>M1BaseSpeed</i> (99.04) is must be set in the range of: 0.2 to 1.6 times of <i>SpeedScaleAct</i> (2.29). If the scaling is out of range A124 SpeedScale [<i>AlarmWord2</i> (9.07) bit 7] is generated. Int. Scaling: 10 == 1 rpm Type: I Volatile: N</p>	10	6500	1500	rpm	C
99.05	<p>Unused</p>					
99.06	<p>ServiceMode (service mode) <i>ServiceMode</i> (99.06) contains several test modes, auto- and manual tuning procedures. The drive mode is automatically set to NormalMode after an autotuning procedure or after the thyristor diagnosis is finished or failed. In case errors occur during the selected procedure A121 AutotuneFail [<i>AlarmWord2</i> (9.07) bit 4] is generated. The reason of the error can be seen in <i>Diagnosis</i> (9.11). SetTypeCode is automatically set to NormalMode after the next power up. 0 = NormalMode normal operating mode depending on <i>OperModeSel</i> (43.01), default 1 = ArmCurAuto autotuning armature current controller 2 = FieldCurAuto autotuning field current controller 3 = EMF FluxAuto autotuning EMF controller and flux linearization 4 = SpdCtrlAuto autotuning speed controller step response 5 = SpdFbAssist test speed feedback 6 = ArmCurMan manual tuning of armature current controller 7 = FieldCurMan manual tuning of field current controller 8 = ThyDiagnosis thyristor diagnosis 9 = FldRevAssist test field reversal 10 = SetTypeCode set type code, release for: <i>TypeCode</i> (97.01) <i>S ConvScaleCur</i> (97.02) <i>S ConvScaleVolt</i> (97.03) <i>S M1FldScale</i> (45.20) <i>S M2FldScale</i> (45.21) The new values will be taken over after the next power up 11 = SpdCtrlMan manual tuning of speed controller step response 12 = EMF Man manual tuning of EMF controller Note1: The reference chain is blocked while <i>ServiceMode</i> (99.06) ≠ NormalMode. Note1: Depending on <i>MotSel</i> (8.09) the field current of motor 1 or motor 2 is tuned. Note2: A 3-phase field exciter cannot be tuned by means of its armature converter. Tune it by setting <i>ServiceMode</i> (99.06) = ArmCurAuto in the 3-phase field exciter itself. Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	NormalMode	SetTypeCode	NormalMode	-	C

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
99.07	<p>ApplRestore (application restore) Setting <i>ApplRestore (99.07)</i> = Yes starts the loading / storing of the macro (preset parameter set) selected by means of <i>ApplMacro (99.08)</i>. <i>ApplRestore (99.07)</i> is automatically set back to Done after the chosen action is finished:</p> <p>0 = Done no action or macro change completed, default 1 = Yes macro selected with <i>ApplMacro (99.08)</i> will be loaded into the drive</p> <p>Note1: Macro changes are only accepted in Off state [<i>MainStatWord (8.01)</i> bit 1 = 0].</p> <p>Note2: It takes about 2s, until the new parameter values are active.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	Done	Yes	Done	-	C
99.08	<p>ApplMacro (application macro) <i>ApplMacro (99.08)</i> selects the macro (preset parameter sets) to be loaded / stored into the RAM and FLASH. In addition to the preset macros, two user-defined macros (User1 and User2) are available.</p> <p>The operation selected by <i>ApplMacro (99.08)</i> is started immediately by setting <i>ApplRestore (99.07)</i> = Yes. <i>ApplMacro (99.08)</i> is automatically set back to NotUsed after the chosen action is finished:</p> <p>0 = NotUsed default 1 = Factory load macro factory (default parameter set) into RAM and FLASH 2 = User1Load load macro User1 into RAM and FLASH 3 = User1Save save actual parameter set form RAM into macro User1 4 = User2Load load macro User2 into RAM and FLASH 5 = User2Save save actual parameter set form RAM into macro User2 6 = Standard load macro standard into RAM and FLASH 7 = Man/Const load macro manual / constant speed into RAM and FLASH 8 = Hand/Auto load macro hand (manual) / automatic into RAM and FLASH 9 = Hand/MotPot load macro hand (manual) / motor potentiometer into RAM and FLASH 10 = reserved reserved 11 = MotPot load macro motor potentiometer into RAM and FLASH 12 = TorqCtrl load macro torque control into RAM and FLASH</p> <p>Note1: If User1 is active <i>AuxStatWord (8.02)</i> bit 3 is set. If User2 is active <i>AuxStatWord (8.02)</i> bit 4 is set.</p> <p>Note2: It is possible to change all preset parameters of a loaded macro. On a macro change or an application restore command of the actual macro the macro depending parameters are restored to the macro's default values.</p> <p>Note3: In case macro User1 or User2 is loaded by means of <i>ParChange (10.10)</i> it is not saved into the FLASH and thus not valid after the next power on.</p> <p>Note4: The DriveWindow backup function only saves the active macro. Thus both macros User1 and User2 must be backed-up separately.</p> <p>Int. Scaling: 1 == 1 Type: C Volatile: Y</p>	NotUsed	TorqCtrl	NotUsed	-	C
99.09	<p>DeviceNumber (device number) / DeviceName (device name) The user can set a drive number by means of the control panel or DriveWindow Light. With DriveWindow it is possible to fill in a string (name) with a maximum of 12 characters. This name will override the numbers and is shown as well in the control panel and in DriveWindow</p> <p>Note1: With a SDCS-CON-8 parameter (99.09) is named <i>DeviceNumber</i>, otherwise <i>DeviceName</i>.</p> <p>Int. Scaling: 1 == 1 Type: I/C Volatile: N</p>	0	65535	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
99.10	<p>NomMainsVolt (nominal mains voltage) Nominal mains voltage (AC) from the converter rating plate. The default and maximum values are preset automatically according to TypeCode (97.01) respectively S ConvScaleVolt (97.03).</p> <p>Absolute max. is 2000 V Int. Scaling: 1 == 1 V Type: I Volatile: N</p>	0	(97.01) / (97.03)	(97.01) / (97.03)	V	C
99.11	<p>M1NomFldCur (motor 1 nominal field current) Motor 1 nominal field current from the motor rating plate. Note1: In case the converter is used as a 3-phase field exciter use <i>M1NomCur</i> (99.03) to set the nominal field current. Int. Scaling: 100 == 1 A Type: I Volatile: N</p>	0.3	655	0.3	A	C
99.12	<p>M1UsedFexType (motor 1 used field exciter type) Select motor 1 used field exciter type:</p> <p>0 = NotUsed no or foreign field exciter connected 1 = OnBoard integrated 2-Q field exciter (for sizes D1 - D4 only), default 2 = FEX-425-Int internal 2-Q 25 A field exciter (for size D5 only) 3 = DCF803-0035 external 2-Q 35 A field exciter used for field currents from 0.3 A to 35 A (terminals X100.1 and X100.3) 4 = DCF803-0050 external 2-Q 50 A field exciter 5 = DCF804-0050 external 4-Q 50 A field exciter 6 = DCF803-0060 external 2-Q 60 A field exciter 7 = DCF804-0060 external 4-Q 60 A field exciter 8 = DCS800-S01 external 2-Q 3-phase field exciter 9 = DCS800-S02 external 4-Q 3-phase field exciter 10 = reserved to 19 = reserved 20 = FEX-4-Term5A external 2-Q 35 A field exciter used for field currents from 0.3 A to 5 A (terminals X100.2 and X100.3) 21 = reserved Int. Scaling: 1 == 1 Type: C Volatile: N</p>	NotUsed	reserved	OnBoard	-	C
99.13	Unused					
99.14	Unused					
99.15	<p>Pot1 (potentiometer 1) Constant test reference 1 for the manual tuning functions - see <i>AppMacro</i> (99.08) - and the square wave generator. Note1: The value is depending on the chosen destination of the square wave [e.g. <i>SqrWaveIndex</i> (99.18) = 2301 relates to <i>SpeedScaleAct</i> (2.29)]:</p> <ul style="list-style-type: none"> - 100% voltage == 10000 - 100% current == 10000 - 100% torque == 10000 - 100% speed == <i>SpeedScaleAct</i> (2.29) == 20000 <p>Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-32768	32767	0	'	E

Index	Signal / Parameter name	min.	max.	def.	unit	E/C
99.16	<p>Pot2 (potentiometer 2) Constant test reference 2 for the manual tuning functions - see <i>App/Macro (99.08)</i> - and the square wave generator. Note1: The value is depending on the chosen destination of the square wave [e.g. <i>SqrWaveIndex (99.18)</i> = 2301 relates to <i>SpeedScaleAct (2.29)</i>]:</p> <ul style="list-style-type: none"> - 100% voltage == 10000 - 100% current == 10000 - 100% torque == 10000 - 100% speed == <i>SpeedScaleAct (2.29)</i> == 20000 <p>Int. Scaling: 1 == 1 Type: SI Volatile: N</p>	-32768	32767	0	-	E
99.17	<p>SqrWavePeriod (square wave period) The time period of the square wave generator. Int. Scaling: 100 == 1 s Type: I Volatile: N</p>	0.01	655	10	s	E
99.18	<p>SqrWaveIndex (square wave index) Index pointer to the source (signal/parameter) of the square wave signal [e.g. 2301 equals <i>SpeedRef (23.01)</i>]. Note1: After a power-up <i>SqrWaveIndex (99.18)</i> is set back to 0 and thus disables the square wave function. Int. Scaling: 1 == 1 Type: I Volatile: Y</p>	0	9999	0	-	E

Overview of the control panel (DCS800PAN)

Overview

Panel operation

Panel wizard

(with structure diagram)

Fault tracing

Converter protection

Motor protection

Status messages

Display of status, fault and alarm signals

Categories of signals and display options

The thyristor power converters series DCS800 generate general messages, power-up errors, fault and alarm signals:

	general messages
	power-up errors
F	fault signals
A	alarm signals

The messages are indicated on the seven-segment display (H2500) of the SDCS-CON-4 control board. On the seven-segment display the messages appear in code. The letters and numbers of multi-character codes are displayed one after the other for 0.7 seconds at a time. Plain text messages are available on the control panels and in the fault logger of DriveWindow and DriveWindow Light.



F514 = mains not in synchronism

For evaluation via digital outputs or communication to the overriding control 16 bit words are available, containing all fault and alarm signals as binary code:

- *FaultWord1 (9.01),*
- *FaultWord2 (9.02),*
- *FaultWord3 (9.03),*
- *FaultWord4 (9.04),*
- *UserFaultWord (9.05),*
- *AlarmWord1 (9.06),*
- *AlarmWord2 (9.07),*
- *AlarmWord3 (9.08) and*
- *UserAlarmWord (9.09)*

General messages

SDCS-CON-4 General messages will only be indicated on the seven-segment display of the SDCS-CON-4.

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition	Remark
8	not available	firmware is not running	1
.	not available	firmware is running, no faults, no alarms	-
-	not available	indication while loading firmware into SDCS-CON-4	-
d	not available	indication while loading panel texts into SDCS-CON-4	-

Power-up errors (E)

SDCS-CON-4 Power-up errors will only be indicated on the seven segment display of the SDCS-CON-4. With a power-up error active it is not possible to start the drive.

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition	Remark
E2	not available	SDCS-CON-4 ROM memory test error	1
E3	not available	SDCS-CON-4 RAM memory test error	1
E4	not available	SDCS-CON-4 RAM memory test error	1
E5	not available	SDCS-CON-4 hardware is not compatible, unknown board	1
E6	not available	SDCS-CON-4 watchdog timeout occurred	1

1. Units should be de-energized and energized. If the fault occurs again check the SDCS-CON-4, SDCS-PIN-4 respectively SDCS-POW-4 boards and change them if necessary.

Fault signals (F)

To avoid dangerous situations, damage of the motor, the drive or any other material some physical values must not exceed certain limits. Therefore limit values can be specified for these values by parameter setting which cause an alarm or a fault when the value exceeds the limits (e.g. max. armature voltage, max. converter temperature). Faults can also be caused by situations which inhibit the drive from normal operation (e.g. blown fuse).

A fault is a condition which requires an immediate stop of the drive in order to avoid danger or damage. The drive is stopped automatically and cannot be restarted before removing its cause.

All fault signals, with the exception of:

- F501 AuxUnderVolt,
- F525 TypeCode,
- F547 HwFailure and
- F548 FwFailure

are resettable in case the fault is eliminated.

To reset a fault following steps are required:

- remove the **Run** and **On** commands [*UsedMCW (7.04)* bit 3 and 0]
- eliminate the faults
- acknowledge the fault with **Reset** [*UsedMCW (7.04)* bit 7] via digital input, overriding control system or in **Local** mode with control panel, DriveWindow or DriveWindow Light
- depending on the systems condition, generate **Run** and **On** commands [*UsedMCW (7.04)* bit 3 and 0] again

The fault signals will switch the drive off completely or partly depending on its trip level.

Trip level 1:

- main contactor is switched off immediately
- field contactor is switched off immediately
- fan contactor is switched off immediately

Trip level 2:

- main contactor is switched off immediately
- field contactor is switched off immediately
- fan contactor stays on as long as the fault is pending or as long as *FanDly (21.14)* is running

Trip level 3:

The drive is stopping via *SpeedFbFltMode (30.36)*, thus the

- main contactor is switched off immediately
- field contactor is switched off immediately in case of *SpeedFbFltMode (30.36)* = **CoastStop**, but it stays on in case of field heating or *SpeedFbFltMode (30.36)* = **DynBraking**
- fan contactor stays on

At standstill the

- main contactor cannot be switched on again
- field contactor stays on in case of field heating
- fan contactor stays on as long as *FanDly (21.14)* is running

Trip level 4:

As long as the drive is stopping via *FaultStopMode (30.30)*, the

- main contactor is switched off immediately in case of *FaultStopMode (30.30)* = **CoastStop** or **DynBraking**, but it stays

on in case of *FaultStopMode (30.30)* = **RampStop** or **TorqueLimit**

- field contactor is switched off immediately in case of *FaultStopMode (30.30)* = **CoastStop**, but it stays on in case of field heating or *FaultStopMode (30.30)* = **RampStop**, **TorqueLimit** or **DynBraking**
- fan contactor stays is switched off immediately in case of *FaultStopMode (30.30)* = **CoastStop**, but stays on in case of *FaultStopMode (30.30)* = **RampStop**, **TorqueLimit** or **DynBraking**

At standstill the

- main contactor is switched off immediately
- field contactor stays on in case of field heating
- fan contactor stays on as long as *FanDly (21.14)* is running

Trip level 5

As long as the drive is stopping via any communication loss control [*LocalLossCtrl (30.27)*, *ComLossCtrl (30.28)*, *Ch0ComLossCtrl (70.05)* or *Ch2ComLossCtrl (70.15)*], the

- main contactor is switched off immediately or stays on depending on the selected communication loss control
- field contactor is switched off immediately or stays on depending on the selected communication loss control, but it stays on in case of field heating
- fan contactor is switched off immediately or stays on depending on the selected communication loss control

At standstill

- main contactor is switched off immediately
- field contactor stays on in case of field heating
- fan contactor stays on as long as *FanDly (21.14)* is running

In case a fault occurs, it stays active until the cause is eliminated and a **Reset** [*UsedMCW (7.04)* bit 7] is given

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F501	501 AuxUnderVolt	Auxiliary undervoltage: The auxiliary voltage (115VAC or 230 VAC) is too low (threshold see hardware manual) while the drive is in operation. If resetting fails, check: <ul style="list-style-type: none"> – internal auxiliary voltages (SDCS-CON-4), – and change SDCS-CON-4 and / or SDCS-PIN-4 respectively SDCS-POW-4 board 	9.01, bit 0	RdyRun = 1	1
F502	502 ArmOverCur	Armature overcurrent: Check: <ul style="list-style-type: none"> – <i>ArmOvrCurLev (30.09)</i> , – parameter settings of group 43 (current control: armature current controller tuning), – current and torque limitation in group 20, – all connections in the armature circuit, – for faulty thyristors, – armature cabling, – in case of a rebuild kit proper connection of firing pulses and CT's 	9.01, bit 1	always	3
F503	503 ArmOverVolt	Armature overvoltage (DC): Check: <ul style="list-style-type: none"> – if setting of <i>ArmOvrVoltLev (30.09)</i> is suitable for the system, – parameter settings of group 44 (field excitation: field current controller tuning, EMF controller tuning, flux linearization), – too high field current (e.g. problems with field weakening), – if the motor was accelerated by the load, – overspeed, – does the speed scaling fit, see <i>SpeedScaleAct (2.29)</i> , – proper armature voltage feedback, – connector X12 and X13 on SDCS-CON-4, – connector X12 and X13 on SDCS-PIN-4/51, – cutting of resistors for voltage coding on SDCS-PIN-51 	9.01, bit 2	always	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Trip level
F504	504 ConvOverTemp	<p>Converter overtemperature: Wait until the converter is cooled down. Shutdown temperature see <i>MaxBridgeTemp (4.17)</i> . Check:</p> <ul style="list-style-type: none"> – converter door open, – converter fan supply voltage, – converter fan direction of rotation, – converter fan components, – converter cooling air inlet (filter), – ambient temperature, – inadmissible load cycle, – connector X12 on SDCS-CON-4, – connector X12 and X22 on SDCS-PIN-4/51 	9.01, bit 3	always	2
F505	505 ResCurDetect	<p>Residual current detection (sum of I_{L1}, I_{L2}, $I_{L3} \neq$ zero): Check:</p> <ul style="list-style-type: none"> – <i>ResCurDetectSel (30.05)</i> , <i>ResCurDetectLim (30.06)</i> , <i>ResCurDetectDel (30.07)</i> , – sum current transformer, if necessary change transformer or SDCS-IOB-3, – disconnect the mains, verify zero voltage in armature and field circuits and make insulation tests for the complete installation 	9.01, bit 4	always	1
F506	506 M1OverTemp	<p>Motor 1 measured overtemperature: Wait until the motor is cooled down. The motor fan will continue to work until the motor is cooled down to alarm limit. Check:</p> <ul style="list-style-type: none"> – <i>M1FaultLimTemp (31.07)</i> , <i>M1KlixonSel (31.08)</i> – motor temperature, – motor fan supply voltage, – motor fan direction of rotation, – motor fan components, – motor cooling air inlet (filter), – motor temperature sensors and cabling, – ambient temperature, – inadmissible load cycle, – inputs for temperature sensors on SDCS-CON-4 and SDCS-IOB-3 	9.01, bit 5	always	2
F507	507 M1OverLoad	<p>Motor 1 calculated overload: Wait until the motor is cooled down. The motor fan will continue to work until the motor is calculated down to alarm limit. Check:</p> <ul style="list-style-type: none"> – <i>M1FaultLimLoad (31.04)</i> 	9.01, bit 6	always	2

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Trip level
F508	508 I/OBoardLoss	I/O board not found or faulty: Check: <ul style="list-style-type: none"> – <i>DIO ExtModule1 (98.03)</i> , <i>DIO ExtModule2 (98.04)</i> , <i>AIO ExtModule (98.06)</i> , <i>AIO MotTempMeas (98.12)</i> , <i>IO BoardConfig (98.15)</i> , – flat cable connections between SDCS-CON-4 and SDCS-IOB-2/3 	9.01, bit 7	always	1
F509	509 M2OverTemp	Motor 2 measured overtemperature: Wait until the motor is cooled down. The motor fan will continue to work until the motor is cooled down to alarm limit. Check: <ul style="list-style-type: none"> – <i>M2FaultLimTemp (49.37)</i> , <i>M2KlixonSel (49.38)</i> – motor temperature (let motor cool down and restart), – motor fan supply voltage, – motor fan direction of rotation, – motor fan components, – motor cooling air inlet (filter), – motor temperature sensors and cabling, – ambient temperature, – inadmissible load cycle, – inputs for temperature sensors on SDCS-CON-4 and SDCS-IOB-3 	9.01, bit 8	always	2
F510	510 M2OverLoad	Motor 2 calculated overload: Wait until the motor is cooled down. The motor fan will continue to work until the motor is cooled down to alarm limit. Check: <ul style="list-style-type: none"> – <i>M2FaultLimLoad (49.34)</i> 	9.01, bit 9	always	2
F511	511 ConvFanCur	Converter fan current: only with <i>ConvTempDly (97.05) ≠ 0</i> and a PW-10002/3 board connected to SDCS-PIN-4/51. Check: <ul style="list-style-type: none"> – converter fan supply voltage, – converter fan direction of rotation, – converter fan components, – converter cooling air inlet, – connector X12 on SDCS-CON-4, – connector X12 and X22 on SDCS-PIN-4/51 	9.01, bit 10	RdyRun = 1	4

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F512	512 MainsLowVolt	<p>Mains low (under-) voltage (AC): Check:</p> <ul style="list-style-type: none"> – <i>PwrLossTrip (30.21)</i> , <i>UNetMin1 (30.22)</i> , <i>UNetMin2 (30.23)</i> , – If all 3 phases are present, – if the mains voltage is within the set tolerance, – if the main contactor closes and opens, – if the mains voltage scaling is correct [<i>NomMainsVolt (99.10)</i>], – connector X12 and X13 on SDCS-CON-4, – connector X12 and X13 on SDCS-PIN-4/51, – cutting of resistors for voltage coding on SDCS-PIN-51 	9.01, bit 11	RdyRun = 1	3
F513	513 MainsOvrVolt	<p>Mains overvoltage (AC): Actual mains voltage is $> 1.3 * \text{NomMainsVolt (99.10)}$ and RdyRun = 1. Check:</p> <ul style="list-style-type: none"> – if the mains voltage is within the set tolerance, – if the mains voltage scaling is correct [<i>NomMainsVolt (99.10)</i>], – connector X12 and X13 on SDCS-CON-4, – connector X12 and X13 on SDCS-PIN-4/51, – cutting of resistors for voltage coding on SDCS-PIN-51 	9.01, bit 12	RdyRun = 1	1
F514	514 MainsNotSync	<p>Mains not in synchronism (AC): The synchronization with the mains frequency has been lost. Check:</p> <ul style="list-style-type: none"> – <i>DevLimPLL (97.13)</i> , – mains supply, – fuses etc, – mains frequency (50Hz \pm5Hz; 60Hz \pm5Hz) and stability (df/dt = 17%/s) [<i>PLLOut (3.20)</i>] 	9.01, bit 13	RdyRun = 1	3
F515	515 M1FexOverCur	<p>Motor 1 field exciter overcurrent: Check:</p> <ul style="list-style-type: none"> – <i>M1FldOvrCurLev (30.13)</i> , – parameter settings of group 44 (field excitation: field current controller tuning), – connections of field exciter, – insulation of cables and field winding, – resistance of field winding 	9.01, bit 14	RdyRun = 1	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F516	516 M1FexCom	Motor 1 field exciter communication loss: Check: <ul style="list-style-type: none"> – <i>FexTimeOut (94.07)</i> , – flat cable connections between SDCS-CON-4 and SDCS-PIN-4, – auxiliary voltage for integrated and external field exciter, – DCSLink cable connections, – DCSLink termination, – DCSLink node ID settings [<i>DCSLinkNodeID (94.01)</i> , <i>M1FexNode (94.08)</i>] 	9.01, bit 15	RdyRun = 1	1
F517	517 ArmCurRipple	Armature current ripple: One or several thyristors may carry no current. Check: <ul style="list-style-type: none"> – <i>CurRippleSel (30.18)</i> , <i>CurRippleLim (30.19)</i> , – for too high gain of current controller [<i>M1KpArmCur (43.06)</i>] , – current feedback with oscilloscope (6 pulses within one cycle visible?), – branch fuses, – thyristor gate-cathode resistance, – thyristor gate connection, – current transformers (T51, T52) 	9.02, bit 0	RdyRef = 1	3
F518	518 M2FexOverCur	Motor 2 field exciter overcurrent: Check: <ul style="list-style-type: none"> – <i>M2FldOvrCurLev (49.09)</i> , – parameter settings of group 44 (field excitation: field current controller tuning), – connections of field exciter, – insulation of cables and field winding, – resistance of field winding 	9.02, bit 1	RdyRun = 1	1
F519	519 M2FexCom	Motor 2 field exciter communication loss: Check: <ul style="list-style-type: none"> – <i>FexTimeOut (94.07)</i> , – flat cable connections between SDCS-CON-4 and SDCS-PIN-4, – auxiliary voltage for integrated and external field exciter, – DCSLink cable connections, – DCSLink termination, – DCSLink node ID settings [<i>DCSLinkNodeID (94.01)</i> , <i>M2FexNode (94.09)</i>] 	9.02, bit 2	RdyRun = 1	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F521	521 FieldAck	Selected motor, field acknowledge missing: Check: <ul style="list-style-type: none"> - <i>M1UsedFexType (99.12)</i> , if selection matches the field exciter type, <i>Mot1FexStatus (6.12)</i> , <i>Mot2FexStatus (6.13)</i> - fault message of or at field exciter 	9.02, bit 4	RdyRun = 1	1
F522	522 SpeedFb	Selected motor, speed feedback: The comparison of the speed feedback from pulse encoder or analog tacho has failed. Check: <ul style="list-style-type: none"> - <i>M1SpeedFbSel (50.03)</i> , <i>SpeedFbFitMode (30.36)</i> , <i>SpeedFbFltSel (30.17)</i> , - pulse encoder: encoder itself, alignment, cabling, coupling, power supply (feedback might be too low), mechanical disturbances, - analog tacho: tacho itself, tacho polarity and voltage, alignment, cabling, coupling, mechanical disturbances, jumper S1 on SDCS-CON-4, - EMF: connection converter - armature circuit closed, - SDCS-CON-4, SDCS-IOB-3, SDCS-POW-4 	9.02, bit 5	always	3
F523	523 ExtFanAck	External fan acknowledge missing: Check: <ul style="list-style-type: none"> - <i>MotFanAck (10.06)</i> , - external fan contactor, - external fan circuit, - external fan supply voltage, - used digital inputs and outputs (group 14) 	9.02, bit 6	RdyRun = 1	4
F524	524 MainContAck	Main contactor acknowledge missing: Check: <ul style="list-style-type: none"> - <i>MainContAck (10.21)</i> , - switch on - off sequence, - auxiliary contactor (relay) switching the main contactor after on or off command, - safety relays, - used digital inputs and outputs (group 14) 	9.02, bit 7	RdyRun = 1	3
F525	525 TypeCode	Type code mismatch: Check: <ul style="list-style-type: none"> - <i>TypeCode (97.01)</i> setting 	9.02, bit 8	always	1
F526	526 ExternalDI	External fault via binary input: There is no problem with the drive itself! Check: <ul style="list-style-type: none"> - <i>ExtFaultSel (30.31)</i> , fault = 0, <i>ExtFaultOnSel (30.33)</i> 	9.02, bit 9	Always or RdyRun = 1	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Trip level
F527	527 ConvFanAck	<p>Converter fan acknowledge missing: Check:</p> <ul style="list-style-type: none"> – <i>ConvFanAck (10.20)</i> , – converter fan contactor, – converter fan circuit, – converter fan klixon, – converter fan supply voltage, – used digital inputs and outputs (group 14) 	9.02, bit 10	RdyRun = 1	4
F528	528 FieldBusCom	<p>Fieldbus communication loss: F528 FieldBusCom is only activated after the first dataset from the overriding control is received by the drive. Before the first dataset is received only A128 FieldBusCom is active. The reason is to suppress unnecessary faults (the starts up of the overriding control is usually slower than the one of the drive). Check:</p> <ul style="list-style-type: none"> – <i>ComLossCtrl (30.28)</i> , <i>FB TimeOut (30.35)</i> , <i>CommModule (98.02)</i> , – parameter settings of group 51 (fieldbus), – fieldbus cable, – fieldbus termination, – fieldbus module 	9.02, bit 11	always if <i>FB TimeOut (30.35) ≠ 0</i>	5
F529	529 M1FexNotOK	<p>Motor 1 field exciter not okay: A fault was found during self-diagnosis of field exciter or power failure in field exciter 1. Check:</p> <ul style="list-style-type: none"> – field exciter operation and change the field exciter, if necessary 	9.02, bit 12	always	1
F530	530 M2FexNotOK	<p>Motor 2 field exciter not okay: A fault was found during self-diagnosis of field exciter or power failure in field exciter 2. Check:</p> <ul style="list-style-type: none"> – field exciter operation and change the field exciter, if necessary 	9.02, bit 13	always	1
F531	531 MotorStalled	<p>Selected motor, motor stalled: The motor torque exceeded <i>StallTorq (30.03)</i> for a time longer than <i>StallTime (30.01)</i> while the speed feedback was below <i>StallSpeed (30.02)</i> . Check:</p> <ul style="list-style-type: none"> – motor stalled (mechanical couplings of the motor), – proper conditions of load, – correct field current, – parameter settings of group 20 (limits: current and torque limits) 	9.02, bit 14	RdyRef = 1	3

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Trip level
F532	532 MotOverSpeed	<p>Selected motor, motor overspeed:</p> <p>Check:</p> <ul style="list-style-type: none"> – <i>M1OvrSpeed (30.16)</i> , – parameter settings of group 24 (speed control: speed controller), – scaling of speed controller loop [<i>SpeedScaleAct (2.29)</i>], – drive speed [<i>MotSpeed (1.04)</i>] vs. measured motor speed (hand held tacho), – field current, – speed feedback (encoder, tacho), – connection of speed feedback, – if the motor was accelerated by the load, – in case of EMF control if the DC-voltage measurement (C1, D1) might be swapped 	9.02, bit 15	always	3
F533	533 ReversalTime	<p>Reversal time:</p> <p>Zero current signal not reached within <i>ZeroCurTimeOut (97.19)</i> ,</p> <p>Check:</p> <ul style="list-style-type: none"> – for high inductive motor, – too high motor voltage compared to mains voltage 	9.03, bit 0	RdyRef = 1	3
F534	534 12PCurDiff	<p>12-pulse current difference (only for 12-pulse parallel operation):</p> <p>Check:</p> <ul style="list-style-type: none"> – <i>DiffCurLim (47.02)</i> , <i>DiffCurDly (47.03)</i> , – parameter settings of group 43 (current control: armature current controller), 	9.03, bit 1	always	3
F535	535 12PCom	<p>12-pulse communication:</p> <p>Check:</p> <ul style="list-style-type: none"> – <i>12P TimeOut (94.03)</i> , – DCSLink cable connections, – DCSLink termination, – DCSLink node ID settings [<i>DCSLinkNodeID (94.01)</i> , <i>12P SlaNode (94.04)</i>] 	9.03, bit 2	RdyOn = 1	3
F536	536 12PSlaveFail	<p>12-pulse slave failure:</p> <p>12-pulse master is tripped by a fault of the 12-pulse slave.</p> <p>Check:</p> <ul style="list-style-type: none"> – Fault logger of 12-pulse slave 	9.03, bit 3	RdyOn = 1	4
F537	537 M1FexRdyLost	<p>Motor 1 field exciter ready lost:</p> <p>Field exciter lost ready-for-operation message while working.</p> <p>AC-voltage missing or not in synchronism.</p> <p>Check:</p> <ul style="list-style-type: none"> – if all phases are present, – if the mains voltage is within the set tolerance 	9.03, bit 4	RdyRun = 1	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F538	538 M2FexRdyLost	Motor 2 field exciter ready lost: Field exciter lost ready-for-operation message while working. AC-voltage missing or not in synchronism. Check: – if all phases are present, – if the mains voltage is within the set tolerance	9.03, bit 5	RdyRun = 1	1
F539	539 FastCurRise	Fast current rise: Actual current di/dt too fast. Check: – <i>ArmCurRiseMax (30.10)</i>	9.03, bit 6	RdyRef = 1 and generating	1
F540	540 COM8Faulty	SDCS-COM-8 faulty or not found: Check: – <i>SysComBoard (98.16)</i> , – and change SDCS-COM-8 and / or SDCS-CON-4	9.03, bit 7	RdyOn = 1	1
F541	541 M1FexLowCur	Motor 1 field exciter low (under-) current: Check: – <i>M1FldMinTrip (30.12)</i> , <i>FldMinTripDly (45.18)</i> , – parameter settings of group 44 (field excitation: field current controller tuning, EMF controller tuning, flux linearization), – motor name plate for minimum current at maximum field weakening (maximum speed), – field circuit fuses, – if the field current oscillates, – if the motor has a high armature reaction	9.03, bit 8	always	1
F542	542 M2FexLowCur	Motor 2 field exciter low (under-) current: Check: – <i>M2FldMinTrip (49.08)</i> , <i>FldMinTripDly (45.18)</i> , – parameter settings of group 44 (field excitation: field current controller tuning, EMF controller tuning, flux linearization), – motor name plate for minimum current at maximum field weakening (maximum speed), – field circuit fuses, – if the field current oscillates, – if the motor has a high armature reaction	9.03, bit 9	always	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F543	543 COM8Com	SDCS-COM-8 communication (overriding control and master-follower): Check: <ul style="list-style-type: none"> – Ch0ComLossCtrl (70.05) , Ch0TimeOut (70.04) , Ch2ComLossCtrl (70.15) , Ch2TimeOut (70.14) , – fiber optic cables to overriding control (channel 0), – overriding control adapters, – fiber optic cables between master and followers (channel 2) 	9.03, bit 10	RdyOn = 1	5
F544	544 P2PandMFCCom	Peer to peer and master-follower communication loss: Check: <ul style="list-style-type: none"> – ComLossCtrl (30.28) , MailBoxCycle1 (94.13) , MailBoxCycle2 (94.19) , MailBoxCycle3 (94.25) , MailBoxCycle4 (94.31) , – DCSLink cable connections, – DCSLink termination, – DCSLink node ID settings [DCSLinkNodeID (94.01)] 	9.03, bit 11	always	5
F545	545 ApplLoadFail	Application load failure: Check: <ul style="list-style-type: none"> – Diagnosis (9.11) , 	9.03, bit 12	always	1
F546	546 LocalCmdLoss	Local command loss: Connection fault with control panel, DriveWindow or DriveWindow Light. Check: <ul style="list-style-type: none"> – LocalLossCtrl (30.27) , – if control panel is disconnected, – connection adapter, – cables 	9.03, bit 13	local	5
F547	547 HwFailure	Hardware failure: For more details check <i>Diagnosis (9.11)</i> .	9.03, bit 14	always	1
F548	548 FwFailure	Firmware failure: For more details check <i>Diagnosis (9.11)</i> .	9.03, bit 15	always	1
F549	549 ParComp	Parameter compatibility: When setting the parameters to default or on power-up the firmware attempts to write the parameters. If the setting is not possible or not compatible the parameter is set to default. The parameters causing the fault can be identified in <i>Diagnosis (9.11)</i> . Check: <ul style="list-style-type: none"> – parameter setting 	9.04, bit 0	always	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Triplevel
F550	550 ParMemRead	Parameter memory read: Reading the actual parameter set or a user parameter set from either parameter flash or Memory Card failed (checksum fault) Check: – Memory Card and – SDCS-CON-4	9.04, bit 1	always	1
F551	551 AIRange	Analog input range: Undershoot of one of the analog input values under 4mA / 2V. Check: – <i>AI Mon4mA (30.29)</i> , – used analog inputs connections and cables, – polarity of connection	9.04, bit 2	always	4
F552	552 MechBrake	Selected motor, mechanical brake: Acknowledge brake applied (closed) is missing or torque actual does not reach <i>StrtTorqRef (42.08)</i> ,during torque proving. Check: – <i>BrakeFaultFunc (42.06)</i> , <i>StrtTorqRefSel (42.07)</i> , – brake, – brake cabling, – used digital inputs and outputs (group 14)	9.04, bit 3	always	3
F553	553 TachPolarity	Selected motor, tacho polarity: Polarity of analog tacho signal incorrect. Check: – polarity of tacho cable, – polarity of armature and field cables, – direction of motor rotation	9.04, bit 4	always	3
F554	554 TachoRange	Selected motor, tacho range: Overflow of AI Tacho input Check: – for proper tacho connection at terminals X3.1 to X3.4	9.04, bit 5	always	3
F601	601 APFault1	User defined fault by adaptive program	9.04, bit 11	always	1
F602	602 APFault2	User defined fault by adaptive program	9.04, bit 12	always	1
F603	603 APFault3	User defined fault by adaptive program	9.04, bit 13	always	1
F604	604 APFault4	User defined fault by adaptive program	9.04, bit 14	always	1
F605	605 APFault5	User defined fault by adaptive program	9.04, bit 15	always	1
F610	610 UserFault1	User defined fault by application program	9.05, bit 0	always	1

Fault tracing

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Fault-word	Fault is active when	Trip level
F611	611 UserFault2	User defined fault by application program	9.05, bit 1	always	1
F612	612 UserFault3	User defined fault by application program	9.05, bit 2	always	1
F613	613 UserFault4	User defined fault by application program	9.05, bit 3	always	1
F614	614 UserFault5	User defined fault by application program	9.05, bit 4	always	1
F615	615 UserFault6	User defined fault by application program	9.05, bit 5	always	1
F616	616 UserFault7	User defined fault by application program	9.05, bit 6	always	1
F617	617 UserFault8	User defined fault by application program	9.05, bit 7	always	1
F618	618 UserFault9	User defined fault by application program	9.05, bit 8	always	1
F619	619 UserFault10	User defined fault by application program	9.05, bit 9	always	1
F620	620 UserFault11	User defined fault by application program	9.05, bit 10	always	1
F621	621 UserFault12	User defined fault by application program	9.05, bit 11	always	1
F622	622 UserFault13	User defined fault by application program	9.05, bit 12	always	1
F623	623 UserFault14	User defined fault by application program	9.05, bit 13	always	1
F624	624 UserFault15	User defined fault by application program	9.05, bit 14	always	1
F625	625 UserFault16	User defined fault by application program	9.05, bit 15	always	1

Alarm signals (A)

An alarm is a message, that a condition occurred, which may lead to a dangerous situation. It is displayed and written into the fault logger. However, the cause for the alarm can inhibit the drive from continuing with normal operation. If the cause of the alarm disappears the alarm will be automatically reset.

The alarm handling must provides 4 alarm levels.

Alarm level 1:

- the main contactor cannot be switched on again, after the drive stopped (no re-start possible)

Alarm level 2:

- fan contactor stays on as long as the alarm is pending
- if the alarm disappears *FanDly (21.14)* will start

Alarm level 3:

- **AutoReclosing** (auto re-start) is [*AuxStatWord (8.02)* bit 15] active
- **RdyRun** [*MainStatWord (8.01)* bit 1] is disabled, but the drive is automatically restarted when the alarm condition vanishes
- α is set to 150°
- single firing pulses

Alarm level 4:

- drive keeps on running and the alarm is indicated

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A101	101 Off2ViaDI	Off2 (Emergency Off / Coast stop) pending via digital input - start inhibition: There is no problem with the drive itself! Check: – <i>Off2 (10.08)</i> , if necessary invert the signal (group 10)	9.06, bit 0	RdyRun = 1	1
A102	102 Off3ViaDI	Off3 (E-stop) pending via digital input: There is no problem with the drive itself! Check: – <i>E Stop (10.09)</i> , if necessary invert the signal (group 10)	9.06, bit 1	RdyRun = 1	1
A103	103 DCBreakAck	Selected motor, DC-Breaker acknowledge missing: α is set to 150°; single firing pulses Check: – <i>DCBreakAck (10.23)</i> , if necessary invert the signal (group 10)	9.06, bit 2	RdyRef = 1	3
A104	104 ConvOverTemp	Converter overtemperature: Wait until the converter is cooled down. Shutdown temperature see <i>MaxBridgeTemp (4.17)</i> . The converter overtemperature alarm will already appear at approximately 5°C below the shutdown temperature. Check: – <i>ConvFanAck (10.20)</i> , – converter door open, – converter fan supply voltage, – converter fan direction of rotation, – converter fan components, – converter cooling air inlet (filter), – ambient temperature, – inadmissible load cycle, – connector X12 on SDCS-CON-4, – connector X12 and X22 on SDCS-PIN-4/51	9.06, bit 3	always	2
A105	105 DynBrakeAck	Selected motor, dynamic braking is still pending: This alarm prevents the drive to be switched on while dynamic braking is active. Check: – <i>DynBrakeAck (10.22)</i>	9.06, bit 4	RdyRun = 1	1

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A106	106 M1OverTemp	Motor 1 measured overtemperature: Check: <ul style="list-style-type: none"> – <i>M1AlarmLimTemp (31.06)</i> , – motor temperature, – motor fan supply voltage, – motor fan direction of rotation, – motor fan components, – motor cooling air inlet (filter), – motor temperature sensors and cabling, – ambient temperature, – inadmissible load cycle, – inputs for temperature sensors on SDCS-CON-4 and SDCS-IOB-3 	9.06, bit 5	always	2
A107	107 M1OverLoad	Motor 1 calculated overload: Check: <ul style="list-style-type: none"> – <i>M1AlarmLimLoad (31.04)</i> 	9.06, bit 6	always	2
A109	109 M2OverTemp	Motor 2 measured overtemperature: Check: <ul style="list-style-type: none"> – <i>M2AlarmLimTemp (49.36)</i> , – motor temperature, – motor fan supply voltage, – motor fan direction of rotation, – motor fan components, – motor cooling air inlet (filter), – motor temperature sensors and cabling, – ambient temperature, – inadmissible load cycle, – inputs for temperature sensors on SDCS-CON-4 and SDCS-IOB-3 	9.06, bit 8	always	2
A110	110 M2OverLoad	Motor 2 calculated overload: Check: <ul style="list-style-type: none"> – <i>M2AlarmLimLoad (49.33)</i> 	9.06, bit 9	always	2

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A111	111 MainsLowVolt	<p>Mains low (under-) voltage (AC): α is set to 150°; single firing pulses Check: <ul style="list-style-type: none"> – <i>PwrLossTrip (30.21)</i> , <i>UNetMin1 (30.22)</i> , <i>UNetMin2 (30.23)</i> , – If all 3 phases are present, – if the mains voltage is within the set tolerance, – if the main contactor closes and opens, – if the mains voltage scaling is correct [<i>NomMainsVolt (99.10)</i>], – connector X12 and X13 on SDCS-CON-4, – connector X12 and X13 on SDCS-PIN-4/51, – cutting of resistors for voltage coding on SDCS-PIN-51 </p>	9.06, bit 10	RdyRun = 1	3
A112	112 P2PandMFCom	<p>Peer to peer and master-follower communication loss: Check: <ul style="list-style-type: none"> – <i>ComLossCtrl (30.28)</i> , <i>MailBoxCycle1 (94.13)</i> , <i>MailBoxCycle2 (94.19)</i> , <i>MailBoxCycle3 (94.25)</i> , <i>MailBoxCycle4 (94.31)</i> , – DCSLink cable connections, – DCSLink termination, – DCSLink node ID settings [<i>DCSLinkNodeID (94.01)</i>] </p>	9.06, bit 11	always	4
A113	113 COM8Com	<p>SDCS-COM-8 communication (overriding control and master-follower): Check: <ul style="list-style-type: none"> – <i>Ch0ComLossCtrl (70.05)</i> , <i>Ch0TimeOut (70.04)</i> , <i>Ch2ComLossCtrl (70.15)</i> , <i>Ch2TimeOut (70.14)</i> , – fiber optic cables to overriding control (channel 0), – overriding control adapters, – fiber optic cables between master and followers (channel 2) </p>	9.06, bit 12	always	4
A114	114 ArmCurDev	<p>Armature Current Deviation: Is shown, if the current reference [<i>CurRefUsed (3.12)</i>] differs from current actual [<i>MotCur (1.06)</i>] for longer than 5 sec by more than 20% of nominal motor current. α is set to 150°; single firing pulses Check: <ul style="list-style-type: none"> – ratio between mains supply voltage and EMF, – <i>ArmAlphaMin (20.15)</i> is set too high </p>	9.06, bit 13	RdyRef = 1	3

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A115	115 TachoRange	Selected motor, tacho range: Overflow of AI Tacho input Check: – for proper tacho connection at terminals X3.1 to X3.4	9.06, bit 14	always	4
A117	117 ArmCurRipple	Armature current ripple: One or several thyristors may carry no current. Check: – <i>CurRippleSel (30.18)</i> , <i>CurRippleLim (30.19)</i> , – for too high gain of current controller [<i>M1KpArmCur (43.06)</i>] , – current feedback with oscilloscope (6 pulses within one cycle visible?), – branch fuses, – thyristor gate-cathode resistance, – thyristor gate connection, – current transformers (T51, T52)	9.07, bit 0	RdyRef = 1	4
A118	118 FoundNewAppl	Found new application on Memory Card: Activate application on Memory Card by means of <i>ParSave (16.06)</i> = EableAppl	9.07, bit 1	directly after energizing of auxiliary supply	1
A119	118 ApplDiff	Application on drive and Memory Card are different: Activate application on Memory Card by means of <i>ParSave (16.06)</i> = EableAppl	9.07, bit 2	directly after energizing of auxiliary supply	1
A120	120 OverVoltProt	Overvoltage protection active: Overvoltage protection DCF806 is active and converter is blocked. α is set to 150°; single firing pulses Check: – <i>OvrVoltProt (10.13)</i> if necessary invert the signal (group 10) – field converter cables and connections	9.07, bit 3	always	3
A121	121 AutotuneFail	Autotuning failed: For more details check <i>Diagnosis (9.11)</i>	9.07, bit 4	always	4
A122	122 MechBrake	Selected motor, mechanical brake: Acknowledge brake applied (closed) is missing or torque actual does not reach <i>StrtTorqRef (42.08)</i> , during torque proving. Check: – <i>BrakeFaultFunc (42.06)</i> , <i>StrtTorqRefSel (42.07)</i> , – brake, – brake cabling, – used digital inputs and outputs (group 14)	9.07, bit 5	always	4

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A123	123 FaultSuppres	Fault suppressed: At least one fault message is mask. Check: – <i>FaultMask (30.25)</i>	9.07, bit 6	always	4
A124	124 SpeedScale	Speed scaling out of range: The parameters causing the alarm can be identified in <i>Diagnosis (9.11)</i> . α is set to 150°; single firing pulses Check: – <i>M1SpeedScale (50.01)</i> , <i>M1BaseSpeed (99.04)</i>	9.07, bit 7	always	3
A125	125 SpeedFb	Selected motor, speed feedback: The comparison of the speed feedback from pulse encoder or analog tacho has failed. Check: – <i>M1SpeedFbSel (50.03)</i> , <i>SpeedFbFltMode (30.36)</i> , <i>SpeedFbFltSel (30.17)</i> , – pulse encoder: encoder itself, alignment, cabling, coupling, power supply (feedback might be too low), mechanical disturbances, – analog tacho: tacho itself, tacho polarity and voltage, alignment, cabling, coupling, mechanical disturbances, jumper S1 on SDCS-CON-4, – EMF: connection converter - armature circuit closed, – SDCS-CON-4, SDCS-IOB-3, SDCS-POW-4	9.07, bit 8	always	4
A126	126 ExternalDI	External fault via binary input: There is no problem with the drive itself! Check: – <i>ExtFaultSel (30.31)</i> , fault = 0, <i>ExtFaultOnSel (30.33)</i>	9.07, bit 9	always	4
A127	127 AIRange	Analog input range: Undershoot of one of the analog input values under 4mA / 2V. Check: – <i>AI Mon4mA (30.29)</i> , – used analog inputs connections and cables, – polarity of connection	9.07, bit 10	always	4

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A128	128 FieldBusCom	<p>Fieldbus communication loss: F528 FieldBusCom is only activated after the first dataset from the overriding control is received by the drive. Before the first dataset is received only A128 FieldBusCom is active. The reason is to suppress unnecessary faults (the starts up of the overriding control is usually slower than the one of the drive). Check: <ul style="list-style-type: none"> – <i>ComLossCtrl (30.28)</i> , <i>FB TimeOut (30.35)</i> , <i>CommModule (98.02)</i> , – parameter settings of group 51 (fieldbus), – fieldbus cable, – fieldbus termination, – fieldbus module </p>	9.07, bit 11	always if <i>FB TimeOut (30.35) ≠ 0</i>	4
A129	129 ParRestored	<p>Parameter restored: The parameters found in flash memory were found invalid at power-up (checksum fault). The parameters were restored from the parameter backup.</p>	9.07, bit 12	always	4
A130	130 LocalCmdLoss	<p>Local command loss: Connection fault with control panel, DriveWindow or DriveWindow Light. Check: <ul style="list-style-type: none"> – <i>LocalLossCtrl (30.27)</i> , – if control panel is disconnected, – connection adapter, – cables </p>	9.07, bit 13	local	4
A131	131 ParAdded	<p>Parameter added: A new firmware with a different amount of parameters was downloaded. The new parameters are set to their default values. The parameters causing the alarm can be identified in <i>Diagnosis (9.11)</i>. Check: <ul style="list-style-type: none"> – new parameters and set them to the desired values </p>	9.07, bit 14	after download of firmware for max. 10 s	4
A132	132 ParConflict	<p>Parameter setting conflict: Is triggered by parameter settings conflicting with other parameters. The parameters causing the alarm can be identified in <i>Diagnosis (9.11)</i>.</p>	9.07, bit 15	always	4
A134	134 ParComp	<p>Parameter compatibility: When downloading parameter sets the firmware attempts to write the parameters. If the setting is not possible or not compatible the parameter is set to default. The parameters causing the alarm can be identified in <i>Diagnosis (9.11)</i> . Check: <ul style="list-style-type: none"> – parameter setting </p>	9.08, bit 1	after download of a parameter set for max. 10 s	4

7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A135	135 ParUpDwnLoad	Parameter Up- or download failed: The checksum verification failed during up- or download of parameters. Please try again. Two or more parameter set actions were requested at the same time. Please try again.	9.08, bit 2	after up- or download of parameters for max. 10 s	4
A137	137 SpeedNotZero	Speed not zero: Re-start of drive is not possible. Speed zero has not been reached [only in case <i>FlyStart (21.10) = StartFrom0</i>]. Check: – <i>ZeroSpeedLim (20.03)</i> , – <i>FlyStart (21.10)</i> , – <i>M1SpeedFbSel (50.03)</i> , – <i>M2SpeedFbSel (49.24)</i>	9.08, bit 4	Not active if RdyRef = 1	1
A138	138 Off2FieldBus	Off2 (Emergency Off / Coast Stop) pending via MainCtrlWord (7.01) / fieldbus - start inhibition: There is no problem with the drive itself! Check: – <i>MainCtrlWord (7.01)</i> bit1 Off2N	9.08, bit 5	RdyRun = 1	1
A139	139 Off3FieldBus	Off3 (E-stop) pending via MainCtrlWord (7.01) / fieldbus: There is no problem with the drive itself! Check: – <i>MainCtrlWord (7.01)</i> bit2 Off3N	9.08, bit 6	RdyRun = 1	1
A140	140 IllgFieldBus	Illegal fieldbus settings: The fieldbus parameters in group 51 (fieldbus) are not set according to the fieldbus adapter or the device has not been selected. Check: – group 51 (fieldbus) – configuration of fieldbus adapter	9.08, bit 7	always	4
A141	141 COM8FwVer	SDCS-COM-8 firmware version conflict: Invalid combination of SDCS-CON-4 firmware and SDCS-COM-8 firmware. Check: – for valid combination of SDCS-CON-4 [<i>FirmwareVer (4.01)</i>] and SDCS-COM-8 [<i>Com8SwVersion (4.11)</i>] firmware version according to the release notes	9.08, bit 8	always	4
A142	142 MemCardMiss	Memory Card missing: There is an application loaded in the drive. The Memory Card belonging to the application is not found. Check: – if the Memory Card is properly plugged into the SDCS-CON-4 (X20)	9.08, bit 9	directly after energizing of electronics	1

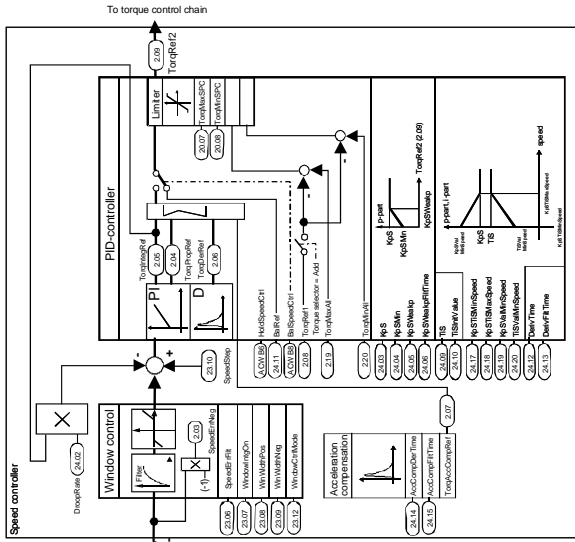
7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A143	143 MemCardFail	Memory Card failure: Checksum failure or wrong Memory Card Check: – Memory Card – if proper ABB Memory Card is used	9.08, bit 10	directly after energizing of electronics	1
A301	301 APAlarm1	User defined alarm by adaptive program	9.08, bit 11	always	4
A302	302 APAlarm2	User defined alarm by adaptive program	9.08, bit 12	always	4
A303	303 APAlarm3	User defined alarm by adaptive program	9.08, bit 13	always	4
A304	304 APAlarm4	User defined alarm by adaptive program	9.08, bit 14	always	4
A305	305 APAlarm5	User defined alarm by adaptive program	9.08, bit 15	always	4
A310	310 UserAlarm1	User defined fault by application program	9.09, bit 0	always	4
A311	311 UserAlarm1	User defined fault by application program	9.09, bit 1	always	4
A312	312 UserAlarm2	User defined fault by application program	9.09, bit 2	always	4
A313	313 UserAlarm3	User defined fault by application program	9.09, bit 3	always	4
A314	314 UserAlarm4	User defined fault by application program	9.09, bit 4	always	4
A315	315 UserAlarm5	User defined fault by application program	9.09, bit 5	always	4
A316	316 UserAlarm6	User defined fault by application program	9.09, bit 6	always	4
A317	317 UserAlarm7	User defined fault by application program	9.09, bit 7	always	4
A318	318 UserAlarm8	User defined fault by application program	9.09, bit 8	always	4
A319	319 UserAlarm9	User defined fault by application program	9.09, bit 9	always	4
A320	320 UserAlarm10	User defined fault by application program	9.09, bit 10	always	4
A321	321 UserAlarm11	User defined fault by application program	9.09, bit 11	always	4
A322	322 UserAlarm12	User defined fault by application program	9.09, bit 12	always	4
A323	323 UserAlarm13	User defined fault by application program	9.09, bit 13	always	4
A324	324 UserAlarm14	User defined fault by application program	9.09, bit 14	always	4

Fault tracing

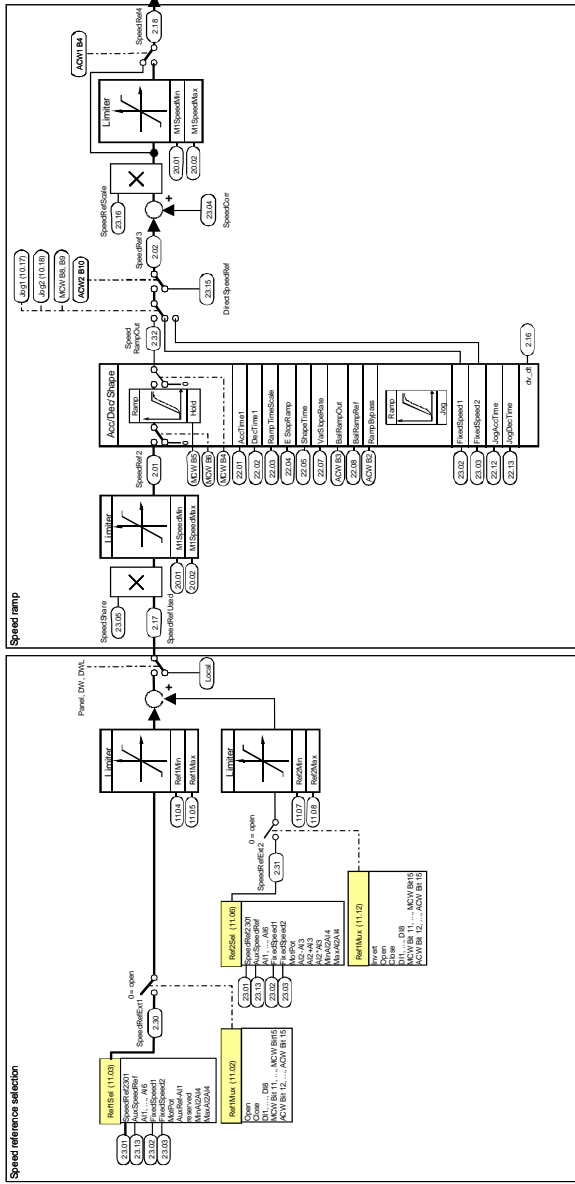
7-segmen display	Text on control panel, DriveWindow and DriveWindow Light	Definition / Action	Alarm-word	Alarm is active when	Alarmlevel
A325	325 UserAlarm16	User defined fault by application program	9.09, bit 15	always	4

Appendix A: Firmware structure diagram

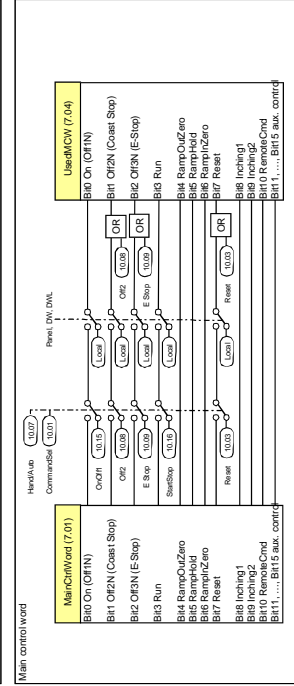
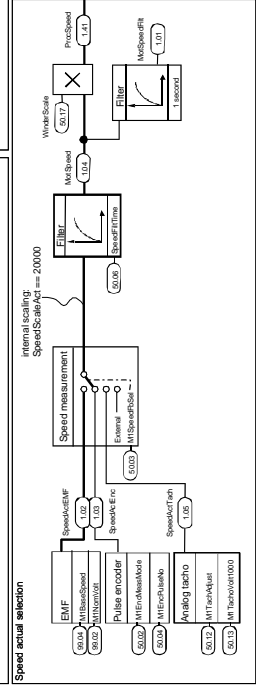
SPEED CONTROL



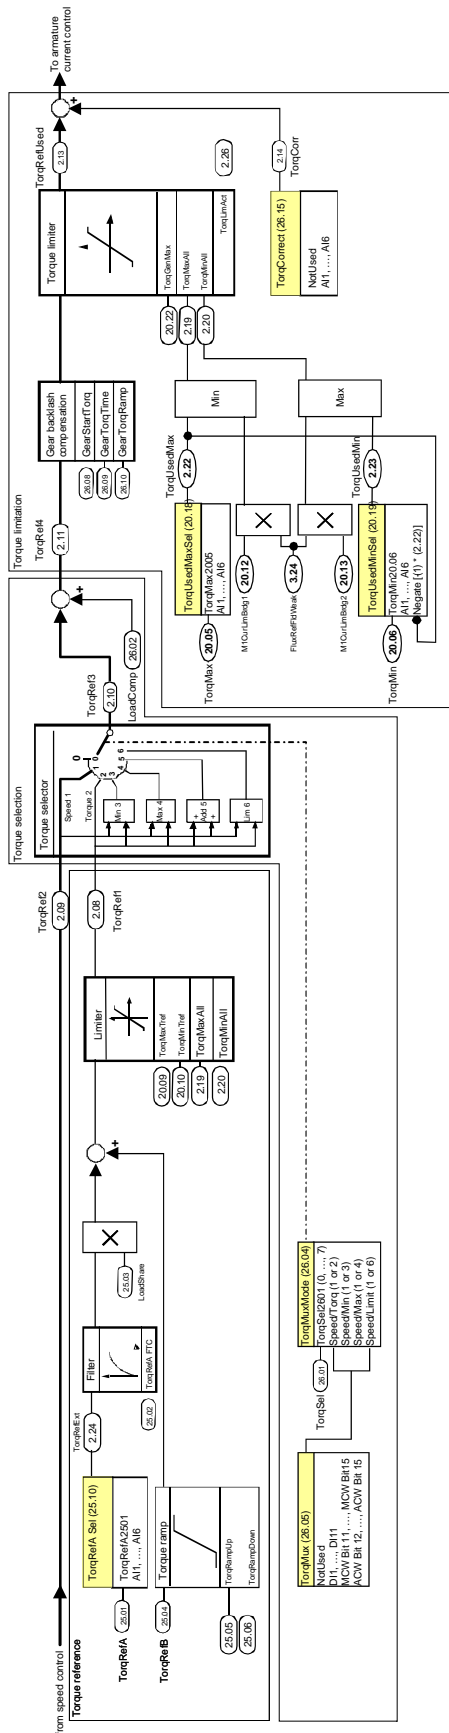
SPEED REFERENCE CHAIN



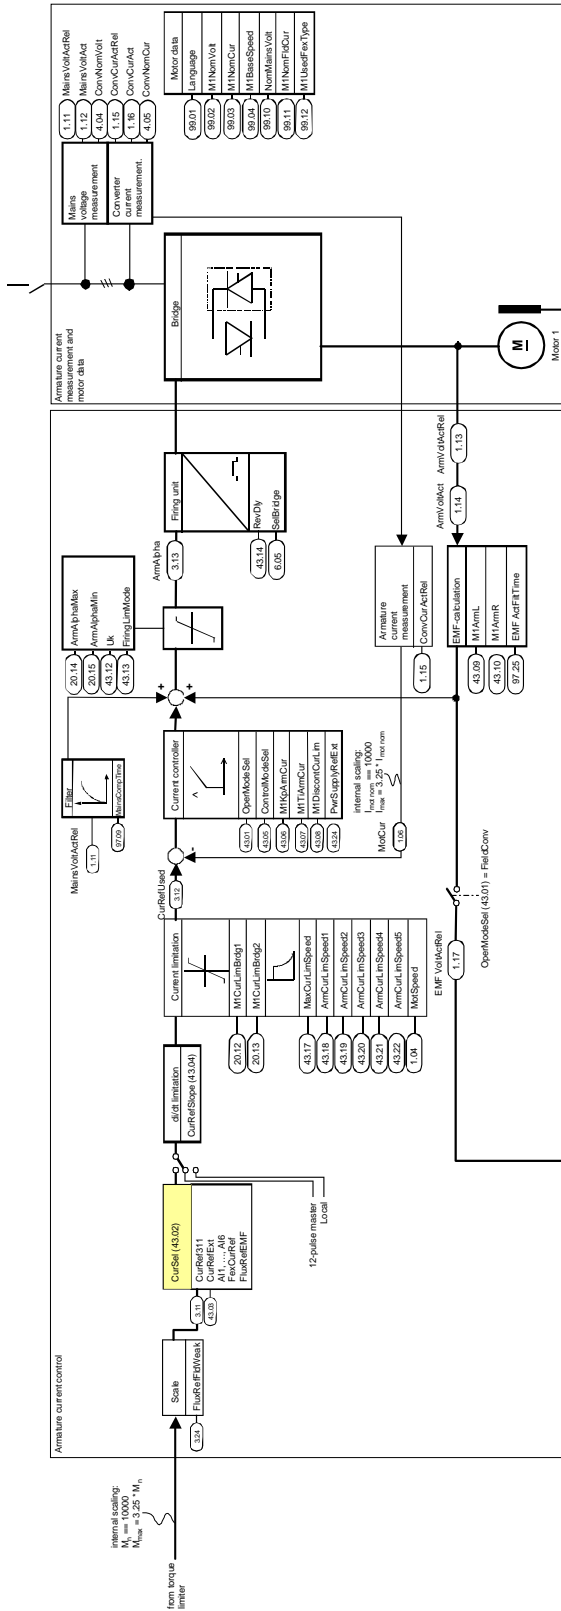
DCS800_Fw_structure_diagram_rev_a.dsf



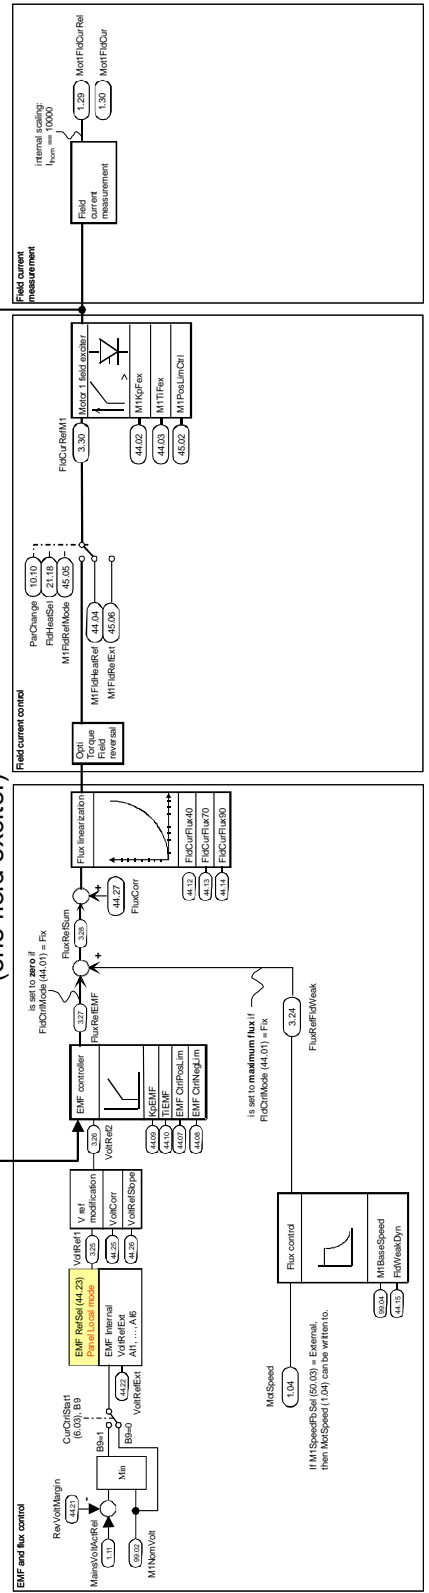
TORQUE CONTROL CHAIN



ARMATURE CURRENT CONTROL



FIELD CURRENT CONTROL (one field exciter)



Appendix B: Index of signals and parameters

Index of signals and parameters (alphabetic order)

<i>12P SlaNode</i>	207	ApplicName	54
12P TimeOut	207	ApplicVer	56
2 nd LastFault.....	82	ApplLoad.....	59
3 rd LastFault	82	ApplMacro.....	191
AccCompDerTime	126	ApplRestore	191
AccCompFiltTime	126	ArmAlpha	53
AccTime1	117	ArmAlphaMax	114
AccTime2	119	<i>ArmAlphaMin</i>	215
ActFiltTime	183	ArmAlphaMin	114
AdapPrgStat	172	ArmAlphaSI.....	53
AdapProgCmd.....	170	ArmCurActSI	48
AdjIDC	181	ArmCurAll	49
AdjUDC	183	ArmCurAllRel	48
AhCounter	49	ArmCurLimSpeed1	150
AI Mon4mA.....	210, 217	ArmCurLimSpeed2	150
AI Mon4mA.....	139	ArmCurLimSpeed3	150
AI1 Val.....	60	ArmCurLimSpeed4	151
AI1HighVal	99	ArmCurLimSpeed5	151
AI1LowVal	99	ArmCurRiseMax	134
AI2 Val.....	60	<i>ArmCurRiseMax</i>	208
AI2HighVal	100	ArmOvrCurLev	200
AI2LowVal	100	ArmOvrCurLev	134
AI3 Val.....	60	<i>ArmOvrVoltLev</i>	200
AI3HighVal	100	ArmOvrVoltLev	134
AI3LowVal	100	ArmVoltAct.....	47
AI4 Val.....	60	ArmVoltActRel	47
AI4HighVal	101	AuxCtrlWord	66
AI4LowVal	101	AuxCtrlWord2	67
AI5 Val.....	60	AuxSpeedRef.....	123
AI5HighVal	102	AuxStatWord.....	70
AI5LowVal	102	BalRampRef	118
AI6 Val.....	60	BalRef	125
AI6HighVal	103	Block10Out	177
AI6LowVal	104	Block11Out	177
<i>AIO ExtModule</i>	202	Block12Out	178
AIO ExtModule	187	Block13Out	178
<i>AIO MotTempMeas</i>	202	Block14Out	178
AIO MotTempMeas	188	Block15Out	178
AITacho Val.....	60	Block16Out	178
AlarmWord1	78, 196	Block1Attrib.....	174
AlarmWord2	79, 196	Block1In1	173
AlarmWord3	80, 196	Block1In2	174
AO1 Val.....	60	Block1In3	174
AO2 Val.....	60	Block1Out	176

Block1Output.....	174	ConvModeAI3	101
Block1Type.....	173	ConvModeAI4	101
Block2Out.....	177	ConvModeAI5	103
Block3Out.....	177	ConvModeAI6	104
Block4Out.....	177	ConvModeAO1	106
Block5Out.....	177	ConvModeAO2	107
Block6Out.....	177	ConvModeAO3	107
Block7Out.....	177	ConvModeAO4	108
Block8Out.....	177	ConvModeTacho	102
Block9Out.....	177	ConvNomCur	55
BlockBridge2	180	ConvNomVolt.....	55
BrakeEStopMode	146	<i>ConvTempDly</i>	202
<i>BrakeFaultFunc</i>	210, 216	ConvTempDly	180
BrakeFaultFunc	145	ConvType	56
BreakPoint.....	171	CPU load	59
BridgeTemp.....	48	CtrlMode	48
<i>Ch0ComLossCtrl</i>	209, 215	CtrlStatMas	63
<i>Ch0TimeOut</i>	209, 215	CtrlStatSla.....	64
<i>Ch2ComLossCtrl</i>	209, 215	CtrlWordAO1	106
Ch2TimeOut.....	209, 215	CtrlWordAO2	106
<i>Com8SwVersion</i>	219	CtrlWordAO3	107
Com8SwVersion.....	56	CtrlWordAO4	107
<i>ComLossCtrl</i>	206, 209, 215, 218	CurCtrlIntegOut.....	54
ComLossCtrl.....	138	CurCtrlStat1	61
CommandSel.....	83	CurCtrlStat2	62
CommModule	206, 218	CurRef	53
CommModule	185	CurRefExt	147
CompUkPLL	181	CurRefSlope	147
ConcOvrCur	56	<i>CurRefUsed</i>	215
Constant1	175	CurRefUsed	53
Constant10.....	176	CurRipple.....	46
Constant2.....	175	CurRippleFilt	46
Constant3.....	175	CurRippleLim	204, 216
Constant4.....	175	CurRippleLim	135
Constant5.....	175	<i>CurRippleSel</i>	204, 216
Constant6.....	175	CurRippleSel.....	135
Constant7	175	CurSel.....	147
Constant8	176	Data1	110
Constant9	176	Data10	111
ConstSpeed1.....	98	Data11	111
ConstSpeed2.....	98	Data12	111
ConstSpeed3.....	99	Data2	110
ConstSpeed4.....	99	Data3	110
ControlModeSel.....	147	Data4	111
ConvCurAct.....	47	Data5	111
ConvCurActRel.....	47	Data6	111
ConvFanAck.....	206, 213	Data7	111
ConvFanAck.....	91	Data8	111
ConvModeAI1.....	99	Data9	111
ConvModeAI2.....	100	DataLogStatus	52

DC BreakAck.....	91	DO6BitNo.....	105
DC VoltSerAll	49	DO6Index.....	105
<i>DCBreakAck</i>	213	DO7BitNo.....	105
<i>DCSLinkNodeID</i>	204, 207, 209, 215	DO7Index.....	105
DCSLinkStat1	57	DO8BitNo.....	105
DCSLinkStat2.....	58	DO8Index.....	105
DecMonDly.....	116	DriveLibVer	56
DecTime1	117	DriveStat	72
DecTime2	119	DroopRate	124
DerivFiltTime	126	dv_dt.....	50
DerivTime	125	DynBrakeAck	213
DeviceName.....	191	DynBrakeAck	91
DeviceNumber.....	191	DynBrakeDyl.....	169
DevLimPLL.....	203	<i>E Stop</i>	213
DevLimPLL.....	181	E Stop	86
DI StatWord.....	71	E StopDecMax.....	116
DI10Invert.....	92	E StopDecMin.....	116
DI11Invert.....	92	E StopMode	115
DI1Invert.....	91	E StopRamp	118
DI2Invert.....	91	EditBlock.....	171
DI3Invert.....	92	EditCmd	171
DI5Invert.....	92	EMF CtrlNegLim	152
DI6Invert.....	92	EMF CtrlPosLim.....	152
DI7Invert.....	92	EMF FbMonLev	134
DI8Invert.....	92	EMF RefSel	156
DI9Invert.....	92	EMF VoltActRel	47
Diagnosis	81, 209, 216, 218	Ext IO Status.....	59
DiffCurDly	207	ExtAlarmOnSel	140
<i>DiffCurLim</i>	207	ExtAlarmSel	140
<i>DIO ExtModule1</i>	202	ExtFaultOnSel.....	205, 217
DIO ExtModule1	186	ExtFaultOnSel.....	140
<i>DIO ExtModule2</i>	202	ExtFaultSel	205, 217
DIO ExtModule2	186	ExtFaultSel	139
Direction	83	<i>FanDly</i>	198
DirectSpeedRef	123	FanDly	116
DispParam1Sel	142	FaultedPar	172
DispParam2Sel	143	<i>FaultMask</i>	217
DispParam3Sel	143	FaultMask	137
DO CtrlWord.....	68	<i>FaultStopMode</i>	198
DO StatWord	72	FaultStopMode	139
DO1BitNo	104	FaultWord1	74, 196
DO1Index	104	FaultWord2	75, 196
DO2BitNo	104	FaultWord3	76, 196
DO2Index	104	FaultWord4	77, 196
DO3BitNo	105	<i>FB TimeOut</i>	206, 218
DO3Index	105	FB TimeOut	140
DO4BitNo	105	FexTimeOut.....	204
DO4Index	105	Fieldbus1	170
DO5BitNo	105	Fieldbus15	170
DO5Index	105	Fieldbus16	170

Fieldbus31	170	IndexAO4	107
FilterAI1	100	IO BoardConfig	202
FilterAI2	100	IO BoardConfig	189
FilterAI3	101	Jog1	90
FilterAI4	101	JogAccTime	120
FilterAO1	106	JogDecTime	120
FilterAO2	107	KpEMF	152
FilterAO3	107	KpPLL	181
FilterAO4	108	KpS	124
FiringLimMode	149	KpS2	127
<i>FirmwareVer</i>	219	KpSMin	125
FirmwareVer	54	KpSTiSMaxSpeed	126
FixedSpeed1	120	KpSTiSMinSpeed	126
FixedSpeed2	120	KpSVaMinSpeed	127
FldBoostFact	154	KpSWeakp	125
FldBoostSel	153	KpSWeakpFiltTime	125
FldBoostTime	154	Language	189
FldCtrlAlarm	63	LastFault	82
FldCtrlMode	151	LimWord	70
FldCurFlux40	152	LoadComp	130
FldCurFlux70	153	LoadShare	129
FldCurFlux90	153	LocalLossCtrl	209, 218
FldCurRefM1	54	LocalLossCtrl	138
FldCurRefM2	54	LocationCounter	172
FldCurTrim	159	LocLock	108
FldHeatSel	117	<i>M1AlarmLimLoad</i>	214
FldMinDly	156	M1AlarmLimLoad	141
FldMinTripDly	208	M1AlarmLimTemp	214
FldMinTripDly	159	M1AlarmLimTemp	142
FldRefGain	158	M1ArmL	148
FldRefHyst	158	M1ArmR	148
FldRefMin	156	<i>M1BaseSpeed</i>	217
FldRevHyst	158	M1BaseSpeed	190
FldWeakDyn	153	M1BrakeAckSel	145
FluxCorr	156	M1BrakeCloseDly	145
FluxRefEMF	54	M1BrakeCtrl	144
FluxRefFldWeak	54	M1BrakeOpenDly	145
FluxRefSum	54	M1CurLimBrdg1	114
FluxRevMonDly	157	M1CurLimBrdg2	114
<i>FlyStart</i>	219	M1DiscontCurLim	148
FlyStart	116	M1EncMeasMode	167
ForceFldDir	157	M1EncPulseNo	168
GearStartTorq	132	<i>M1FaultLimLoad</i>	201
GearTorqRamp	132	M1FaultLimLoad	141
GearTorqTime	132	<i>M1FaultLimTemp</i>	201
HandAuto	85	M1FaultLimTemp	142
HW FiltUDC	183	<i>M1FexNode</i>	204
IndexAO1	106	M1FldHeatRef	152
IndexAO2	106	<i>M1FldMinTrip</i>	208
IndexAO3	107	M1FldMinTrip	134

M1FldOvrCurLev	203	M2FldHeatRef	161
M1FldOvrCurLev	134	<i>M2FldMinTrip</i>	208
M1FldRefExt	157	M2FldMinTrip	161
M1FldRefMode	157	M2FldOvrCurLev	204
M1FreewhlLev	156	M2FldOvrCurLev	161
<i>M1KlixonSel</i>	201	M2FldRefExt	158
M1KlixonSel	142	M2FldRefMode	158
M1KpArmCur	204, 216	M2FreewhlLev	159
M1KpArmCur	147	<i>M2KlixonSel</i>	202
M1ModelTime	141	M2KlixonSel	167
M1NomCur	190	M2KpArmCur	162
M1NomFldCur	192	M2ModelTime	165
M1NomVolt	189	M2NomCur	160
M1OperModeFex4	160	M2NomFldCur	161
M1OvrSpeed	207	M2NomVolt	160
M1OvrSpeed	134	M2OperModeFex4	160
M1PosLimCtrl	156	M2OvrSpeed	163
<i>M1SpeedFbSel</i>	205, 217, 219	M2PosLimCtrl	159
M1SpeedFbSel	168	M2SpeedFbSel	219
M1SpeedMax	113	M2SpeedFbSel	164
M1SpeedMin	112	M2SpeedMax	163
<i>M1SpeedScale</i>	217	M2SpeedMin	163
M1SpeedScale	167	M2SpeedScale	164
M1TachoAdjust	169	M2TachoAdjust	164
M1TachoVolt1000	169	M2TachoVolt1000	165
M1TempSel	141	M2TempSel	166
M1TiArmCur	148	M2TiArmCur	162
M1UsedFexType	205	M2UsedFexType	161
M1UsedFexType	192	MacroChangeMode	109
<i>M2AlarmLimLoad</i>	214	MacroSel	73
M2AlarmLimLoad	165	<i>MailBoxCycle1</i>	209, 215
M2AlarmLimTemp	214	<i>MailBoxCycle2</i>	209, 215
M2AlarmLimTemp	166	<i>MailBoxCycle3</i>	209, 215
M2ArmL	163	MailBoxCycle4	209, 215
M2ArmR	163	MainContAck	205
M2BaseSpeed	160	MainContAck	91
M2BrakeAckSel	165	MainContCtrlMode	117
M2BrakeCloseDly	165	MainCtrlWord	64
M2BrakeCtrl	165	MainsCompTime	180
M2BrakeOpenDly	165	MainsFreqAct	49
M2CurLimBrdg1	162	MainStatWord	69
M2CurLimBrdg2	162	MainsVoltAct	47
M2DiscontCurLim	162	MainsVoltActRel	47
M2EncMeasMode	164	<i>MaxBridgeTemp</i>	201, 213
M2EncPulseNo	164	MaxBridgeTemp	57
<i>M2FaultLimLoad</i>	202	MaxCurLimSpeed	150
M2FaultLimLoad	166	ModBusModule2	187
<i>M2FaultLimTemp</i>	202	<i>Mot1FexStatus</i>	205
M2FaultLimTemp	166	Mot1FexStatus	64
<i>M2FexNode</i>	204	Mot1FexSwVer	56

Mot1FexType	55	P-M2TiFex	162
Mot1FldCur.....	48	PoleDampRFE.....	127
Mot1FldCurRel	48	PoleFreqRFE	127
Mot1TempCalc	47	PosCountHigh.....	53
Mot1TempMeas	47	PosCountInitHi.....	168
Mot2FexStatus	205	PosCountInitLo	168
Mot2FexStatus	64	PosCountLow	53
Mot2FexSwVer.....	56	PosCountMode	168
Mot2FexType	55	PosSyncMode.....	169
Mot2FldCur.....	48	Pot1	192
Mot2FldCurRel	48	Pot2	193
Mot2TempCalc	47	PowrDownTime	136
Mot2TempMeas	48	ProcSpeed	49
<i>MotCur</i>	215	ProgressSignal	59
MotCur.....	46	<i>PwrLossTrip</i>	203, 215
MotFanAck	205	PwrLossTrip.....	135
MotFanAck	85	PwrSupplyRefExt.....	151
MotNomTorque	59	QuadrantType.....	56
MotPotDown.....	97	Ramp2Select	119
MotPotMin	98	RampTimeScale	118
MotPotUp	96	ReactCur.....	53
MotSel	73	Ref1Max	94
<i>MotSpeed</i>	207	Ref1Mux	93
MotSpeed.....	46	Ref1Sel	93, 94
MotSpeedFilt	46	Ref2Max	94
MotTorq.....	41, 42, 46	Ref2Mux	95
MotTorqFilt	46	Ref2Sel	94
<i>NomMainsVolt</i>	203, 215	ResCurDetectDel.....	201
NomMainsVolt.....	192	ResCurDetectDel.....	133
Off1Mode.....	115	<i>ResCurDetectLim</i>	201
<i>Off2</i>	213	ResCurDetectLim	133
Off2.....	86	<i>ResCurDetectSel</i>	201
OffsetIDC.....	181	ResCurDetectSel	133
OffsetUDC	183	Reset	84
OnOff1	88	ResetAhCounter	183
OperModeSel	146	RevDly	149
<i>OvrVoltProt</i>	216	RevMode	149
OvrVoltProt.....	88	RevVoltMargin	155
Par2Select.....	128	RFE CtrlWord	68
ParApplSave	109	RFE StatWord.....	73
ParChange	86	S ConvScaleCur	179
ParLock	108	S ConvScaleVolt.....	180
<i>ParSave</i>	216	S M1FldScale	159
PassCode.....	171	S M2FldScale	160
PID Out.....	53	S MaxBrdgTemp.....	180
<i>PLLOut</i>	203	ScaleAO1.....	106
PLLOut	53	ScaleAO2.....	107
P-M1KpFex	151	ScaleAO3.....	107
P-M1TiFex.....	152	ScaleAO4.....	108
P-M2KpFex	161	SelBridge	62

ServiceMode	190	StrtTorqRefSel	210, 216
SetSystemTime	109	StrtTorqRefSel	146
ShapeTime	118	SyncCommand	84
SpeedActEMF	46	SysComBoard	208
SpeedActEnc	46	SysComBoard	189
SpeedActTach	46	SysFaultWord	81
SpeedCorr	121	SysPassCode	108
SpeedErrFilt	121	SystemTime	61
SpeedErrFilt2	122	TachoHighVal	101
SpeedErrNeg	49	TachoLowVal	102
SpeedErrorScale	127	TiEMF	152
SpeedFbFiltMode	140, 198, 205, 217	TimeLevSel	171
SpeedFbFiltSel	205, 217	TiS	125
SpeedFbFiltSel	135	TiS2	127
SpeedFbMonLev	134	TiSInitValue	125
SpeedFiltTime	168	TiSVaMinSpeed	127
SpeedLev	168	ToolLinkConfig	109
SpeedRampOut	52	TorqAccCompRef	50
SpeedRef	45	TorqActFiltTime	183
SpeedRef	44, 120	TorqCorr	50
SpeedRef2	49	TorqCorrect	132
SpeedRef3	49	TorqDerRef	49
SpeedRef4	50	TorqGenMax	115
SpeedRefExt1	52	TorqIntegRef	49
SpeedRefExt2	52	TorqLimAct	51
SpeedRefScale	123	TorqMax	113
SpeedRefUsed	42	TorqMaxAll	50
SpeedRefUsed	41, 50	TorqMaxSPC	45
SpeedScaleAct	200, 207	TorqMaxSPC	44, 113
SpeedScaleAct	42, 45, 52	TorqMaxTref	114
SpeedShare	121	TorqMin	113
SpeedStep	122	TorqMinAll	51
SqrWaveIndex	193	TorqMinSPC	113
SqrWavePeriod	193	TorqMinTref	114
SquareWave	52	TorqMux	131
StallSpeed	206	TorqMuxMode	131
StallSpeed	133	TorqPropRef	49
StallTime	206	TorqRampDown	129
StallTime	132	TorqRampUp	129
StallTorq	206	TorqRef1	50
StallTorq	133	TorqRef2	50
StartStop	89	TorqRef3	50
StopMode	115	TorqRef4	50
String1	176	TorqRefA	129
String2	176	TorqRefA FTC	129
String3	176	TorqRefA Sel	129
String4	176	TorqRefB	129
String5	176	TorqRefExt	51
StrtTorqRef	210, 216	TorqRefUsed	50
StrtTorqRef	146	TorqSel	130

TorqUsedMax.....	51	VoltCorr.....	156
TorqUsedMaxSel.....	114	VoltRef1.....	54
TorqUsedMin.....	51	VoltRef2.....	54
TorqUsedMinSel.....	115	VoltRefExt.....	155
TypeCode.....	205	VoltRefSlope.....	156
TypeCode.....	179	WinCtrlMode.....	122
Uk.....	148	WinderScale.....	169
UNetMin1.....	203, 215	WinIntegOn.....	121
UNetMin1.....	135	WinWidthNeg.....	122
UnetMin2.....	136	WinWidthPos.....	122
UNetMin2.....	203, 215	ZeroCurDetect.....	182
UsedMCW.....	67	ZeroCurTimeOut.....	207
UserAlarmWord.....	80, 196	ZeroDampRFE.....	127
UserFaultWord.....	77, 196	ZeroFreqRFE.....	127
USI Sel.....	42, 44, 109	<i>ZeroSpeedLim</i>	219
VarSlopeRate.....	118	ZeroSpeedLim.....	113



ABB Automation Products GmbH
Postfach 1180
68619 Lampertheim • Germany
Tel: +49 (0) 62 06-5 03-0
Fax: +49 (0) 62 06-5 03-6 09
www.abb.com/motors&drives



193R0101A5260000

Ident. No.: 3ADW 000 193 R0101 Rev A
07_2005